

Jaguar_V01.10 Reset Function List (Note:For reference only)								
VehicleType	ModelYear	Engine Type	OIL	BMS	EPB	DPF	ETCS	SAS
XJ	2013-2015	2.0L GTDi (P)	●	●	●	○	○	○
XJ	2013-2015	Supercharged V6	●	●	●	○	●	○
XJ	2013-2015	Normally aspirated V8	●	●	●	○	●	○
XJ	2013-2015	Supercharged V8	●	●	●	○	●	○
XJ	2013-2015	Diesel V6	●	●	●	●		○
XJ	2010-2012	Normally aspirated V6	●	●	●	○	●	○
XJ	2010-2012	Normally aspirated V8	●	●	●	○	●	○
XJ	2010-2012	Supercharged V8	●	●	●		●	○
XJ	2010-2012	Diesel V6	●	●	●	●		○
XJ	2008-2009	Normally aspirated V6	●	○	●	○	●	○
XJ	2008-2009	Normally aspirated V8	●	○	●	○	●	○
XJ	2008-2009	Supercharged V8	●	○	●	○	●	○
XJ	2008-2009	Diesel V6	●	○	●	●	●	○
XJ	2006-2007	Normally aspirated V6	●	○	●	○	●	○
XJ	2006-2007	Normally aspirated V8	●	○	●	○	●	○
XJ	2006-2007	Supercharged V8	●	○	●	○	●	○
XJ	2006-2007	Diesel V6	●	○	●	●	●	○
XJ	2002-2005	Normally aspirated V6	●	○	●	○	○	○
XJ	2002-2005	Normally aspirated V8	●	○	●	○	○	○
XJ	2002-2005	Supercharged V8	●	○	●	○		○
XF	2013-2015	2.0L GTDi (P)	●	○	●	○	●	○
XF	2013-2015	Supercharged V6	●	○	●	○	●	○
XF	2013-2015	Supercharged V8	●	○	●	○	●	○
XF	2013-2015	Diesel I4	●	●	●	●	○	○
XF	2013-2015	Diesel V6	●		●	●	○	○
XF	2012	Normally aspirated V6	●	●	●	○	●	○
XF	2012	Normally aspirated V8	●	●	●	○	●	○
XF	2012	Supercharged V8	●	●	●	○	●	○
XF	2012	Diesel I4	●	●	●	●		○
XF	2012	Diesel V6	●	●	●	●		○
XF	2010-2011	Normally aspirated V6	●	●	●	○	●	○
XF	2010-2011	Normally aspirated V8 (4.2L)	●	●	●	○	●	○
XF	2010-2011	Normally aspirated V8 (5.0L)	●	●	●	○	●	○
XF	2010-2011	Supercharged V8	●	●	●	○	●	○
XF	2010-2011	Diesel V6	●	●	●	●		○
XF	2008-2009	Normally aspirated V6	●	●	●	○	●	○
XF	2008-2009	Normally aspirated V8	●	●	●	○	●	○
XF	2008-2009	Supercharged V8	●	●	●		●	○
XF	2008-2009	Diesel V6	●	●	●	●		○
XK	2010-2015	Normally aspirated V8	●	●	●	○	●	○
XK	2010-2015	Supercharged V8	●	●	●	○	●	○
XK	2006-2009	Normally aspirated V8	●	○	●	○	●	○
XK	2006-2009	Supercharged V8	●	○	●	○	●	
F TYPE	2014-2015	Supercharged V6	●	●	●	○	●	●
F TYPE	2014-2015	Supercharged V8	●	●	●	○	●	●
S TYPE	2006-2008	Normally aspirated V6	●	○	●	○	●	○
S TYPE	2006-2008	Normally aspirated V8	●	○	●	○	●	○
S TYPE	2006-2008	Supercharged V8	●	○	●		●	○
S TYPE	2006-2008	Diesel V6	●	○	●	●	●	○
S TYPE	2004-2005	AJ61 2.5L	●	○	●	○	●	○
S TYPE	2004-2005	AJ61 3.0L	●	○	●	○	●	○
S TYPE	2004-2005	AJ61 4.2L	●	○	●	○	●	○
S TYPE	2004-2005	Diesel V6	●	○	●	○	●	○
S TYPE	2002-2003		●	○	●	○	●	○

VehicleType	ModelYear	Engine Type	OIL	BMS	EPB	DPF	ETCS	SAS
X TYPE	2008-2009	AJ61 2.0L	●	○	○	○	○	○
X TYPE	2008-2009	AJ61 2.5L	●	○	○	○	○	○
X TYPE	2008-2009	AJ61 3.0L	●	○	○	○	○	○
X TYPE	2008-2009	Duratorq TDCi 2.0L	●	○	○	○	○	○
X TYPE	2008-2009	Duratorq TDCi 2.2L	●	○	○	○	○	○
X TYPE	2004-2008	AJ61 2.0L	●	○	○	○	○	○
X TYPE	2004-2008	AJ61 2.5L	●	○	○	○	○	○
X TYPE	2004-2008	AJ61 3.0L	●	○	○	○	○	○
X TYPE	2004-2008	Duratorq TDCi 2.0L	●	○	○	○	○	○
X TYPE	2004-2008	Duratorq TDCi 2.2L	●	○	○	○	○	○
X TYPE	2001-2003		●	○	○	○	○	○

Jaguar_V01.10 Daig Fuction List (Note:For reference only)

NOTES:

● This function is supported.

This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
XJ	1996			BPM	●	●	●
XJ	1996			IPK	●	●	●
XJ	1996			SEC	●	●	●
XJ	1996			CCM	●	●	●
XJ	1996			DSM	●	●	●
XJ	1996			CMM	●	●	●
XJ	1996			TCM	●	●	●
XJ	1996			ECM	●	●	●
XJ	1996			PSM	●	●	●
XJ	1996			ABS	●	●	●
XJ	1997			BPM	●	●	●
XJ	1997			IPK	●	●	●
XJ	1997			SEC	●	●	●
XJ	1997			CCM	●	●	●
XJ	1997			DSM	●	●	●
XJ	1997			CMM	●	●	●
XJ	1997			TCM	●	●	●
XJ	1997			ECM	●	●	●
XJ	1997			PSM	●	●	●
XJ	1997			ABS	●	●	●
XJ	1998			ABS	●	●	●
XJ	1998			ECM	●	●	●
XJ	1998			IPK	●	●	●
XJ	1998			TCM	●	●	●
XJ	1998			DSM	●	●	●
XJ	1998			PSM	●	●	●
XJ	1998			SLM	●	●	●
XJ	1998			PRDM	●	●	●
XJ	1998			PDM	●	●	●
XJ	1998			DRDM	●	●	●
XJ	1998			DDM	●	●	●
XJ	1998			BPM	●	●	●
XJ	1998			ACM	●	●	●
XJ	1998			CCM	●	●	●
XJ	1998			ADS	●	●	●
XJ	1998			KTM	●	●	●
XJ	1999			ABS	●	●	●
XJ	1999			ECM	●	●	●
XJ	1999			IPK	●	●	●
XJ	1999			TCM	●	●	●
XJ	1999			DSM	●	●	●
XJ	1999			PSM	●	●	●
XJ	1999			SLM	●	●	●
XJ	1999			PRDM	●	●	●
XJ	1999			PDM	●	●	●
XJ	1999			DRDM	●	●	●
XJ	1999			DDM	●	●	●
XJ	1999			BPM	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
XJ	1999			ACM	•	•	•
XJ	1999			CCM	•	•	•
XJ	1999			ADS	•	•	•
XJ	1999			KTM	•	•	•
XJ	2000			ABS	•	•	•
XJ	2000			ECM	•	•	•
XJ	2000			IPK	•	•	•
XJ	2000			TCM	•	•	•
XJ	2000			DSM	•	•	•
XJ	2000			PSM	•	•	•
XJ	2000			SLM	•	•	•
XJ	2000			PRDM	•	•	•
XJ	2000			PDM	•	•	•
XJ	2000			DRDM	•	•	•
XJ	2000			DDM	•	•	•
XJ	2000			ACM	•	•	•
XJ	2000			BPM	•	•	•
XJ	2000			CCM	•	•	•
XJ	2000			ADS	•	•	•
XJ	2000			KTM	•	•	•
XJ	2001			ABS	•	•	•
XJ	2001			ECM	•	•	•
XJ	2001			IPK	•	•	•
XJ	2001			TCM	•	•	•
XJ	2001			DSM	•	•	•
XJ	2001			PSM	•	•	•
XJ	2001			SLM	•	•	•
XJ	2001			PRDM	•	•	•
XJ	2001			PDM	•	•	•
XJ	2001			DRDM	•	•	•
XJ	2001			DDM	•	•	•
XJ	2001			BPM	•	•	•
XJ	2001			ACM	•	•	•
XJ	2001			CCM	•	•	•
XJ	2001			ADS	•	•	•
XJ	2001			KTM	•	•	•
XJ	2002-2005			ABS	•	•	•
XJ	2002-2005			ACC	•	•	•
XJ	2002-2005			ADHLS_L	•	•	•
XJ	2002-2005			ADHLS_R	•	•	•
XJ	2002-2005			AMP	•	•	•
XJ	2002-2005			ARM	•	•	•
XJ	2002-2005			ASU	•	•	•
XJ	2002-2005			ATC	•	•	•
XJ	2002-2005			CPM	•	•	•
XJ	2002-2005			DDM	•	•	•
XJ	2002-2005			DSM	•	•	•
XJ	2002-2005			ECM	•	•	•
XJ	2002-2005			EPB	•	•	•
XJ	2002-2005			FETM	•	•	•
XJ	2002-2005			GEM	•	•	•
XJ	2002-2005			IP	•	•	•
XJ	2002-2005			ISM	•	•	•
XJ	2002-2005			NAV	•	•	•

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
XJ	2002-2005			PAM	•	•	•
XJ	2002-2005			RATC	•	•	•
XJ	2002-2005			REM	•	•	•
XJ	2002-2005			RETM	•	•	•
XJ	2002-2005			RSM	•	•	•
XJ	2002-2005			SCLM	•	•	•
XJ	2002-2005			TCM	•	•	•
XJ	2002-2005			VACM	•	•	•
XJ	2006-2007	V6DIESEL		AHCM	•	•	•
XJ	2006-2007	V6DIESEL		ABS	•	•	•
XJ	2006-2007	V6DIESEL		ACC	•	•	•
XJ	2006-2007	V6DIESEL		AMP	•	•	•
XJ	2006-2007	V6DIESEL		ARM	•	•	•
XJ	2006-2007	V6DIESEL		ASU	•	•	•
XJ	2006-2007	V6DIESEL		ATC	•	•	•
XJ	2006-2007	V6DIESEL		CPM	•	•	•
XJ	2006-2007	V6DIESEL		DDM	•	•	•
XJ	2006-2007	V6DIESEL		DSM	•	•	•
XJ	2006-2007	V6DIESEL		FETM	•	•	•
XJ	2006-2007	V6DIESEL		GEM	•	•	•
XJ	2006-2007	V6DIESEL		IP	•	•	•
XJ	2006-2007	V6DIESEL		ISM	•	•	•
XJ	2006-2007	V6DIESEL		NAV	•	•	•
XJ	2006-2007	V6DIESEL		PAM	•	•	•
XJ	2006-2007	V6DIESEL		PBM	•	•	•
XJ	2006-2007	V6DIESEL		PCM	•	•	•
XJ	2006-2007	V6DIESEL		RATC	•	•	•
XJ	2006-2007	V6DIESEL		REM	•	•	•
XJ	2006-2007	V6DIESEL		RETM	•	•	•
XJ	2006-2007	V6DIESEL		RSM	•	•	•
XJ	2006-2007	V6DIESEL		SCLM	•	•	•
XJ	2006-2007	V6DIESEL		TCM	•	•	•
XJ	2006-2007	V6DIESEL		TPM	•	•	•
XJ	2006-2007	V6DIESEL		VACM	•	•	•
XJ	2006-2007	V6NA		ABS	•	•	•
XJ	2006-2007	V6NA		ACC	•	•	•
XJ	2006-2007	V6NA		AMP	•	•	•
XJ	2006-2007	V6NA		ARM	•	•	•
XJ	2006-2007	V6NA		ASU	•	•	•
XJ	2006-2007	V6NA		ATC	•	•	•
XJ	2006-2007	V6NA		CPM	•	•	•
XJ	2006-2007	V6NA		DDM	•	•	•
XJ	2006-2007	V6NA		DSM	•	•	•
XJ	2006-2007	V6NA		FETM	•	•	•
XJ	2006-2007	V6NA		GEM	•	•	•
XJ	2006-2007	V6NA		IP	•	•	•
XJ	2006-2007	V6NA		ISM	•	•	•
XJ	2006-2007	V6NA		NAV	•	•	•
XJ	2006-2007	V6NA		PAM	•	•	•
XJ	2006-2007	V6NA		PBM	•	•	•
XJ	2006-2007	V6NA		PCM	•	•	•
XJ	2006-2007	V6NA		RATC	•	•	•
XJ	2006-2007	V6NA		REM	•	•	•
XJ	2006-2007	V6NA		RETM	•	•	•

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
XJ	2006-2007	V6NA		RSM	●	●	●
XJ	2006-2007	V6NA		SCLM	●	●	●
XJ	2006-2007	V6NA		TCM	●	●	●
XJ	2006-2007	V6NA		TPM	●	●	●
XJ	2006-2007	V6NA		VACM	●	●	●
XJ	2006-2007	V8NA		ABS	●	●	●
XJ	2006-2007	V8NA		ACC	●	●	●
XJ	2006-2007	V8NA		AMP	●	●	●
XJ	2006-2007	V8NA		ARM	●	●	●
XJ	2006-2007	V8NA		ASU	●	●	●
XJ	2006-2007	V8NA		ATC	●	●	●
XJ	2006-2007	V8NA		CPM	●	●	●
XJ	2006-2007	V8NA		DDM	●	●	●
XJ	2006-2007	V8NA		DSM	●	●	●
XJ	2006-2007	V8NA		FETM	●	●	●
XJ	2006-2007	V8NA		GEM	●	●	●
XJ	2006-2007	V8NA		IP	●	●	●
XJ	2006-2007	V8NA		ISM	●	●	●
XJ	2006-2007	V8NA		NAV	●	●	●
XJ	2006-2007	V8NA		PAM	●	●	●
XJ	2006-2007	V8NA		PBM	●	●	●
XJ	2006-2007	V8NA		PCM	●	●	●
XJ	2006-2007	V8NA		RATC	●	●	●
XJ	2006-2007	V8NA		REM	●	●	●
XJ	2006-2007	V8NA		RETM	●	●	●
XJ	2006-2007	V8NA		RSM	●	●	●
XJ	2006-2007	V8NA		SCLM	●	●	●
XJ	2006-2007	V8NA		TCM	●	●	●
XJ	2006-2007	V8NA		TPM	●	●	●
XJ	2006-2007	V8NA		VACM	●	●	●
XJ	2006-2007	V8SC		ABS	●	●	●
XJ	2006-2007	V8SC		ACC	●	●	●
XJ	2006-2007	V8SC		AMP	●	●	●
XJ	2006-2007	V8SC		ARM	●	●	●
XJ	2006-2007	V8SC		ASU	●	●	●
XJ	2006-2007	V8SC		ATC	●	●	●
XJ	2006-2007	V8SC		CPM	●	●	●
XJ	2006-2007	V8SC		DDM	●	●	●
XJ	2006-2007	V8SC		DSM	●	●	●
XJ	2006-2007	V8SC		FETM	●	●	●
XJ	2006-2007	V8SC		GEM	●	●	●
XJ	2006-2007	V8SC		IP	●	●	●
XJ	2006-2007	V8SC		ISM	●	●	●
XJ	2006-2007	V8SC		NAV	●	●	●
XJ	2006-2007	V8SC		PAM	●	●	●
XJ	2006-2007	V8SC		PBM	●	●	●
XJ	2006-2007	V8SC		PCM	●	●	●
XJ	2006-2007	V8SC		RATC	●	●	●
XJ	2006-2007	V8SC		REM	●	●	●
XJ	2006-2007	V8SC		RETM	●	●	●
XJ	2006-2007	V8SC		RSM	●	●	●
XJ	2006-2007	V8SC		SCLM	●	●	●
XJ	2006-2007	V8SC		TCM	●	●	●
XJ	2006-2007	V8SC		TPM	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
XJ	2006-2007	V8SC		VACM	•	•	•
XJ	2008-2009	V6DIESEL		AHCM	•	•	•
XJ	2008-2009	V6DIESEL		ABS	•	•	•
XJ	2008-2009	V6DIESEL		ACC	•	•	•
XJ	2008-2009	V6DIESEL		AMP	•	•	•
XJ	2008-2009	V6DIESEL		ARM	•	•	•
XJ	2008-2009	V6DIESEL		ASU	•	•	•
XJ	2008-2009	V6DIESEL		ATC	•	•	•
XJ	2008-2009	V6DIESEL		CPM	•	•	•
XJ	2008-2009	V6DIESEL		DABM	•	•	•
XJ	2008-2009	V6DIESEL		DACMC	•	•	•
XJ	2008-2009	V6DIESEL		DCSM	•	•	•
XJ	2008-2009	V6DIESEL		DDM	•	•	•
XJ	2008-2009	V6DIESEL		DSM	•	•	•
XJ	2008-2009	V6DIESEL		FETM	•	•	•
XJ	2008-2009	V6DIESEL		GEM	•	•	•
XJ	2008-2009	V6DIESEL		GWM	•	•	•
XJ	2008-2009	V6DIESEL		IP	•	•	•
XJ	2008-2009	V6DIESEL		ISM	•	•	•
XJ	2008-2009	V6DIESEL		NAV	•	•	•
XJ	2008-2009	V6DIESEL		PAM	•	•	•
XJ	2008-2009	V6DIESEL		PBM	•	•	•
XJ	2008-2009	V6DIESEL		PCM	•	•	•
XJ	2008-2009	V6DIESEL		RATC	•	•	•
XJ	2008-2009	V6DIESEL		REM	•	•	•
XJ	2008-2009	V6DIESEL		RETM	•	•	•
XJ	2008-2009	V6DIESEL		RSM	•	•	•
XJ	2008-2009	V6DIESEL		SCLM	•	•	•
XJ	2008-2009	V6DIESEL		SRM	•	•	•
XJ	2008-2009	V6DIESEL		TCM	•	•	•
XJ	2008-2009	V6DIESEL		TPM	•	•	•
XJ	2008-2009	V6DIESEL		VACM	•	•	•
XJ	2008-2009	V6NA		ABS	•	•	•
XJ	2008-2009	V6NA		ACC	•	•	•
XJ	2008-2009	V6NA		AMP	•	•	•
XJ	2008-2009	V6NA		ARM	•	•	•
XJ	2008-2009	V6NA		ASU	•	•	•
XJ	2008-2009	V6NA		ATC	•	•	•
XJ	2008-2009	V6NA		CPM	•	•	•
XJ	2008-2009	V6NA		DABM	•	•	•
XJ	2008-2009	V6NA		DACMC	•	•	•
XJ	2008-2009	V6NA		DCSM	•	•	•
XJ	2008-2009	V6NA		DDM	•	•	•
XJ	2008-2009	V6NA		DSM	•	•	•
XJ	2008-2009	V6NA		FETM	•	•	•
XJ	2008-2009	V6NA		GEM	•	•	•
XJ	2008-2009	V6NA		GWM	•	•	•
XJ	2008-2009	V6NA		IP	•	•	•
XJ	2008-2009	V6NA		ISM	•	•	•
XJ	2008-2009	V6NA		NAV	•	•	•
XJ	2008-2009	V6NA		PAM	•	•	•
XJ	2008-2009	V6NA		PBM	•	•	•
XJ	2008-2009	V6NA		PCM	•	•	•
XJ	2008-2009	V6NA		RATC	•	•	•

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
XJ	2008-2009	V6NA		REM	●	●	●
XJ	2008-2009	V6NA		RETM	●	●	●
XJ	2008-2009	V6NA		RSM	●	●	●
XJ	2008-2009	V6NA		SCLM	●	●	●
XJ	2008-2009	V6NA		SRM	●	●	●
XJ	2008-2009	V6NA		TCM	●	●	●
XJ	2008-2009	V6NA		TPM	●	●	●
XJ	2008-2009	V6NA		VACM	●	●	●
XJ	2008-2009	V8NA		ABS	●	●	●
XJ	2008-2009	V8NA		ACC	●	●	●
XJ	2008-2009	V8NA		AMP	●	●	●
XJ	2008-2009	V8NA		ARM	●	●	●
XJ	2008-2009	V8NA		ASU	●	●	●
XJ	2008-2009	V8NA		ATC	●	●	●
XJ	2008-2009	V8NA		CPM	●	●	●
XJ	2008-2009	V8NA		DABM	●	●	●
XJ	2008-2009	V8NA		DACMC	●	●	●
XJ	2008-2009	V8NA		DCSM	●	●	●
XJ	2008-2009	V8NA		DDM	●	●	●
XJ	2008-2009	V8NA		DSM	●	●	●
XJ	2008-2009	V8NA		FETM	●	●	●
XJ	2008-2009	V8NA		GEM	●	●	●
XJ	2008-2009	V8NA		GWM	●	●	●
XJ	2008-2009	V8NA		IP	●	●	●
XJ	2008-2009	V8NA		ISM	●	●	●
XJ	2008-2009	V8NA		NAV	●	●	●
XJ	2008-2009	V8NA		PAM	●	●	●
XJ	2008-2009	V8NA		PBM	●	●	●
XJ	2008-2009	V8NA		PCM	●	●	●
XJ	2008-2009	V8NA		RATC	●	●	●
XJ	2008-2009	V8NA		REM	●	●	●
XJ	2008-2009	V8NA		RETM	●	●	●
XJ	2008-2009	V8NA		RSM	●	●	●
XJ	2008-2009	V8NA		SCLM	●	●	●
XJ	2008-2009	V8NA		SRM	●	●	●
XJ	2008-2009	V8NA		TCM	●	●	●
XJ	2008-2009	V8NA		TPM	●	●	●
XJ	2008-2009	V8NA		VACM	●	●	●
XJ	2008-2009	V8SC		ABS	●	●	●
XJ	2008-2009	V8SC		ACC	●	●	●
XJ	2008-2009	V8SC		AMP	●	●	●
XJ	2008-2009	V8SC		ARM	●	●	●
XJ	2008-2009	V8SC		ASU	●	●	●
XJ	2008-2009	V8SC		ATC	●	●	●
XJ	2008-2009	V8SC		CPM	●	●	●
XJ	2008-2009	V8SC		DABM	●	●	●
XJ	2008-2009	V8SC		DACMC	●	●	●
XJ	2008-2009	V8SC		DCSM	●	●	●
XJ	2008-2009	V8SC		DDM	●	●	●
XJ	2008-2009	V8SC		DSM	●	●	●
XJ	2008-2009	V8SC		FETM	●	●	●
XJ	2008-2009	V8SC		GEM	●	●	●
XJ	2008-2009	V8SC		GWM	●	●	●
XJ	2008-2009	V8SC		IP	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
XJ	2008-2009	V8SC		ISM	●	●	●
XJ	2008-2009	V8SC		NAV	●	●	●
XJ	2008-2009	V8SC		PAM	●	●	●
XJ	2008-2009	V8SC		PBM	●	●	●
XJ	2008-2009	V8SC		PCM	●	●	●
XJ	2008-2009	V8SC		RATC	●	●	●
XJ	2008-2009	V8SC		REM	●	●	●
XJ	2008-2009	V8SC		RETM	●	●	●
XJ	2008-2009	V8SC		RSM	●	●	●
XJ	2008-2009	V8SC		SCLM	●	●	●
XJ	2008-2009	V8SC		SRM	●	●	●
XJ	2008-2009	V8SC		TCM	●	●	●
XJ	2008-2009	V8SC		TPM	●	●	●
XJ	2008-2009	V8SC		VACM	●	●	●
XJ	2010-2012	V6DIESEL		AAM	●	●	●
XJ	2010-2012	V6DIESEL		ABS	●	●	●
XJ	2010-2012	V6DIESEL		ACM	●	●	●
XJ	2010-2012	V6DIESEL		ADCM	●	●	●
XJ	2010-2012	V6DIESEL		BCM	●	●	●
XJ	2010-2012	V6DIESEL		CCM	●	●	●
XJ	2010-2012	V6DIESEL		CHCM	●	●	●
XJ	2010-2012	V6DIESEL		DABM	●	●	●
XJ	2010-2012	V6DIESEL		DCSM	●	●	●
XJ	2010-2012	V6DIESEL		DDM	●	●	●
XJ	2010-2012	V6DIESEL		DSM	●	●	●
XJ	2010-2012	V6DIESEL		FCDIM	●	●	●
XJ	2010-2012	V6DIESEL		FCIMB	●	●	●
XJ	2010-2012	V6DIESEL		GSM	●	●	●
XJ	2010-2012	V6DIESEL		HCM	●	●	●
XJ	2010-2012	V6DIESEL		HVAC	●	●	●
XJ	2010-2012	V6DIESEL		IPC	●	●	●
XJ	2010-2012	V6DIESEL		KVM	●	●	●
XJ	2010-2012	V6DIESEL		OCS	●	●	●
XJ	2010-2012	V6DIESEL		PAM	●	●	●
XJ	2010-2012	V6DIESEL		PBM	●	●	●
XJ	2010-2012	V6DIESEL		PCM	●	●	●
XJ	2010-2012	V6DIESEL		PDM	●	●	●
XJ	2010-2012	V6DIESEL		PSM	●	●	●
XJ	2010-2012	V6DIESEL		RCM	●	●	●
XJ	2010-2012	V6DIESEL		RDCM	●	●	●
XJ	2010-2012	V6DIESEL		RDCSM	●	●	●
XJ	2010-2012	V6DIESEL		REM	●	●	●
XJ	2010-2012	V6DIESEL		RGTM	●	●	●
XJ	2010-2012	V6DIESEL		RHVAC	●	●	●
XJ	2010-2012	V6DIESEL		RLM	●	●	●
XJ	2010-2012	V6DIESEL		SODL	●	●	●
XJ	2010-2012	V6DIESEL		SODR	●	●	●
XJ	2010-2012	V6DIESEL		SPMA	●	●	●
XJ	2010-2012	V6DIESEL		SPMB	●	●	●
XJ	2010-2012	V6DIESEL		SRM	●	●	●
XJ	2010-2012	V6DIESEL		TCM	●	●	●
XJ	2010-2012	V6DIESEL		TVM	●	●	●
XJ	2010-2012	V6DIESEL		VIM	●	●	●
XJ	2010-2012	V8NA		AAM	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
XJ	2010-2012	V8NA		ABS	●	●	●
XJ	2010-2012	V8NA		ACM	●	●	●
XJ	2010-2012	V8NA		ADCM	●	●	●
XJ	2010-2012	V8NA		BCM	●	●	●
XJ	2010-2012	V8NA		CCM	●	●	●
XJ	2010-2012	V8NA		CHCM	●	●	●
XJ	2010-2012	V8NA		DABM	●	●	●
XJ	2010-2012	V8NA		DCSM	●	●	●
XJ	2010-2012	V8NA		DDM	●	●	●
XJ	2010-2012	V8NA		DSM	●	●	●
XJ	2010-2012	V8NA		FCDIM	●	●	●
XJ	2010-2012	V8NA		FCIMB	●	●	●
XJ	2010-2012	V8NA		GSM	●	●	●
XJ	2010-2012	V8NA		HCMB	●	●	●
XJ	2010-2012	V8NA		HCM	●	●	●
XJ	2010-2012	V8NA		HVAC	●	●	●
XJ	2010-2012	V8NA		IPC	●	●	●
XJ	2010-2012	V8NA		KVM	●	●	●
XJ	2010-2012	V8NA		OCS	●	●	●
XJ	2010-2012	V8NA		PAM	●	●	●
XJ	2010-2012	V8NA		PBM	●	●	●
XJ	2010-2012	V8NA		PCM	●	●	●
XJ	2010-2012	V8NA		PDM	●	●	●
XJ	2010-2012	V8NA		PSM	●	●	●
XJ	2010-2012	V8NA		RCM	●	●	●
XJ	2010-2012	V8NA		RDCM	●	●	●
XJ	2010-2012	V8NA		RDCSM	●	●	●
XJ	2010-2012	V8NA		REM	●	●	●
XJ	2010-2012	V8NA		RGTM	●	●	●
XJ	2010-2012	V8NA		RHVAC	●	●	●
XJ	2010-2012	V8NA		RLM	●	●	●
XJ	2010-2012	V8NA		SODL	●	●	●
XJ	2010-2012	V8NA		SODR	●	●	●
XJ	2010-2012	V8NA		SPMA	●	●	●
XJ	2010-2012	V8NA		SPMB	●	●	●
XJ	2010-2012	V8NA		SRM	●	●	●
XJ	2010-2012	V8NA		TCM	●	●	●
XJ	2010-2012	V8NA		TVM	●	●	●
XJ	2010-2012	V8NA		VIM	●	●	●
XJ	2010-2012	V8SC		AAM	●	●	●
XJ	2010-2012	V8SC		ABS	●	●	●
XJ	2010-2012	V8SC		ACM	●	●	●
XJ	2010-2012	V8SC		ADCM	●	●	●
XJ	2010-2012	V8SC		BCM	●	●	●
XJ	2010-2012	V8SC		CCM	●	●	●
XJ	2010-2012	V8SC		CHCM	●	●	●
XJ	2010-2012	V8SC		DABM	●	●	●
XJ	2010-2012	V8SC		DCSM	●	●	●
XJ	2010-2012	V8SC		DDM	●	●	●
XJ	2010-2012	V8SC		DSM	●	●	●
XJ	2010-2012	V8SC		FCDIM	●	●	●
XJ	2010-2012	V8SC		FCIMB	●	●	●
XJ	2010-2012	V8SC		GSM	●	●	●
XJ	2010-2012	V8SC		HCMB	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
XJ	2010-2012	V8SC		HCM	•	•	•
XJ	2010-2012	V8SC		HVAC	•	•	•
XJ	2010-2012	V8SC		IPC	•	•	•
XJ	2010-2012	V8SC		KVM	•	•	•
XJ	2010-2012	V8SC		OCS	•	•	•
XJ	2010-2012	V8SC		PAM	•	•	•
XJ	2010-2012	V8SC		PBM	•	•	•
XJ	2010-2012	V8SC		PCM	•	•	•
XJ	2010-2012	V8SC		PDM	•	•	•
XJ	2010-2012	V8SC		PSM	•	•	•
XJ	2010-2012	V8SC		RCM	•	•	•
XJ	2010-2012	V8SC		RDCM	•	•	•
XJ	2010-2012	V8SC		RDCSM	•	•	•
XJ	2010-2012	V8SC		REM	•	•	•
XJ	2010-2012	V8SC		RGTM	•	•	•
XJ	2010-2012	V8SC		RHVAC	•	•	•
XJ	2010-2012	V8SC		RLM	•	•	•
XJ	2010-2012	V8SC		SODL	•	•	•
XJ	2010-2012	V8SC		SODR	•	•	•
XJ	2010-2012	V8SC		SPMA	•	•	•
XJ	2010-2012	V8SC		SPMB	•	•	•
XJ	2010-2012	V8SC		SRM	•	•	•
XJ	2010-2012	V8SC		TCM	•	•	•
XJ	2010-2012	V8SC		TVM	•	•	•
XJ	2010-2012	V8SC		VIM	•	•	•
XJ	2013-2015			ABS	•	•	•
XJ	2013-2015			BCM	•	•	•
XJ	2013-2015			CCM	•	•	•
XJ	2013-2015			CHCM	•	•	•
XJ	2013-2015			GSM	•	•	•
XJ	2013-2015			GWM	•	•	•
XJ	2013-2015			HCM	•	•	•
XJ	2013-2015			IPC	•	•	•
XJ	2013-2015			OCS	•	•	•
XJ	2013-2015			PBM	•	•	•
XJ	2013-2015			PCM	•	•	•
XJ	2013-2015			RCM	•	•	•
XJ	2013-2015			RDCM	•	•	•
XJ	2013-2015			RLM	•	•	•
XJ	2013-2015			SPMA	•	•	•
XJ	2013-2015			SPMB	•	•	•
XJ	2013-2015			SUMB	•	•	•
XJ	2013-2015			TCCM	•	•	•
XJ	2013-2015			TCM	•	•	•
XJ	2013-2015			VIM	•	•	•
XJ	2013-2015			CAV	•	•	•
XJ	2013-2015			DDM	•	•	•
XJ	2013-2015			DSM	•	•	•
XJ	2013-2015			FCDIM	•	•	•
XJ	2013-2015			FCIMB	•	•	•
XJ	2013-2015			Hcmb	•	•	•
XJ	2013-2015			Hvac	•	•	•
XJ	2013-2015			PAM	•	•	•
XJ	2013-2015			PDM	•	•	•

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
XJ	2013-2015			PSM	•	•	•
XJ	2013-2015			RFA	•	•	•
XJ	2013-2015			RGTM	•	•	•
XJ	2013-2015			RHVAC	•	•	•
XJ	2013-2015			RLSM	•	•	•
XJ	2013-2015			RRSM	•	•	•
XJ	2013-2015			SCME	•	•	•
XJ	2013-2015			SCMF	•	•	•
XJ	2013-2015			SODL	•	•	•
XJ	2013-2015			SODR	•	•	•
XJ	2013-2015			AAM	•	•	•
XJ	2013-2015			ACM	•	•	•
XJ	2013-2015			DABM	•	•	•
XJ	2013-2015			NCM	•	•	•
XJ	2013-2015			REM	•	•	•
XJ	2013-2015			SRM	•	•	•
XJ	2013-2015			TVM	•	•	•
XF	2008-2009	V6DIESEL		AAM	•	•	•
XF	2008-2009	V6DIESEL		ABS	•	•	•
XF	2008-2009	V6DIESEL		ACM	•	•	•
XF	2008-2009	V6DIESEL		ADCM	•	•	•
XF	2008-2009	V6DIESEL		APIM	•	•	•
XF	2008-2009	V6DIESEL		CCM	•	•	•
XF	2008-2009	V6DIESEL		DABM	•	•	•
XF	2008-2009	V6DIESEL		DCSM	•	•	•
XF	2008-2009	V6DIESEL		DDM	•	•	•
XF	2008-2009	V6DIESEL		DSM	•	•	•
XF	2008-2009	V6DIESEL		FCDIM	•	•	•
XF	2008-2009	V6DIESEL		FLR	•	•	•
XF	2008-2009	V6DIESEL		FSJB	•	•	•
XF	2008-2009	V6DIESEL		GSM	•	•	•
XF	2008-2009	V6DIESEL		HCM	•	•	•
XF	2008-2009	V6DIESEL		HVAC	•	•	•
XF	2008-2009	V6DIESEL		ICM	•	•	•
XF	2008-2009	V6DIESEL		ICP	•	•	•
XF	2008-2009	V6DIESEL		ICS	•	•	•
XF	2008-2009	V6DIESEL		IPC	•	•	•
XF	2008-2009	V6DIESEL		KVM	•	•	•
XF	2008-2009	V6DIESEL		NCM	•	•	•
XF	2008-2009	V6DIESEL		OCS	•	•	•
XF	2008-2009	V6DIESEL		PAM	•	•	•
XF	2008-2009	V6DIESEL		PBM	•	•	•
XF	2008-2009	V6DIESEL		PCM	•	•	•
XF	2008-2009	V6DIESEL		PDM	•	•	•
XF	2008-2009	V6DIESEL		RCM	•	•	•
XF	2008-2009	V6DIESEL		RSJB	•	•	•
XF	2008-2009	V6DIESEL		SODL	•	•	•
XF	2008-2009	V6DIESEL		SODR	•	•	•
XF	2008-2009	V6DIESEL		SRM	•	•	•
XF	2008-2009	V6DIESEL		TCM	•	•	•
XF	2008-2009	V6DIESEL		TEL	•	•	•
XF	2008-2009	V6DIESEL		TPM	•	•	•
XF	2008-2009	V6DIESEL		TVM	•	•	•
XF	2008-2009	V6DIESEL		VIM	•	•	•

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
XF	2008-2009	Normal aspirated V6		AAM	●	●	●
XF	2008-2009	Normal aspirated V6		ABS	●	●	●
XF	2008-2009	Normal aspirated V6		ACM	●	●	●
XF	2008-2009	Normal aspirated V6		ADCM	●	●	●
XF	2008-2009	Normal aspirated V6		APIIM	●	●	●
XF	2008-2009	Normal aspirated V6		CCM	●	●	●
XF	2008-2009	Normal aspirated V6		DABM	●	●	●
XF	2008-2009	Normal aspirated V6		DCSM	●	●	●
XF	2008-2009	Normal aspirated V6		DDM	●	●	●
XF	2008-2009	Normal aspirated V6		DSM	●	●	●
XF	2008-2009	Normal aspirated V6		FCDIM	●	●	●
XF	2008-2009	Normal aspirated V6		FLR	●	●	●
XF	2008-2009	Normal aspirated V6		FSJB	●	●	●
XF	2008-2009	Normal aspirated V6		GSM	●	●	●
XF	2008-2009	Normal aspirated V6		HCM	●	●	●
XF	2008-2009	Normal aspirated V6		HVAC	●	●	●
XF	2008-2009	Normal aspirated V6		ICM	●	●	●
XF	2008-2009	Normal aspirated V6		ICP	●	●	●
XF	2008-2009	Normal aspirated V6		ICS	●	●	●
XF	2008-2009	Normal aspirated V6		IPC	●	●	●
XF	2008-2009	Normal aspirated V6		KVM	●	●	●
XF	2008-2009	Normal aspirated V6		NCM	●	●	●
XF	2008-2009	Normal aspirated V6		OCS	●	●	●
XF	2008-2009	Normal aspirated V6		PAM	●	●	●
XF	2008-2009	Normal aspirated V6		PBM	●	●	●
XF	2008-2009	Normal aspirated V6		PCM	●	●	●
XF	2008-2009	Normal aspirated V6		PDM	●	●	●
XF	2008-2009	Normal aspirated V6		RCM	●	●	●
XF	2008-2009	Normal aspirated V6		RSJB	●	●	●
XF	2008-2009	Normal aspirated V6		SODL	●	●	●
XF	2008-2009	Normal aspirated V6		SODR	●	●	●
XF	2008-2009	Normal aspirated V6		SRM	●	●	●
XF	2008-2009	Normal aspirated V6		TCM	●	●	●
XF	2008-2009	Normal aspirated V6		TEL	●	●	●
XF	2008-2009	Normal aspirated V6		TPM	●	●	●
XF	2008-2009	Normal aspirated V6		TVM	●	●	●
XF	2008-2009	Normal aspirated V6		VIM	●	●	●
XF	2008-2009	V8SC		AAM	●	●	●
XF	2008-2009	V8SC		ABS	●	●	●
XF	2008-2009	V8SC		ACM	●	●	●
XF	2008-2009	V8SC		ADCM	●	●	●
XF	2008-2009	V8SC		APIIM	●	●	●
XF	2008-2009	V8SC		CCM	●	●	●
XF	2008-2009	V8SC		DABM	●	●	●
XF	2008-2009	V8SC		DCSM	●	●	●
XF	2008-2009	V8SC		DDM	●	●	●
XF	2008-2009	V8SC		DSM	●	●	●
XF	2008-2009	V8SC		FCDIM	●	●	●
XF	2008-2009	V8SC		FLR	●	●	●
XF	2008-2009	V8SC		FSJB	●	●	●
XF	2008-2009	V8SC		GSM	●	●	●
XF	2008-2009	V8SC		HCM	●	●	●
XF	2008-2009	V8SC		HVAC	●	●	●
XF	2008-2009	V8SC		ICM	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
XF	2008-2009	V8SC		ICP	●	●	●
XF	2008-2009	V8SC		ICS	●	●	●
XF	2008-2009	V8SC		IPC	●	●	●
XF	2008-2009	V8SC		KVM	●	●	●
XF	2008-2009	V8SC		NCM	●	●	●
XF	2008-2009	V8SC		OCS	●	●	●
XF	2008-2009	V8SC		PAM	●	●	●
XF	2008-2009	V8SC		PBM	●	●	●
XF	2008-2009	V8SC		PCM	●	●	●
XF	2008-2009	V8SC		PDM	●	●	●
XF	2008-2009	V8SC		RCM	●	●	●
XF	2008-2009	V8SC		RSJB	●	●	●
XF	2008-2009	V8SC		SODL	●	●	●
XF	2008-2009	V8SC		SODR	●	●	●
XF	2008-2009	V8SC		SRM	●	●	●
XF	2008-2009	V8SC		TCM	●	●	●
XF	2008-2009	V8SC		TEL	●	●	●
XF	2008-2009	V8SC		TPM	●	●	●
XF	2008-2009	V8SC		TVM	●	●	●
XF	2008-2009	V8SC		VIM	●	●	●
XF	2008-2009	V8NA		AAM	●	●	●
XF	2008-2009	V8NA		ABS	●	●	●
XF	2008-2009	V8NA		ACM	●	●	●
XF	2008-2009	V8NA		ADCM	●	●	●
XF	2008-2009	V8NA		APIM	●	●	●
XF	2008-2009	V8NA		CCM	●	●	●
XF	2008-2009	V8NA		DABM	●	●	●
XF	2008-2009	V8NA		DCSM	●	●	●
XF	2008-2009	V8NA		DDM	●	●	●
XF	2008-2009	V8NA		DSM	●	●	●
XF	2008-2009	V8NA		FCDIM	●	●	●
XF	2008-2009	V8NA		FLR	●	●	●
XF	2008-2009	V8NA		FSJB	●	●	●
XF	2008-2009	V8NA		GSM	●	●	●
XF	2008-2009	V8NA		HCM	●	●	●
XF	2008-2009	V8NA		HVAC	●	●	●
XF	2008-2009	V8NA		ICM	●	●	●
XF	2008-2009	V8NA		ICP	●	●	●
XF	2008-2009	V8NA		ICS	●	●	●
XF	2008-2009	V8NA		IPC	●	●	●
XF	2008-2009	V8NA		KVM	●	●	●
XF	2008-2009	V8NA		NCM	●	●	●
XF	2008-2009	V8NA		OCS	●	●	●
XF	2008-2009	V8NA		PAM	●	●	●
XF	2008-2009	V8NA		PBM	●	●	●
XF	2008-2009	V8NA		PCM	●	●	●
XF	2008-2009	V8NA		PDM	●	●	●
XF	2008-2009	V8NA		RCM	●	●	●
XF	2008-2009	V8NA		RSJB	●	●	●
XF	2008-2009	V8NA		SODL	●	●	●
XF	2008-2009	V8NA		SODR	●	●	●
XF	2008-2009	V8NA		SRM	●	●	●
XF	2008-2009	V8NA		TCM	●	●	●
XF	2008-2009	V8NA		TEL	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
XF	2008-2009	V8NA		TPM	•	•	•
XF	2008-2009	V8NA		TVM	•	•	•
XF	2008-2009	V8NA		VIM	•	•	•
XF	2010-2011	V6DIESEL		AAM	•	•	•
XF	2010-2011	V6DIESEL		ABS	•	•	•
XF	2010-2011	V6DIESEL		ACM	•	•	•
XF	2010-2011	V6DIESEL		ADCM	•	•	•
XF	2010-2011	V6DIESEL		APIM	•	•	•
XF	2010-2011	V6DIESEL		CCM	•	•	•
XF	2010-2011	V6DIESEL		DABM	•	•	•
XF	2010-2011	V6DIESEL		DACMC	•	•	•
XF	2010-2011	V6DIESEL		DCSM	•	•	•
XF	2010-2011	V6DIESEL		DDM	•	•	•
XF	2010-2011	V6DIESEL		DSM	•	•	•
XF	2010-2011	V6DIESEL		FCDIM	•	•	•
XF	2010-2011	V6DIESEL		FLR	•	•	•
XF	2010-2011	V6DIESEL		FSJB	•	•	•
XF	2010-2011	V6DIESEL		GSM	•	•	•
XF	2010-2011	V6DIESEL		HCM	•	•	•
XF	2010-2011	V6DIESEL		HVAC	•	•	•
XF	2010-2011	V6DIESEL		ICM	•	•	•
XF	2010-2011	V6DIESEL		ICP	•	•	•
XF	2010-2011	V6DIESEL		ICS	•	•	•
XF	2010-2011	V6DIESEL		IPC	•	•	•
XF	2010-2011	V6DIESEL		KVM	•	•	•
XF	2010-2011	V6DIESEL		NCM	•	•	•
XF	2010-2011	V6DIESEL		OCS	•	•	•
XF	2010-2011	V6DIESEL		PAM	•	•	•
XF	2010-2011	V6DIESEL		PBM	•	•	•
XF	2010-2011	V6DIESEL		PCM	•	•	•
XF	2010-2011	V6DIESEL		PDM	•	•	•
XF	2010-2011	V6DIESEL		RCM	•	•	•
XF	2010-2011	V6DIESEL		RDCM	•	•	•
XF	2010-2011	V6DIESEL		RSJB	•	•	•
XF	2010-2011	V6DIESEL		SODL	•	•	•
XF	2010-2011	V6DIESEL		SODR	•	•	•
XF	2010-2011	V6DIESEL		SRM	•	•	•
XF	2010-2011	V6DIESEL		TCM	•	•	•
XF	2010-2011	V6DIESEL		TEL	•	•	•
XF	2010-2011	V6DIESEL		TPM	•	•	•
XF	2010-2011	V6DIESEL		TVM	•	•	•
XF	2010-2011	V6DIESEL		VIM	•	•	•
XF	2010-2011	Normal aspirated V6		AAM	•	•	•
XF	2010-2011	Normal aspirated V6		ABS	•	•	•
XF	2010-2011	Normal aspirated V6		ACM	•	•	•
XF	2010-2011	Normal aspirated V6		ADCM	•	•	•
XF	2010-2011	Normal aspirated V6		APIM	•	•	•
XF	2010-2011	Normal aspirated V6		CCM	•	•	•
XF	2010-2011	Normal aspirated V6		DABM	•	•	•
XF	2010-2011	Normal aspirated V6		DACMC	•	•	•
XF	2010-2011	Normal aspirated V6		DCSM	•	•	•
XF	2010-2011	Normal aspirated V6		DDM	•	•	•
XF	2010-2011	Normal aspirated V6		DSM	•	•	•
XF	2010-2011	Normal aspirated V6		FCDIM	•	•	•

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
XF	2010-2011	Normal aspirated V6		FLR	●	●	●
XF	2010-2011	Normal aspirated V6		FSJB	●	●	●
XF	2010-2011	Normal aspirated V6		GSM	●	●	●
XF	2010-2011	Normal aspirated V6		HCM	●	●	●
XF	2010-2011	Normal aspirated V6		HVAC	●	●	●
XF	2010-2011	Normal aspirated V6		ICM	●	●	●
XF	2010-2011	Normal aspirated V6		ICP	●	●	●
XF	2010-2011	Normal aspirated V6		ICS	●	●	●
XF	2010-2011	Normal aspirated V6		IPC	●	●	●
XF	2010-2011	Normal aspirated V6		KVM	●	●	●
XF	2010-2011	Normal aspirated V6		NCM	●	●	●
XF	2010-2011	Normal aspirated V6		OCS	●	●	●
XF	2010-2011	Normal aspirated V6		PAM	●	●	●
XF	2010-2011	Normal aspirated V6		PBM	●	●	●
XF	2010-2011	Normal aspirated V6		PCM	●	●	●
XF	2010-2011	Normal aspirated V6		PDM	●	●	●
XF	2010-2011	Normal aspirated V6		RCM	●	●	●
XF	2010-2011	Normal aspirated V6		RDCM	●	●	●
XF	2010-2011	Normal aspirated V6		RSJB	●	●	●
XF	2010-2011	Normal aspirated V6		SODL	●	●	●
XF	2010-2011	Normal aspirated V6		SODR	●	●	●
XF	2010-2011	Normal aspirated V6		SRM	●	●	●
XF	2010-2011	Normal aspirated V6		TCM	●	●	●
XF	2010-2011	Normal aspirated V6		TEL	●	●	●
XF	2010-2011	Normal aspirated V6		TPM	●	●	●
XF	2010-2011	Normal aspirated V6		TVM	●	●	●
XF	2010-2011	Normal aspirated V6		VIM	●	●	●
XF	2010-2011	Supercharged V8		AAM	●	●	●
XF	2010-2011	Supercharged V8		ABS	●	●	●
XF	2010-2011	Supercharged V8		ACM	●	●	●
XF	2010-2011	Supercharged V8		ADCM	●	●	●
XF	2010-2011	Supercharged V8		APIM	●	●	●
XF	2010-2011	Supercharged V8		CCM	●	●	●
XF	2010-2011	Supercharged V8		DABM	●	●	●
XF	2010-2011	Supercharged V8		DACMC	●	●	●
XF	2010-2011	Supercharged V8		DCSM	●	●	●
XF	2010-2011	Supercharged V8		DDM	●	●	●
XF	2010-2011	Supercharged V8		DSM	●	●	●
XF	2010-2011	Supercharged V8		FCDIM	●	●	●
XF	2010-2011	Supercharged V8		FLR	●	●	●
XF	2010-2011	Supercharged V8		FSJB	●	●	●
XF	2010-2011	Supercharged V8		GSM	●	●	●
XF	2010-2011	Supercharged V8		HCM	●	●	●
XF	2010-2011	Supercharged V8		HVAC	●	●	●
XF	2010-2011	Supercharged V8		ICM	●	●	●
XF	2010-2011	Supercharged V8		ICP	●	●	●
XF	2010-2011	Supercharged V8		ICS	●	●	●
XF	2010-2011	Supercharged V8		IPC	●	●	●
XF	2010-2011	Supercharged V8		KVM	●	●	●
XF	2010-2011	Supercharged V8		NCM	●	●	●
XF	2010-2011	Supercharged V8		OCS	●	●	●
XF	2010-2011	Supercharged V8		PAM	●	●	●
XF	2010-2011	Supercharged V8		PBM	●	●	●
XF	2010-2011	Supercharged V8		PCM	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
XF	2010-2011	Supercharged V8		PDM	•	•	•
XF	2010-2011	Supercharged V8		RCM	•	•	•
XF	2010-2011	Supercharged V8		RDCM	•	•	•
XF	2010-2011	Supercharged V8		RSJB	•	•	•
XF	2010-2011	Supercharged V8		SODL	•	•	•
XF	2010-2011	Supercharged V8		SODR	•	•	•
XF	2010-2011	Supercharged V8		SRM	•	•	•
XF	2010-2011	Supercharged V8		TCM	•	•	•
XF	2010-2011	Supercharged V8		TEL	•	•	•
XF	2010-2011	Supercharged V8		TPM	•	•	•
XF	2010-2011	Supercharged V8		TVM	•	•	•
XF	2010-2011	Supercharged V8		VIM	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	AAM	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	ABS	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	ACM	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	ADCM	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	APIM	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	CCM	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	DABM	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	DACMC	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	DCSM	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	DDM	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	DSM	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	FCDIM	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	FLR	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	FSJB	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	GSM	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	HCM	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	HVAC	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	ICM	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	ICP	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	ICS	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	IPC	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	KVM	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	NCM	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	OCS	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	PAM	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	PBM	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	PCM	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	PDM	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	RCM	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	RDCM	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	RSJB	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	SODL	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	SODR	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	SRM	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	TCM	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	TEL	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	TPM	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	TVM	•	•	•
XF	2010-2011	Normal aspirated V8	4.2L	VIM	•	•	•
XF	2010-2011	Normal aspirated V8	5L	AAM	•	•	•
XF	2010-2011	Normal aspirated V8	5L	ABS	•	•	•
XF	2010-2011	Normal aspirated V8	5L	ACM	•	•	•

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
XF	2010-2011	Normal aspirated V8	5L	ADCM	●	●	●
XF	2010-2011	Normal aspirated V8	5L	APIM	●	●	●
XF	2010-2011	Normal aspirated V8	5L	CCM	●	●	●
XF	2010-2011	Normal aspirated V8	5L	DABM	●	●	●
XF	2010-2011	Normal aspirated V8	5L	DACMC	●	●	●
XF	2010-2011	Normal aspirated V8	5L	DCSM	●	●	●
XF	2010-2011	Normal aspirated V8	5L	DDM	●	●	●
XF	2010-2011	Normal aspirated V8	5L	DSM	●	●	●
XF	2010-2011	Normal aspirated V8	5L	FCDIM	●	●	●
XF	2010-2011	Normal aspirated V8	5L	FLR	●	●	●
XF	2010-2011	Normal aspirated V8	5L	FSJB	●	●	●
XF	2010-2011	Normal aspirated V8	5L	GSM	●	●	●
XF	2010-2011	Normal aspirated V8	5L	HCM	●	●	●
XF	2010-2011	Normal aspirated V8	5L	HVAC	●	●	●
XF	2010-2011	Normal aspirated V8	5L	ICM	●	●	●
XF	2010-2011	Normal aspirated V8	5L	ICP	●	●	●
XF	2010-2011	Normal aspirated V8	5L	ICS	●	●	●
XF	2010-2011	Normal aspirated V8	5L	IPC	●	●	●
XF	2010-2011	Normal aspirated V8	5L	KVM	●	●	●
XF	2010-2011	Normal aspirated V8	5L	NCM	●	●	●
XF	2010-2011	Normal aspirated V8	5L	OCS	●	●	●
XF	2010-2011	Normal aspirated V8	5L	PAM	●	●	●
XF	2010-2011	Normal aspirated V8	5L	PBM	●	●	●
XF	2010-2011	Normal aspirated V8	5L	PCM	●	●	●
XF	2010-2011	Normal aspirated V8	5L	PDM	●	●	●
XF	2010-2011	Normal aspirated V8	5L	RCM	●	●	●
XF	2010-2011	Normal aspirated V8	5L	RDCM	●	●	●
XF	2010-2011	Normal aspirated V8	5L	RSJB	●	●	●
XF	2010-2011	Normal aspirated V8	5L	SODL	●	●	●
XF	2010-2011	Normal aspirated V8	5L	SODR	●	●	●
XF	2010-2011	Normal aspirated V8	5L	SRM	●	●	●
XF	2010-2011	Normal aspirated V8	5L	TCM	●	●	●
XF	2010-2011	Normal aspirated V8	5L	TEL	●	●	●
XF	2010-2011	Normal aspirated V8	5L	TPM	●	●	●
XF	2010-2011	Normal aspirated V8	5L	TVM	●	●	●
XF	2010-2011	Normal aspirated V8	5L	VIM	●	●	●
XF	2012			ABS	●	●	●
XF	2012			CCM	●	●	●
XF	2012			GSM	●	●	●
XF	2012			GWM	●	●	●
XF	2012			HCM	●	●	●
XF	2012			IPC	●	●	●
XF	2012			OCS	●	●	●
XF	2012			PBM	●	●	●
XF	2012			PCM	●	●	●
XF	2012			RCM	●	●	●
XF	2012			RDCM	●	●	●
XF	2012			SPMA	●	●	●
XF	2012			SPMB	●	●	●
XF	2012			SUMB	●	●	●
XF	2012			TCM	●	●	●
XF	2012			VIM	●	●	●
XF	2012			BCM	●	●	●
XF	2012			BCMB	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
XF	2012			DDM	●	●	●
XF	2012			DSM	●	●	●
XF	2012			FCDIM	●	●	●
XF	2012			FCIMB	●	●	●
XF	2012			HCMB	●	●	●
XF	2012			HVAC	●	●	●
XF	2012			PAM	●	●	●
XF	2012			PDM	●	●	●
XF	2012			PSM	●	●	●
XF	2012			RFA	●	●	●
XF	2012			SCME	●	●	●
XF	2012			SODL	●	●	●
XF	2012			SODR	●	●	●
XF	2012			TPM	●	●	●
XF	2012			AAM	●	●	●
XF	2012			ACM	●	●	●
XF	2012			DABM	●	●	●
XF	2012			NCM	●	●	●
XF	2012			SRM	●	●	●
XF	2012			TVM	●	●	●
XF	2013-2015			ABS	●	●	●
XF	2013-2015			CCM	●	●	●
XF	2013-2015			CHCM	●	●	●
XF	2013-2015			GSM	●	●	●
XF	2013-2015			GWM	●	●	●
XF	2013-2015			HCM	●	●	●
XF	2013-2015			IPC	●	●	●
XF	2013-2015			OCS	●	●	●
XF	2013-2015			PBM	●	●	●
XF	2013-2015			PCM	●	●	●
XF	2013-2015			RCM	●	●	●
XF	2013-2015			RDCM	●	●	●
XF	2013-2015			SPMA	●	●	●
XF	2013-2015			SPMB	●	●	●
XF	2013-2015			SUMB	●	●	●
XF	2013-2015			TCM	●	●	●
XF	2013-2015			VIM	●	●	●
XF	2013-2015			BCM	●	●	●
XF	2013-2015			BCMB	●	●	●
XF	2013-2015			CAV	●	●	●
XF	2013-2015			DDM	●	●	●
XF	2013-2015			DSM	●	●	●
XF	2013-2015			FCDIM	●	●	●
XF	2013-2015			FCIMB	●	●	●
XF	2013-2015			HCMB	●	●	●
XF	2013-2015			HVAC	●	●	●
XF	2013-2015			PAM	●	●	●
XF	2013-2015			PDM	●	●	●
XF	2013-2015			PSM	●	●	●
XF	2013-2015			RFA	●	●	●
XF	2013-2015			RGTM	●	●	●
XF	2013-2015			SCME	●	●	●
XF	2013-2015			SODL	●	●	●
XF	2013-2015			SODR	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
XF	2013-2015			TPM	•	•	•
XF	2013-2015			AAM	•	•	•
XF	2013-2015			ACM	•	•	•
XF	2013-2015			DABM	•	•	•
XF	2013-2015			NCM	•	•	•
XF	2013-2015			SRM	•	•	•
XF	2013-2015			TVM	•	•	•
XK	1997			ABS	•	•	•
XK	1997			ECM	•	•	•
XK	1997			IPK	•	•	•
XK	1997			TCM	•	•	•
XK	1997			DSM	•	•	•
XK	1997			PSM	•	•	•
XK	1997			SLM	•	•	•
XK	1997			PDM	•	•	•
XK	1997			DDM	•	•	•
XK	1997			BPM	•	•	•
XK	1997			ACM	•	•	•
XK	1997			CCM	•	•	•
XK	1997			ADS	•	•	•
XK	1997			KTM	•	•	•
XK	1998			ABS	•	•	•
XK	1998			ECM	•	•	•
XK	1998			IPK	•	•	•
XK	1998			TCM	•	•	•
XK	1998			DSM	•	•	•
XK	1998			PSM	•	•	•
XK	1998			SLM	•	•	•
XK	1998			PDM	•	•	•
XK	1998			DDM	•	•	•
XK	1998			BPM	•	•	•
XK	1998			ACM	•	•	•
XK	1998			CCM	•	•	•
XK	1998			ADS	•	•	•
XK	1998			KTM	•	•	•
XK	1999			ABS	•	•	•
XK	1999			ECM	•	•	•
XK	1999			IPK	•	•	•
XK	1999			TCM	•	•	•
XK	1999			DSM	•	•	•
XK	1999			PSM	•	•	•
XK	1999			SLM	•	•	•
XK	1999			PDM	•	•	•
XK	1999			DDM	•	•	•
XK	1999			BPM	•	•	•
XK	1999			ACM	•	•	•
XK	1999			CCM	•	•	•
XK	1999			ADS	•	•	•
XK	1999			KTM	•	•	•
XK	2000			ABS	•	•	•
XK	2000			ECM	•	•	•
XK	2000			IPK	•	•	•
XK	2000			TCM	•	•	•
XK	2000			ACC	•	•	•

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
XK	2000			SBC	•	•	•
XK	2000			DSM	•	•	•
XK	2000			PSM	•	•	•
XK	2000			SLM	•	•	•
XK	2000			PDM	•	•	•
XK	2000			DDM	•	•	•
XK	2000			BPM	•	•	•
XK	2000			CCM	•	•	•
XK	2000			ADS	•	•	•
XK	2000			ACM	•	•	•
XK	2000			KTM	•	•	•
XK	2001			ABS	•	•	•
XK	2001			ECM	•	•	•
XK	2001			IPK	•	•	•
XK	2001			TCM	•	•	•
XK	2001			ACC	•	•	•
XK	2001			SBC	•	•	•
XK	2001			DSM	•	•	•
XK	2001			PSM	•	•	•
XK	2001			SLM	•	•	•
XK	2001			PDM	•	•	•
XK	2001			DDM	•	•	•
XK	2001			BPM	•	•	•
XK	2001			DHM	•	•	•
XK	2001			PHM	•	•	•
XK	2001			CCM	•	•	•
XK	2001			ARM	•	•	•
XK	2001			KTM	•	•	•
XK	2001			ADS	•	•	•
XK	2002			ABS	•	•	•
XK	2002			ECM	•	•	•
XK	2002			IPK	•	•	•
XK	2002			TCM	•	•	•
XK	2002			ACC	•	•	•
XK	2002			SBC	•	•	•
XK	2002			DSM	•	•	•
XK	2002			PSM	•	•	•
XK	2002			SLM	•	•	•
XK	2002			PDM	•	•	•
XK	2002			DDM	•	•	•
XK	2002			BPM	•	•	•
XK	2002			DHM	•	•	•
XK	2002			PHM	•	•	•
XK	2002			CCM	•	•	•
XK	2002			ARM	•	•	•
XK	2002			KTM	•	•	•
XK	2002			ADS	•	•	•
XK	2003-2005			ABS	•	•	•
XK	2003-2005			ACC	•	•	•
XK	2003-2005			ADHLS_L	•	•	•
XK	2003-2005			ADHLS_R	•	•	•
XK	2003-2005			ADRC	•	•	•
XK	2003-2005			ARM	•	•	•
XK	2003-2005			ATC	•	•	•

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
XK	2003-2005			BPM	•	•	•
XK	2003-2005			DDM	•	•	•
XK	2003-2005			DHM	•	•	•
XK	2003-2005			DSM	•	•	•
XK	2003-2005			ECM	•	•	•
XK	2003-2005			IP	•	•	•
XK	2003-2005			PAM	•	•	•
XK	2003-2005			PDM	•	•	•
XK	2003-2005			PHM	•	•	•
XK	2003-2005			PSM	•	•	•
XK	2003-2005			SLM	•	•	•
XK	2003-2005			TCM	•	•	•
XK	2006-2009	Normal aspirated V8		ABS	•	•	•
XK	2006-2009	Normal aspirated V8		CCM	•	•	•
XK	2006-2009	Normal aspirated V8		ADCM	•	•	•
XK	2006-2009	Normal aspirated V8		HCM	•	•	•
XK	2006-2009	Normal aspirated V8		PCM	•	•	•
XK	2006-2009	Normal aspirated V8		VIM	•	•	•
XK	2006-2009	Normal aspirated V8		PBM	•	•	•
XK	2006-2009	Normal aspirated V8		IPC	•	•	•
XK	2006-2009	Normal aspirated V8		ICS	•	•	•
XK	2006-2009	Normal aspirated V8		RCM	•	•	•
XK	2006-2009	Normal aspirated V8		TCM	•	•	•
XK	2006-2009	Normal aspirated V8		DDM	•	•	•
XK	2006-2009	Normal aspirated V8		DSM	•	•	•
XK	2006-2009	Normal aspirated V8		FLR	•	•	•
XK	2006-2009	Normal aspirated V8		FSJB	•	•	•
XK	2006-2009	Normal aspirated V8		FTCM	•	•	•
XK	2006-2009	Normal aspirated V8		ICM	•	•	•
XK	2006-2009	Normal aspirated V8		ICP	•	•	•
XK	2006-2009	Normal aspirated V8		KVM	•	•	•
XK	2006-2009	Normal aspirated V8		PAM	•	•	•
XK	2006-2009	Normal aspirated V8		PDM	•	•	•
XK	2006-2009	Normal aspirated V8		PSM	•	•	•
XK	2006-2009	Normal aspirated V8		HVAC	•	•	•
XK	2006-2009	Normal aspirated V8		RSJB	•	•	•
XK	2006-2009	Normal aspirated V8		TPM	•	•	•
XK	2006-2009	Normal aspirated V8		FCDIM	•	•	•
XK	2006-2009	Normal aspirated V8		ACM	•	•	•
XK	2006-2009	Normal aspirated V8		AAM	•	•	•
XK	2006-2009	Normal aspirated V8		NCM	•	•	•
XK	2006-2009	Normal aspirated V8		SRM	•	•	•
XK	2006-2009	Normal aspirated V8		BPM	•	•	•
XK	2006-2009	Supercharged V8		ABS	•	•	•
XK	2006-2009	Supercharged V8		CCM	•	•	•
XK	2006-2009	Supercharged V8		ADCM	•	•	•
XK	2006-2009	Supercharged V8		HCM	•	•	•
XK	2006-2009	Supercharged V8		PCM	•	•	•
XK	2006-2009	Supercharged V8		VIM	•	•	•
XK	2006-2009	Supercharged V8		PBM	•	•	•
XK	2006-2009	Supercharged V8		IPC	•	•	•
XK	2006-2009	Supercharged V8		ICS	•	•	•
XK	2006-2009	Supercharged V8		RCM	•	•	•
XK	2006-2009	Supercharged V8		TCM	•	•	•

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
XK	2006-2009	Supercharged V8		DDM	●	●	●
XK	2006-2009	Supercharged V8		DSM	●	●	●
XK	2006-2009	Supercharged V8		FSJB	●	●	●
XK	2006-2009	Supercharged V8		FTCM	●	●	●
XK	2006-2009	Supercharged V8		ICM	●	●	●
XK	2006-2009	Supercharged V8		ICP	●	●	●
XK	2006-2009	Supercharged V8		KVM	●	●	●
XK	2006-2009	Supercharged V8		PAM	●	●	●
XK	2006-2009	Supercharged V8		PDM	●	●	●
XK	2006-2009	Supercharged V8		PSM	●	●	●
XK	2006-2009	Supercharged V8		HVAC	●	●	●
XK	2006-2009	Supercharged V8		RSJB	●	●	●
XK	2006-2009	Supercharged V8		TPM	●	●	●
XK	2006-2009	Supercharged V8		FCDIM	●	●	●
XK	2006-2009	Supercharged V8		ACM	●	●	●
XK	2006-2009	Supercharged V8		AAM	●	●	●
XK	2006-2009	Supercharged V8		NCM	●	●	●
XK	2006-2009	Supercharged V8		SRM	●	●	●
XK	2006-2009	Supercharged V8		BPM	●	●	●
XK	2006-2009	Supercharged V8		FLR	●	●	●
XK	2010-2015	Normal aspirated V8		AAM	●	●	●
XK	2010-2015	Normal aspirated V8		ABS	●	●	●
XK	2010-2015	Normal aspirated V8		ACM	●	●	●
XK	2010-2015	Normal aspirated V8		ADCM	●	●	●
XK	2010-2015	Normal aspirated V8		APIM	●	●	●
XK	2010-2015	Normal aspirated V8		BCM	●	●	●
XK	2010-2015	Normal aspirated V8		CCM	●	●	●
XK	2010-2015	Normal aspirated V8		DABM	●	●	●
XK	2010-2015	Normal aspirated V8		DACMC	●	●	●
XK	2010-2015	Normal aspirated V8		DCSM	●	●	●
XK	2010-2015	Normal aspirated V8		DDM	●	●	●
XK	2010-2015	Normal aspirated V8		DSM	●	●	●
XK	2010-2015	Normal aspirated V8		FCDIM	●	●	●
XK	2010-2015	Normal aspirated V8		FLR	●	●	●
XK	2010-2015	Normal aspirated V8		FSJB	●	●	●
XK	2010-2015	Normal aspirated V8		FTCM	●	●	●
XK	2010-2015	Normal aspirated V8		GSM	●	●	●
XK	2010-2015	Normal aspirated V8		HCM	●	●	●
XK	2010-2015	Normal aspirated V8		HVAC	●	●	●
XK	2010-2015	Normal aspirated V8		ICM	●	●	●
XK	2010-2015	Normal aspirated V8		ICP	●	●	●
XK	2010-2015	Normal aspirated V8		ICS	●	●	●
XK	2010-2015	Normal aspirated V8		IPC	●	●	●
XK	2010-2015	Normal aspirated V8		KVM	●	●	●
XK	2010-2015	Normal aspirated V8		NCM	●	●	●
XK	2010-2015	Normal aspirated V8		OCS	●	●	●
XK	2010-2015	Normal aspirated V8		PAM	●	●	●
XK	2010-2015	Normal aspirated V8		PBM	●	●	●
XK	2010-2015	Normal aspirated V8		PCM	●	●	●
XK	2010-2015	Normal aspirated V8		PDM	●	●	●
XK	2010-2015	Normal aspirated V8		PSM	●	●	●
XK	2010-2015	Normal aspirated V8		RCM	●	●	●
XK	2010-2015	Normal aspirated V8		RDCM	●	●	●
XK	2010-2015	Normal aspirated V8		RSJB	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
XK	2010-2015	Normal aspirated V8		SRM	●	●	●
XK	2010-2015	Normal aspirated V8		TCM	●	●	●
XK	2010-2015	Normal aspirated V8		TEL	●	●	●
XK	2010-2015	Normal aspirated V8		TPM	●	●	●
XK	2010-2015	Normal aspirated V8		VIM	●	●	●
XK	2010-2015	Supercharged V8		AAM	●	●	●
XK	2010-2015	Supercharged V8		ABS	●	●	●
XK	2010-2015	Supercharged V8		ACM	●	●	●
XK	2010-2015	Supercharged V8		ADCM	●	●	●
XK	2010-2015	Supercharged V8		APIM	●	●	●
XK	2010-2015	Supercharged V8		BCM	●	●	●
XK	2010-2015	Supercharged V8		CCM	●	●	●
XK	2010-2015	Supercharged V8		DABM	●	●	●
XK	2010-2015	Supercharged V8		DACMC	●	●	●
XK	2010-2015	Supercharged V8		DCSM	●	●	●
XK	2010-2015	Supercharged V8		DDM	●	●	●
XK	2010-2015	Supercharged V8		DSM	●	●	●
XK	2010-2015	Supercharged V8		FCDIM	●	●	●
XK	2010-2015	Supercharged V8		FLR	●	●	●
XK	2010-2015	Supercharged V8		FSJB	●	●	●
XK	2010-2015	Supercharged V8		FTCM	●	●	●
XK	2010-2015	Supercharged V8		GSM	●	●	●
XK	2010-2015	Supercharged V8		HCM	●	●	●
XK	2010-2015	Supercharged V8		HVAC	●	●	●
XK	2010-2015	Supercharged V8		ICM	●	●	●
XK	2010-2015	Supercharged V8		ICP	●	●	●
XK	2010-2015	Supercharged V8		ICS	●	●	●
XK	2010-2015	Supercharged V8		IPC	●	●	●
XK	2010-2015	Supercharged V8		KVM	●	●	●
XK	2010-2015	Supercharged V8		NCM	●	●	●
XK	2010-2015	Supercharged V8		OCS	●	●	●
XK	2010-2015	Supercharged V8		PAM	●	●	●
XK	2010-2015	Supercharged V8		PBM	●	●	●
XK	2010-2015	Supercharged V8		PCM	●	●	●
XK	2010-2015	Supercharged V8		PDM	●	●	●
XK	2010-2015	Supercharged V8		PSM	●	●	●
XK	2010-2015	Supercharged V8		RCM	●	●	●
XK	2010-2015	Supercharged V8		RDCM	●	●	●
XK	2010-2015	Supercharged V8		RSJB	●	●	●
XK	2010-2015	Supercharged V8		SRM	●	●	●
XK	2010-2015	Supercharged V8		TCM	●	●	●
XK	2010-2015	Supercharged V8		TEL	●	●	●
XK	2010-2015	Supercharged V8		TPM	●	●	●
XK	2010-2015	Supercharged V8		VIM	●	●	●
F_TYPE	2014-2015	V8SC		ABS	●	●	●
F_TYPE	2014-2015	V8SC		ATCM	●	●	●
F_TYPE	2014-2015	V8SC		BCM	●	●	●
F_TYPE	2014-2015	V8SC		CHCM	●	●	●
F_TYPE	2014-2015	V8SC		FTCM	●	●	●
F_TYPE	2014-2015	V8SC		FTCMB	●	●	●
F_TYPE	2014-2015	V8SC		GSM	●	●	●
F_TYPE	2014-2015	V8SC		GWM	●	●	●
F_TYPE	2014-2015	V8SC		HCM	●	●	●
F_TYPE	2014-2015	V8SC		IPC	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
F_TYPE	2014-2015	V8SC		OCS	•	•	•
F_TYPE	2014-2015	V8SC		PAM	•	•	•
F_TYPE	2014-2015	V8SC		PBM	•	•	•
F_TYPE	2014-2015	V8SC		PCM	•	•	•
F_TYPE	2014-2015	V8SC		PCM	•	•	•
F_TYPE	2014-2015	V8SC		RCM	•	•	•
F_TYPE	2014-2015	V8SC		RDCM	•	•	•
F_TYPE	2014-2015	V8SC		TCM	•	•	•
F_TYPE	2014-2015	V8SC		VIM	•	•	•
F_TYPE	2014-2015	V8SC		DDM	•	•	•
F_TYPE	2014-2015	V8SC		DSM	•	•	•
F_TYPE	2014-2015	V8SC		FCDIM	•	•	•
F_TYPE	2014-2015	V8SC		FCIM	•	•	•
F_TYPE	2014-2015	V8SC		HCM ^B	•	•	•
F_TYPE	2014-2015	V8SC		HVAC	•	•	•
F_TYPE	2014-2015	V8SC		IPMB	•	•	•
F_TYPE	2014-2015	V8SC		RFA	•	•	•
F_TYPE	2014-2015	V8SC		PDM	•	•	•
F_TYPE	2014-2015	V8SC		PSM	•	•	•
F_TYPE	2014-2015	V8SC		SODL	•	•	•
F_TYPE	2014-2015	V8SC		SODR	•	•	•
F_TYPE	2014-2015	V8SC		AAM	•	•	•
F_TYPE	2014-2015	V8SC		ACM	•	•	•
F_TYPE	2014-2015	V8SC		DABM	•	•	•
F_TYPE	2014-2015	V8SC		NCM	•	•	•
F_TYPE	2014-2015	V8SC		SRM	•	•	•
F_TYPE	2014-2015	V8SC		TVM	•	•	•
F_TYPE	2014-2015	V6SC		ABS	•	•	•
F_TYPE	2014-2015	V6SC		ATCM	•	•	•
F_TYPE	2014-2015	V6SC		BCM	•	•	•
F_TYPE	2014-2015	V6SC		CHCM	•	•	•
F_TYPE	2014-2015	V6SC		FTCM	•	•	•
F_TYPE	2014-2015	V6SC		FTCMB	•	•	•
F_TYPE	2014-2015	V6SC		GSM	•	•	•
F_TYPE	2014-2015	V6SC		GWM	•	•	•
F_TYPE	2014-2015	V6SC		HCM	•	•	•
F_TYPE	2014-2015	V6SC		IPC	•	•	•
F_TYPE	2014-2015	V6SC		OCS	•	•	•
F_TYPE	2014-2015	V6SC		PAM	•	•	•
F_TYPE	2014-2015	V6SC		PBM	•	•	•
F_TYPE	2014-2015	V6SC		PCM	•	•	•
F_TYPE	2014-2015	V6SC		PCM	•	•	•
F_TYPE	2014-2015	V6SC		RCM	•	•	•
F_TYPE	2014-2015	V6SC		RDCM	•	•	•
F_TYPE	2014-2015	V6SC		TCM	•	•	•
F_TYPE	2014-2015	V6SC		VIM	•	•	•
F_TYPE	2014-2015	V6SC		DDM	•	•	•
F_TYPE	2014-2015	V6SC		DSM	•	•	•
F_TYPE	2014-2015	V6SC		FCDIM	•	•	•
F_TYPE	2014-2015	V6SC		FCIM	•	•	•
F_TYPE	2014-2015	V6SC		HCM ^B	•	•	•
F_TYPE	2014-2015	V6SC		HVAC	•	•	•
F_TYPE	2014-2015	V6SC		IPMB	•	•	•
F_TYPE	2014-2015	V6SC		RFA	•	•	•

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
F_TYPE	2014-2015	V6SC		PDM	•	•	•
F_TYPE	2014-2015	V6SC		PSM	•	•	•
F_TYPE	2014-2015	V6SC		SODL	•	•	•
F_TYPE	2014-2015	V6SC		SODR	•	•	•
F_TYPE	2014-2015	V6SC		AAM	•	•	•
F_TYPE	2014-2015	V6SC		ACM	•	•	•
F_TYPE	2014-2015	V6SC		DABM	•	•	•
F_TYPE	2014-2015	V6SC		NCM	•	•	•
F_TYPE	2014-2015	V6SC		SRM	•	•	•
F_TYPE	2014-2015	V6SC		TVM	•	•	•
S_TYPE	1999-2001			PAM	•	•	•
S_TYPE	1999-2001			RCM	•	•	•
S_TYPE	1999-2001			ABS	•	•	•
S_TYPE	1999-2001			ADS	•	•	•
S_TYPE	1999-2001			CCM	•	•	•
S_TYPE	1999-2001			CPM	•	•	•
S_TYPE	1999-2001			DDM	•	•	•
S_TYPE	1999-2001			DSM	•	•	•
S_TYPE	1999-2001			GEM	•	•	•
S_TYPE	1999-2001			ICE	•	•	•
S_TYPE	1999-2001			IPK	•	•	•
S_TYPE	1999-2001			MCC	•	•	•
S_TYPE	1999-2001			NAV	•	•	•
S_TYPE	1999-2001			PCM	•	•	•
S_TYPE	1999-2001			REM	•	•	•
S_TYPE	1999-2001			RES	•	•	•
S_TYPE	1999-2001			SCL	•	•	•
S_TYPE	1999-2001			TCU	•	•	•
S_TYPE	1999-2001			VAM	•	•	•
S_TYPE	2002-2003			ABS	•	•	•
S_TYPE	2002-2003			ACC	•	•	•
S_TYPE	2002-2003			ADHLS	•	•	•
S_TYPE	2002-2003			ADRC	•	•	•
S_TYPE	2002-2003			AMP	•	•	•
S_TYPE	2002-2003			ARM	•	•	•
S_TYPE	2002-2003			ATC	•	•	•
S_TYPE	2002-2003			CPM	•	•	•
S_TYPE	2002-2003			DDM	•	•	•
S_TYPE	2002-2003			DSM	•	•	•
S_TYPE	2002-2003			ECM	•	•	•
S_TYPE	2002-2003			EPB	•	•	•
S_TYPE	2002-2003			FETM	•	•	•
S_TYPE	2002-2003			GEM	•	•	•
S_TYPE	2002-2003			IP	•	•	•
S_TYPE	2002-2003			ISM	•	•	•
S_TYPE	2002-2003			NAV	•	•	•
S_TYPE	2002-2003			PAM	•	•	•
S_TYPE	2002-2003			REM	•	•	•
S_TYPE	2002-2003			SCLM	•	•	•
S_TYPE	2002-2003			TCM	•	•	•
S_TYPE	2002-2003			VACM	•	•	•
S_TYPE	2004-2005	AJ61		ABS	•	•	•
S_TYPE	2004-2005	AJ61		ACC	•	•	•
S_TYPE	2004-2005	AJ61		ADHLS	•	•	•

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
S_TYPE	2004-2005	AJ61		ADRC	•	•	•
S_TYPE	2004-2005	AJ61		AMP	•	•	•
S_TYPE	2004-2005	AJ61		ARM	•	•	•
S_TYPE	2004-2005	AJ61		ATC	•	•	•
S_TYPE	2004-2005	AJ61		CPM	•	•	•
S_TYPE	2004-2005	AJ61		DDM	•	•	•
S_TYPE	2004-2005	AJ61		DSM	•	•	•
S_TYPE	2004-2005	AJ61		ECM	•	•	•
S_TYPE	2004-2005	AJ61		FETM	•	•	•
S_TYPE	2004-2005	AJ61		GEM	•	•	•
S_TYPE	2004-2005	AJ61		IP	•	•	•
S_TYPE	2004-2005	AJ61		ISM	•	•	•
S_TYPE	2004-2005	AJ61		NAV	•	•	•
S_TYPE	2004-2005	AJ61		PAM	•	•	•
S_TYPE	2004-2005	AJ61		PBM	•	•	•
S_TYPE	2004-2005	AJ61		REM	•	•	•
S_TYPE	2004-2005	AJ61		SCLM	•	•	•
S_TYPE	2004-2005	AJ61		TCM	•	•	•
S_TYPE	2004-2005	AJ61		VACM	•	•	•
S_TYPE	2004-2005	V6DIESEL		ABS	•	•	•
S_TYPE	2004-2005	V6DIESEL		ACC	•	•	•
S_TYPE	2004-2005	V6DIESEL		ADHLS	•	•	•
S_TYPE	2004-2005	V6DIESEL		ADRC	•	•	•
S_TYPE	2004-2005	V6DIESEL		AMP	•	•	•
S_TYPE	2004-2005	V6DIESEL		ARM	•	•	•
S_TYPE	2004-2005	V6DIESEL		ATC	•	•	•
S_TYPE	2004-2005	V6DIESEL		CPM	•	•	•
S_TYPE	2004-2005	V6DIESEL		DDM	•	•	•
S_TYPE	2004-2005	V6DIESEL		DSM	•	•	•
S_TYPE	2004-2005	V6DIESEL		FETM	•	•	•
S_TYPE	2004-2005	V6DIESEL		GEM	•	•	•
S_TYPE	2004-2005	V6DIESEL		IP	•	•	•
S_TYPE	2004-2005	V6DIESEL		ISM	•	•	•
S_TYPE	2004-2005	V6DIESEL		NAV	•	•	•
S_TYPE	2004-2005	V6DIESEL		PAM	•	•	•
S_TYPE	2004-2005	V6DIESEL		PBM	•	•	•
S_TYPE	2004-2005	V6DIESEL		REM	•	•	•
S_TYPE	2004-2005	V6DIESEL		SCLM	•	•	•
S_TYPE	2004-2005	V6DIESEL		TCM	•	•	•
S_TYPE	2004-2005	V6DIESEL		VACM	•	•	•
S_TYPE	2004-2005	V6DIESEL		AHCM	•	•	•
S_TYPE	2004-2005	V6DIESEL		PCM	•	•	•
S_TYPE	2006-2008	V6DIESEL		AHCM	•	•	•
S_TYPE	2006-2008	V6DIESEL		ABS	•	•	•
S_TYPE	2006-2008	V6DIESEL		ACC	•	•	•
S_TYPE	2006-2008	V6DIESEL		ADHLS	•	•	•
S_TYPE	2006-2008	V6DIESEL		ADRC	•	•	•
S_TYPE	2006-2008	V6DIESEL		AMP	•	•	•
S_TYPE	2006-2008	V6DIESEL		ARM	•	•	•
S_TYPE	2006-2008	V6DIESEL		ATC	•	•	•
S_TYPE	2006-2008	V6DIESEL		CPM	•	•	•
S_TYPE	2006-2008	V6DIESEL		DDM	•	•	•
S_TYPE	2006-2008	V6DIESEL		DSM	•	•	•
S_TYPE	2006-2008	V6DIESEL		FETM	•	•	•

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
S_TYPE	2006-2008	V6DIESEL		GEM	●	●	●
S_TYPE	2006-2008	V6DIESEL		IP	●	●	●
S_TYPE	2006-2008	V6DIESEL		ISM	●	●	●
S_TYPE	2006-2008	V6DIESEL		NAV	●	●	●
S_TYPE	2006-2008	V6DIESEL		PAM	●	●	●
S_TYPE	2006-2008	V6DIESEL		PBM	●	●	●
S_TYPE	2006-2008	V6DIESEL		PCM	●	●	●
S_TYPE	2006-2008	V6DIESEL		REM	●	●	●
S_TYPE	2006-2008	V6DIESEL		SCLM	●	●	●
S_TYPE	2006-2008	V6DIESEL		TCM	●	●	●
S_TYPE	2006-2008	V6DIESEL		TPM	●	●	●
S_TYPE	2006-2008	V6DIESEL		VACM	●	●	●
S_TYPE	2006-2008	V6NA		ABS	●	●	●
S_TYPE	2006-2008	V6NA		ACC	●	●	●
S_TYPE	2006-2008	V6NA		ADHLS	●	●	●
S_TYPE	2006-2008	V6NA		ADRC	●	●	●
S_TYPE	2006-2008	V6NA		AMP	●	●	●
S_TYPE	2006-2008	V6NA		ARM	●	●	●
S_TYPE	2006-2008	V6NA		ATC	●	●	●
S_TYPE	2006-2008	V6NA		CPM	●	●	●
S_TYPE	2006-2008	V6NA		DDM	●	●	●
S_TYPE	2006-2008	V6NA		DSM	●	●	●
S_TYPE	2006-2008	V6NA		FETM	●	●	●
S_TYPE	2006-2008	V6NA		GEM	●	●	●
S_TYPE	2006-2008	V6NA		IP	●	●	●
S_TYPE	2006-2008	V6NA		ISM	●	●	●
S_TYPE	2006-2008	V6NA		NAV	●	●	●
S_TYPE	2006-2008	V6NA		PAM	●	●	●
S_TYPE	2006-2008	V6NA		PBM	●	●	●
S_TYPE	2006-2008	V6NA		PCM	●	●	●
S_TYPE	2006-2008	V6NA		REM	●	●	●
S_TYPE	2006-2008	V6NA		SCLM	●	●	●
S_TYPE	2006-2008	V6NA		TCM	●	●	●
S_TYPE	2006-2008	V6NA		TPM	●	●	●
S_TYPE	2006-2008	V6NA		VACM	●	●	●
S_TYPE	2006-2008	V8SC		ABS	●	●	●
S_TYPE	2006-2008	V8SC		ACC	●	●	●
S_TYPE	2006-2008	V8SC		ADHLS	●	●	●
S_TYPE	2006-2008	V8SC		ADRC	●	●	●
S_TYPE	2006-2008	V8SC		AMP	●	●	●
S_TYPE	2006-2008	V8SC		ARM	●	●	●
S_TYPE	2006-2008	V8SC		ATC	●	●	●
S_TYPE	2006-2008	V8SC		CPM	●	●	●
S_TYPE	2006-2008	V8SC		DDM	●	●	●
S_TYPE	2006-2008	V8SC		DSM	●	●	●
S_TYPE	2006-2008	V8SC		FETM	●	●	●
S_TYPE	2006-2008	V8SC		GEM	●	●	●
S_TYPE	2006-2008	V8SC		IP	●	●	●
S_TYPE	2006-2008	V8SC		ISM	●	●	●
S_TYPE	2006-2008	V8SC		NAV	●	●	●
S_TYPE	2006-2008	V8SC		PAM	●	●	●
S_TYPE	2006-2008	V8SC		PBM	●	●	●
S_TYPE	2006-2008	V8SC		PCM	●	●	●
S_TYPE	2006-2008	V8SC		REM	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
S_TYPE	2006-2008	V8SC		SCLM	●	●	●
S_TYPE	2006-2008	V8SC		TCM	●	●	●
S_TYPE	2006-2008	V8SC		TPM	●	●	●
S_TYPE	2006-2008	V8SC		VACM	●	●	●
S_TYPE	2006-2008	V8NA		ABS	●	●	●
S_TYPE	2006-2008	V8NA		ACC	●	●	●
S_TYPE	2006-2008	V8NA		ADHLS	●	●	●
S_TYPE	2006-2008	V8NA		ADRC	●	●	●
S_TYPE	2006-2008	V8NA		AMP	●	●	●
S_TYPE	2006-2008	V8NA		ARM	●	●	●
S_TYPE	2006-2008	V8NA		ATC	●	●	●
S_TYPE	2006-2008	V8NA		CPM	●	●	●
S_TYPE	2006-2008	V8NA		DDM	●	●	●
S_TYPE	2006-2008	V8NA		DSM	●	●	●
S_TYPE	2006-2008	V8NA		FETM	●	●	●
S_TYPE	2006-2008	V8NA		GEM	●	●	●
S_TYPE	2006-2008	V8NA		IP	●	●	●
S_TYPE	2006-2008	V8NA		ISM	●	●	●
S_TYPE	2006-2008	V8NA		NAV	●	●	●
S_TYPE	2006-2008	V8NA		PAM	●	●	●
S_TYPE	2006-2008	V8NA		PBM	●	●	●
S_TYPE	2006-2008	V8NA		PCM	●	●	●
S_TYPE	2006-2008	V8NA		REM	●	●	●
S_TYPE	2006-2008	V8NA		SCLM	●	●	●
S_TYPE	2006-2008	V8NA		TCM	●	●	●
S_TYPE	2006-2008	V8NA		TPM	●	●	●
S_TYPE	2006-2008	V8NA		VACM	●	●	●
X_TYPE	2001-2003			ABS	●	●	●
X_TYPE	2001-2003			ECM	●	●	●
X_TYPE	2001-2003			IP	●	●	●
X_TYPE	2001-2003			TCM	●	●	●
X_TYPE	2001-2003			ATC	●	●	●
X_TYPE	2001-2003			PAM	●	●	●
X_TYPE	2001-2003			ISM	●	●	●
X_TYPE	2001-2003			ARM	●	●	●
X_TYPE	2001-2003			ADHLS	●	●	●
X_TYPE	2001-2003			FETM	●	●	●
X_TYPE	2001-2003			GEM	●	●	●
X_TYPE	2001-2003			NAV	●	●	●
X_TYPE	2001-2003			CPM	●	●	●
X_TYPE	2001-2003			VACM	●	●	●
X_TYPE	2004-2009	AJ61		ABS	●	●	●
X_TYPE	2004-2009	AJ61		ADHLS	●	●	●
X_TYPE	2004-2009	AJ61		AMP	●	●	●
X_TYPE	2004-2009	AJ61		ARM	●	●	●
X_TYPE	2004-2009	AJ61		ATC	●	●	●
X_TYPE	2004-2009	AJ61		CPM	●	●	●
X_TYPE	2004-2009	AJ61		DSM	●	●	●
X_TYPE	2004-2009	AJ61		ECM	●	●	●
X_TYPE	2004-2009	AJ61		FETM	●	●	●
X_TYPE	2004-2009	AJ61		GEM	●	●	●
X_TYPE	2004-2009	AJ61		IP	●	●	●
X_TYPE	2004-2009	AJ61		ISM	●	●	●
X_TYPE	2004-2009	AJ61		NAV	●	●	●

VehicleType	ModelYear	Engine Type	Capacity	System Name	Read Codes	Erase Codes	Live Data
X_TYPE	2004-2009	AJ61		PAM	•	•	•
X_TYPE	2004-2009	AJ61		TCM	•	•	•
X_TYPE	2004-2009	AJ61		TPM	•	•	•
X_TYPE	2004-2009	AJ61		VACM	•	•	•
X_TYPE	2004-2009	TDCi	2.2L	ABS	•	•	•
X_TYPE	2004-2009	TDCi	2.2L	ADHLS	•	•	•
X_TYPE	2004-2009	TDCi	2.2L	AMP	•	•	•
X_TYPE	2004-2009	TDCi	2.2L	ARM	•	•	•
X_TYPE	2004-2009	TDCi	2.2L	ATC	•	•	•
X_TYPE	2004-2009	TDCi	2.2L	CPM	•	•	•
X_TYPE	2004-2009	TDCi	2.2L	DSM	•	•	•
X_TYPE	2004-2009	TDCi	2.2L	FETM	•	•	•
X_TYPE	2004-2009	TDCi	2.2L	GEM	•	•	•
X_TYPE	2004-2009	TDCi	2.2L	IP	•	•	•
X_TYPE	2004-2009	TDCi	2.2L	ISM	•	•	•
X_TYPE	2004-2009	TDCi	2.2L	NAV	•	•	•
X_TYPE	2004-2009	TDCi	2.2L	PAM	•	•	•
X_TYPE	2004-2009	TDCi	2.2L	TPM	•	•	•
X_TYPE	2004-2009	TDCi	2.2L	VACM	•	•	•
X_TYPE	2004-2009	TDCi	2.2L	ECM	•	•	•
X_TYPE	2004-2009	TDCi	2.2L	FFH	•	•	•
X_TYPE	2004-2009	TDCi	2.2L	GWM	•	•	•
X_TYPE	2004-2009	TDCi	2.2L	TCM	•	•	•
X_TYPE	2004-2009	TDCi	2L	ABS	•	•	•
X_TYPE	2004-2009	TDCi	2L	ADHLS	•	•	•
X_TYPE	2004-2009	TDCi	2L	AMP	•	•	•
X_TYPE	2004-2009	TDCi	2L	ARM	•	•	•
X_TYPE	2004-2009	TDCi	2L	ATC	•	•	•
X_TYPE	2004-2009	TDCi	2L	CPM	•	•	•
X_TYPE	2004-2009	TDCi	2L	DSM	•	•	•
X_TYPE	2004-2009	TDCi	2L	FETM	•	•	•
X_TYPE	2004-2009	TDCi	2L	GEM	•	•	•
X_TYPE	2004-2009	TDCi	2L	IP	•	•	•
X_TYPE	2004-2009	TDCi	2L	ISM	•	•	•
X_TYPE	2004-2009	TDCi	2L	NAV	•	•	•
X_TYPE	2004-2009	TDCi	2L	PAM	•	•	•
X_TYPE	2004-2009	TDCi	2L	TPM	•	•	•
X_TYPE	2004-2009	TDCi	2L	VACM	•	•	•
X_TYPE	2004-2009	TDCi	2L	ECM	•	•	•
X_TYPE	2004-2009	TDCi	2L	FFH	•	•	•