

OPEL_V01.10 Daig Function List (Note: For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Year	Engine	System Name	EcuInfo.	Read Codes	Erase Codes	LiveData
Adam	[G] 2016	1.0L (LE1)	ECM (Engine Control Module)	●	●	●	●
Adam	[G] 2016	1.0L (LE1)	FICM (Fuel Injector Control Module)	●	●	●	●
Adam	[G] 2016	1.0L (LE1)	CCM (Chassis Control Module)	●	●	●	●
Adam	[G] 2016	1.0L (LE1)	TCM (Transmission Control Module)	●	●	●	●
Adam	[G] 2016	1.0L (LE1)	EBCM (Electronic Brake Control Module)	●	●	●	●
Adam	[G] 2016	1.0L (LE1)	PSCM (Power Steering Control Module)	●	●	●	●
Adam	[G] 2016	1.0L (LE1)	BCM (Body Control Module)	●	●	●	●
Adam	[G] 2016	1.0L (LE1)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Adam	[G] 2016	1.0L (LE1)	IC (Instrument Cluster)	●	●	●	●
Adam	[G] 2016	1.0L (LE1)	TIM (Trailer Interface Module)	●	●	●	●
Adam	[G] 2016	1.0L (LE1)	Radio	●	●	●	●
Adam	[G] 2016	1.0L (LE1)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Adam	[G] 2016	1.0L (LE1)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Adam	[G] 2016	1.0L (LE1)	PACM (Parking Assist Control Module)	●	●	●	●
Adam	[G] 2016	1.2L (LWD)	ECM (Engine Control Module)	●	●	●	●
Adam	[G] 2016	1.2L (LWD)	FICM (Fuel Injector Control Module)	●	●	●	●
Adam	[G] 2016	1.2L (LWD)	CCM (Chassis Control Module)	●	●	●	●
Adam	[G] 2016	1.2L (LWD)	TCM (Transmission Control Module)	●	●	●	●
Adam	[G] 2016	1.2L (LWD)	EBCM (Electronic Brake Control Module)	●	●	●	●
Adam	[G] 2016	1.2L (LWD)	PSCM (Power Steering Control Module)	●	●	●	●
Adam	[G] 2016	1.2L (LWD)	BCM (Body Control Module)	●	●	●	●
Adam	[G] 2016	1.2L (LWD)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Adam	[G] 2016	1.2L (LWD)	IC (Instrument Cluster)	●	●	●	●
Adam	[G] 2016	1.2L (LWD)	TIM (Trailer Interface Module)	●	●	●	●
Adam	[G] 2016	1.2L (LWD)	Radio	●	●	●	●
Adam	[G] 2016	1.2L (LWD)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Adam	[G] 2016	1.2L (LWD)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Adam	[G] 2016	1.2L (LWD)	PACM (Parking Assist Control Module)	●	●	●	●
Adam	[G] 2016	1.4L (LUJ)	ECM (Engine Control Module)	●	●	●	●
Adam	[G] 2016	1.4L (LUJ)	FICM (Fuel Injector Control Module)	●	●	●	●
Adam	[G] 2016	1.4L (LUJ)	CCM (Chassis Control Module)	●	●	●	●
Adam	[G] 2016	1.4L (LUJ)	TCM (Transmission Control Module)	●	●	●	●
Adam	[G] 2016	1.4L (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Adam	[G] 2016	1.4L (LUJ)	PSCM (Power Steering Control Module)	●	●	●	●
Adam	[G] 2016	1.4L (LUJ)	BCM (Body Control Module)	●	●	●	●
Adam	[G] 2016	1.4L (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Adam	[G] 2016	1.4L (LUJ)	IC (Instrument Cluster)	●	●	●	●
Adam	[G] 2016	1.4L (LUJ)	TIM (Trailer Interface Module)	●	●	●	●
Adam	[G] 2016	1.4L (LUJ)	Radio	●	●	●	●
Adam	[G] 2016	1.4L (LUJ)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Adam	[G] 2016	1.4L (LUJ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Adam	[G] 2016	1.4L (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Adam	[G] 2016	1.4L (LDD) (Auto TCM)	ECM (Engine Control Module)	●	●	●	●
Adam	[G] 2016	1.4L (LDD) (Auto TCM)	FICM (Fuel Injector Control Module)	●	●	●	●
Adam	[G] 2016	1.4L (LDD) (Auto TCM)	CCM (Chassis Control Module)	●	●	●	●

Adam	[G] 2016	1. 4L (LDD) (Auto TCM)	TCM (Transmission Control Module)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) (Auto TCM)	EBCM (Electronic Brake Control Module)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) (Auto TCM)	PSCM (Power Steering Control Module)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) (Auto TCM)	BCM (Body Control Module)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) (Auto TCM)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) (Auto TCM)	IC (Instrument Cluster)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) (Auto TCM)	TIM (Trailer Interface Module)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) (Auto TCM)	Radio	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) (Auto TCM)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) (Auto TCM)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) (Auto TCM)	PACM (Parking Assist Control Module)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) with Sart/Stop System (KL9)	ECM (Engine Control Module)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) with Sart/Stop System (KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) with Sart/Stop System (KL9)	CCM (Chassis Control Module)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) with Sart/Stop System (KL9)	TCM (Transmission Control Module)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) with Sart/Stop System (KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) with Sart/Stop System (KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) with Sart/Stop System (KL9)	BCM (Body Control Module)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) with Sart/Stop System (KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) with Sart/Stop System (KL9)	IC (Instrument Cluster)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) with Sart/Stop System (KL9)	TIM (Trailer Interface Module)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) with Sart/Stop System (KL9)	Radio	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) with Sart/Stop System (KL9)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) with Sart/Stop System (KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) with Sart/Stop System (KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) (Manual TCM) without Sart/Stop System (KL9)	ECM (Engine Control Module)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) (Manual TCM) without Sart/Stop System (KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) (Manual TCM) without Sart/Stop System (KL9)	CCM (Chassis Control Module)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) (Manual TCM) without Sart/Stop System (KL9)	TCM (Transmission Control Module)	●	●	●	●

Adam	[G] 2016	1. 4L (LDD) (Manual TCM) without Start/Stop System (KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) (Manual TCM) without Start/Stop System (KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) (Manual TCM) without Start/Stop System (KL9)	BCM (Body Control Module)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) (Manual TCM) without Start/Stop System (KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) (Manual TCM) without Start/Stop System (KL9)	IC (Instrument Cluster)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) (Manual TCM) without Start/Stop System (KL9)	TIM (Trailer Interface Module)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) (Manual TCM) without Start/Stop System (KL9)	Radio	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) (Manual TCM) without Start/Stop System (KL9)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) (Manual TCM) without Start/Stop System (KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Adam	[G] 2016	1. 4L (LDD) (Manual TCM) without Start/Stop System (KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Adam	[G] 2016	1. 4L (L2Z) with Start/Stop System (KL9)	ECM (Engine Control Module)	●	●	●	●
Adam	[G] 2016	1. 4L (L2Z) with Start/Stop System (KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Adam	[G] 2016	1. 4L (L2Z) with Start/Stop System (KL9)	CCM (Chassis Control Module)	●	●	●	●
Adam	[G] 2016	1. 4L (L2Z) with Start/Stop System (KL9)	TCM (Transmission Control Module)	●	●	●	●
Adam	[G] 2016	1. 4L (L2Z) with Start/Stop System (KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Adam	[G] 2016	1. 4L (L2Z) with Start/Stop System (KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Adam	[G] 2016	1. 4L (L2Z) with Start/Stop System (KL9)	BCM (Body Control Module)	●	●	●	●
Adam	[G] 2016	1. 4L (L2Z) with Start/Stop System (KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Adam	[G] 2016	1. 4L (L2Z) with Start/Stop System (KL9)	IC (Instrument Cluster)	●	●	●	●
Adam	[G] 2016	1. 4L (L2Z) with Start/Stop System (KL9)	TIM (Trailer Interface Module)	●	●	●	●
Adam	[G] 2016	1. 4L (L2Z) with Start/Stop System (KL9)	Radio	●	●	●	●
Adam	[G] 2016	1. 4L (L2Z) with Start/Stop System (KL9)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●

Adam	[G] 2016	1.4L(L2Z)with Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Adam	[G] 2016	1.4L(L2Z)with Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Adam	[G] 2016	1.4L(L2Z)with out Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Adam	[G] 2016	1.4L(L2Z)with out Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Adam	[G] 2016	1.4L(L2Z)with out Sart/Stop System(KL9)	CCM (Chassis Control Module)	●	●	●	●
Adam	[G] 2016	1.4L(L2Z)with out Sart/Stop System(KL9)	TCM (Transmission Control Module)	●	●	●	●
Adam	[G] 2016	1.4L(L2Z)with out Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Adam	[G] 2016	1.4L(L2Z)with out Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Adam	[G] 2016	1.4L(L2Z)with out Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Adam	[G] 2016	1.4L(L2Z)with out Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Adam	[G] 2016	1.4L(L2Z)with out Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Adam	[G] 2016	1.4L(L2Z)with out Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Adam	[G] 2016	1.4L(L2Z)with out Sart/Stop System(KL9)	Radio	●	●	●	●
Adam	[G] 2016	1.4L(L2Z)with out Sart/Stop System(KL9)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Adam	[G] 2016	1.4L(L2Z)with out Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Adam	[G] 2016	1.4L(L2Z)with out Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Adam	[F] 2015	1.0L (LE1)	ECM (Engine Control Module)	●	●	●	●
Adam	[F] 2015	1.0L (LE1)	FICM (Fuel Injector Control Module)	●	●	●	●
Adam	[F] 2015	1.0L (LE1)	CCM (Chassis Control Module)	●	●	●	●
Adam	[F] 2015	1.0L (LE1)	TCM (Transmission Control Module)	●	●	●	●
Adam	[F] 2015	1.0L (LE1)	EBCM (Electronic Brake Control Module)	●	●	●	●
Adam	[F] 2015	1.0L (LE1)	PSCM (Power Steering Control Module)	●	●	●	●
Adam	[F] 2015	1.0L (LE1)	BCM (Body Control Module)	●	●	●	●
Adam	[F] 2015	1.0L (LE1)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Adam	[F] 2015	1.0L (LE1)	IC (Instrument Cluster)	●	●	●	●
Adam	[F] 2015	1.0L (LE1)	TIM (Trailer Interface Module)	●	●	●	●
Adam	[F] 2015	1.0L (LE1)	Radio	●	●	●	●
Adam	[F] 2015	1.0L (LE1)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Adam	[F] 2015	1.0L (LE1)	PACM (Parking Assist Control Module)	●	●	●	●
Adam	[F] 2015	1.2L (LWD)	ECM (Engine Control Module)	●	●	●	●
Adam	[F] 2015	1.2L (LWD)	FICM (Fuel Injector Control Module)	●	●	●	●
Adam	[F] 2015	1.2L (LWD)	CCM (Chassis Control Module)	●	●	●	●
Adam	[F] 2015	1.2L (LWD)	TCM (Transmission Control Module)	●	●	●	●
Adam	[F] 2015	1.2L (LWD)	EBCM (Electronic Brake Control Module)	●	●	●	●
Adam	[F] 2015	1.2L (LWD)	PSCM (Power Steering Control Module)	●	●	●	●
Adam	[F] 2015	1.2L (LWD)	BCM (Body Control Module)	●	●	●	●
Adam	[F] 2015	1.2L (LWD)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Adam	[F] 2015	1.2L (LWD)	IC (Instrument Cluster)	●	●	●	●
Adam	[F] 2015	1.2L (LWD)	TIM (Trailer Interface Module)	●	●	●	●
Adam	[F] 2015	1.2L (LWD)	Radio	●	●	●	●

Adam	[F] 2015	1.2L (LWD)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Adam	[F] 2015	1.2L (LWD)	PACM (Parking Assist Control Module)	●	●	●	●
Adam	[F] 2015	1.4L (LUJ)	ECM (Engine Control Module)	●	●	●	●
Adam	[F] 2015	1.4L (LUJ)	FICM (Fuel Injector Control Module)	●	●	●	●
Adam	[F] 2015	1.4L (LUJ)	CCM (Chassis Control Module)	●	●	●	●
Adam	[F] 2015	1.4L (LUJ)	TCM (Transmission Control Module)	●	●	●	●
Adam	[F] 2015	1.4L (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Adam	[F] 2015	1.4L (LUJ)	PSCM (Power Steering Control Module)	●	●	●	●
Adam	[F] 2015	1.4L (LUJ)	BCM (Body Control Module)	●	●	●	●
Adam	[F] 2015	1.4L (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Adam	[F] 2015	1.4L (LUJ)	IC (Instrument Cluster)	●	●	●	●
Adam	[F] 2015	1.4L (LUJ)	TIM (Trailer Interface Module)	●	●	●	●
Adam	[F] 2015	1.4L (LUJ)	Radio	●	●	●	●
Adam	[F] 2015	1.4L (LUJ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Adam	[F] 2015	1.4L (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Adam	[F] 2015	1.4L (LDD) (Auto TCM)	ECM (Engine Control Module)	●	●	●	●
Adam	[F] 2015	1.4L (LDD) (Auto TCM)	FICM (Fuel Injector Control Module)	●	●	●	●
Adam	[F] 2015	1.4L (LDD) (Auto TCM)	CCM (Chassis Control Module)	●	●	●	●
Adam	[F] 2015	1.4L (LDD) (Auto TCM)	TCM (Transmission Control Module)	●	●	●	●
Adam	[F] 2015	1.4L (LDD) (Auto TCM)	EBCM (Electronic Brake Control Module)	●	●	●	●
Adam	[F] 2015	1.4L (LDD) (Auto TCM)	PSCM (Power Steering Control Module)	●	●	●	●
Adam	[F] 2015	1.4L (LDD) (Auto TCM)	BCM (Body Control Module)	●	●	●	●
Adam	[F] 2015	1.4L (LDD) (Auto TCM)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Adam	[F] 2015	1.4L (LDD) (Auto TCM)	IC (Instrument Cluster)	●	●	●	●
Adam	[F] 2015	1.4L (LDD) (Auto TCM)	TIM (Trailer Interface Module)	●	●	●	●
Adam	[F] 2015	1.4L (LDD) (Auto TCM)	Radio	●	●	●	●
Adam	[F] 2015	1.4L (LDD) (Auto TCM)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Adam	[F] 2015	1.4L (LDD) (Auto TCM)	PACM (Parking Assist Control Module)	●	●	●	●
Adam	[F] 2015	1.4L (LDD) with Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Adam	[F] 2015	1.4L (LDD) with Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Adam	[F] 2015	1.4L (LDD) with Sart/Stop System(KL9)	CCM (Chassis Control Module)	●	●	●	●
Adam	[F] 2015	1.4L (LDD) with Sart/Stop System(KL9)	TCM (Transmission Control Module)	●	●	●	●
Adam	[F] 2015	1.4L (LDD) with Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Adam	[F] 2015	1.4L (LDD) with Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Adam	[F] 2015	1.4L (LDD) with Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Adam	[F] 2015	1.4L (LDD) with Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Adam	[F] 2015	1.4L (LDD) with Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Adam	[F] 2015	1.4L (LDD) with Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Adam	[F] 2015	1.4L (LDD) with Sart/Stop System(KL9)	Radio	●	●	●	●
Adam	[F] 2015	1.4L (LDD) with Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●

Adam	[F] 2015	1. 4L(LDD)with Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Adam	[F] 2015	1. 4L(LDD) (Manual TCM)without Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Adam	[F] 2015	1. 4L(LDD) (Manual TCM)without Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Adam	[F] 2015	1. 4L(LDD) (Manual TCM)without Sart/Stop System(KL9)	CCM (Chassis Control Module)	●	●	●	●
Adam	[F] 2015	1. 4L(LDD) (Manual TCM)without Sart/Stop System(KL9)	TCM (Transmission Control Module)	●	●	●	●
Adam	[F] 2015	1. 4L(LDD) (Manual TCM)without Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Adam	[F] 2015	1. 4L(LDD) (Manual TCM)without Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Adam	[F] 2015	1. 4L(LDD) (Manual TCM)without Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Adam	[F] 2015	1. 4L(LDD) (Manual TCM)without Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Adam	[F] 2015	1. 4L(LDD) (Manual TCM)without Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Adam	[F] 2015	1. 4L(LDD) (Manual TCM)without Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Adam	[F] 2015	1. 4L(LDD) (Manual TCM)without Sart/Stop System(KL9)	Radio	●	●	●	●
Adam	[F] 2015	1. 4L(LDD) (Manual TCM)without Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Adam	[F] 2015	1. 4L(LDD) (Manual TCM)without Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Adam	[F] 2015	1. 4L(L2Z)with Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Adam	[F] 2015	1. 4L(L2Z)with Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Adam	[F] 2015	1. 4L(L2Z)with Sart/Stop System(KL9)	CCM (Chassis Control Module)	●	●	●	●
Adam	[F] 2015	1. 4L(L2Z)with Sart/Stop System(KL9)	TCM (Transmission Control Module)	●	●	●	●
Adam	[F] 2015	1. 4L(L2Z)with Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Adam	[F] 2015	1. 4L(L2Z)with Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●

Adam	[F] 2015	1.4L(L2Z)with Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Adam	[F] 2015	1.4L(L2Z)with Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Adam	[F] 2015	1.4L(L2Z)with Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Adam	[F] 2015	1.4L(L2Z)with Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Adam	[F] 2015	1.4L(L2Z)with Sart/Stop System(KL9)	Radio	●	●	●	●
Adam	[F] 2015	1.4L(L2Z)with Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Adam	[F] 2015	1.4L(L2Z)with Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Adam	[F] 2015	1.4L(L2Z)with out Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Adam	[F] 2015	1.4L(L2Z)with out Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Adam	[F] 2015	1.4L(L2Z)with out Sart/Stop System(KL9)	CCM (Chassis Control Module)	●	●	●	●
Adam	[F] 2015	1.4L(L2Z)with out Sart/Stop System(KL9)	TCM (Transmission Control Module)	●	●	●	●
Adam	[F] 2015	1.4L(L2Z)with out Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Adam	[F] 2015	1.4L(L2Z)with out Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Adam	[F] 2015	1.4L(L2Z)with out Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Adam	[F] 2015	1.4L(L2Z)with out Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Adam	[F] 2015	1.4L(L2Z)with out Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Adam	[F] 2015	1.4L(L2Z)with out Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Adam	[F] 2015	1.4L(L2Z)with out Sart/Stop System(KL9)	Radio	●	●	●	●
Adam	[F] 2015	1.4L(L2Z)with out Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Adam	[F] 2015	1.4L(L2Z)with out Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Adam	[E] 2014	1.2L (LWD)	ECM (Engine Control Module)	●	●	●	●
Adam	[E] 2014	1.2L (LWD)	FICM (Fuel Injector Control Module)	●	●	●	●
Adam	[E] 2014	1.2L (LWD)	EBCM (Electronic Brake Control Module)	●	●	●	●
Adam	[E] 2014	1.2L (LWD)	PSCM (Power Steering Control Module)	●	●	●	●
Adam	[E] 2014	1.2L (LWD)	BCM (Body Control Module)	●	●	●	●
Adam	[E] 2014	1.2L (LWD)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Adam	[E] 2014	1.2L (LWD)	IC (Instrument Cluster)	●	●	●	●
Adam	[E] 2014	1.2L (LWD)	TIM (Trailer Interface Module)	●	●	●	●
Adam	[E] 2014	1.2L (LWD)	Radio	●	●	●	●
Adam	[E] 2014	1.2L (LWD)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Adam	[E] 2014	1.2L (LWD)	PACM (Parking Assist Control Module)	●	●	●	●
Adam	[E] 2014	1.4L(L2Z)with Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Adam	[E] 2014	1.4L(L2Z)with Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●

Adam	[E] 2014	1.4L(L2Z)with Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Adam	[E] 2014	1.4L(L2Z)with Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Adam	[E] 2014	1.4L(L2Z)with Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Adam	[E] 2014	1.4L(L2Z)with Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Adam	[E] 2014	1.4L(L2Z)with Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Adam	[E] 2014	1.4L(L2Z)with Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Adam	[E] 2014	1.4L(L2Z)with Sart/Stop System(KL9)	Radio	●	●	●	●
Adam	[E] 2014	1.4L(L2Z)with Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Adam	[E] 2014	1.4L(L2Z)with Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Adam	[E] 2014	1.4L(L2Z)with out Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Adam	[E] 2014	1.4L(L2Z)with out Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Adam	[E] 2014	1.4L(L2Z)with out Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Adam	[E] 2014	1.4L(L2Z)with out Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Adam	[E] 2014	1.4L(L2Z)with out Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Adam	[E] 2014	1.4L(L2Z)with out Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Adam	[E] 2014	1.4L(L2Z)with out Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Adam	[E] 2014	1.4L(L2Z)with out Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Adam	[E] 2014	1.4L(L2Z)with out Sart/Stop System(KL9)	Radio	●	●	●	●
Adam	[E] 2014	1.4L(L2Z)with out Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Adam	[E] 2014	1.4L(L2Z)with out Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Adam	[E] 2014	1.4L(LDD)with Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Adam	[E] 2014	1.4L(LDD)with Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Adam	[E] 2014	1.4L(LDD)with Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Adam	[E] 2014	1.4L(LDD)with Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Adam	[E] 2014	1.4L(LDD)with Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Adam	[E] 2014	1.4L(LDD)with Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Adam	[E] 2014	1.4L(LDD)with Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Adam	[E] 2014	1.4L(LDD)with Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●

Adam	[E] 2014	1. 4L(LDD)with Sart/Stop System(KL9)	Radio	●	●	●	●
Adam	[E] 2014	1. 4L(LDD)with Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Adam	[E] 2014	1. 4L(LDD)with Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Adam	[E] 2014	1. 4L(LDD)with out Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Adam	[E] 2014	1. 4L(LDD)with out Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Adam	[E] 2014	1. 4L(LDD)with out Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Adam	[E] 2014	1. 4L(LDD)with out Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Adam	[E] 2014	1. 4L(LDD)with out Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Adam	[E] 2014	1. 4L(LDD)with out Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Adam	[E] 2014	1. 4L(LDD)with out Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Adam	[E] 2014	1. 4L(LDD)with out Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Adam	[E] 2014	1. 4L(LDD)with out Sart/Stop System(KL9)	Radio	●	●	●	●
Adam	[E] 2014	1. 4L(LDD)with out Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Adam	[E] 2014	1. 4L(LDD)with out Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Adam	[D] 2013	1. 2L (LWD)	ECM (Engine Control Module)	●	●	●	●
Adam	[D] 2013	1. 2L (LWD)	EBCM (Electronic Brake Control Module)	●	●	●	●
Adam	[D] 2013	1. 2L (LWD)	PSCM (Power Steering Control Module)	●	●	●	●
Adam	[D] 2013	1. 2L (LWD)	BCM (Body Control Module)	●	●	●	●
Adam	[D] 2013	1. 2L (LWD)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Adam	[D] 2013	1. 2L (LWD)	IC (Instrument Cluster)	●	●	●	●
Adam	[D] 2013	1. 2L (LWD)	TIM (Trailer Interface Module)	●	●	●	●
Adam	[D] 2013	1. 2L (LWD)	Radio	●	●	●	●
Adam	[D] 2013	1. 2L (LWD)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Adam	[D] 2013	1. 2L (LWD)	PACM (Parking Assist Control Module)	●	●	●	●
Adam	[D] 2013	1. 4L(L2Z)with Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Adam	[D] 2013	1. 4L(L2Z)with Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Adam	[D] 2013	1. 4L(L2Z)with Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Adam	[D] 2013	1. 4L(L2Z)with Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Adam	[D] 2013	1. 4L(L2Z)with Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Adam	[D] 2013	1. 4L(L2Z)with Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Adam	[D] 2013	1. 4L(L2Z)with Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Adam	[D] 2013	1. 4L(L2Z)with Sart/Stop System(KL9)	Radio	●	●	●	●
Adam	[D] 2013	1. 4L(L2Z)with Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●

Adam	[D] 2013	1. 4L(L2Z)with Sart/Stop System(KI.9)	PACM (Parking Assist Control Module)	●	●	●	●
Adam	[D] 2013	1. 4L(L2Z)with out Sart/Stop System(KI.9)	ECM (Engine Control Module)	●	●	●	●
Adam	[D] 2013	1. 4L(L2Z)with out Sart/Stop System(KI.9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Adam	[D] 2013	1. 4L(L2Z)with out Sart/Stop System(KI.9)	PSCM (Power Steering Control Module)	●	●	●	●
Adam	[D] 2013	1. 4L(L2Z)with out Sart/Stop System(KI.9)	BCM (Body Control Module)	●	●	●	●
Adam	[D] 2013	1. 4L(L2Z)with out Sart/Stop System(KI.9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Adam	[D] 2013	1. 4L(L2Z)with out Sart/Stop System(KI.9)	IC (Instrument Cluster)	●	●	●	●
Adam	[D] 2013	1. 4L(L2Z)with out Sart/Stop System(KI.9)	TIM (Trailer Interface Module)	●	●	●	●
Adam	[D] 2013	1. 4L(L2Z)with out Sart/Stop System(KI.9)	Radio	●	●	●	●
Adam	[D] 2013	1. 4L(L2Z)with out Sart/Stop System(KI.9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Adam	[D] 2013	1. 4L(L2Z)with out Sart/Stop System(KI.9)	PACM (Parking Assist Control Module)	●	●	●	●
Adam	[D] 2013	1. 4L(LDD)with Sart/Stop System(KI.9)	ECM (Engine Control Module)	●	●	●	●
Adam	[D] 2013	1. 4L(LDD)with Sart/Stop System(KI.9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Adam	[D] 2013	1. 4L(LDD)with Sart/Stop System(KI.9)	PSCM (Power Steering Control Module)	●	●	●	●
Adam	[D] 2013	1. 4L(LDD)with Sart/Stop System(KI.9)	BCM (Body Control Module)	●	●	●	●
Adam	[D] 2013	1. 4L(LDD)with Sart/Stop System(KI.9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Adam	[D] 2013	1. 4L(LDD)with Sart/Stop System(KI.9)	IC (Instrument Cluster)	●	●	●	●
Adam	[D] 2013	1. 4L(LDD)with Sart/Stop System(KI.9)	TIM (Trailer Interface Module)	●	●	●	●
Adam	[D] 2013	1. 4L(LDD)with Sart/Stop System(KI.9)	Radio	●	●	●	●
Adam	[D] 2013	1. 4L(LDD)with Sart/Stop System(KI.9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Adam	[D] 2013	1. 4L(LDD)with Sart/Stop System(KI.9)	PACM (Parking Assist Control Module)	●	●	●	●
Adam	[D] 2013	1. 4L(LDD)with out Sart/Stop System(KI.9)	ECM (Engine Control Module)	●	●	●	●
Adam	[D] 2013	1. 4L(LDD)with out Sart/Stop System(KI.9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Adam	[D] 2013	1. 4L(LDD)with out Sart/Stop System(KI.9)	PSCM (Power Steering Control Module)	●	●	●	●
Adam	[D] 2013	1. 4L(LDD)with out Sart/Stop System(KI.9)	BCM (Body Control Module)	●	●	●	●
Adam	[D] 2013	1. 4L(LDD)with out Sart/Stop System(KI.9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Adam	[D] 2013	1. 4L(LDD)with out Sart/Stop System(KI.9)	IC (Instrument Cluster)	●	●	●	●
Adam	[D] 2013	1. 4L(LDD)with out Sart/Stop System(KI.9)	TIM (Trailer Interface Module)	●	●	●	●

Adam	[D] 2013	1.4L(LDD)without Sart/Stop System(KI9)	Radio	●	●	●	●
Adam	[D] 2013	1.4L(LDD)without Sart/Stop System(KI9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Adam	[D] 2013	1.4L(LDD)without Sart/Stop System(KI9)	PACM (Parking Assist Control Module)	●	●	●	●
Agila	[7] 2007	Z 10 XEP	ECM (Engine Control Module)	●	●	●	●
Agila	[7] 2007	Z 10 XEP	ABS (Anti-locked Braking System)	●	●	●	●
Agila	[7] 2007	Z 10 XEP	EPS (Electronic Power Steering)	●	●	●	●
Agila	[7] 2007	Z 10 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila	[7] 2007	Z 10 XEP	IMMO (Immobiliser)	●	●	●	●
Agila	[7] 2007	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Agila	[7] 2007	Z 12 XE	ABS (Anti-locked Braking System)	●	●	●	●
Agila	[7] 2007	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Agila	[7] 2007	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila	[7] 2007	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Agila	[7] 2007	Z 12 XEP	ECM (Engine Control Module)	●	●	●	●
Agila	[7] 2007	Z 12 XEP	ABS (Anti-locked Braking System)	●	●	●	●
Agila	[7] 2007	Z 12 XEP	EPS (Electronic Power Steering)	●	●	●	●
Agila	[7] 2007	Z 12 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila	[7] 2007	Z 12 XEP	IMMO (Immobiliser)	●	●	●	●
Agila	[7] 2007	Z 13 DT	ECM (Engine Control Module)	●	●	●	●
Agila	[7] 2007	Z 13 DT	ABS (Anti-locked Braking System)	●	●	●	●
Agila	[7] 2007	Z 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Agila	[7] 2007	Z 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila	[7] 2007	Z 13 DT	IMMO (Immobiliser)	●	●	●	●
Agila	[6] 2006	Z 10 XEP	ECM (Engine Control Module)	●	●	●	●
Agila	[6] 2006	Z 10 XEP	ABS (Anti-locked Braking System)	●	●	●	●
Agila	[6] 2006	Z 10 XEP	EPS (Electronic Power Steering)	●	●	●	●
Agila	[6] 2006	Z 10 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila	[6] 2006	Z 10 XEP	IMMO (Immobiliser)	●	●	●	●
Agila	[6] 2006	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Agila	[6] 2006	Z 12 XE	ABS (Anti-locked Braking System)	●	●	●	●
Agila	[6] 2006	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Agila	[6] 2006	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila	[6] 2006	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Agila	[6] 2006	Z 12 XEP	ECM (Engine Control Module)	●	●	●	●
Agila	[6] 2006	Z 12 XEP	ABS (Anti-locked Braking System)	●	●	●	●
Agila	[6] 2006	Z 12 XEP	EPS (Electronic Power Steering)	●	●	●	●
Agila	[6] 2006	Z 12 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila	[6] 2006	Z 12 XEP	IMMO (Immobiliser)	●	●	●	●
Agila	[6] 2006	Z 13 DT	ECM (Engine Control Module)	●	●	●	●
Agila	[6] 2006	Z 13 DT	ABS (Anti-locked Braking System)	●	●	●	●
Agila	[6] 2006	Z 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Agila	[6] 2006	Z 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila	[6] 2006	Z 13 DT	IMMO (Immobiliser)	●	●	●	●
Agila	[5] 2005	Z 10 XEP	ECM (Engine Control Module)	●	●	●	●
Agila	[5] 2005	Z 10 XEP	ABS (Anti-locked Braking System)	●	●	●	●
Agila	[5] 2005	Z 10 XEP	EPS (Electronic Power Steering)	●	●	●	●
Agila	[5] 2005	Z 10 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila	[5] 2005	Z 10 XEP	IMMO (Immobiliser)	●	●	●	●
Agila	[5] 2005	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Agila	[5] 2005	Z 12 XE	ABS (Anti-locked Braking System)	●	●	●	●
Agila	[5] 2005	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●

Agila	[5] 2005	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila	[5] 2005	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Agila	[5] 2005	Z 12 XEP	ECM (Engine Control Module)	●	●	●	●
Agila	[5] 2005	Z 12 XEP	ABS (Anti-locked Braking System)	●	●	●	●
Agila	[5] 2005	Z 12 XEP	EPS (Electronic Power Steering)	●	●	●	●
Agila	[5] 2005	Z 12 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila	[5] 2005	Z 12 XEP	IMMO (Immobiliser)	●	●	●	●
Agila	[5] 2005	Z 13 DT	ECM (Engine Control Module)	●	●	●	●
Agila	[5] 2005	Z 13 DT	ABS (Anti-locked Braking System)	●	●	●	●
Agila	[5] 2005	Z 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Agila	[5] 2005	Z 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila	[5] 2005	Z 13 DT	IMMO (Immobiliser)	●	●	●	●
Agila	[4] 2004	Z 10 XEP	ECM (Engine Control Module)	●	●	●	●
Agila	[4] 2004	Z 10 XEP	ABS (Anti-locked Braking System)	●	●	●	●
Agila	[4] 2004	Z 10 XEP	EPS (Electronic Power Steering)	●	●	●	●
Agila	[4] 2004	Z 10 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila	[4] 2004	Z 10 XEP	IMMO (Immobiliser)	●	●	●	●
Agila	[4] 2004	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Agila	[4] 2004	Z 12 XE	ABS (Anti-locked Braking System)	●	●	●	●
Agila	[4] 2004	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Agila	[4] 2004	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila	[4] 2004	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Agila	[4] 2004	Z 13 DT	ECM (Engine Control Module)	●	●	●	●
Agila	[4] 2004	Z 13 DT	ABS (Anti-locked Braking System)	●	●	●	●
Agila	[4] 2004	Z 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Agila	[4] 2004	Z 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila	[4] 2004	Z 13 DT	IMMO (Immobiliser)	●	●	●	●
Agila	[3] 2003	Z 10 XE	ECM (Engine Control Module)	●	●	●	●
Agila	[3] 2003	Z 10 XE	ABS (Anti-locked Braking System)	●	●	●	●
Agila	[3] 2003	Z 10 XE	EPS (Electronic Power Steering)	●	●	●	●
Agila	[3] 2003	Z 10 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila	[3] 2003	Z 10 XE	IMMO (Immobiliser)	●	●	●	●
Agila	[3] 2003	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Agila	[3] 2003	Z 12 XE	ABS (Anti-locked Braking System)	●	●	●	●
Agila	[3] 2003	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Agila	[3] 2003	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila	[3] 2003	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Agila	[2] 2002	Z 10 XE	ECM (Engine Control Module)	●	●	●	●
Agila	[2] 2002	Z 10 XE	ABS (Anti-locked Braking System)	●	●	●	●
Agila	[2] 2002	Z 10 XE	EPS (Electronic Power Steering)	●	●	●	●
Agila	[2] 2002	Z 10 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila	[2] 2002	Z 10 XE	IMMO (Immobiliser)	●	●	●	●
Agila	[2] 2002	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Agila	[2] 2002	Z 12 XE	ABS (Anti-locked Braking System)	●	●	●	●
Agila	[2] 2002	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Agila	[2] 2002	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila	[2] 2002	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Agila	[1] 2001	Z 10 XE	ECM (Engine Control Module)	●	●	●	●
Agila	[1] 2001	Z 10 XE	ABS (Anti-locked Braking System)	●	●	●	●
Agila	[1] 2001	Z 10 XE	EPS (Electronic Power Steering)	●	●	●	●
Agila	[1] 2001	Z 10 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila	[1] 2001	Z 10 XE	IMMO (Immobiliser)	●	●	●	●
Agila	[1] 2001	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Agila	[1] 2001	Z 12 XE	ABS (Anti-locked Braking System)	●	●	●	●

Agila	[1] 2001	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Agila	[1] 2001	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila	[1] 2001	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Agila	[Y] 2000	Z 10 XE	ECM (Engine Control Module)	●	●	●	●
Agila	[Y] 2000	Z 10 XE	ABS (Anti-locked Braking System)	●	●	●	●
Agila	[Y] 2000	Z 10 XE	EPS (Electronic Power Steering)	●	●	●	●
Agila	[Y] 2000	Z 10 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila	[Y] 2000	Z 10 XE	IMMO (Immobiliser)	●	●	●	●
Agila	[Y] 2000	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Agila	[Y] 2000	Z 12 XE	ABS (Anti-locked Braking System)	●	●	●	●
Agila	[Y] 2000	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Agila	[Y] 2000	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila	[Y] 2000	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Agila-B	[E] 2014	K10B	ECM (Engine Control Module)	●	●	●	●
Agila-B	[E] 2014	K10B	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Agila-B	[E] 2014	K10B	EPS (Electronic Power Steering)	●	●	●	●
Agila-B	[E] 2014	K10B	BCM (Body Control Module)	●	●	●	●
Agila-B	[E] 2014	K10B	IMMO (Immobiliser)	●	●	●	●
Agila-B	[E] 2014	K10B	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila-B	[E] 2014	K12B	ECM (Engine Control Module)	●	●	●	●
Agila-B	[E] 2014	K12B	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Agila-B	[E] 2014	K12B	EPS (Electronic Power Steering)	●	●	●	●
Agila-B	[E] 2014	K12B	BCM (Body Control Module)	●	●	●	●
Agila-B	[E] 2014	K12B	IMMO (Immobiliser)	●	●	●	●
Agila-B	[E] 2014	K12B	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila-B	[E] 2014	D13A / Z 13 DTI	ECM (Engine Control Module)	●	●	●	●
Agila-B	[E] 2014	D13A / Z 13 DTI	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Agila-B	[E] 2014	D13A / Z 13 DTI	EPS (Electronic Power Steering)	●	●	●	●
Agila-B	[E] 2014	D13A / Z 13 DTI	BCM (Body Control Module)	●	●	●	●
Agila-B	[E] 2014	D13A / Z 13 DTI	IMMO (Immobiliser)	●	●	●	●
Agila-B	[E] 2014	D13A / Z 13 DTI	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila-B	[D] 2013	K10B	ECM (Engine Control Module)	●	●	●	●
Agila-B	[D] 2013	K10B	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Agila-B	[D] 2013	K10B	EPS (Electronic Power Steering)	●	●	●	●
Agila-B	[D] 2013	K10B	BCM (Body Control Module)	●	●	●	●
Agila-B	[D] 2013	K10B	IMMO (Immobiliser)	●	●	●	●
Agila-B	[D] 2013	K10B	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila-B	[D] 2013	K12B	ECM (Engine Control Module)	●	●	●	●
Agila-B	[D] 2013	K12B	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Agila-B	[D] 2013	K12B	EPS (Electronic Power Steering)	●	●	●	●
Agila-B	[D] 2013	K12B	BCM (Body Control Module)	●	●	●	●
Agila-B	[D] 2013	K12B	IMMO (Immobiliser)	●	●	●	●
Agila-B	[D] 2013	K12B	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila-B	[D] 2013	D13A / Z 13 DTI	ECM (Engine Control Module)	●	●	●	●
Agila-B	[D] 2013	D13A / Z 13 DTI	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Agila-B	[D] 2013	D13A / Z 13 DTI	EPS (Electronic Power Steering)	●	●	●	●
Agila-B	[D] 2013	D13A / Z 13 DTI	BCM (Body Control Module)	●	●	●	●
Agila-B	[D] 2013	D13A / Z 13 DTI	IMMO (Immobiliser)	●	●	●	●
Agila-B	[D] 2013	D13A / Z 13 DTI	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila-B	[C] 2012	K10B	ECM (Engine Control Module)	●	●	●	●
Agila-B	[C] 2012	K10B	ABS/ESP (Anti-locked Braking System)	●	●	●	●

Agila-B	[C] 2012	K10B	EPS (Electronic Power Steering)	●	●	●	●
Agila-B	[C] 2012	K10B	BCM (Body Control Module)	●	●	●	●
Agila-B	[C] 2012	K10B	IMMO (Immobiliser)	●	●	●	●
Agila-B	[C] 2012	K10B	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila-B	[C] 2012	K12B	ECM (Engine Control Module)	●	●	●	●
Agila-B	[C] 2012	K12B	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Agila-B	[C] 2012	K12B	EPS (Electronic Power Steering)	●	●	●	●
Agila-B	[C] 2012	K12B	BCM (Body Control Module)	●	●	●	●
Agila-B	[C] 2012	K12B	IMMO (Immobiliser)	●	●	●	●
Agila-B	[C] 2012	K12B	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila-B	[C] 2012	D13A / Z 13 DTI	ECM (Engine Control Module)	●	●	●	●
Agila-B	[C] 2012	D13A / Z 13 DTI	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Agila-B	[C] 2012	D13A / Z 13 DTI	EPS (Electronic Power Steering)	●	●	●	●
Agila-B	[C] 2012	D13A / Z 13 DTI	BCM (Body Control Module)	●	●	●	●
Agila-B	[C] 2012	D13A / Z 13 DTI	IMMO (Immobiliser)	●	●	●	●
Agila-B	[C] 2012	D13A / Z 13 DTI	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila-B	[B] 2011	K10B	ECM (Engine Control Module)	●	●	●	●
Agila-B	[B] 2011	K10B	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Agila-B	[B] 2011	K10B	EPS (Electronic Power Steering)	●	●	●	●
Agila-B	[B] 2011	K10B	BCM (Body Control Module)	●	●	●	●
Agila-B	[B] 2011	K10B	IMMO (Immobiliser)	●	●	●	●
Agila-B	[B] 2011	K10B	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila-B	[B] 2011	K12B	ECM (Engine Control Module)	●	●	●	●
Agila-B	[B] 2011	K12B	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Agila-B	[B] 2011	K12B	EPS (Electronic Power Steering)	●	●	●	●
Agila-B	[B] 2011	K12B	BCM (Body Control Module)	●	●	●	●
Agila-B	[B] 2011	K12B	IMMO (Immobiliser)	●	●	●	●
Agila-B	[B] 2011	K12B	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila-B	[B] 2011	D13A / Z 13 DTI	ECM (Engine Control Module)	●	●	●	●
Agila-B	[B] 2011	D13A / Z 13 DTI	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Agila-B	[B] 2011	D13A / Z 13 DTI	EPS (Electronic Power Steering)	●	●	●	●
Agila-B	[B] 2011	D13A / Z 13 DTI	BCM (Body Control Module)	●	●	●	●
Agila-B	[B] 2011	D13A / Z 13 DTI	IMMO (Immobiliser)	●	●	●	●
Agila-B	[B] 2011	D13A / Z 13 DTI	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila-B	[A] 2010	K10B	ECM (Engine Control Module)	●	●	●	●
Agila-B	[A] 2010	K10B	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Agila-B	[A] 2010	K10B	EPS (Electronic Power Steering)	●	●	●	●
Agila-B	[A] 2010	K10B	BCM (Body Control Module)	●	●	●	●
Agila-B	[A] 2010	K10B	IMMO (Immobiliser)	●	●	●	●
Agila-B	[A] 2010	K10B	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila-B	[A] 2010	K12B	ECM (Engine Control Module)	●	●	●	●
Agila-B	[A] 2010	K12B	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Agila-B	[A] 2010	K12B	EPS (Electronic Power Steering)	●	●	●	●
Agila-B	[A] 2010	K12B	BCM (Body Control Module)	●	●	●	●
Agila-B	[A] 2010	K12B	IMMO (Immobiliser)	●	●	●	●
Agila-B	[A] 2010	K12B	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila-B	[A] 2010	D13A / Z 13 DTI	ECM (Engine Control Module)	●	●	●	●
Agila-B	[A] 2010	D13A / Z 13 DTI	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Agila-B	[A] 2010	D13A / Z 13 DTI	EPS (Electronic Power Steering)	●	●	●	●
Agila-B	[A] 2010	D13A / Z 13 DTI	BCM (Body Control Module)	●	●	●	●

Agila-B	[A] 2010	D13A / Z 13 DTI	IMMO (Immobiliser)	●	●	●	●
Agila-B	[A] 2010	D13A / Z 13 DTI	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila-B	[9] 2009	K10B	ECM (Engine Control Module)	●	●	●	●
Agila-B	[9] 2009	K10B	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Agila-B	[9] 2009	K10B	EPS (Electronic Power Steering)	●	●	●	●
Agila-B	[9] 2009	K10B	BCM (Body Control Module)	●	●	●	●
Agila-B	[9] 2009	K10B	IMMO (Immobiliser)	●	●	●	●
Agila-B	[9] 2009	K10B	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila-B	[9] 2009	K12B	ECM (Engine Control Module)	●	●	●	●
Agila-B	[9] 2009	K12B	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Agila-B	[9] 2009	K12B	EPS (Electronic Power Steering)	●	●	●	●
Agila-B	[9] 2009	K12B	BCM (Body Control Module)	●	●	●	●
Agila-B	[9] 2009	K12B	IMMO (Immobiliser)	●	●	●	●
Agila-B	[9] 2009	K12B	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila-B	[9] 2009	D13A / Z 13 DTI	ECM (Engine Control Module)	●	●	●	●
Agila-B	[9] 2009	D13A / Z 13 DTI	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Agila-B	[9] 2009	D13A / Z 13 DTI	EPS (Electronic Power Steering)	●	●	●	●
Agila-B	[9] 2009	D13A / Z 13 DTI	BCM (Body Control Module)	●	●	●	●
Agila-B	[9] 2009	D13A / Z 13 DTI	IMMO (Immobiliser)	●	●	●	●
Agila-B	[9] 2009	D13A / Z 13 DTI	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila-B	[8] 2008	K10B	ECM (Engine Control Module)	●	●	●	●
Agila-B	[8] 2008	K10B	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Agila-B	[8] 2008	K10B	EPS (Electronic Power Steering)	●	●	●	●
Agila-B	[8] 2008	K10B	BCM (Body Control Module)	●	●	●	●
Agila-B	[8] 2008	K10B	IMMO (Immobiliser)	●	●	●	●
Agila-B	[8] 2008	K10B	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila-B	[8] 2008	K12B	ECM (Engine Control Module)	●	●	●	●
Agila-B	[8] 2008	K12B	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Agila-B	[8] 2008	K12B	EPS (Electronic Power Steering)	●	●	●	●
Agila-B	[8] 2008	K12B	BCM (Body Control Module)	●	●	●	●
Agila-B	[8] 2008	K12B	IMMO (Immobiliser)	●	●	●	●
Agila-B	[8] 2008	K12B	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Agila-B	[8] 2008	D13A / Z 13 DTI	ECM (Engine Control Module)	●	●	●	●
Agila-B	[8] 2008	D13A / Z 13 DTI	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Agila-B	[8] 2008	D13A / Z 13 DTI	EPS (Electronic Power Steering)	●	●	●	●
Agila-B	[8] 2008	D13A / Z 13 DTI	BCM (Body Control Module)	●	●	●	●
Agila-B	[8] 2008	D13A / Z 13 DTI	IMMO (Immobiliser)	●	●	●	●
Agila-B	[8] 2008	D13A / Z 13 DTI	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Ampera	[F] 2015	1.4L (LUU)	ECM (Engine Control Module)	●	●	●	●
Ampera	[F] 2015	1.4L (LUU)	CCM (Chassis Control Module)	●	●	●	●
Ampera	[F] 2015	1.4L (LUU)	HPCM (Hybrid Powertrain Control Module)	●	●	●	●
Ampera	[F] 2015	1.4L (LUU)	HPCM (Hybrid Powertrain Control Module 2)	●	●	●	●
Ampera	[F] 2015	1.4L (LUU)	TCM (Transmission Control Module)	●	●	●	●
Ampera	[F] 2015	1.4L (LUU)	DMCM1 (Drive Motor Control Module 1)	●	●	●	●
Ampera	[F] 2015	1.4L (LUU)	DMCM2 (Drive Motor Control Module 2)	●	●	●	●
Ampera	[F] 2015	1.4L (LUU)	ATFP (Auxiliary Transmission Fluid Pump)	●	●	●	●
Ampera	[F] 2015	1.4L (LUU)	EBCM (Electronic Brake Control Module)	●	●	●	●
Ampera	[F] 2015	1.4L (LUU)	PBCM (Parking Brake Control Module)	●	●	●	●
Ampera	[F] 2015	1.4L (LUU)	PSCM (Power Steering Control Module)	●	●	●	●
Ampera	[F] 2015	1.4L (LUU)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Ampera	[F] 2015	1.4L (LUU)	BCM (Body Control Module)	●	●	●	●

Ampera	[F] 2015	1.4L (LUU)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Ampera	[F] 2015	1.4L (LUU)	IC (Instrument Cluster)	●	●	●	●
Ampera	[F] 2015	1.4L (LUU)	Radio	●	●	●	●
Ampera	[F] 2015	1.4L (LUU)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Ampera	[F] 2015	1.4L (LUU)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Ampera	[F] 2015	1.4L (LUU)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Ampera	[F] 2015	1.4L (LUU)	EACCM (Electric A/C Compressor Control Module)	●	●	●	●
Ampera	[F] 2015	1.4L (LUU)	CHCM (Coolant Heater Control Module)	●	●	●	●
Ampera	[F] 2015	1.4L (LUU)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Ampera	[F] 2015	1.4L (LUU)	KECM (Keyless Entry Control Module)	●	●	●	●
Ampera	[F] 2015	1.4L (LUU)	PACM (Parking Assist Control Module)	●	●	●	●
Ampera	[F] 2015	1.4L (LUU)	FCM (Frontview Camera Module)	●	●	●	●
Ampera	[F] 2015	1.4L (LUU)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Ampera	[F] 2015	1.4L (LUU)	BCCM (Battery Charger Control Module)	●	●	●	●
Ampera	[F] 2015	1.4L (LUU)	BECM (Battery Energy Control Module)	●	●	●	●
Antara	[G] 2016	2.0L (LFS)	ECM (Engine Control Module)	●	●	●	●
Antara	[G] 2016	2.0L (LFS)	TCM (Transmission Control Module)	●	●	●	●
Antara	[G] 2016	2.0L (LFS)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Antara	[G] 2016	2.0L (LFS)	EBCM (Electronic Brake Control Module)	●	●	●	●
Antara	[G] 2016	2.0L (LFS)	PBCM (Parking Brake Control Module)	●	●	●	●
Antara	[G] 2016	2.0L (LFS)	PSCM (Power Steering Control Module)	●	●	●	●
Antara	[G] 2016	2.0L (LFS)	BCM (Body Control Module)	●	●	●	●
Antara	[G] 2016	2.0L (LFS)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Antara	[G] 2016	2.0L (LFS)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Antara	[G] 2016	2.0L (LFS)	IC (Instrument Cluster)	●	●	●	●
Antara	[G] 2016	2.0L (LFS)	HCM (Headlamp Control Module)	●	●	●	●
Antara	[G] 2016	2.0L (LFS)	Radio	●	●	●	●
Antara	[G] 2016	2.0L (LFS)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Antara	[G] 2016	2.0L (LFS)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Antara	[G] 2016	2.0L (LFS)	IDM (Info Display Module)	●	●	●	●
Antara	[G] 2016	2.0L (LFS)	RCDLR (Remote Control Door Lock Receiver)	●	●	●	●
Antara	[G] 2016	2.0L (LFS)	PACM (Parking Assist Control Module)	●	●	●	●
Antara	[G] 2016	2.0L (LFS)	TDM (Theft Deterrent Module)	●	●	●	●
Antara	[F] 2015	2.0L (LNP)	ECM (Engine Control Module)	●	●	●	●
Antara	[F] 2015	2.0L (LNP)	CCM (Chassis Control Module)	●	●	●	●
Antara	[F] 2015	2.0L (LNP)	TCM (Transmission Control Module)	●	●	●	●
Antara	[F] 2015	2.0L (LNP)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Antara	[F] 2015	2.0L (LNP)	EBCM (Electronic Brake Control Module)	●	●	●	●
Antara	[F] 2015	2.0L (LNP)	PBCM (Parking Brake Control Module)	●	●	●	●
Antara	[F] 2015	2.0L (LNP)	BCM (Body Control Module)	●	●	●	●
Antara	[F] 2015	2.0L (LNP)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Antara	[F] 2015	2.0L (LNP)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Antara	[F] 2015	2.0L (LNP)	IC (Instrument Cluster)	●	●	●	●
Antara	[F] 2015	2.0L (LNP)	HCM (Headlamp Control Module)	●	●	●	●
Antara	[F] 2015	2.0L (LNP)	Radio	●	●	●	●
Antara	[F] 2015	2.0L (LNP)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Antara	[F] 2015	2.0L (LNP)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Antara	[F] 2015	2.0L (LNP)	IDM (Info Display Module)	●	●	●	●
Antara	[F] 2015	2.0L (LNP)	RCDLR (Remote Control Door Lock Receiver)	●	●	●	●
Antara	[F] 2015	2.0L (LNP)	PACM (Parking Assist Control Module)	●	●	●	●
Antara	[F] 2015	2.0L (LNP)	TDM (Theft Deterrent Module)	●	●	●	●
Antara	[F] 2015	2.2L (LNQ)	ECM (Engine Control Module)	●	●	●	●
Antara	[F] 2015	2.2L (LNQ)	CCM (Chassis Control Module)	●	●	●	●
Antara	[F] 2015	2.2L (LNQ)	TCM (Transmission Control Module)	●	●	●	●

Antara	[F] 2015	2.2L (LNQ)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Antara	[F] 2015	2.2L (LNQ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Antara	[F] 2015	2.2L (LNQ)	PBCM (Parking Brake Control Module)	●	●	●	●
Antara	[F] 2015	2.2L (LNQ)	BCM (Body Control Module)	●	●	●	●
Antara	[F] 2015	2.2L (LNQ)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Antara	[F] 2015	2.2L (LNQ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Antara	[F] 2015	2.2L (LNQ)	IC (Instrument Cluster)	●	●	●	●
Antara	[F] 2015	2.2L (LNQ)	HCM (Headlamp Control Module)	●	●	●	●
Antara	[F] 2015	2.2L (LNQ)	Radio	●	●	●	●
Antara	[F] 2015	2.2L (LNQ)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Antara	[F] 2015	2.2L (LNQ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Antara	[F] 2015	2.2L (LNQ)	IDM (Info Display Module)	●	●	●	●
Antara	[F] 2015	2.2L (LNQ)	RCDLR (Remote Control Door Lock Receiver)	●	●	●	●
Antara	[F] 2015	2.2L (LNQ)	PACM (Parking Assist Control Module)	●	●	●	●
Antara	[F] 2015	2.2L (LNQ)	TDM (Theft Deterrent Module)	●	●	●	●
Antara	[F] 2015	2.4L (LE9)	ECM (Engine Control Module)	●	●	●	●
Antara	[F] 2015	2.4L (LE9)	CCM (Chassis Control Module)	●	●	●	●
Antara	[F] 2015	2.4L (LE9)	TCM (Transmission Control Module)	●	●	●	●
Antara	[F] 2015	2.4L (LE9)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Antara	[F] 2015	2.4L (LE9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Antara	[F] 2015	2.4L (LE9)	PBCM (Parking Brake Control Module)	●	●	●	●
Antara	[F] 2015	2.4L (LE9)	BCM (Body Control Module)	●	●	●	●
Antara	[F] 2015	2.4L (LE9)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Antara	[F] 2015	2.4L (LE9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Antara	[F] 2015	2.4L (LE9)	IC (Instrument Cluster)	●	●	●	●
Antara	[F] 2015	2.4L (LE9)	HCM (Headlamp Control Module)	●	●	●	●
Antara	[F] 2015	2.4L (LE9)	Radio	●	●	●	●
Antara	[F] 2015	2.4L (LE9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Antara	[F] 2015	2.4L (LE9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Antara	[F] 2015	2.4L (LE9)	IDM (Info Display Module)	●	●	●	●
Antara	[F] 2015	2.4L (LE9)	RCDLR (Remote Control Door Lock Receiver)	●	●	●	●
Antara	[F] 2015	2.4L (LE9)	PACM (Parking Assist Control Module)	●	●	●	●
Antara	[F] 2015	2.4L (LE9)	TDM (Theft Deterrent Module)	●	●	●	●
Antara	[F] 2015	3.0L (LFW)	ECM (Engine Control Module)	●	●	●	●
Antara	[F] 2015	3.0L (LFW)	CCM (Chassis Control Module)	●	●	●	●
Antara	[F] 2015	3.0L (LFW)	TCM (Transmission Control Module)	●	●	●	●
Antara	[F] 2015	3.0L (LFW)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Antara	[F] 2015	3.0L (LFW)	EBCM (Electronic Brake Control Module)	●	●	●	●
Antara	[F] 2015	3.0L (LFW)	PBCM (Parking Brake Control Module)	●	●	●	●
Antara	[F] 2015	3.0L (LFW)	BCM (Body Control Module)	●	●	●	●
Antara	[F] 2015	3.0L (LFW)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Antara	[F] 2015	3.0L (LFW)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Antara	[F] 2015	3.0L (LFW)	IC (Instrument Cluster)	●	●	●	●
Antara	[F] 2015	3.0L (LFW)	HCM (Headlamp Control Module)	●	●	●	●
Antara	[F] 2015	3.0L (LFW)	Radio	●	●	●	●
Antara	[F] 2015	3.0L (LFW)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Antara	[F] 2015	3.0L (LFW)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Antara	[F] 2015	3.0L (LFW)	IDM (Info Display Module)	●	●	●	●
Antara	[F] 2015	3.0L (LFW)	RCDLR (Remote Control Door Lock Receiver)	●	●	●	●
Antara	[F] 2015	3.0L (LFW)	PACM (Parking Assist Control Module)	●	●	●	●
Antara	[F] 2015	3.0L (LFW)	TDM (Theft Deterrent Module)	●	●	●	●
Antara	[E] 2014	2.0L (LNP)	ECM (Engine Control Module)	●	●	●	●
Antara	[E] 2014	2.0L (LNP)	CCM (Chassis Control Module)	●	●	●	●
Antara	[E] 2014	2.0L (LNP)	TCM (Transmission Control Module)	●	●	●	●
Antara	[E] 2014	2.0L (LNP)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●

Antara	[E] 2014	2.0L (LNP)	EBCM (Electronic Brake Control Module)	●	●	●	●
Antara	[E] 2014	2.0L (LNP)	PBCM (Parking Brake Control Module)	●	●	●	●
Antara	[E] 2014	2.0L (LNP)	BCM (Body Control Module)	●	●	●	●
Antara	[E] 2014	2.0L (LNP)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Antara	[E] 2014	2.0L (LNP)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Antara	[E] 2014	2.0L (LNP)	IC (Instrument Cluster)	●	●	●	●
Antara	[E] 2014	2.0L (LNP)	HCM (Headlamp Control Module)	●	●	●	●
Antara	[E] 2014	2.0L (LNP)	Radio	●	●	●	●
Antara	[E] 2014	2.0L (LNP)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Antara	[E] 2014	2.0L (LNP)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Antara	[E] 2014	2.0L (LNP)	IDM (Info Display Module)	●	●	●	●
Antara	[E] 2014	2.0L (LNP)	RCDLR (Remote Control Door Lock Receiver)	●	●	●	●
Antara	[E] 2014	2.0L (LNP)	PACM (Parking Assist Control Module)	●	●	●	●
Antara	[E] 2014	2.0L (LNP)	TDM (Theft Deterrent Module)	●	●	●	●
Antara	[E] 2014	2.2L (LNQ)	ECM (Engine Control Module)	●	●	●	●
Antara	[E] 2014	2.2L (LNQ)	CCM (Chassis Control Module)	●	●	●	●
Antara	[E] 2014	2.2L (LNQ)	TCM (Transmission Control Module)	●	●	●	●
Antara	[E] 2014	2.2L (LNQ)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Antara	[E] 2014	2.2L (LNQ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Antara	[E] 2014	2.2L (LNQ)	PBCM (Parking Brake Control Module)	●	●	●	●
Antara	[E] 2014	2.2L (LNQ)	BCM (Body Control Module)	●	●	●	●
Antara	[E] 2014	2.2L (LNQ)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Antara	[E] 2014	2.2L (LNQ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Antara	[E] 2014	2.2L (LNQ)	IC (Instrument Cluster)	●	●	●	●
Antara	[E] 2014	2.2L (LNQ)	HCM (Headlamp Control Module)	●	●	●	●
Antara	[E] 2014	2.2L (LNQ)	Radio	●	●	●	●
Antara	[E] 2014	2.2L (LNQ)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Antara	[E] 2014	2.2L (LNQ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Antara	[E] 2014	2.2L (LNQ)	IDM (Info Display Module)	●	●	●	●
Antara	[E] 2014	2.2L (LNQ)	RCDLR (Remote Control Door Lock Receiver)	●	●	●	●
Antara	[E] 2014	2.2L (LNQ)	PACM (Parking Assist Control Module)	●	●	●	●
Antara	[E] 2014	2.2L (LNQ)	TDM (Theft Deterrent Module)	●	●	●	●
Antara	[E] 2014	2.4L (LE9)	ECM (Engine Control Module)	●	●	●	●
Antara	[E] 2014	2.4L (LE9)	CCM (Chassis Control Module)	●	●	●	●
Antara	[E] 2014	2.4L (LE9)	TCM (Transmission Control Module)	●	●	●	●
Antara	[E] 2014	2.4L (LE9)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Antara	[E] 2014	2.4L (LE9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Antara	[E] 2014	2.4L (LE9)	PBCM (Parking Brake Control Module)	●	●	●	●
Antara	[E] 2014	2.4L (LE9)	BCM (Body Control Module)	●	●	●	●
Antara	[E] 2014	2.4L (LE9)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Antara	[E] 2014	2.4L (LE9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Antara	[E] 2014	2.4L (LE9)	IC (Instrument Cluster)	●	●	●	●
Antara	[E] 2014	2.4L (LE9)	HCM (Headlamp Control Module)	●	●	●	●
Antara	[E] 2014	2.4L (LE9)	Radio	●	●	●	●
Antara	[E] 2014	2.4L (LE9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Antara	[E] 2014	2.4L (LE9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Antara	[E] 2014	2.4L (LE9)	IDM (Info Display Module)	●	●	●	●
Antara	[E] 2014	2.4L (LE9)	RCDLR (Remote Control Door Lock Receiver)	●	●	●	●
Antara	[E] 2014	2.4L (LE9)	PACM (Parking Assist Control Module)	●	●	●	●
Antara	[E] 2014	2.4L (LE9)	TDM (Theft Deterrent Module)	●	●	●	●
Antara	[E] 2014	3.0L (LFW)	ECM (Engine Control Module)	●	●	●	●
Antara	[E] 2014	3.0L (LFW)	CCM (Chassis Control Module)	●	●	●	●
Antara	[E] 2014	3.0L (LFW)	TCM (Transmission Control Module)	●	●	●	●
Antara	[E] 2014	3.0L (LFW)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Antara	[E] 2014	3.0L (LFW)	EBCM (Electronic Brake Control Module)	●	●	●	●

Antara	[E] 2014	3.0L (LFW)	PBCM (Parking Brake Control Module)	●	●	●	●
Antara	[E] 2014	3.0L (LFW)	BCM (Body Control Module)	●	●	●	●
Antara	[E] 2014	3.0L (LFW)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Antara	[E] 2014	3.0L (LFW)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Antara	[E] 2014	3.0L (LFW)	IC (Instrument Cluster)	●	●	●	●
Antara	[E] 2014	3.0L (LFW)	HCM (Headlamp Control Module)	●	●	●	●
Antara	[E] 2014	3.0L (LFW)	Radio	●	●	●	●
Antara	[E] 2014	3.0L (LFW)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Antara	[E] 2014	3.0L (LFW)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Antara	[E] 2014	3.0L (LFW)	IDM (Info Display Module)	●	●	●	●
Antara	[E] 2014	3.0L (LFW)	RCDLR (Remote Control Door Lock Receiver)	●	●	●	●
Antara	[E] 2014	3.0L (LFW)	PACM (Parking Assist Control Module)	●	●	●	●
Antara	[E] 2014	3.0L (LFW)	TDM (Theft Deterrent Module)	●	●	●	●
Antara	[D] 2013	ECM 2.0L (LNP)	ECM (Engine Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.0L (LNP)	FPCM (Fuel Pump Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.0L (LNP)	TCM (Transmission Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.0L (LNP)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.0L (LNP)	EBCM (Electronic Brake Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.0L (LNP)	PBCM (Parking Brake Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.0L (LNP)	BCM (Body Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.0L (LNP)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.0L (LNP)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Antara	[D] 2013	ECM 2.0L (LNP)	IC (Instrument Cluster)	●	●	●	●
Antara	[D] 2013	ECM 2.0L (LNP)	HCM (Headlamp Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.0L (LNP)	Radio	●	●	●	●
Antara	[D] 2013	ECM 2.0L (LNP)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.0L (LNP)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Antara	[D] 2013	ECM 2.0L (LNP)	IDM (Info Display Module)	●	●	●	●
Antara	[D] 2013	ECM 2.0L (LNP)	RCDLR (Remote Control Door Lock Receiver)	●	●	●	●
Antara	[D] 2013	ECM 2.0L (LNP)	PACM (Parking Assist Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.0L (LNP)	TDM (Theft Deterrent Module)	●	●	●	●
Antara	[D] 2013	ECM 2.2L (LNQ)	ECM (Engine Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.2L (LNQ)	FPCM (Fuel Pump Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.2L (LNQ)	TCM (Transmission Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.2L (LNQ)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.2L (LNQ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.2L (LNQ)	PBCM (Parking Brake Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.2L (LNQ)	BCM (Body Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.2L (LNQ)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.2L (LNQ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Antara	[D] 2013	ECM 2.2L (LNQ)	IC (Instrument Cluster)	●	●	●	●
Antara	[D] 2013	ECM 2.2L (LNQ)	HCM (Headlamp Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.2L (LNQ)	Radio	●	●	●	●
Antara	[D] 2013	ECM 2.2L (LNQ)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.2L (LNQ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●

Antara	[D] 2013	ECM 2.2L (LNQ)	IDM (Info Display Module)	●	●	●	●
Antara	[D] 2013	ECM 2.2L (LNQ)	RCDLR (Remote Control Door Lock Receiver)	●	●	●	●
Antara	[D] 2013	ECM 2.2L (LNQ)	PACM (Parking Assist Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.2L (LNQ)	TDM (Theft Deterrent Module)	●	●	●	●
Antara	[D] 2013	ECM 2.4L (LE9)	ECM (Engine Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.4L (LE9)	FPCM (Fuel Pump Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.4L (LE9)	TCM (Transmission Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.4L (LE9)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.4L (LE9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.4L (LE9)	PBCM (Parking Brake Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.4L (LE9)	BCM (Body Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.4L (LE9)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.4L (LE9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Antara	[D] 2013	ECM 2.4L (LE9)	IC (Instrument Cluster)	●	●	●	●
Antara	[D] 2013	ECM 2.4L (LE9)	HCM (Headlamp Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.4L (LE9)	Radio	●	●	●	●
Antara	[D] 2013	ECM 2.4L (LE9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.4L (LE9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Antara	[D] 2013	ECM 2.4L (LE9)	IDM (Info Display Module)	●	●	●	●
Antara	[D] 2013	ECM 2.4L (LE9)	RCDLR (Remote Control Door Lock Receiver)	●	●	●	●
Antara	[D] 2013	ECM 2.4L (LE9)	PACM (Parking Assist Control Module)	●	●	●	●
Antara	[D] 2013	ECM 2.4L (LE9)	TDM (Theft Deterrent Module)	●	●	●	●
Antara	[D] 2013	3.0L (LFW)	ECM (Engine Control Module)	●	●	●	●
Antara	[D] 2013	3.0L (LFW)	FPCM (Fuel Pump Control Module)	●	●	●	●
Antara	[D] 2013	3.0L (LFW)	TCM (Transmission Control Module)	●	●	●	●
Antara	[D] 2013	3.0L (LFW)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Antara	[D] 2013	3.0L (LFW)	EBCM (Electronic Brake Control Module)	●	●	●	●
Antara	[D] 2013	3.0L (LFW)	PBCM (Parking Brake Control Module)	●	●	●	●
Antara	[D] 2013	3.0L (LFW)	BCM (Body Control Module)	●	●	●	●
Antara	[D] 2013	3.0L (LFW)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Antara	[D] 2013	3.0L (LFW)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Antara	[D] 2013	3.0L (LFW)	IC (Instrument Cluster)	●	●	●	●
Antara	[D] 2013	3.0L (LFW)	HCM (Headlamp Control Module)	●	●	●	●
Antara	[D] 2013	3.0L (LFW)	Radio	●	●	●	●
Antara	[D] 2013	3.0L (LFW)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Antara	[D] 2013	3.0L (LFW)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Antara	[D] 2013	3.0L (LFW)	IDM (Info Display Module)	●	●	●	●
Antara	[D] 2013	3.0L (LFW)	RCDLR (Remote Control Door Lock Receiver)	●	●	●	●
Antara	[D] 2013	3.0L (LFW)	PACM (Parking Assist Control Module)	●	●	●	●
Antara	[D] 2013	3.0L (LFW)	TDM (Theft Deterrent Module)	●	●	●	●
Antara	[C] 2012	2.0L (LNP)	ECM (Engine Control Module)	●	●	●	●
Antara	[C] 2012	2.0L (LNP)	FPCM (Fuel Pump Control Module)	●	●	●	●
Antara	[C] 2012	2.0L (LNP)	TCM (Transmission Control Module)	●	●	●	●
Antara	[C] 2012	2.0L (LNP)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Antara	[C] 2012	2.0L (LNP)	EBCM (Electronic Brake Control Module)	●	●	●	●
Antara	[C] 2012	2.0L (LNP)	PBCM (Parking Brake Control Module)	●	●	●	●
Antara	[C] 2012	2.0L (LNP)	BCM (Body Control Module)	●	●	●	●
Antara	[C] 2012	2.0L (LNP)	ABCM (Auxiliary Body Control Module)	●	●	●	●

Antara	[C] 2012	2.0L (LNP)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Antara	[C] 2012	2.0L (LNP)	IC (Instrument Cluster)	●	●	●	●
Antara	[C] 2012	2.0L (LNP)	HCM (Headlamp Control Module)	●	●	●	●
Antara	[C] 2012	2.0L (LNP)	Radio	●	●	●	●
Antara	[C] 2012	2.0L (LNP)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Antara	[C] 2012	2.0L (LNP)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Antara	[C] 2012	2.0L (LNP)	IDM (Info Display Module)	●	●	●	●
Antara	[C] 2012	2.0L (LNP)	RCDLR (Remote Control Door Lock Receiver)	●	●	●	●
Antara	[C] 2012	2.0L (LNP)	PACM (Parking Assist Control Module)	●	●	●	●
Antara	[C] 2012	2.0L (LNP)	TDM (Theft Deterrent Module)	●	●	●	●
Antara	[C] 2012	2.2L (LNQ)	ECM (Engine Control Module)	●	●	●	●
Antara	[C] 2012	2.2L (LNQ)	FPCM (Fuel Pump Control Module)	●	●	●	●
Antara	[C] 2012	2.2L (LNQ)	TCM (Transmission Control Module)	●	●	●	●
Antara	[C] 2012	2.2L (LNQ)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Antara	[C] 2012	2.2L (LNQ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Antara	[C] 2012	2.2L (LNQ)	PBCM (Parking Brake Control Module)	●	●	●	●
Antara	[C] 2012	2.2L (LNQ)	BCM (Body Control Module)	●	●	●	●
Antara	[C] 2012	2.2L (LNQ)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Antara	[C] 2012	2.2L (LNQ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Antara	[C] 2012	2.2L (LNQ)	IC (Instrument Cluster)	●	●	●	●
Antara	[C] 2012	2.2L (LNQ)	HCM (Headlamp Control Module)	●	●	●	●
Antara	[C] 2012	2.2L (LNQ)	Radio	●	●	●	●
Antara	[C] 2012	2.2L (LNQ)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Antara	[C] 2012	2.2L (LNQ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Antara	[C] 2012	2.2L (LNQ)	IDM (Info Display Module)	●	●	●	●
Antara	[C] 2012	2.2L (LNQ)	RCDLR (Remote Control Door Lock Receiver)	●	●	●	●
Antara	[C] 2012	2.2L (LNQ)	PACM (Parking Assist Control Module)	●	●	●	●
Antara	[C] 2012	2.2L (LNQ)	TDM (Theft Deterrent Module)	●	●	●	●
Antara	[C] 2012	2.4L (LE5)	ECM (Engine Control Module)	●	●	●	●
Antara	[C] 2012	2.4L (LE5)	FPCM (Fuel Pump Control Module)	●	●	●	●
Antara	[C] 2012	2.4L (LE5)	TCM (Transmission Control Module)	●	●	●	●
Antara	[C] 2012	2.4L (LE5)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Antara	[C] 2012	2.4L (LE5)	EBCM (Electronic Brake Control Module)	●	●	●	●
Antara	[C] 2012	2.4L (LE5)	PBCM (Parking Brake Control Module)	●	●	●	●
Antara	[C] 2012	2.4L (LE5)	BCM (Body Control Module)	●	●	●	●
Antara	[C] 2012	2.4L (LE5)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Antara	[C] 2012	2.4L (LE5)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Antara	[C] 2012	2.4L (LE5)	IC (Instrument Cluster)	●	●	●	●
Antara	[C] 2012	2.4L (LE5)	HCM (Headlamp Control Module)	●	●	●	●
Antara	[C] 2012	2.4L (LE5)	Radio	●	●	●	●
Antara	[C] 2012	2.4L (LE5)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Antara	[C] 2012	2.4L (LE5)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Antara	[C] 2012	2.4L (LE5)	IDM (Info Display Module)	●	●	●	●
Antara	[C] 2012	2.4L (LE5)	RCDLR (Remote Control Door Lock Receiver)	●	●	●	●
Antara	[C] 2012	2.4L (LE5)	PACM (Parking Assist Control Module)	●	●	●	●
Antara	[C] 2012	2.4L (LE5)	TDM (Theft Deterrent Module)	●	●	●	●
Antara	[C] 2012	2.4L (LE9)	ECM (Engine Control Module)	●	●	●	●
Antara	[C] 2012	2.4L (LE9)	FPCM (Fuel Pump Control Module)	●	●	●	●
Antara	[C] 2012	2.4L (LE9)	TCM (Transmission Control Module)	●	●	●	●
Antara	[C] 2012	2.4L (LE9)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Antara	[C] 2012	2.4L (LE9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Antara	[C] 2012	2.4L (LE9)	PBCM (Parking Brake Control Module)	●	●	●	●
Antara	[C] 2012	2.4L (LE9)	BCM (Body Control Module)	●	●	●	●
Antara	[C] 2012	2.4L (LE9)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Antara	[C] 2012	2.4L (LE9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●

Antara	[C] 2012	2.4L (LE9)	IC (Instrument Cluster)	●	●	●	●
Antara	[C] 2012	2.4L (LE9)	HCM (Headlamp Control Module)	●	●	●	●
Antara	[C] 2012	2.4L (LE9)	Radio	●	●	●	●
Antara	[C] 2012	2.4L (LE9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Antara	[C] 2012	2.4L (LE9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Antara	[C] 2012	2.4L (LE9)	IDM (Info Display Module)	●	●	●	●
Antara	[C] 2012	2.4L (LE9)	RCDLR (Remote Control Door Lock Receiver)	●	●	●	●
Antara	[C] 2012	2.4L (LE9)	PACM (Parking Assist Control Module)	●	●	●	●
Antara	[C] 2012	2.4L (LE9)	TDM (Theft Deterrent Module)	●	●	●	●
Antara	[C] 2012	3.0L (LF1)	ECM (Engine Control Module)	●	●	●	●
Antara	[C] 2012	3.0L (LF1)	FPCM (Fuel Pump Control Module)	●	●	●	●
Antara	[C] 2012	3.0L (LF1)	TCM (Transmission Control Module)	●	●	●	●
Antara	[C] 2012	3.0L (LF1)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Antara	[C] 2012	3.0L (LF1)	EBCM (Electronic Brake Control Module)	●	●	●	●
Antara	[C] 2012	3.0L (LF1)	PBCM (Parking Brake Control Module)	●	●	●	●
Antara	[C] 2012	3.0L (LF1)	BCM (Body Control Module)	●	●	●	●
Antara	[C] 2012	3.0L (LF1)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Antara	[C] 2012	3.0L (LF1)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Antara	[C] 2012	3.0L (LF1)	IC (Instrument Cluster)	●	●	●	●
Antara	[C] 2012	3.0L (LF1)	HCM (Headlamp Control Module)	●	●	●	●
Antara	[C] 2012	3.0L (LF1)	Radio	●	●	●	●
Antara	[C] 2012	3.0L (LF1)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Antara	[C] 2012	3.0L (LF1)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Antara	[C] 2012	3.0L (LF1)	IDM (Info Display Module)	●	●	●	●
Antara	[C] 2012	3.0L (LF1)	RCDLR (Remote Control Door Lock Receiver)	●	●	●	●
Antara	[C] 2012	3.0L (LF1)	PACM (Parking Assist Control Module)	●	●	●	●
Antara	[C] 2012	3.0L (LF1)	TDM (Theft Deterrent Module)	●	●	●	●
Antara	[C] 2012	3.0L (LFW)	ECM (Engine Control Module)	●	●	●	●
Antara	[C] 2012	3.0L (LFW)	FPCM (Fuel Pump Control Module)	●	●	●	●
Antara	[C] 2012	3.0L (LFW)	TCM (Transmission Control Module)	●	●	●	●
Antara	[C] 2012	3.0L (LFW)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Antara	[C] 2012	3.0L (LFW)	EBCM (Electronic Brake Control Module)	●	●	●	●
Antara	[C] 2012	3.0L (LFW)	PBCM (Parking Brake Control Module)	●	●	●	●
Antara	[C] 2012	3.0L (LFW)	BCM (Body Control Module)	●	●	●	●
Antara	[C] 2012	3.0L (LFW)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Antara	[C] 2012	3.0L (LFW)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Antara	[C] 2012	3.0L (LFW)	IC (Instrument Cluster)	●	●	●	●
Antara	[C] 2012	3.0L (LFW)	HCM (Headlamp Control Module)	●	●	●	●
Antara	[C] 2012	3.0L (LFW)	Radio	●	●	●	●
Antara	[C] 2012	3.0L (LFW)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Antara	[C] 2012	3.0L (LFW)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Antara	[C] 2012	3.0L (LFW)	IDM (Info Display Module)	●	●	●	●
Antara	[C] 2012	3.0L (LFW)	RCDLR (Remote Control Door Lock Receiver)	●	●	●	●
Antara	[C] 2012	3.0L (LFW)	PACM (Parking Assist Control Module)	●	●	●	●
Antara	[C] 2012	3.0L (LFW)	TDM (Theft Deterrent Module)	●	●	●	●
Antara	[B] 2011	2.2L (LNQ)	ECM (Engine Control Module)	●	●	●	●
Antara	[B] 2011	2.2L (LNQ)	FPCM (Fuel Pump Control Module)	●	●	●	●
Antara	[B] 2011	2.2L (LNQ)	TCM (Transmission Control Module)	●	●	●	●
Antara	[B] 2011	2.2L (LNQ)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Antara	[B] 2011	2.2L (LNQ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Antara	[B] 2011	2.2L (LNQ)	PBCM (Parking Brake Control Module)	●	●	●	●
Antara	[B] 2011	2.2L (LNQ)	BCM (Body Control Module)	●	●	●	●
Antara	[B] 2011	2.2L (LNQ)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Antara	[B] 2011	2.2L (LNQ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Antara	[B] 2011	2.2L (LNQ)	IC (Instrument Cluster)	●	●	●	●

Antara	[B] 2011	2.2L (LNQ)	HCM (Headlamp Control Module)	●	●	●	●
Antara	[B] 2011	2.2L (LNQ)	Radio	●	●	●	●
Antara	[B] 2011	2.2L (LNQ)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Antara	[B] 2011	2.2L (LNQ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Antara	[B] 2011	2.2L (LNQ)	IDM (Info Display Module)	●	●	●	●
Antara	[B] 2011	2.2L (LNQ)	RCDLR (Remote Control Door Lock Receiver)	●	●	●	●
Antara	[B] 2011	2.2L (LNQ)	PACM (Parking Assist Control Module)	●	●	●	●
Antara	[B] 2011	2.2L (LNQ)	TDM (Theft Deterrent Module)	●	●	●	●
Antara	[B] 2011	2.4L (LE5)	ECM (Engine Control Module)	●	●	●	●
Antara	[B] 2011	2.4L (LE5)	FPCM (Fuel Pump Control Module)	●	●	●	●
Antara	[B] 2011	2.4L (LE5)	TCM (Transmission Control Module)	●	●	●	●
Antara	[B] 2011	2.4L (LE5)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Antara	[B] 2011	2.4L (LE5)	EBCM (Electronic Brake Control Module)	●	●	●	●
Antara	[B] 2011	2.4L (LE5)	PBCM (Parking Brake Control Module)	●	●	●	●
Antara	[B] 2011	2.4L (LE5)	BCM (Body Control Module)	●	●	●	●
Antara	[B] 2011	2.4L (LE5)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Antara	[B] 2011	2.4L (LE5)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Antara	[B] 2011	2.4L (LE5)	IC (Instrument Cluster)	●	●	●	●
Antara	[B] 2011	2.4L (LE5)	HCM (Headlamp Control Module)	●	●	●	●
Antara	[B] 2011	2.4L (LE5)	Radio	●	●	●	●
Antara	[B] 2011	2.4L (LE5)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Antara	[B] 2011	2.4L (LE5)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Antara	[B] 2011	2.4L (LE5)	IDM (Info Display Module)	●	●	●	●
Antara	[B] 2011	2.4L (LE5)	RCDLR (Remote Control Door Lock Receiver)	●	●	●	●
Antara	[B] 2011	2.4L (LE5)	PACM (Parking Assist Control Module)	●	●	●	●
Antara	[B] 2011	2.4L (LE5)	TDM (Theft Deterrent Module)	●	●	●	●
Antara	[B] 2011	3.0L (LF1)	ECM (Engine Control Module)	●	●	●	●
Antara	[B] 2011	3.0L (LF1)	FPCM (Fuel Pump Control Module)	●	●	●	●
Antara	[B] 2011	3.0L (LF1)	TCM (Transmission Control Module)	●	●	●	●
Antara	[B] 2011	3.0L (LF1)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Antara	[B] 2011	3.0L (LF1)	EBCM (Electronic Brake Control Module)	●	●	●	●
Antara	[B] 2011	3.0L (LF1)	PBCM (Parking Brake Control Module)	●	●	●	●
Antara	[B] 2011	3.0L (LF1)	BCM (Body Control Module)	●	●	●	●
Antara	[B] 2011	3.0L (LF1)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Antara	[B] 2011	3.0L (LF1)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Antara	[B] 2011	3.0L (LF1)	IC (Instrument Cluster)	●	●	●	●
Antara	[B] 2011	3.0L (LF1)	HCM (Headlamp Control Module)	●	●	●	●
Antara	[B] 2011	3.0L (LF1)	Radio	●	●	●	●
Antara	[B] 2011	3.0L (LF1)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Antara	[B] 2011	3.0L (LF1)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Antara	[B] 2011	3.0L (LF1)	IDM (Info Display Module)	●	●	●	●
Antara	[B] 2011	3.0L (LF1)	RCDLR (Remote Control Door Lock Receiver)	●	●	●	●
Antara	[B] 2011	3.0L (LF1)	PACM (Parking Assist Control Module)	●	●	●	●
Antara	[B] 2011	3.0L (LF1)	TDM (Theft Deterrent Module)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	2.0 L (Diesel)	ECM (Engine Control Module)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	2.0 L (Diesel)	TCCM (Transfer Case Control Module)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	2.0 L (Diesel)	AT (Automatic Transmission)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	2.0 L (Diesel)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	2.0 L (Diesel)	FPCM (Fuel Pump Control Module)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	2.0 L (Diesel)	AHL (Automatic Headlamp Levelling)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	2.0 L (Diesel)	BCM (Body Control Module)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	2.0 L (Diesel)	ECC (Electronic Climate Control)	●	●	●	●

Antara, Captiva (Short Body)	[A] 2010	2.0 L (Diesel)	IMMO (Immobiliser)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	2.0 L (Diesel)	IC (Instrument Cluster)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	2.0 L (Diesel)	PAS (Park Pilot)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	2.0 L (Diesel)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	2.0 L (Diesel)	RFA (Multipurpose Receiver Module)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	2.0 L (Diesel)	ATWS (Anti Theft Warning System)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	2.0 L (Diesel)	Wipers/Washer	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	2.0 L (Diesel)	CDL (Central Door Lock)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	2.0 L (Diesel)	SLM (Shift Lever Module)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	2.0 L (Diesel)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	2.0 L (Diesel)	Interior Lighting	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	2.0 L (Diesel)	Exterior Lighting/Turn Indicator System	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	2.0 L (Diesel)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 24 XE	ECM (Engine Control Module)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 24 XE	TCCM (Transfer Case Control Module)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 24 XE	AT (Automatic Transmission)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 24 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 24 XE	FPCM (Fuel Pump Control Module)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 24 XE	AHL (Automatic Headlamp Levelling)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 24 XE	BCM (Body Control Module)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 24 XE	ECC (Electronic Climate Control)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 24 XE	IMMO (Immobiliser)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 24 XE	IC (Instrument Cluster)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 24 XE	PAS (Park Pilot)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 24 XE	ABCM (Auxiliary Body Control Module)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 24 XE	RFA (Multipurpose Receiver Module)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 24 XE	ATWS (Anti Theft Warning System)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 24 XE	Wipers/Washer	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 24 XE	CDL (Central Door Lock)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 24 XE	SLM (Shift Lever Module)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 24 XE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 24 XE	Interior Lighting	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 24 XE	Exterior Lighting/Turn Indicator System	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 24 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 32 SE	ECM (Engine Control Module)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 32 SE	TCCM (Transfer Case Control Module)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 32 SE	AT (Automatic Transmission)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 32 SE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 32 SE	FPCM (Fuel Pump Control Module)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 32 SE	AHL (Automatic Headlamp Levelling)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 32 SE	BCM (Body Control Module)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 32 SE	ECC (Electronic Climate Control)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 32 SE	IMMO (Immobiliser)	●	●	●	●

Antara, Captiva (Short Body)	[A] 2010	Z 32 SE	IC (Instrument Cluster)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 32 SE	PAS (Park Pilot)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 32 SE	ABCM (Auxiliary Body Control Module)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 32 SE	RFA (Multipurpose Receiver Module)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 32 SE	ATWS (Anti Theft Warning System)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 32 SE	Wipers/Washer	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 32 SE	CDL (Central Door Lock)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 32 SE	SLM (Shift Lever Module)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 32 SE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 32 SE	Interior Lighting	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 32 SE	Exterior Lighting/Turn Indicator System	●	●	●	●
Antara, Captiva (Short Body)	[A] 2010	Z 32 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Antara, Captiva (Short Body)	[9] 2009	2.0 L (Diesel)	ECM (Engine Control Module)	●	●	●	●
Antara, Captiva (Short Body)	[9] 2009	2.0 L (Diesel)	TCCM (Transfer Case Control Module)	●	●	●	●
Antara, Captiva (Short Body)	[9] 2009	2.0 L (Diesel)	AT (Automatic Transmission)	●	●	●	●
Antara, Captiva (Short Body)	[9] 2009	2.0 L (Diesel)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Antara, Captiva (Short Body)	[9] 2009	2.0 L (Diesel)	FPCM (Fuel Pump Control Module)	●	●	●	●
Antara, Captiva (Short Body)	[9] 2009	2.0 L (Diesel)	AHL (Automatic Headlamp Levelling)	●	●	●	●
Antara, Captiva (Short Body)	[9] 2009	2.0 L (Diesel)	BCM (Body Control Module)	●	●	●	●
Antara, Captiva (Short Body)	[9] 2009	2.0 L (Diesel)	ECC (Electronic Climate Control)	●	●	●	●
Antara, Captiva (Short Body)	[9] 2009	2.0 L (Diesel)	IMMO (Immobiliser)	●	●	●	●
Antara, Captiva (Short Body)	[9] 2009	2.0 L (Diesel)	IC (Instrument Cluster)	●	●	●	●
Antara, Captiva (Short Body)	[9] 2009	2.0 L (Diesel)	PAS (Park Pilot)	●	●	●	●
Antara, Captiva (Short Body)	[9] 2009	2.0 L (Diesel)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Antara, Captiva (Short Body)	[9] 2009	2.0 L (Diesel)	RFA (Multipurpose Receiver Module)	●	●	●	●
Antara, Captiva (Short Body)	[9] 2009	2.0 L (Diesel)	ATWS (Anti Theft Warning System)	●	●	●	●
Antara, Captiva (Short Body)	[9] 2009	2.0 L (Diesel)	Wipers/Washer	●	●	●	●
Antara, Captiva (Short Body)	[9] 2009	2.0 L (Diesel)	CDL (Central Door Lock)	●	●	●	●
Antara, Captiva (Short Body)	[9] 2009	2.0 L (Diesel)	SLM (Shift Lever Module)	●	●	●	●
Antara, Captiva (Short Body)	[9] 2009	2.0 L (Diesel)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Antara, Captiva (Short Body)	[9] 2009	2.0 L (Diesel)	Interior Lighting	●	●	●	●
Antara, Captiva (Short Body)	[9] 2009	2.0 L (Diesel)	Exterior Lighting/Turn Indicator System	●	●	●	●
Antara, Captiva (Short Body)	[9] 2009	2.0 L (Diesel)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Antara, Captiva (Short Body)	[8] 2008	2.0 L (Diesel)	ECM (Engine Control Module)	●	●	●	●
Antara, Captiva (Short Body)	[8] 2008	2.0 L (Diesel)	TCCM (Transfer Case Control Module)	●	●	●	●
Antara, Captiva (Short Body)	[8] 2008	2.0 L (Diesel)	AT (Automatic Transmission)	●	●	●	●
Antara, Captiva (Short Body)	[8] 2008	2.0 L (Diesel)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Antara, Captiva (Short Body)	[8] 2008	2.0 L (Diesel)	FPCM (Fuel Pump Control Module)	●	●	●	●
Antara, Captiva (Short Body)	[8] 2008	2.0 L (Diesel)	AHL (Automatic Headlamp Levelling)	●	●	●	●
Antara, Captiva (Short Body)	[8] 2008	2.0 L (Diesel)	BCM (Body Control Module)	●	●	●	●
Antara, Captiva (Short Body)	[8] 2008	2.0 L (Diesel)	ECC (Electronic Climate Control)	●	●	●	●
Antara, Captiva (Short Body)	[8] 2008	2.0 L (Diesel)	IMMO (Immobiliser)	●	●	●	●
Antara, Captiva (Short Body)	[8] 2008	2.0 L (Diesel)	IC (Instrument Cluster)	●	●	●	●

Antara, Captiva (Short Body)	[8] 2008	2.0 L (Diesel)	PAS (Park Pilot)	●	●	●	●
Antara, Captiva (Short Body)	[8] 2008	2.0 L (Diesel)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Antara, Captiva (Short Body)	[8] 2008	2.0 L (Diesel)	RFA (Multipurpose Receiver Module)	●	●	●	●
Antara, Captiva (Short Body)	[8] 2008	2.0 L (Diesel)	ATWS (Anti Theft Warning System)	●	●	●	●
Antara, Captiva (Short Body)	[8] 2008	2.0 L (Diesel)	Wipers/Washer	●	●	●	●
Antara, Captiva (Short Body)	[8] 2008	2.0 L (Diesel)	CDL (Central Door Lock)	●	●	●	●
Antara, Captiva (Short Body)	[8] 2008	2.0 L (Diesel)	SLM (Shift Lever Module)	●	●	●	●
Antara, Captiva (Short Body)	[8] 2008	2.0 L (Diesel)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Antara, Captiva (Short Body)	[8] 2008	2.0 L (Diesel)	Interior Lighting	●	●	●	●
Antara, Captiva (Short Body)	[8] 2008	2.0 L (Diesel)	Exterior Lighting/Turn Indicator System	●	●	●	●
Antara, Captiva (Short Body)	[8] 2008	2.0 L (Diesel)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Antara, Captiva (Short Body)	[7] 2007	2.0 L (Diesel)	ECM (Engine Control Module)	●	●	●	●
Antara, Captiva (Short Body)	[7] 2007	2.0 L (Diesel)	TCCM (Transfer Case Control Module)	●	●	●	●
Antara, Captiva (Short Body)	[7] 2007	2.0 L (Diesel)	AT (Automatic Transmission)	●	●	●	●
Antara, Captiva (Short Body)	[7] 2007	2.0 L (Diesel)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Antara, Captiva (Short Body)	[7] 2007	2.0 L (Diesel)	FPCM (Fuel Pump Control Module)	●	●	●	●
Antara, Captiva (Short Body)	[7] 2007	2.0 L (Diesel)	AHL (Automatic Headlamp Levelling)	●	●	●	●
Antara, Captiva (Short Body)	[7] 2007	2.0 L (Diesel)	BCM (Body Control Module)	●	●	●	●
Antara, Captiva (Short Body)	[7] 2007	2.0 L (Diesel)	ECC (Electronic Climate Control)	●	●	●	●
Antara, Captiva (Short Body)	[7] 2007	2.0 L (Diesel)	IMMO (Immobiliser)	●	●	●	●
Antara, Captiva (Short Body)	[7] 2007	2.0 L (Diesel)	IC (Instrument Cluster)	●	●	●	●
Antara, Captiva (Short Body)	[7] 2007	2.0 L (Diesel)	PAS (Park Pilot)	●	●	●	●
Antara, Captiva (Short Body)	[7] 2007	2.0 L (Diesel)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Antara, Captiva (Short Body)	[7] 2007	2.0 L (Diesel)	RFA (Multipurpose Receiver Module)	●	●	●	●
Antara, Captiva (Short Body)	[7] 2007	2.0 L (Diesel)	ATWS (Anti Theft Warning System)	●	●	●	●
Antara, Captiva (Short Body)	[7] 2007	2.0 L (Diesel)	Wipers/Washer	●	●	●	●
Antara, Captiva (Short Body)	[7] 2007	2.0 L (Diesel)	CDL (Central Door Lock)	●	●	●	●
Antara, Captiva (Short Body)	[7] 2007	2.0 L (Diesel)	SLM (Shift Lever Module)	●	●	●	●
Antara, Captiva (Short Body)	[7] 2007	2.0 L (Diesel)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Antara, Captiva (Short Body)	[7] 2007	2.0 L (Diesel)	Interior Lighting	●	●	●	●
Antara, Captiva (Short Body)	[7] 2007	2.0 L (Diesel)	Exterior Lighting/Turn Indicator System	●	●	●	●
Antara, Captiva (Short Body)	[7] 2007	2.0 L (Diesel)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-F	[2] 2002	X 16 XEL	ECM (Engine Control Module)	●	●	●	●
Astra-F	[2] 2002	X 16 XEL	IMMO (Immobiliser)	●	●	●	●
Astra-F	[2] 2002	X 16 SZR	ECM (Engine Control Module)	●	●	●	●
Astra-F	[2] 2002	X 16 SZR	IMMO (Immobiliser)	●	●	●	●
Astra-F	[1] 2001	X 16 XEL	ECM (Engine Control Module)	●	●	●	●
Astra-F	[1] 2001	X 16 XEL	IMMO (Immobiliser)	●	●	●	●
Astra-F	[1] 2001	X 16 SZR	ECM (Engine Control Module)	●	●	●	●
Astra-F	[1] 2001	X 16 SZR	IMMO (Immobiliser)	●	●	●	●
Astra-F	[Y] 2000	X 16 XEL	ECM (Engine Control Module)	●	●	●	●
Astra-F	[Y] 2000	X 16 XEL	IMMO (Immobiliser)	●	●	●	●
Astra-F	[Y] 2000	X 16 SZR	ECM (Engine Control Module)	●	●	●	●
Astra-F	[Y] 2000	X 16 SZR	IMMO (Immobiliser)	●	●	●	●
Astra-F	[Y] 2000	16 NZR	ECM (Engine Control Module)	●	●	●	●
Astra-F	[Y] 2000	16 NZR	IMMO (Immobiliser)	●	●	●	●
Astra-F	[X] 1999	X 16 SZR	ECM (Engine Control Module)	●	●	●	●

Astra-F	[X] 1999	X 16 SZR	IMMO (Immobiliser)	●	●	●	●
Astra-F	[X] 1999	X 16 XEL	ECM (Engine Control Module)	●	●	●	●
Astra-F	[X] 1999	X 16 XEL	IMMO (Immobiliser)	●	●	●	●
Astra-F	[X] 1999	X 18 XE	ECM (Engine Control Module)	●	●	●	●
Astra-F	[X] 1999	X 18 XE	IMMO (Immobiliser)	●	●	●	●
Astra-F	[X] 1999	C 18 SEL	ECM (Engine Control Module)	●	●	●	●
Astra-F	[X] 1999	C 18 SEL	IMMO (Immobiliser)	●	●	●	●
Astra-F	[W] 1998	X 14 XE	ECM (Engine Control Module)	●	●	●	●
Astra-F	[W] 1998	X 14 XE	IMMO (Immobiliser)	●	●	●	●
Astra-F	[W] 1998	X 16 XEL	ECM (Engine Control Module)	●	●	●	●
Astra-F	[W] 1998	X 16 XEL	IMMO (Immobiliser)	●	●	●	●
Astra-F	[W] 1998	X 16 SZR	ECM (Engine Control Module)	●	●	●	●
Astra-F	[W] 1998	X 16 SZR	IMMO (Immobiliser)	●	●	●	●
Astra-F	[W] 1998	16 NZR	ECM (Engine Control Module)	●	●	●	●
Astra-F	[W] 1998	16 NZR	IMMO (Immobiliser)	●	●	●	●
Astra-F	[W] 1998	X 18 XE	ECM (Engine Control Module)	●	●	●	●
Astra-F	[W] 1998	X 18 XE	IMMO (Immobiliser)	●	●	●	●
Astra-F	[W] 1998	C 18 SEL	ECM (Engine Control Module)	●	●	●	●
Astra-F	[W] 1998	C 18 SEL	IMMO (Immobiliser)	●	●	●	●
Astra-F	[W] 1998	X 20 XEV	ECM (Engine Control Module)	●	●	●	●
Astra-F	[W] 1998	X 20 XEV	IMMO (Immobiliser)	●	●	●	●
Astra-F	[V] 1997	X 14 XE	ECM (Engine Control Module)	●	●	●	●
Astra-F	[V] 1997	X 14 XE	IMMO (Immobiliser)	●	●	●	●
Astra-F	[V] 1997	X 16 SZR	ECM (Engine Control Module)	●	●	●	●
Astra-F	[V] 1997	X 16 SZR	IMMO (Immobiliser)	●	●	●	●
Astra-F	[V] 1997	X 16 XEL	ECM (Engine Control Module)	●	●	●	●
Astra-F	[V] 1997	X 16 XEL	IMMO (Immobiliser)	●	●	●	●
Astra-F	[V] 1997	16 NZR	ECM (Engine Control Module)	●	●	●	●
Astra-F	[V] 1997	16 NZR	IMMO (Immobiliser)	●	●	●	●
Astra-F	[V] 1997	X 18 XE	ECM (Engine Control Module)	●	●	●	●
Astra-F	[V] 1997	X 18 XE	IMMO (Immobiliser)	●	●	●	●
Astra-F	[V] 1997	C 18 SEL	ECM (Engine Control Module)	●	●	●	●
Astra-F	[V] 1997	C 18 SEL	IMMO (Immobiliser)	●	●	●	●
Astra-F	[V] 1997	X 20 XEV	ECM (Engine Control Module)	●	●	●	●
Astra-F	[V] 1997	X 20 XEV	IMMO (Immobiliser)	●	●	●	●
Astra-G	[B] 2011	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[B] 2011	Z 12 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[B] 2011	Z 12 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[B] 2011	Z 12 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[B] 2011	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[B] 2011	Z 12 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[B] 2011	Z 12 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[B] 2011	Z 12 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[B] 2011	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[B] 2011	Z 12 XE	Softtop Controller	●	●	●	●
Astra-G	[B] 2011	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[B] 2011	Z 14 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[B] 2011	Z 14 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[B] 2011	Z 14 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[B] 2011	Z 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[B] 2011	Z 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[B] 2011	Z 14 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[B] 2011	Z 14 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[B] 2011	Z 14 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[B] 2011	Z 14 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[B] 2011	Z 14 XE	Softtop Controller	●	●	●	●
Astra-G	[B] 2011	Z 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●

Astra-G	[B] 2011	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-G	[B] 2011	Z 14 XEP	AF 13-II/17/20/22	●	●	●	●
Astra-G	[B] 2011	Z 14 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[B] 2011	Z 14 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[B] 2011	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[B] 2011	Z 14 XEP	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[B] 2011	Z 14 XEP	AOH (Add On Heater)	●	●	●	●
Astra-G	[B] 2011	Z 14 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[B] 2011	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-G	[B] 2011	Z 14 XEP	Softtop Controller	●	●	●	●
Astra-G	[B] 2011	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[B] 2011	C 16 SEL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[B] 2011	C 16 SEL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[B] 2011	C 16 SEL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[B] 2011	C 16 SEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[B] 2011	C 16 SEL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[B] 2011	C 16 SEL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[B] 2011	C 16 SEL	AOH (Add On Heater)	●	●	●	●
Astra-G	[B] 2011	C 16 SEL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[B] 2011	C 16 SEL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[B] 2011	C 16 SEL	Softtop Controller	●	●	●	●
Astra-G	[B] 2011	C 16 SEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[B] 2011	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[B] 2011	Z 16 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[B] 2011	Z 16 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[B] 2011	Z 16 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[B] 2011	Z 16 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[B] 2011	Z 16 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[B] 2011	Z 16 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[B] 2011	Z 16 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[B] 2011	Z 16 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[B] 2011	Z 16 XE	Softtop Controller	●	●	●	●
Astra-G	[B] 2011	Z 16 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[B] 2011	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[B] 2011	Z 16 SE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[B] 2011	Z 16 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[B] 2011	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[B] 2011	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[B] 2011	Z 16 SE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[B] 2011	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Astra-G	[B] 2011	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[B] 2011	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[B] 2011	Z 16 SE	Softtop Controller	●	●	●	●
Astra-G	[B] 2011	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[B] 2011	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-G	[B] 2011	Z 16 XEP	AF 13-II/17/20/22	●	●	●	●
Astra-G	[B] 2011	Z 16 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[B] 2011	Z 16 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[B] 2011	Z 16 XEP	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[B] 2011	Z 16 XEP	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[B] 2011	Z 16 XEP	AOH (Add On Heater)	●	●	●	●
Astra-G	[B] 2011	Z 16 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[B] 2011	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-G	[B] 2011	Z 16 XEP	Softtop Controller	●	●	●	●
Astra-G	[B] 2011	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[B] 2011	Z 16 YNG	ECM (Engine Control Module)	●	●	●	●

Astra-G	[B] 2011	Z 16 YNG	AF 13-II/17/20/22	●	●	●	●
Astra-G	[B] 2011	Z 16 YNG	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[B] 2011	Z 16 YNG	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[B] 2011	Z 16 YNG	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[B] 2011	Z 16 YNG	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[B] 2011	Z 16 YNG	AOH (Add On Heater)	●	●	●	●
Astra-G	[B] 2011	Z 16 YNG	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[B] 2011	Z 16 YNG	IMMO (Immobiliser)	●	●	●	●
Astra-G	[B] 2011	Z 16 YNG	Softtop Controller	●	●	●	●
Astra-G	[B] 2011	Z 16 YNG	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[B] 2011	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Astra-G	[B] 2011	Y 17 DT	AF 13-II/17/20/22	●	●	●	●
Astra-G	[B] 2011	Y 17 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[B] 2011	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[B] 2011	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[B] 2011	Y 17 DT	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[B] 2011	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Astra-G	[B] 2011	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[B] 2011	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Astra-G	[B] 2011	Y 17 DT	Softtop Controller	●	●	●	●
Astra-G	[B] 2011	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[B] 2011	Z 17 DTL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[B] 2011	Z 17 DTL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[B] 2011	Z 17 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[B] 2011	Z 17 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[B] 2011	Z 17 DTL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[B] 2011	Z 17 DTL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[B] 2011	Z 17 DTL	AOH (Add On Heater)	●	●	●	●
Astra-G	[B] 2011	Z 17 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[B] 2011	Z 17 DTL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[B] 2011	Z 17 DTL	Softtop Controller	●	●	●	●
Astra-G	[B] 2011	Z 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[B] 2011	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[B] 2011	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[B] 2011	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[B] 2011	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[B] 2011	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[B] 2011	Z 18 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[B] 2011	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[B] 2011	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[B] 2011	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[B] 2011	Z 18 XE	Softtop Controller	●	●	●	●
Astra-G	[B] 2011	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[B] 2011	Z 18 XEL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[B] 2011	Z 18 XEL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[B] 2011	Z 18 XEL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[B] 2011	Z 18 XEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[B] 2011	Z 18 XEL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[B] 2011	Z 18 XEL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[B] 2011	Z 18 XEL	AOH (Add On Heater)	●	●	●	●
Astra-G	[B] 2011	Z 18 XEL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[B] 2011	Z 18 XEL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[B] 2011	Z 18 XEL	Softtop Controller	●	●	●	●
Astra-G	[B] 2011	Z 18 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[B] 2011	Y 20 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-G	[B] 2011	Y 20 DTH	AF 13-II/17/20/22	●	●	●	●

Astra-G	[B] 2011	Y 20 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[B] 2011	Y 20 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[B] 2011	Y 20 DTH	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[B] 2011	Y 20 DTH	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[B] 2011	Y 20 DTH	AOH (Add On Heater)	●	●	●	●
Astra-G	[B] 2011	Y 20 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[B] 2011	Y 20 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-G	[B] 2011	Y 20 DTH	Softtop Controller	●	●	●	●
Astra-G	[B] 2011	Y 20 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[B] 2011	Z 20 LET	ECM (Engine Control Module)	●	●	●	●
Astra-G	[B] 2011	Z 20 LET	AF 13-II/17/20/22	●	●	●	●
Astra-G	[B] 2011	Z 20 LET	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[B] 2011	Z 20 LET	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[B] 2011	Z 20 LET	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[B] 2011	Z 20 LET	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[B] 2011	Z 20 LET	AOH (Add On Heater)	●	●	●	●
Astra-G	[B] 2011	Z 20 LET	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[B] 2011	Z 20 LET	IMMO (Immobiliser)	●	●	●	●
Astra-G	[B] 2011	Z 20 LET	Softtop Controller	●	●	●	●
Astra-G	[B] 2011	Z 20 LET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[B] 2011	Y 22 DTR	ECM (Engine Control Module)	●	●	●	●
Astra-G	[B] 2011	Y 22 DTR	AF 13-II/17/20/22	●	●	●	●
Astra-G	[B] 2011	Y 22 DTR	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[B] 2011	Y 22 DTR	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[B] 2011	Y 22 DTR	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[B] 2011	Y 22 DTR	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[B] 2011	Y 22 DTR	AOH (Add On Heater)	●	●	●	●
Astra-G	[B] 2011	Y 22 DTR	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[B] 2011	Y 22 DTR	IMMO (Immobiliser)	●	●	●	●
Astra-G	[B] 2011	Y 22 DTR	Softtop Controller	●	●	●	●
Astra-G	[B] 2011	Y 22 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[B] 2011	Z 22 SE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[B] 2011	Z 22 SE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[B] 2011	Z 22 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[B] 2011	Z 22 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[B] 2011	Z 22 SE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[B] 2011	Z 22 SE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[B] 2011	Z 22 SE	AOH (Add On Heater)	●	●	●	●
Astra-G	[B] 2011	Z 22 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[B] 2011	Z 22 SE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[B] 2011	Z 22 SE	Softtop Controller	●	●	●	●
Astra-G	[B] 2011	Z 22 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[A] 2010	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[A] 2010	Z 12 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[A] 2010	Z 12 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[A] 2010	Z 12 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[A] 2010	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[A] 2010	Z 12 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[A] 2010	Z 12 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[A] 2010	Z 12 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[A] 2010	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[A] 2010	Z 12 XE	Softtop Controller	●	●	●	●
Astra-G	[A] 2010	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[A] 2010	Z 14 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[A] 2010	Z 14 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[A] 2010	Z 14 XE	AF 13-II/17/20/22 CAN	●	●	●	●

Astra-G	[A] 2010	Z 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[A] 2010	Z 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[A] 2010	Z 14 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[A] 2010	Z 14 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[A] 2010	Z 14 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[A] 2010	Z 14 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[A] 2010	Z 14 XE	Softtop Controller	●	●	●	●
Astra-G	[A] 2010	Z 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[A] 2010	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-G	[A] 2010	Z 14 XEP	AF 13-II/17/20/22	●	●	●	●
Astra-G	[A] 2010	Z 14 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[A] 2010	Z 14 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[A] 2010	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[A] 2010	Z 14 XEP	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[A] 2010	Z 14 XEP	AOH (Add On Heater)	●	●	●	●
Astra-G	[A] 2010	Z 14 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[A] 2010	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-G	[A] 2010	Z 14 XEP	Softtop Controller	●	●	●	●
Astra-G	[A] 2010	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[A] 2010	C 16 SEL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[A] 2010	C 16 SEL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[A] 2010	C 16 SEL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[A] 2010	C 16 SEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[A] 2010	C 16 SEL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[A] 2010	C 16 SEL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[A] 2010	C 16 SEL	AOH (Add On Heater)	●	●	●	●
Astra-G	[A] 2010	C 16 SEL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[A] 2010	C 16 SEL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[A] 2010	C 16 SEL	Softtop Controller	●	●	●	●
Astra-G	[A] 2010	C 16 SEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[A] 2010	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[A] 2010	Z 16 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[A] 2010	Z 16 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[A] 2010	Z 16 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[A] 2010	Z 16 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[A] 2010	Z 16 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[A] 2010	Z 16 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[A] 2010	Z 16 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[A] 2010	Z 16 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[A] 2010	Z 16 XE	Softtop Controller	●	●	●	●
Astra-G	[A] 2010	Z 16 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[A] 2010	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[A] 2010	Z 16 SE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[A] 2010	Z 16 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[A] 2010	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[A] 2010	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[A] 2010	Z 16 SE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[A] 2010	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Astra-G	[A] 2010	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[A] 2010	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[A] 2010	Z 16 SE	Softtop Controller	●	●	●	●
Astra-G	[A] 2010	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[A] 2010	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-G	[A] 2010	Z 16 XEP	AF 13-II/17/20/22	●	●	●	●
Astra-G	[A] 2010	Z 16 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[A] 2010	Z 16 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●

Astra-G	[A] 2010	Z 16 XEP	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[A] 2010	Z 16 XEP	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[A] 2010	Z 16 XEP	AOH (Add On Heater)	●	●	●	●
Astra-G	[A] 2010	Z 16 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[A] 2010	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-G	[A] 2010	Z 16 XEP	Softtop Controller	●	●	●	●
Astra-G	[A] 2010	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[A] 2010	Z 16 YNG	ECM (Engine Control Module)	●	●	●	●
Astra-G	[A] 2010	Z 16 YNG	AF 13-II/17/20/22	●	●	●	●
Astra-G	[A] 2010	Z 16 YNG	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[A] 2010	Z 16 YNG	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[A] 2010	Z 16 YNG	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[A] 2010	Z 16 YNG	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[A] 2010	Z 16 YNG	AOH (Add On Heater)	●	●	●	●
Astra-G	[A] 2010	Z 16 YNG	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[A] 2010	Z 16 YNG	IMMO (Immobiliser)	●	●	●	●
Astra-G	[A] 2010	Z 16 YNG	Softtop Controller	●	●	●	●
Astra-G	[A] 2010	Z 16 YNG	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[A] 2010	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Astra-G	[A] 2010	Y 17 DT	AF 13-II/17/20/22	●	●	●	●
Astra-G	[A] 2010	Y 17 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[A] 2010	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[A] 2010	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[A] 2010	Y 17 DT	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[A] 2010	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Astra-G	[A] 2010	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[A] 2010	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Astra-G	[A] 2010	Y 17 DT	Softtop Controller	●	●	●	●
Astra-G	[A] 2010	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[A] 2010	Z 17 DTL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[A] 2010	Z 17 DTL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[A] 2010	Z 17 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[A] 2010	Z 17 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[A] 2010	Z 17 DTL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[A] 2010	Z 17 DTL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[A] 2010	Z 17 DTL	AOH (Add On Heater)	●	●	●	●
Astra-G	[A] 2010	Z 17 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[A] 2010	Z 17 DTL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[A] 2010	Z 17 DTL	Softtop Controller	●	●	●	●
Astra-G	[A] 2010	Z 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[A] 2010	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[A] 2010	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[A] 2010	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[A] 2010	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[A] 2010	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[A] 2010	Z 18 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[A] 2010	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[A] 2010	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[A] 2010	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[A] 2010	Z 18 XE	Softtop Controller	●	●	●	●
Astra-G	[A] 2010	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[A] 2010	Z 18 XEL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[A] 2010	Z 18 XEL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[A] 2010	Z 18 XEL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[A] 2010	Z 18 XEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[A] 2010	Z 18 XEL	EPS (Electronic Power Steering)	●	●	●	●

Astra-G	[A] 2010	Z 18 XEL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[A] 2010	Z 18 XEL	AOH (Add On Heater)	●	●	●	●
Astra-G	[A] 2010	Z 18 XEL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[A] 2010	Z 18 XEL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[A] 2010	Z 18 XEL	Softtop Controller	●	●	●	●
Astra-G	[A] 2010	Z 18 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[A] 2010	Y 20 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-G	[A] 2010	Y 20 DTH	AF 13-II/17/20/22	●	●	●	●
Astra-G	[A] 2010	Y 20 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[A] 2010	Y 20 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[A] 2010	Y 20 DTH	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[A] 2010	Y 20 DTH	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[A] 2010	Y 20 DTH	AOH (Add On Heater)	●	●	●	●
Astra-G	[A] 2010	Y 20 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[A] 2010	Y 20 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-G	[A] 2010	Y 20 DTH	Softtop Controller	●	●	●	●
Astra-G	[A] 2010	Y 20 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[A] 2010	Z 20 LET	ECM (Engine Control Module)	●	●	●	●
Astra-G	[A] 2010	Z 20 LET	AF 13-II/17/20/22	●	●	●	●
Astra-G	[A] 2010	Z 20 LET	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[A] 2010	Z 20 LET	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[A] 2010	Z 20 LET	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[A] 2010	Z 20 LET	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[A] 2010	Z 20 LET	AOH (Add On Heater)	●	●	●	●
Astra-G	[A] 2010	Z 20 LET	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[A] 2010	Z 20 LET	IMMO (Immobiliser)	●	●	●	●
Astra-G	[A] 2010	Z 20 LET	Softtop Controller	●	●	●	●
Astra-G	[A] 2010	Z 20 LET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[A] 2010	Y 22 DTR	ECM (Engine Control Module)	●	●	●	●
Astra-G	[A] 2010	Y 22 DTR	AF 13-II/17/20/22	●	●	●	●
Astra-G	[A] 2010	Y 22 DTR	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[A] 2010	Y 22 DTR	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[A] 2010	Y 22 DTR	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[A] 2010	Y 22 DTR	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[A] 2010	Y 22 DTR	AOH (Add On Heater)	●	●	●	●
Astra-G	[A] 2010	Y 22 DTR	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[A] 2010	Y 22 DTR	IMMO (Immobiliser)	●	●	●	●
Astra-G	[A] 2010	Y 22 DTR	Softtop Controller	●	●	●	●
Astra-G	[A] 2010	Y 22 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[A] 2010	Z 22 SE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[A] 2010	Z 22 SE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[A] 2010	Z 22 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[A] 2010	Z 22 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[A] 2010	Z 22 SE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[A] 2010	Z 22 SE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[A] 2010	Z 22 SE	AOH (Add On Heater)	●	●	●	●
Astra-G	[A] 2010	Z 22 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[A] 2010	Z 22 SE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[A] 2010	Z 22 SE	Softtop Controller	●	●	●	●
Astra-G	[A] 2010	Z 22 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[9] 2009	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[9] 2009	Z 12 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[9] 2009	Z 12 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[9] 2009	Z 12 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[9] 2009	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[9] 2009	Z 12 XE	ESP (Electronic Stability Program)	●	●	●	●

Astra-G	[9] 2009	Z 12 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[9] 2009	Z 12 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[9] 2009	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[9] 2009	Z 12 XE	Softtop Controller	●	●	●	●
Astra-G	[9] 2009	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[9] 2009	Z 14 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[9] 2009	Z 14 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[9] 2009	Z 14 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[9] 2009	Z 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[9] 2009	Z 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[9] 2009	Z 14 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[9] 2009	Z 14 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[9] 2009	Z 14 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[9] 2009	Z 14 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[9] 2009	Z 14 XE	Softtop Controller	●	●	●	●
Astra-G	[9] 2009	Z 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[9] 2009	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-G	[9] 2009	Z 14 XEP	AF 13-II/17/20/22	●	●	●	●
Astra-G	[9] 2009	Z 14 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[9] 2009	Z 14 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[9] 2009	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[9] 2009	Z 14 XEP	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[9] 2009	Z 14 XEP	AOH (Add On Heater)	●	●	●	●
Astra-G	[9] 2009	Z 14 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[9] 2009	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-G	[9] 2009	Z 14 XEP	Softtop Controller	●	●	●	●
Astra-G	[9] 2009	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[9] 2009	C 16 SEL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[9] 2009	C 16 SEL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[9] 2009	C 16 SEL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[9] 2009	C 16 SEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[9] 2009	C 16 SEL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[9] 2009	C 16 SEL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[9] 2009	C 16 SEL	AOH (Add On Heater)	●	●	●	●
Astra-G	[9] 2009	C 16 SEL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[9] 2009	C 16 SEL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[9] 2009	C 16 SEL	Softtop Controller	●	●	●	●
Astra-G	[9] 2009	C 16 SEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[9] 2009	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[9] 2009	Z 16 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[9] 2009	Z 16 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[9] 2009	Z 16 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[9] 2009	Z 16 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[9] 2009	Z 16 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[9] 2009	Z 16 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[9] 2009	Z 16 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[9] 2009	Z 16 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[9] 2009	Z 16 XE	Softtop Controller	●	●	●	●
Astra-G	[9] 2009	Z 16 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[9] 2009	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[9] 2009	Z 16 SE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[9] 2009	Z 16 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[9] 2009	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[9] 2009	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[9] 2009	Z 16 SE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[9] 2009	Z 16 SE	AOH (Add On Heater)	●	●	●	●

Astra-G	[9] 2009	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[9] 2009	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[9] 2009	Z 16 SE	Softtop Controller	●	●	●	●
Astra-G	[9] 2009	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[9] 2009	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-G	[9] 2009	Z 16 XEP	AF 13-II/17/20/22	●	●	●	●
Astra-G	[9] 2009	Z 16 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[9] 2009	Z 16 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[9] 2009	Z 16 XEP	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[9] 2009	Z 16 XEP	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[9] 2009	Z 16 XEP	AOH (Add On Heater)	●	●	●	●
Astra-G	[9] 2009	Z 16 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[9] 2009	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-G	[9] 2009	Z 16 XEP	Softtop Controller	●	●	●	●
Astra-G	[9] 2009	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[9] 2009	Z 16 YNG	ECM (Engine Control Module)	●	●	●	●
Astra-G	[9] 2009	Z 16 YNG	AF 13-II/17/20/22	●	●	●	●
Astra-G	[9] 2009	Z 16 YNG	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[9] 2009	Z 16 YNG	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[9] 2009	Z 16 YNG	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[9] 2009	Z 16 YNG	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[9] 2009	Z 16 YNG	AOH (Add On Heater)	●	●	●	●
Astra-G	[9] 2009	Z 16 YNG	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[9] 2009	Z 16 YNG	IMMO (Immobiliser)	●	●	●	●
Astra-G	[9] 2009	Z 16 YNG	Softtop Controller	●	●	●	●
Astra-G	[9] 2009	Z 16 YNG	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[9] 2009	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Astra-G	[9] 2009	Y 17 DT	AF 13-II/17/20/22	●	●	●	●
Astra-G	[9] 2009	Y 17 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[9] 2009	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[9] 2009	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[9] 2009	Y 17 DT	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[9] 2009	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Astra-G	[9] 2009	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[9] 2009	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Astra-G	[9] 2009	Y 17 DT	Softtop Controller	●	●	●	●
Astra-G	[9] 2009	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[9] 2009	Z 17 DTL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[9] 2009	Z 17 DTL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[9] 2009	Z 17 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[9] 2009	Z 17 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[9] 2009	Z 17 DTL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[9] 2009	Z 17 DTL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[9] 2009	Z 17 DTL	AOH (Add On Heater)	●	●	●	●
Astra-G	[9] 2009	Z 17 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[9] 2009	Z 17 DTL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[9] 2009	Z 17 DTL	Softtop Controller	●	●	●	●
Astra-G	[9] 2009	Z 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[9] 2009	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[9] 2009	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[9] 2009	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[9] 2009	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[9] 2009	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[9] 2009	Z 18 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[9] 2009	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[9] 2009	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●

Astra-G	[9] 2009	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[9] 2009	Z 18 XE	Softtop Controller	●	●	●	●
Astra-G	[9] 2009	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[9] 2009	Z 18 XEL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[9] 2009	Z 18 XEL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[9] 2009	Z 18 XEL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[9] 2009	Z 18 XEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[9] 2009	Z 18 XEL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[9] 2009	Z 18 XEL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[9] 2009	Z 18 XEL	AOH (Add On Heater)	●	●	●	●
Astra-G	[9] 2009	Z 18 XEL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[9] 2009	Z 18 XEL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[9] 2009	Z 18 XEL	Softtop Controller	●	●	●	●
Astra-G	[9] 2009	Z 18 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[9] 2009	Y 20 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-G	[9] 2009	Y 20 DTH	AF 13-II/17/20/22	●	●	●	●
Astra-G	[9] 2009	Y 20 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[9] 2009	Y 20 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[9] 2009	Y 20 DTH	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[9] 2009	Y 20 DTH	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[9] 2009	Y 20 DTH	AOH (Add On Heater)	●	●	●	●
Astra-G	[9] 2009	Y 20 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[9] 2009	Y 20 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-G	[9] 2009	Y 20 DTH	Softtop Controller	●	●	●	●
Astra-G	[9] 2009	Y 20 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[9] 2009	Z 20 LET	ECM (Engine Control Module)	●	●	●	●
Astra-G	[9] 2009	Z 20 LET	AF 13-II/17/20/22	●	●	●	●
Astra-G	[9] 2009	Z 20 LET	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[9] 2009	Z 20 LET	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[9] 2009	Z 20 LET	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[9] 2009	Z 20 LET	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[9] 2009	Z 20 LET	AOH (Add On Heater)	●	●	●	●
Astra-G	[9] 2009	Z 20 LET	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[9] 2009	Z 20 LET	IMMO (Immobiliser)	●	●	●	●
Astra-G	[9] 2009	Z 20 LET	Softtop Controller	●	●	●	●
Astra-G	[9] 2009	Z 20 LET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[9] 2009	Y 22 DTR	ECM (Engine Control Module)	●	●	●	●
Astra-G	[9] 2009	Y 22 DTR	AF 13-II/17/20/22	●	●	●	●
Astra-G	[9] 2009	Y 22 DTR	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[9] 2009	Y 22 DTR	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[9] 2009	Y 22 DTR	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[9] 2009	Y 22 DTR	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[9] 2009	Y 22 DTR	AOH (Add On Heater)	●	●	●	●
Astra-G	[9] 2009	Y 22 DTR	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[9] 2009	Y 22 DTR	IMMO (Immobiliser)	●	●	●	●
Astra-G	[9] 2009	Y 22 DTR	Softtop Controller	●	●	●	●
Astra-G	[9] 2009	Y 22 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[9] 2009	Z 22 SE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[9] 2009	Z 22 SE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[9] 2009	Z 22 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[9] 2009	Z 22 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[9] 2009	Z 22 SE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[9] 2009	Z 22 SE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[9] 2009	Z 22 SE	AOH (Add On Heater)	●	●	●	●
Astra-G	[9] 2009	Z 22 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[9] 2009	Z 22 SE	IMMO (Immobiliser)	●	●	●	●

Astra-G	[9] 2009	Z 22 SE	Softtop Controller	●	●	●	●
Astra-G	[9] 2009	Z 22 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[8] 2008	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[8] 2008	Z 12 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[8] 2008	Z 12 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[8] 2008	Z 12 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[8] 2008	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[8] 2008	Z 12 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[8] 2008	Z 12 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[8] 2008	Z 12 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[8] 2008	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[8] 2008	Z 12 XE	Softtop Controller	●	●	●	●
Astra-G	[8] 2008	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[8] 2008	Z 14 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[8] 2008	Z 14 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[8] 2008	Z 14 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[8] 2008	Z 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[8] 2008	Z 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[8] 2008	Z 14 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[8] 2008	Z 14 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[8] 2008	Z 14 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[8] 2008	Z 14 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[8] 2008	Z 14 XE	Softtop Controller	●	●	●	●
Astra-G	[8] 2008	Z 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[8] 2008	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-G	[8] 2008	Z 14 XEP	AF 13-II/17/20/22	●	●	●	●
Astra-G	[8] 2008	Z 14 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[8] 2008	Z 14 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[8] 2008	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[8] 2008	Z 14 XEP	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[8] 2008	Z 14 XEP	AOH (Add On Heater)	●	●	●	●
Astra-G	[8] 2008	Z 14 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[8] 2008	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-G	[8] 2008	Z 14 XEP	Softtop Controller	●	●	●	●
Astra-G	[8] 2008	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[8] 2008	C 16 SEL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[8] 2008	C 16 SEL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[8] 2008	C 16 SEL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[8] 2008	C 16 SEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[8] 2008	C 16 SEL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[8] 2008	C 16 SEL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[8] 2008	C 16 SEL	AOH (Add On Heater)	●	●	●	●
Astra-G	[8] 2008	C 16 SEL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[8] 2008	C 16 SEL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[8] 2008	C 16 SEL	Softtop Controller	●	●	●	●
Astra-G	[8] 2008	C 16 SEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[8] 2008	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[8] 2008	Z 16 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[8] 2008	Z 16 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[8] 2008	Z 16 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[8] 2008	Z 16 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[8] 2008	Z 16 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[8] 2008	Z 16 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[8] 2008	Z 16 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[8] 2008	Z 16 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[8] 2008	Z 16 XE	Softtop Controller	●	●	●	●

Astra-G	[8] 2008	Z 16 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[8] 2008	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[8] 2008	Z 16 SE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[8] 2008	Z 16 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[8] 2008	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[8] 2008	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[8] 2008	Z 16 SE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[8] 2008	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Astra-G	[8] 2008	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[8] 2008	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[8] 2008	Z 16 SE	Softtop Controller	●	●	●	●
Astra-G	[8] 2008	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[8] 2008	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-G	[8] 2008	Z 16 XEP	AF 13-II/17/20/22	●	●	●	●
Astra-G	[8] 2008	Z 16 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[8] 2008	Z 16 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[8] 2008	Z 16 XEP	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[8] 2008	Z 16 XEP	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[8] 2008	Z 16 XEP	AOH (Add On Heater)	●	●	●	●
Astra-G	[8] 2008	Z 16 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[8] 2008	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-G	[8] 2008	Z 16 XEP	Softtop Controller	●	●	●	●
Astra-G	[8] 2008	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[8] 2008	Z 16 YNG	ECM (Engine Control Module)	●	●	●	●
Astra-G	[8] 2008	Z 16 YNG	AF 13-II/17/20/22	●	●	●	●
Astra-G	[8] 2008	Z 16 YNG	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[8] 2008	Z 16 YNG	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[8] 2008	Z 16 YNG	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[8] 2008	Z 16 YNG	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[8] 2008	Z 16 YNG	AOH (Add On Heater)	●	●	●	●
Astra-G	[8] 2008	Z 16 YNG	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[8] 2008	Z 16 YNG	IMMO (Immobiliser)	●	●	●	●
Astra-G	[8] 2008	Z 16 YNG	Softtop Controller	●	●	●	●
Astra-G	[8] 2008	Z 16 YNG	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[8] 2008	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Astra-G	[8] 2008	Y 17 DT	AF 13-II/17/20/22	●	●	●	●
Astra-G	[8] 2008	Y 17 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[8] 2008	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[8] 2008	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[8] 2008	Y 17 DT	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[8] 2008	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Astra-G	[8] 2008	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[8] 2008	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Astra-G	[8] 2008	Y 17 DT	Softtop Controller	●	●	●	●
Astra-G	[8] 2008	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[8] 2008	Z 17 DTL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[8] 2008	Z 17 DTL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[8] 2008	Z 17 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[8] 2008	Z 17 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[8] 2008	Z 17 DTL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[8] 2008	Z 17 DTL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[8] 2008	Z 17 DTL	AOH (Add On Heater)	●	●	●	●
Astra-G	[8] 2008	Z 17 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[8] 2008	Z 17 DTL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[8] 2008	Z 17 DTL	Softtop Controller	●	●	●	●
Astra-G	[8] 2008	Z 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●

Astra-G	[8] 2008	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[8] 2008	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[8] 2008	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[8] 2008	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[8] 2008	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[8] 2008	Z 18 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[8] 2008	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[8] 2008	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[8] 2008	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[8] 2008	Z 18 XE	Softtop Controller	●	●	●	●
Astra-G	[8] 2008	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[8] 2008	Z 18 XEL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[8] 2008	Z 18 XEL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[8] 2008	Z 18 XEL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[8] 2008	Z 18 XEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[8] 2008	Z 18 XEL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[8] 2008	Z 18 XEL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[8] 2008	Z 18 XEL	AOH (Add On Heater)	●	●	●	●
Astra-G	[8] 2008	Z 18 XEL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[8] 2008	Z 18 XEL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[8] 2008	Z 18 XEL	Softtop Controller	●	●	●	●
Astra-G	[8] 2008	Z 18 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[8] 2008	Y 20 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-G	[8] 2008	Y 20 DTH	AF 13-II/17/20/22	●	●	●	●
Astra-G	[8] 2008	Y 20 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[8] 2008	Y 20 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[8] 2008	Y 20 DTH	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[8] 2008	Y 20 DTH	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[8] 2008	Y 20 DTH	AOH (Add On Heater)	●	●	●	●
Astra-G	[8] 2008	Y 20 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[8] 2008	Y 20 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-G	[8] 2008	Y 20 DTH	Softtop Controller	●	●	●	●
Astra-G	[8] 2008	Y 20 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[8] 2008	Z 20 LET	ECM (Engine Control Module)	●	●	●	●
Astra-G	[8] 2008	Z 20 LET	AF 13-II/17/20/22	●	●	●	●
Astra-G	[8] 2008	Z 20 LET	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[8] 2008	Z 20 LET	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[8] 2008	Z 20 LET	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[8] 2008	Z 20 LET	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[8] 2008	Z 20 LET	AOH (Add On Heater)	●	●	●	●
Astra-G	[8] 2008	Z 20 LET	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[8] 2008	Z 20 LET	IMMO (Immobiliser)	●	●	●	●
Astra-G	[8] 2008	Z 20 LET	Softtop Controller	●	●	●	●
Astra-G	[8] 2008	Z 20 LET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[8] 2008	Y 22 DTR	ECM (Engine Control Module)	●	●	●	●
Astra-G	[8] 2008	Y 22 DTR	AF 13-II/17/20/22	●	●	●	●
Astra-G	[8] 2008	Y 22 DTR	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[8] 2008	Y 22 DTR	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[8] 2008	Y 22 DTR	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[8] 2008	Y 22 DTR	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[8] 2008	Y 22 DTR	AOH (Add On Heater)	●	●	●	●
Astra-G	[8] 2008	Y 22 DTR	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[8] 2008	Y 22 DTR	IMMO (Immobiliser)	●	●	●	●
Astra-G	[8] 2008	Y 22 DTR	Softtop Controller	●	●	●	●
Astra-G	[8] 2008	Y 22 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[8] 2008	Z 22 SE	ECM (Engine Control Module)	●	●	●	●

Astra-G	[8] 2008	Z 22 SE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[8] 2008	Z 22 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[8] 2008	Z 22 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[8] 2008	Z 22 SE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[8] 2008	Z 22 SE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[8] 2008	Z 22 SE	AOH (Add On Heater)	●	●	●	●
Astra-G	[8] 2008	Z 22 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[8] 2008	Z 22 SE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[8] 2008	Z 22 SE	Softtop Controller	●	●	●	●
Astra-G	[8] 2008	Z 22 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[7] 2007	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[7] 2007	Z 12 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[7] 2007	Z 12 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[7] 2007	Z 12 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[7] 2007	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[7] 2007	Z 12 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[7] 2007	Z 12 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[7] 2007	Z 12 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[7] 2007	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[7] 2007	Z 12 XE	Softtop Controller	●	●	●	●
Astra-G	[7] 2007	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[7] 2007	Z 14 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[7] 2007	Z 14 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[7] 2007	Z 14 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[7] 2007	Z 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[7] 2007	Z 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[7] 2007	Z 14 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[7] 2007	Z 14 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[7] 2007	Z 14 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[7] 2007	Z 14 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[7] 2007	Z 14 XE	Softtop Controller	●	●	●	●
Astra-G	[7] 2007	Z 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[7] 2007	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-G	[7] 2007	Z 14 XEP	AF 13-II/17/20/22	●	●	●	●
Astra-G	[7] 2007	Z 14 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[7] 2007	Z 14 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[7] 2007	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[7] 2007	Z 14 XEP	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[7] 2007	Z 14 XEP	AOH (Add On Heater)	●	●	●	●
Astra-G	[7] 2007	Z 14 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[7] 2007	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-G	[7] 2007	Z 14 XEP	Softtop Controller	●	●	●	●
Astra-G	[7] 2007	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[7] 2007	C 16 SEL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[7] 2007	C 16 SEL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[7] 2007	C 16 SEL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[7] 2007	C 16 SEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[7] 2007	C 16 SEL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[7] 2007	C 16 SEL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[7] 2007	C 16 SEL	AOH (Add On Heater)	●	●	●	●
Astra-G	[7] 2007	C 16 SEL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[7] 2007	C 16 SEL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[7] 2007	C 16 SEL	Softtop Controller	●	●	●	●
Astra-G	[7] 2007	C 16 SEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[7] 2007	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[7] 2007	Z 16 XE	AF 13-II/17/20/22	●	●	●	●

Astra-G	[7] 2007	Z 16 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[7] 2007	Z 16 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[7] 2007	Z 16 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[7] 2007	Z 16 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[7] 2007	Z 16 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[7] 2007	Z 16 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[7] 2007	Z 16 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[7] 2007	Z 16 XE	Softtop Controller	●	●	●	●
Astra-G	[7] 2007	Z 16 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[7] 2007	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[7] 2007	Z 16 SE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[7] 2007	Z 16 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[7] 2007	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[7] 2007	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[7] 2007	Z 16 SE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[7] 2007	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Astra-G	[7] 2007	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[7] 2007	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[7] 2007	Z 16 SE	Softtop Controller	●	●	●	●
Astra-G	[7] 2007	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[7] 2007	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-G	[7] 2007	Z 16 XEP	AF 13-II/17/20/22	●	●	●	●
Astra-G	[7] 2007	Z 16 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[7] 2007	Z 16 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[7] 2007	Z 16 XEP	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[7] 2007	Z 16 XEP	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[7] 2007	Z 16 XEP	AOH (Add On Heater)	●	●	●	●
Astra-G	[7] 2007	Z 16 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[7] 2007	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-G	[7] 2007	Z 16 XEP	Softtop Controller	●	●	●	●
Astra-G	[7] 2007	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[7] 2007	Z 16 YNG	ECM (Engine Control Module)	●	●	●	●
Astra-G	[7] 2007	Z 16 YNG	AF 13-II/17/20/22	●	●	●	●
Astra-G	[7] 2007	Z 16 YNG	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[7] 2007	Z 16 YNG	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[7] 2007	Z 16 YNG	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[7] 2007	Z 16 YNG	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[7] 2007	Z 16 YNG	AOH (Add On Heater)	●	●	●	●
Astra-G	[7] 2007	Z 16 YNG	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[7] 2007	Z 16 YNG	IMMO (Immobiliser)	●	●	●	●
Astra-G	[7] 2007	Z 16 YNG	Softtop Controller	●	●	●	●
Astra-G	[7] 2007	Z 16 YNG	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[7] 2007	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Astra-G	[7] 2007	Y 17 DT	AF 13-II/17/20/22	●	●	●	●
Astra-G	[7] 2007	Y 17 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[7] 2007	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[7] 2007	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[7] 2007	Y 17 DT	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[7] 2007	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Astra-G	[7] 2007	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[7] 2007	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Astra-G	[7] 2007	Y 17 DT	Softtop Controller	●	●	●	●
Astra-G	[7] 2007	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[7] 2007	Z 17 DTL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[7] 2007	Z 17 DTL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[7] 2007	Z 17 DTL	AF 13-II/17/20/22 CAN	●	●	●	●

Astra-G	[7] 2007	Z 17 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[7] 2007	Z 17 DTL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[7] 2007	Z 17 DTL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[7] 2007	Z 17 DTL	AOH (Add On Heater)	●	●	●	●
Astra-G	[7] 2007	Z 17 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[7] 2007	Z 17 DTL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[7] 2007	Z 17 DTL	Softtop Controller	●	●	●	●
Astra-G	[7] 2007	Z 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[7] 2007	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[7] 2007	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[7] 2007	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[7] 2007	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[7] 2007	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[7] 2007	Z 18 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[7] 2007	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[7] 2007	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[7] 2007	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[7] 2007	Z 18 XE	Softtop Controller	●	●	●	●
Astra-G	[7] 2007	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[7] 2007	Z 18 XEL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[7] 2007	Z 18 XEL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[7] 2007	Z 18 XEL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[7] 2007	Z 18 XEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[7] 2007	Z 18 XEL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[7] 2007	Z 18 XEL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[7] 2007	Z 18 XEL	AOH (Add On Heater)	●	●	●	●
Astra-G	[7] 2007	Z 18 XEL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[7] 2007	Z 18 XEL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[7] 2007	Z 18 XEL	Softtop Controller	●	●	●	●
Astra-G	[7] 2007	Z 18 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[7] 2007	Y 20 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-G	[7] 2007	Y 20 DTH	AF 13-II/17/20/22	●	●	●	●
Astra-G	[7] 2007	Y 20 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[7] 2007	Y 20 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[7] 2007	Y 20 DTH	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[7] 2007	Y 20 DTH	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[7] 2007	Y 20 DTH	AOH (Add On Heater)	●	●	●	●
Astra-G	[7] 2007	Y 20 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[7] 2007	Y 20 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-G	[7] 2007	Y 20 DTH	Softtop Controller	●	●	●	●
Astra-G	[7] 2007	Y 20 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[7] 2007	Z 20 LET	ECM (Engine Control Module)	●	●	●	●
Astra-G	[7] 2007	Z 20 LET	AF 13-II/17/20/22	●	●	●	●
Astra-G	[7] 2007	Z 20 LET	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[7] 2007	Z 20 LET	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[7] 2007	Z 20 LET	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[7] 2007	Z 20 LET	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[7] 2007	Z 20 LET	AOH (Add On Heater)	●	●	●	●
Astra-G	[7] 2007	Z 20 LET	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[7] 2007	Z 20 LET	IMMO (Immobiliser)	●	●	●	●
Astra-G	[7] 2007	Z 20 LET	Softtop Controller	●	●	●	●
Astra-G	[7] 2007	Z 20 LET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[7] 2007	Y 22 DTR	ECM (Engine Control Module)	●	●	●	●
Astra-G	[7] 2007	Y 22 DTR	AF 13-II/17/20/22	●	●	●	●
Astra-G	[7] 2007	Y 22 DTR	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[7] 2007	Y 22 DTR	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●

Astra-G	[7] 2007	Y 22 DTR	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[7] 2007	Y 22 DTR	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[7] 2007	Y 22 DTR	AOH (Add On Heater)	●	●	●	●
Astra-G	[7] 2007	Y 22 DTR	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[7] 2007	Y 22 DTR	IMMO (Immobiliser)	●	●	●	●
Astra-G	[7] 2007	Y 22 DTR	Softtop Controller	●	●	●	●
Astra-G	[7] 2007	Y 22 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[7] 2007	Z 22 SE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[7] 2007	Z 22 SE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[7] 2007	Z 22 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[7] 2007	Z 22 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[7] 2007	Z 22 SE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[7] 2007	Z 22 SE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[7] 2007	Z 22 SE	AOH (Add On Heater)	●	●	●	●
Astra-G	[7] 2007	Z 22 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[7] 2007	Z 22 SE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[7] 2007	Z 22 SE	Softtop Controller	●	●	●	●
Astra-G	[7] 2007	Z 22 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[6] 2006	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[6] 2006	Z 12 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[6] 2006	Z 12 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[6] 2006	Z 12 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[6] 2006	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[6] 2006	Z 12 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[6] 2006	Z 12 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[6] 2006	Z 12 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[6] 2006	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[6] 2006	Z 12 XE	Softtop Controller	●	●	●	●
Astra-G	[6] 2006	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[6] 2006	Z 14 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[6] 2006	Z 14 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[6] 2006	Z 14 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[6] 2006	Z 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[6] 2006	Z 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[6] 2006	Z 14 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[6] 2006	Z 14 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[6] 2006	Z 14 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[6] 2006	Z 14 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[6] 2006	Z 14 XE	Softtop Controller	●	●	●	●
Astra-G	[6] 2006	Z 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[6] 2006	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-G	[6] 2006	Z 14 XEP	AF 13-II/17/20/22	●	●	●	●
Astra-G	[6] 2006	Z 14 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[6] 2006	Z 14 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[6] 2006	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[6] 2006	Z 14 XEP	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[6] 2006	Z 14 XEP	AOH (Add On Heater)	●	●	●	●
Astra-G	[6] 2006	Z 14 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[6] 2006	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-G	[6] 2006	Z 14 XEP	Softtop Controller	●	●	●	●
Astra-G	[6] 2006	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[6] 2006	C 16 SEL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[6] 2006	C 16 SEL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[6] 2006	C 16 SEL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[6] 2006	C 16 SEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[6] 2006	C 16 SEL	EPS (Electronic Power Steering)	●	●	●	●

Astra-G	[6] 2006	C 16 SEL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[6] 2006	C 16 SEL	AOH (Add On Heater)	●	●	●	●
Astra-G	[6] 2006	C 16 SEL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[6] 2006	C 16 SEL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[6] 2006	C 16 SEL	Softtop Controller	●	●	●	●
Astra-G	[6] 2006	C 16 SEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[6] 2006	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[6] 2006	Z 16 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[6] 2006	Z 16 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[6] 2006	Z 16 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[6] 2006	Z 16 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[6] 2006	Z 16 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[6] 2006	Z 16 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[6] 2006	Z 16 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[6] 2006	Z 16 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[6] 2006	Z 16 XE	Softtop Controller	●	●	●	●
Astra-G	[6] 2006	Z 16 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[6] 2006	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[6] 2006	Z 16 SE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[6] 2006	Z 16 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[6] 2006	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[6] 2006	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[6] 2006	Z 16 SE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[6] 2006	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Astra-G	[6] 2006	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[6] 2006	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[6] 2006	Z 16 SE	Softtop Controller	●	●	●	●
Astra-G	[6] 2006	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[6] 2006	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-G	[6] 2006	Z 16 XEP	AF 13-II/17/20/22	●	●	●	●
Astra-G	[6] 2006	Z 16 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[6] 2006	Z 16 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[6] 2006	Z 16 XEP	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[6] 2006	Z 16 XEP	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[6] 2006	Z 16 XEP	AOH (Add On Heater)	●	●	●	●
Astra-G	[6] 2006	Z 16 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[6] 2006	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-G	[6] 2006	Z 16 XEP	Softtop Controller	●	●	●	●
Astra-G	[6] 2006	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[6] 2006	Z 16 YNG	ECM (Engine Control Module)	●	●	●	●
Astra-G	[6] 2006	Z 16 YNG	AF 13-II/17/20/22	●	●	●	●
Astra-G	[6] 2006	Z 16 YNG	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[6] 2006	Z 16 YNG	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[6] 2006	Z 16 YNG	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[6] 2006	Z 16 YNG	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[6] 2006	Z 16 YNG	AOH (Add On Heater)	●	●	●	●
Astra-G	[6] 2006	Z 16 YNG	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[6] 2006	Z 16 YNG	IMMO (Immobiliser)	●	●	●	●
Astra-G	[6] 2006	Z 16 YNG	Softtop Controller	●	●	●	●
Astra-G	[6] 2006	Z 16 YNG	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[6] 2006	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Astra-G	[6] 2006	Y 17 DT	AF 13-II/17/20/22	●	●	●	●
Astra-G	[6] 2006	Y 17 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[6] 2006	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[6] 2006	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[6] 2006	Y 17 DT	ESP (Electronic Stability Program)	●	●	●	●

Astra-G	[6] 2006	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Astra-G	[6] 2006	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[6] 2006	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Astra-G	[6] 2006	Y 17 DT	Softtop Controller	●	●	●	●
Astra-G	[6] 2006	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[6] 2006	Z 17 DTL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[6] 2006	Z 17 DTL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[6] 2006	Z 17 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[6] 2006	Z 17 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[6] 2006	Z 17 DTL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[6] 2006	Z 17 DTL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[6] 2006	Z 17 DTL	AOH (Add On Heater)	●	●	●	●
Astra-G	[6] 2006	Z 17 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[6] 2006	Z 17 DTL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[6] 2006	Z 17 DTL	Softtop Controller	●	●	●	●
Astra-G	[6] 2006	Z 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[6] 2006	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[6] 2006	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[6] 2006	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[6] 2006	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[6] 2006	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[6] 2006	Z 18 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[6] 2006	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[6] 2006	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[6] 2006	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[6] 2006	Z 18 XE	Softtop Controller	●	●	●	●
Astra-G	[6] 2006	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[6] 2006	Z 18 XEL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[6] 2006	Z 18 XEL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[6] 2006	Z 18 XEL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[6] 2006	Z 18 XEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[6] 2006	Z 18 XEL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[6] 2006	Z 18 XEL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[6] 2006	Z 18 XEL	AOH (Add On Heater)	●	●	●	●
Astra-G	[6] 2006	Z 18 XEL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[6] 2006	Z 18 XEL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[6] 2006	Z 18 XEL	Softtop Controller	●	●	●	●
Astra-G	[6] 2006	Z 18 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[6] 2006	Y 20 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-G	[6] 2006	Y 20 DTH	AF 13-II/17/20/22	●	●	●	●
Astra-G	[6] 2006	Y 20 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[6] 2006	Y 20 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[6] 2006	Y 20 DTH	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[6] 2006	Y 20 DTH	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[6] 2006	Y 20 DTH	AOH (Add On Heater)	●	●	●	●
Astra-G	[6] 2006	Y 20 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[6] 2006	Y 20 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-G	[6] 2006	Y 20 DTH	Softtop Controller	●	●	●	●
Astra-G	[6] 2006	Y 20 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[6] 2006	Z 20 LET	ECM (Engine Control Module)	●	●	●	●
Astra-G	[6] 2006	Z 20 LET	AF 13-II/17/20/22	●	●	●	●
Astra-G	[6] 2006	Z 20 LET	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[6] 2006	Z 20 LET	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[6] 2006	Z 20 LET	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[6] 2006	Z 20 LET	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[6] 2006	Z 20 LET	AOH (Add On Heater)	●	●	●	●

Astra-G	[6] 2006	Z 20 LET	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[6] 2006	Z 20 LET	IMMO (Immobiliser)	●	●	●	●
Astra-G	[6] 2006	Z 20 LET	Softtop Controller	●	●	●	●
Astra-G	[6] 2006	Z 20 LET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[6] 2006	Y 22 DTR	ECM (Engine Control Module)	●	●	●	●
Astra-G	[6] 2006	Y 22 DTR	AF 13-II/17/20/22	●	●	●	●
Astra-G	[6] 2006	Y 22 DTR	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[6] 2006	Y 22 DTR	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[6] 2006	Y 22 DTR	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[6] 2006	Y 22 DTR	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[6] 2006	Y 22 DTR	AOH (Add On Heater)	●	●	●	●
Astra-G	[6] 2006	Y 22 DTR	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[6] 2006	Y 22 DTR	IMMO (Immobiliser)	●	●	●	●
Astra-G	[6] 2006	Y 22 DTR	Softtop Controller	●	●	●	●
Astra-G	[6] 2006	Y 22 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[6] 2006	Z 22 SE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[6] 2006	Z 22 SE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[6] 2006	Z 22 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[6] 2006	Z 22 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[6] 2006	Z 22 SE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[6] 2006	Z 22 SE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[6] 2006	Z 22 SE	AOH (Add On Heater)	●	●	●	●
Astra-G	[6] 2006	Z 22 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[6] 2006	Z 22 SE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[6] 2006	Z 22 SE	Softtop Controller	●	●	●	●
Astra-G	[6] 2006	Z 22 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[5] 2005	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[5] 2005	Z 12 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[5] 2005	Z 12 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[5] 2005	Z 12 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[5] 2005	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[5] 2005	Z 12 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[5] 2005	Z 12 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[5] 2005	Z 12 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[5] 2005	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[5] 2005	Z 12 XE	Softtop Controller	●	●	●	●
Astra-G	[5] 2005	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[5] 2005	Z 14 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[5] 2005	Z 14 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[5] 2005	Z 14 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[5] 2005	Z 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[5] 2005	Z 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[5] 2005	Z 14 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[5] 2005	Z 14 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[5] 2005	Z 14 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[5] 2005	Z 14 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[5] 2005	Z 14 XE	Softtop Controller	●	●	●	●
Astra-G	[5] 2005	Z 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[5] 2005	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-G	[5] 2005	Z 14 XEP	AF 13-II/17/20/22	●	●	●	●
Astra-G	[5] 2005	Z 14 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[5] 2005	Z 14 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[5] 2005	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[5] 2005	Z 14 XEP	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[5] 2005	Z 14 XEP	AOH (Add On Heater)	●	●	●	●
Astra-G	[5] 2005	Z 14 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●

Astra-G	[5] 2005	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-G	[5] 2005	Z 14 XEP	Softtop Controller	●	●	●	●
Astra-G	[5] 2005	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[5] 2005	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[5] 2005	Z 16 SE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[5] 2005	Z 16 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[5] 2005	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[5] 2005	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[5] 2005	Z 16 SE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[5] 2005	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Astra-G	[5] 2005	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[5] 2005	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[5] 2005	Z 16 SE	Softtop Controller	●	●	●	●
Astra-G	[5] 2005	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[5] 2005	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[5] 2005	Z 16 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[5] 2005	Z 16 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[5] 2005	Z 16 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[5] 2005	Z 16 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[5] 2005	Z 16 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[5] 2005	Z 16 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[5] 2005	Z 16 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[5] 2005	Z 16 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[5] 2005	Z 16 XE	Softtop Controller	●	●	●	●
Astra-G	[5] 2005	Z 16 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[5] 2005	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-G	[5] 2005	Z 16 XEP	AF 13-II/17/20/22	●	●	●	●
Astra-G	[5] 2005	Z 16 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[5] 2005	Z 16 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[5] 2005	Z 16 XEP	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[5] 2005	Z 16 XEP	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[5] 2005	Z 16 XEP	AOH (Add On Heater)	●	●	●	●
Astra-G	[5] 2005	Z 16 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[5] 2005	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-G	[5] 2005	Z 16 XEP	Softtop Controller	●	●	●	●
Astra-G	[5] 2005	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[5] 2005	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Astra-G	[5] 2005	Y 17 DT	AF 13-II/17/20/22	●	●	●	●
Astra-G	[5] 2005	Y 17 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[5] 2005	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[5] 2005	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[5] 2005	Y 17 DT	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[5] 2005	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Astra-G	[5] 2005	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[5] 2005	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Astra-G	[5] 2005	Y 17 DT	Softtop Controller	●	●	●	●
Astra-G	[5] 2005	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[5] 2005	Z 17 DTL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[5] 2005	Z 17 DTL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[5] 2005	Z 17 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[5] 2005	Z 17 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[5] 2005	Z 17 DTL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[5] 2005	Z 17 DTL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[5] 2005	Z 17 DTL	AOH (Add On Heater)	●	●	●	●
Astra-G	[5] 2005	Z 17 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[5] 2005	Z 17 DTL	IMMO (Immobiliser)	●	●	●	●

Astra-G	[5] 2005	Z 17 DTL	Softtop Controller	●	●	●	●
Astra-G	[5] 2005	Z 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[5] 2005	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[5] 2005	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[5] 2005	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[5] 2005	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[5] 2005	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[5] 2005	Z 18 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[5] 2005	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[5] 2005	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[5] 2005	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[5] 2005	Z 18 XE	Softtop Controller	●	●	●	●
Astra-G	[5] 2005	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[5] 2005	Z 18 XEL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[5] 2005	Z 18 XEL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[5] 2005	Z 18 XEL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[5] 2005	Z 18 XEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[5] 2005	Z 18 XEL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[5] 2005	Z 18 XEL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[5] 2005	Z 18 XEL	AOH (Add On Heater)	●	●	●	●
Astra-G	[5] 2005	Z 18 XEL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[5] 2005	Z 18 XEL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[5] 2005	Z 18 XEL	Softtop Controller	●	●	●	●
Astra-G	[5] 2005	Z 18 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[5] 2005	Y 20 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-G	[5] 2005	Y 20 DTH	AF 13-II/17/20/22	●	●	●	●
Astra-G	[5] 2005	Y 20 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[5] 2005	Y 20 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[5] 2005	Y 20 DTH	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[5] 2005	Y 20 DTH	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[5] 2005	Y 20 DTH	AOH (Add On Heater)	●	●	●	●
Astra-G	[5] 2005	Y 20 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[5] 2005	Y 20 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-G	[5] 2005	Y 20 DTH	Softtop Controller	●	●	●	●
Astra-G	[5] 2005	Y 20 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[5] 2005	Z 20 LET	ECM (Engine Control Module)	●	●	●	●
Astra-G	[5] 2005	Z 20 LET	AF 13-II/17/20/22	●	●	●	●
Astra-G	[5] 2005	Z 20 LET	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[5] 2005	Z 20 LET	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[5] 2005	Z 20 LET	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[5] 2005	Z 20 LET	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[5] 2005	Z 20 LET	AOH (Add On Heater)	●	●	●	●
Astra-G	[5] 2005	Z 20 LET	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[5] 2005	Z 20 LET	IMMO (Immobiliser)	●	●	●	●
Astra-G	[5] 2005	Z 20 LET	Softtop Controller	●	●	●	●
Astra-G	[5] 2005	Z 20 LET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[5] 2005	Y 22 DTR	ECM (Engine Control Module)	●	●	●	●
Astra-G	[5] 2005	Y 22 DTR	AF 13-II/17/20/22	●	●	●	●
Astra-G	[5] 2005	Y 22 DTR	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[5] 2005	Y 22 DTR	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[5] 2005	Y 22 DTR	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[5] 2005	Y 22 DTR	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[5] 2005	Y 22 DTR	AOH (Add On Heater)	●	●	●	●
Astra-G	[5] 2005	Y 22 DTR	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[5] 2005	Y 22 DTR	IMMO (Immobiliser)	●	●	●	●
Astra-G	[5] 2005	Y 22 DTR	Softtop Controller	●	●	●	●

Astra-G	[5] 2005	Y 22 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[5] 2005	Z 22 SE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[5] 2005	Z 22 SE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[5] 2005	Z 22 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[5] 2005	Z 22 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[5] 2005	Z 22 SE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[5] 2005	Z 22 SE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[5] 2005	Z 22 SE	AOH (Add On Heater)	●	●	●	●
Astra-G	[5] 2005	Z 22 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[5] 2005	Z 22 SE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[5] 2005	Z 22 SE	Softtop Controller	●	●	●	●
Astra-G	[5] 2005	Z 22 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[4] 2004	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[4] 2004	Z 12 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[4] 2004	Z 12 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[4] 2004	Z 12 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[4] 2004	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[4] 2004	Z 12 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[4] 2004	Z 12 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[4] 2004	Z 12 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[4] 2004	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[4] 2004	Z 12 XE	Softtop Controller	●	●	●	●
Astra-G	[4] 2004	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[4] 2004	Z 14 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[4] 2004	Z 14 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[4] 2004	Z 14 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[4] 2004	Z 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[4] 2004	Z 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[4] 2004	Z 14 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[4] 2004	Z 14 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[4] 2004	Z 14 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[4] 2004	Z 14 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[4] 2004	Z 14 XE	Softtop Controller	●	●	●	●
Astra-G	[4] 2004	Z 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[4] 2004	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[4] 2004	Z 16 SE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[4] 2004	Z 16 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[4] 2004	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[4] 2004	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[4] 2004	Z 16 SE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[4] 2004	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Astra-G	[4] 2004	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[4] 2004	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[4] 2004	Z 16 SE	Softtop Controller	●	●	●	●
Astra-G	[4] 2004	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[4] 2004	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[4] 2004	Z 16 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[4] 2004	Z 16 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[4] 2004	Z 16 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[4] 2004	Z 16 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[4] 2004	Z 16 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[4] 2004	Z 16 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[4] 2004	Z 16 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[4] 2004	Z 16 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[4] 2004	Z 16 XE	Softtop Controller	●	●	●	●
Astra-G	[4] 2004	Z 16 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●

Astra-G	[4] 2004	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-G	[4] 2004	Z 16 XEP	AF 13-II/17/20/22	●	●	●	●
Astra-G	[4] 2004	Z 16 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[4] 2004	Z 16 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[4] 2004	Z 16 XEP	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[4] 2004	Z 16 XEP	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[4] 2004	Z 16 XEP	AOH (Add On Heater)	●	●	●	●
Astra-G	[4] 2004	Z 16 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[4] 2004	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-G	[4] 2004	Z 16 XEP	Softtop Controller	●	●	●	●
Astra-G	[4] 2004	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[4] 2004	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Astra-G	[4] 2004	Y 17 DT	AF 13-II/17/20/22	●	●	●	●
Astra-G	[4] 2004	Y 17 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[4] 2004	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[4] 2004	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[4] 2004	Y 17 DT	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[4] 2004	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Astra-G	[4] 2004	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[4] 2004	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Astra-G	[4] 2004	Y 17 DT	Softtop Controller	●	●	●	●
Astra-G	[4] 2004	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[4] 2004	Z 17 DTL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[4] 2004	Z 17 DTL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[4] 2004	Z 17 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[4] 2004	Z 17 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[4] 2004	Z 17 DTL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[4] 2004	Z 17 DTL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[4] 2004	Z 17 DTL	AOH (Add On Heater)	●	●	●	●
Astra-G	[4] 2004	Z 17 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[4] 2004	Z 17 DTL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[4] 2004	Z 17 DTL	Softtop Controller	●	●	●	●
Astra-G	[4] 2004	Z 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[4] 2004	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[4] 2004	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[4] 2004	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[4] 2004	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[4] 2004	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[4] 2004	Z 18 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[4] 2004	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[4] 2004	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[4] 2004	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[4] 2004	Z 18 XE	Softtop Controller	●	●	●	●
Astra-G	[4] 2004	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[4] 2004	Z 18 XEL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[4] 2004	Z 18 XEL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[4] 2004	Z 18 XEL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[4] 2004	Z 18 XEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[4] 2004	Z 18 XEL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[4] 2004	Z 18 XEL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[4] 2004	Z 18 XEL	AOH (Add On Heater)	●	●	●	●
Astra-G	[4] 2004	Z 18 XEL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[4] 2004	Z 18 XEL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[4] 2004	Z 18 XEL	Softtop Controller	●	●	●	●
Astra-G	[4] 2004	Z 18 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[4] 2004	Y 20 DTH	ECM (Engine Control Module)	●	●	●	●

Astra-G	[4] 2004	Y 20 DTH	AF 13-II/17/20/22	●	●	●	●
Astra-G	[4] 2004	Y 20 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[4] 2004	Y 20 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[4] 2004	Y 20 DTH	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[4] 2004	Y 20 DTH	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[4] 2004	Y 20 DTH	AOH (Add On Heater)	●	●	●	●
Astra-G	[4] 2004	Y 20 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[4] 2004	Y 20 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-G	[4] 2004	Y 20 DTH	Softtop Controller	●	●	●	●
Astra-G	[4] 2004	Y 20 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[4] 2004	Z 20 LET	ECM (Engine Control Module)	●	●	●	●
Astra-G	[4] 2004	Z 20 LET	AF 13-II/17/20/22	●	●	●	●
Astra-G	[4] 2004	Z 20 LET	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[4] 2004	Z 20 LET	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[4] 2004	Z 20 LET	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[4] 2004	Z 20 LET	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[4] 2004	Z 20 LET	AOH (Add On Heater)	●	●	●	●
Astra-G	[4] 2004	Z 20 LET	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[4] 2004	Z 20 LET	IMMO (Immobiliser)	●	●	●	●
Astra-G	[4] 2004	Z 20 LET	Softtop Controller	●	●	●	●
Astra-G	[4] 2004	Z 20 LET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[4] 2004	Y 22 DTR	ECM (Engine Control Module)	●	●	●	●
Astra-G	[4] 2004	Y 22 DTR	AF 13-II/17/20/22	●	●	●	●
Astra-G	[4] 2004	Y 22 DTR	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[4] 2004	Y 22 DTR	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[4] 2004	Y 22 DTR	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[4] 2004	Y 22 DTR	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[4] 2004	Y 22 DTR	AOH (Add On Heater)	●	●	●	●
Astra-G	[4] 2004	Y 22 DTR	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[4] 2004	Y 22 DTR	IMMO (Immobiliser)	●	●	●	●
Astra-G	[4] 2004	Y 22 DTR	Softtop Controller	●	●	●	●
Astra-G	[4] 2004	Y 22 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[4] 2004	Z 22 SE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[4] 2004	Z 22 SE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[4] 2004	Z 22 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[4] 2004	Z 22 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[4] 2004	Z 22 SE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[4] 2004	Z 22 SE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[4] 2004	Z 22 SE	AOH (Add On Heater)	●	●	●	●
Astra-G	[4] 2004	Z 22 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[4] 2004	Z 22 SE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[4] 2004	Z 22 SE	Softtop Controller	●	●	●	●
Astra-G	[4] 2004	Z 22 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[3] 2003	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[3] 2003	Z 12 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[3] 2003	Z 12 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[3] 2003	Z 12 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[3] 2003	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[3] 2003	Z 12 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[3] 2003	Z 12 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[3] 2003	Z 12 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[3] 2003	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[3] 2003	Z 12 XE	Softtop Controller	●	●	●	●
Astra-G	[3] 2003	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[3] 2003	Z 14 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[3] 2003	Z 14 XE	AF 13-II/17/20/22	●	●	●	●

Astra-G	[3] 2003	Z 14 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[3] 2003	Z 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[3] 2003	Z 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[3] 2003	Z 14 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[3] 2003	Z 14 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[3] 2003	Z 14 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[3] 2003	Z 14 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[3] 2003	Z 14 XE	Softtop Controller	●	●	●	●
Astra-G	[3] 2003	Z 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[3] 2003	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[3] 2003	Z 16 SE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[3] 2003	Z 16 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[3] 2003	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[3] 2003	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[3] 2003	Z 16 SE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[3] 2003	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Astra-G	[3] 2003	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[3] 2003	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[3] 2003	Z 16 SE	Softtop Controller	●	●	●	●
Astra-G	[3] 2003	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[3] 2003	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[3] 2003	Z 16 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[3] 2003	Z 16 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[3] 2003	Z 16 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[3] 2003	Z 16 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[3] 2003	Z 16 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[3] 2003	Z 16 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[3] 2003	Z 16 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[3] 2003	Z 16 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[3] 2003	Z 16 XE	Softtop Controller	●	●	●	●
Astra-G	[3] 2003	Z 16 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[3] 2003	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-G	[3] 2003	Z 16 XEP	AF 13-II/17/20/22	●	●	●	●
Astra-G	[3] 2003	Z 16 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[3] 2003	Z 16 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[3] 2003	Z 16 XEP	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[3] 2003	Z 16 XEP	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[3] 2003	Z 16 XEP	AOH (Add On Heater)	●	●	●	●
Astra-G	[3] 2003	Z 16 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[3] 2003	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-G	[3] 2003	Z 16 XEP	Softtop Controller	●	●	●	●
Astra-G	[3] 2003	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[3] 2003	C 16 SEL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[3] 2003	C 16 SEL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[3] 2003	C 16 SEL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[3] 2003	C 16 SEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[3] 2003	C 16 SEL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[3] 2003	C 16 SEL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[3] 2003	C 16 SEL	AOH (Add On Heater)	●	●	●	●
Astra-G	[3] 2003	C 16 SEL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[3] 2003	C 16 SEL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[3] 2003	C 16 SEL	Softtop Controller	●	●	●	●
Astra-G	[3] 2003	C 16 SEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[3] 2003	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Astra-G	[3] 2003	Y 17 DT	AF 13-II/17/20/22	●	●	●	●
Astra-G	[3] 2003	Y 17 DT	AF 13-II/17/20/22 CAN	●	●	●	●

Astra-G	[3] 2003	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[3] 2003	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[3] 2003	Y 17 DT	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[3] 2003	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Astra-G	[3] 2003	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[3] 2003	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Astra-G	[3] 2003	Y 17 DT	Softtop Controller	●	●	●	●
Astra-G	[3] 2003	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[3] 2003	Z 17 DTL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[3] 2003	Z 17 DTL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[3] 2003	Z 17 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[3] 2003	Z 17 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[3] 2003	Z 17 DTL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[3] 2003	Z 17 DTL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[3] 2003	Z 17 DTL	AOH (Add On Heater)	●	●	●	●
Astra-G	[3] 2003	Z 17 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[3] 2003	Z 17 DTL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[3] 2003	Z 17 DTL	Softtop Controller	●	●	●	●
Astra-G	[3] 2003	Z 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[3] 2003	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[3] 2003	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[3] 2003	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[3] 2003	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[3] 2003	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[3] 2003	Z 18 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[3] 2003	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[3] 2003	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[3] 2003	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[3] 2003	Z 18 XE	Softtop Controller	●	●	●	●
Astra-G	[3] 2003	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[3] 2003	Z 18 XEL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[3] 2003	Z 18 XEL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[3] 2003	Z 18 XEL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[3] 2003	Z 18 XEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[3] 2003	Z 18 XEL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[3] 2003	Z 18 XEL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[3] 2003	Z 18 XEL	AOH (Add On Heater)	●	●	●	●
Astra-G	[3] 2003	Z 18 XEL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[3] 2003	Z 18 XEL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[3] 2003	Z 18 XEL	Softtop Controller	●	●	●	●
Astra-G	[3] 2003	Z 18 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[3] 2003	Y 20 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-G	[3] 2003	Y 20 DTH	AF 13-II/17/20/22	●	●	●	●
Astra-G	[3] 2003	Y 20 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[3] 2003	Y 20 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[3] 2003	Y 20 DTH	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[3] 2003	Y 20 DTH	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[3] 2003	Y 20 DTH	AOH (Add On Heater)	●	●	●	●
Astra-G	[3] 2003	Y 20 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[3] 2003	Y 20 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-G	[3] 2003	Y 20 DTH	Softtop Controller	●	●	●	●
Astra-G	[3] 2003	Y 20 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[3] 2003	Z 20 LET	ECM (Engine Control Module)	●	●	●	●
Astra-G	[3] 2003	Z 20 LET	AF 13-II/17/20/22	●	●	●	●
Astra-G	[3] 2003	Z 20 LET	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[3] 2003	Z 20 LET	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●

Astra-G	[3] 2003	Z 20 LET	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[3] 2003	Z 20 LET	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[3] 2003	Z 20 LET	AOH (Add On Heater)	●	●	●	●
Astra-G	[3] 2003	Z 20 LET	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[3] 2003	Z 20 LET	IMMO (Immobiliser)	●	●	●	●
Astra-G	[3] 2003	Z 20 LET	Softtop Controller	●	●	●	●
Astra-G	[3] 2003	Z 20 LET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[3] 2003	Y 22 DTR	ECM (Engine Control Module)	●	●	●	●
Astra-G	[3] 2003	Y 22 DTR	AF 13-II/17/20/22	●	●	●	●
Astra-G	[3] 2003	Y 22 DTR	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[3] 2003	Y 22 DTR	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[3] 2003	Y 22 DTR	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[3] 2003	Y 22 DTR	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[3] 2003	Y 22 DTR	AOH (Add On Heater)	●	●	●	●
Astra-G	[3] 2003	Y 22 DTR	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[3] 2003	Y 22 DTR	IMMO (Immobiliser)	●	●	●	●
Astra-G	[3] 2003	Y 22 DTR	Softtop Controller	●	●	●	●
Astra-G	[3] 2003	Y 22 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[3] 2003	Z 22 SE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[3] 2003	Z 22 SE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[3] 2003	Z 22 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[3] 2003	Z 22 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[3] 2003	Z 22 SE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[3] 2003	Z 22 SE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[3] 2003	Z 22 SE	AOH (Add On Heater)	●	●	●	●
Astra-G	[3] 2003	Z 22 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[3] 2003	Z 22 SE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[3] 2003	Z 22 SE	Softtop Controller	●	●	●	●
Astra-G	[3] 2003	Z 22 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[2] 2002	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[2] 2002	Z 12 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[2] 2002	Z 12 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[2] 2002	Z 12 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[2] 2002	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[2] 2002	Z 12 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[2] 2002	Z 12 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[2] 2002	Z 12 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[2] 2002	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[2] 2002	Z 12 XE	Softtop Controller	●	●	●	●
Astra-G	[2] 2002	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[2] 2002	Z 14 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[2] 2002	Z 14 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[2] 2002	Z 14 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[2] 2002	Z 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[2] 2002	Z 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[2] 2002	Z 14 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[2] 2002	Z 14 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[2] 2002	Z 14 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[2] 2002	Z 14 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[2] 2002	Z 14 XE	Softtop Controller	●	●	●	●
Astra-G	[2] 2002	Z 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[2] 2002	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[2] 2002	Z 16 SE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[2] 2002	Z 16 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[2] 2002	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[2] 2002	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●

Astra-G	[2] 2002	Z 16 SE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[2] 2002	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Astra-G	[2] 2002	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[2] 2002	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[2] 2002	Z 16 SE	Softtop Controller	●	●	●	●
Astra-G	[2] 2002	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[2] 2002	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[2] 2002	Z 16 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[2] 2002	Z 16 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[2] 2002	Z 16 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[2] 2002	Z 16 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[2] 2002	Z 16 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[2] 2002	Z 16 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[2] 2002	Z 16 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[2] 2002	Z 16 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[2] 2002	Z 16 XE	Softtop Controller	●	●	●	●
Astra-G	[2] 2002	Z 16 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[2] 2002	C 16 SEL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[2] 2002	C 16 SEL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[2] 2002	C 16 SEL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[2] 2002	C 16 SEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[2] 2002	C 16 SEL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[2] 2002	C 16 SEL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[2] 2002	C 16 SEL	AOH (Add On Heater)	●	●	●	●
Astra-G	[2] 2002	C 16 SEL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[2] 2002	C 16 SEL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[2] 2002	C 16 SEL	Softtop Controller	●	●	●	●
Astra-G	[2] 2002	C 16 SEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[2] 2002	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Astra-G	[2] 2002	Y 17 DT	AF 13-II/17/20/22	●	●	●	●
Astra-G	[2] 2002	Y 17 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[2] 2002	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[2] 2002	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[2] 2002	Y 17 DT	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[2] 2002	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Astra-G	[2] 2002	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[2] 2002	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Astra-G	[2] 2002	Y 17 DT	Softtop Controller	●	●	●	●
Astra-G	[2] 2002	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[2] 2002	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[2] 2002	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[2] 2002	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[2] 2002	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[2] 2002	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[2] 2002	Z 18 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[2] 2002	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[2] 2002	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[2] 2002	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[2] 2002	Z 18 XE	Softtop Controller	●	●	●	●
Astra-G	[2] 2002	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[2] 2002	Z 18 XEL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[2] 2002	Z 18 XEL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[2] 2002	Z 18 XEL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[2] 2002	Z 18 XEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[2] 2002	Z 18 XEL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[2] 2002	Z 18 XEL	ESP (Electronic Stability Program)	●	●	●	●

Astra-G	[2] 2002	Z 18 XEL	AOH (Add On Heater)	●	●	●	●
Astra-G	[2] 2002	Z 18 XEL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[2] 2002	Z 18 XEL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[2] 2002	Z 18 XEL	Softtop Controller	●	●	●	●
Astra-G	[2] 2002	Z 18 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[2] 2002	Y 20 DTL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[2] 2002	Y 20 DTL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[2] 2002	Y 20 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[2] 2002	Y 20 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[2] 2002	Y 20 DTL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[2] 2002	Y 20 DTL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[2] 2002	Y 20 DTL	AOH (Add On Heater)	●	●	●	●
Astra-G	[2] 2002	Y 20 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[2] 2002	Y 20 DTL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[2] 2002	Y 20 DTL	Softtop Controller	●	●	●	●
Astra-G	[2] 2002	Y 20 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[2] 2002	Y 20 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-G	[2] 2002	Y 20 DTH	AF 13-II/17/20/22	●	●	●	●
Astra-G	[2] 2002	Y 20 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[2] 2002	Y 20 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[2] 2002	Y 20 DTH	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[2] 2002	Y 20 DTH	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[2] 2002	Y 20 DTH	AOH (Add On Heater)	●	●	●	●
Astra-G	[2] 2002	Y 20 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[2] 2002	Y 20 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-G	[2] 2002	Y 20 DTH	Softtop Controller	●	●	●	●
Astra-G	[2] 2002	Y 20 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[2] 2002	Z 20 LET	ECM (Engine Control Module)	●	●	●	●
Astra-G	[2] 2002	Z 20 LET	AF 13-II/17/20/22	●	●	●	●
Astra-G	[2] 2002	Z 20 LET	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[2] 2002	Z 20 LET	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[2] 2002	Z 20 LET	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[2] 2002	Z 20 LET	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[2] 2002	Z 20 LET	AOH (Add On Heater)	●	●	●	●
Astra-G	[2] 2002	Z 20 LET	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[2] 2002	Z 20 LET	IMMO (Immobiliser)	●	●	●	●
Astra-G	[2] 2002	Z 20 LET	Softtop Controller	●	●	●	●
Astra-G	[2] 2002	Z 20 LET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[2] 2002	Y 22 DTR	ECM (Engine Control Module)	●	●	●	●
Astra-G	[2] 2002	Y 22 DTR	AF 13-II/17/20/22	●	●	●	●
Astra-G	[2] 2002	Y 22 DTR	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[2] 2002	Y 22 DTR	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[2] 2002	Y 22 DTR	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[2] 2002	Y 22 DTR	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[2] 2002	Y 22 DTR	AOH (Add On Heater)	●	●	●	●
Astra-G	[2] 2002	Y 22 DTR	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[2] 2002	Y 22 DTR	IMMO (Immobiliser)	●	●	●	●
Astra-G	[2] 2002	Y 22 DTR	Softtop Controller	●	●	●	●
Astra-G	[2] 2002	Y 22 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[2] 2002	Z 22 SE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[2] 2002	Z 22 SE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[2] 2002	Z 22 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[2] 2002	Z 22 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[2] 2002	Z 22 SE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[2] 2002	Z 22 SE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[2] 2002	Z 22 SE	AOH (Add On Heater)	●	●	●	●

Astra-G	[2] 2002	Z 22 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[2] 2002	Z 22 SE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[2] 2002	Z 22 SE	Softtop Controller	●	●	●	●
Astra-G	[2] 2002	Z 22 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[1] 2001	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[1] 2001	Z 12 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[1] 2001	Z 12 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[1] 2001	Z 12 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[1] 2001	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[1] 2001	Z 12 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[1] 2001	Z 12 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[1] 2001	Z 12 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[1] 2001	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[1] 2001	Z 12 XE	Softtop Controller	●	●	●	●
Astra-G	[1] 2001	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[1] 2001	Z 14 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[1] 2001	Z 14 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[1] 2001	Z 14 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[1] 2001	Z 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[1] 2001	Z 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[1] 2001	Z 14 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[1] 2001	Z 14 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[1] 2001	Z 14 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[1] 2001	Z 14 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[1] 2001	Z 14 XE	Softtop Controller	●	●	●	●
Astra-G	[1] 2001	Z 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[1] 2001	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[1] 2001	Z 16 SE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[1] 2001	Z 16 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[1] 2001	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[1] 2001	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[1] 2001	Z 16 SE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[1] 2001	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Astra-G	[1] 2001	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[1] 2001	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[1] 2001	Z 16 SE	Softtop Controller	●	●	●	●
Astra-G	[1] 2001	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[1] 2001	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[1] 2001	Z 16 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[1] 2001	Z 16 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[1] 2001	Z 16 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[1] 2001	Z 16 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[1] 2001	Z 16 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[1] 2001	Z 16 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[1] 2001	Z 16 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[1] 2001	Z 16 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[1] 2001	Z 16 XE	Softtop Controller	●	●	●	●
Astra-G	[1] 2001	Z 16 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[1] 2001	C 16 SEL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[1] 2001	C 16 SEL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[1] 2001	C 16 SEL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[1] 2001	C 16 SEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[1] 2001	C 16 SEL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[1] 2001	C 16 SEL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[1] 2001	C 16 SEL	AOH (Add On Heater)	●	●	●	●
Astra-G	[1] 2001	C 16 SEL	HLD (HeadLamp Levelling Device)	●	●	●	●

Astra-G	[1] 2001	C 16 SEL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[1] 2001	C 16 SEL	Softtop Controller	●	●	●	●
Astra-G	[1] 2001	C 16 SEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[1] 2001	X 16 SZR	ECM (Engine Control Module)	●	●	●	●
Astra-G	[1] 2001	X 16 SZR	AF 13-II/17/20/22	●	●	●	●
Astra-G	[1] 2001	X 16 SZR	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[1] 2001	X 16 SZR	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[1] 2001	X 16 SZR	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[1] 2001	X 16 SZR	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[1] 2001	X 16 SZR	AOH (Add On Heater)	●	●	●	●
Astra-G	[1] 2001	X 16 SZR	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[1] 2001	X 16 SZR	IMMO (Immobiliser)	●	●	●	●
Astra-G	[1] 2001	X 16 SZR	Softtop Controller	●	●	●	●
Astra-G	[1] 2001	X 16 SZR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[1] 2001	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Astra-G	[1] 2001	Y 17 DT	AF 13-II/17/20/22	●	●	●	●
Astra-G	[1] 2001	Y 17 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[1] 2001	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[1] 2001	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[1] 2001	Y 17 DT	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[1] 2001	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Astra-G	[1] 2001	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[1] 2001	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Astra-G	[1] 2001	Y 17 DT	Softtop Controller	●	●	●	●
Astra-G	[1] 2001	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[1] 2001	X 18 XE1	ECM (Engine Control Module)	●	●	●	●
Astra-G	[1] 2001	X 18 XE1	AF 13-II/17/20/22	●	●	●	●
Astra-G	[1] 2001	X 18 XE1	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[1] 2001	X 18 XE1	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[1] 2001	X 18 XE1	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[1] 2001	X 18 XE1	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[1] 2001	X 18 XE1	AOH (Add On Heater)	●	●	●	●
Astra-G	[1] 2001	X 18 XE1	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[1] 2001	X 18 XE1	IMMO (Immobiliser)	●	●	●	●
Astra-G	[1] 2001	X 18 XE1	Softtop Controller	●	●	●	●
Astra-G	[1] 2001	X 18 XE1	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[1] 2001	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[1] 2001	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[1] 2001	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[1] 2001	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[1] 2001	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[1] 2001	Z 18 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[1] 2001	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[1] 2001	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[1] 2001	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[1] 2001	Z 18 XE	Softtop Controller	●	●	●	●
Astra-G	[1] 2001	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[1] 2001	Z 18 XEL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[1] 2001	Z 18 XEL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[1] 2001	Z 18 XEL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[1] 2001	Z 18 XEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[1] 2001	Z 18 XEL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[1] 2001	Z 18 XEL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[1] 2001	Z 18 XEL	AOH (Add On Heater)	●	●	●	●
Astra-G	[1] 2001	Z 18 XEL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[1] 2001	Z 18 XEL	IMMO (Immobiliser)	●	●	●	●

Astra-G	[1] 2001	Z 18 XEL	Softtop Controller	●	●	●	●
Astra-G	[1] 2001	Z 18 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[1] 2001	Y 20 DTL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[1] 2001	Y 20 DTL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[1] 2001	Y 20 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[1] 2001	Y 20 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[1] 2001	Y 20 DTL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[1] 2001	Y 20 DTL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[1] 2001	Y 20 DTL	AOH (Add On Heater)	●	●	●	●
Astra-G	[1] 2001	Y 20 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[1] 2001	Y 20 DTL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[1] 2001	Y 20 DTL	Softtop Controller	●	●	●	●
Astra-G	[1] 2001	Y 20 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[1] 2001	Y 20 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-G	[1] 2001	Y 20 DTH	AF 13-II/17/20/22	●	●	●	●
Astra-G	[1] 2001	Y 20 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[1] 2001	Y 20 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[1] 2001	Y 20 DTH	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[1] 2001	Y 20 DTH	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[1] 2001	Y 20 DTH	AOH (Add On Heater)	●	●	●	●
Astra-G	[1] 2001	Y 20 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[1] 2001	Y 20 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-G	[1] 2001	Y 20 DTH	Softtop Controller	●	●	●	●
Astra-G	[1] 2001	Y 20 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[1] 2001	Z 20 LET	ECM (Engine Control Module)	●	●	●	●
Astra-G	[1] 2001	Z 20 LET	AF 13-II/17/20/22	●	●	●	●
Astra-G	[1] 2001	Z 20 LET	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[1] 2001	Z 20 LET	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[1] 2001	Z 20 LET	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[1] 2001	Z 20 LET	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[1] 2001	Z 20 LET	AOH (Add On Heater)	●	●	●	●
Astra-G	[1] 2001	Z 20 LET	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[1] 2001	Z 20 LET	IMMO (Immobiliser)	●	●	●	●
Astra-G	[1] 2001	Z 20 LET	Softtop Controller	●	●	●	●
Astra-G	[1] 2001	Z 20 LET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[1] 2001	Z 22 SE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[1] 2001	Z 22 SE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[1] 2001	Z 22 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[1] 2001	Z 22 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[1] 2001	Z 22 SE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[1] 2001	Z 22 SE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[1] 2001	Z 22 SE	AOH (Add On Heater)	●	●	●	●
Astra-G	[1] 2001	Z 22 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[1] 2001	Z 22 SE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[1] 2001	Z 22 SE	Softtop Controller	●	●	●	●
Astra-G	[1] 2001	Z 22 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[Y] 2000	X 12 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[Y] 2000	X 12 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[Y] 2000	X 12 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[Y] 2000	X 12 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[Y] 2000	X 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[Y] 2000	X 12 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[Y] 2000	X 12 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[Y] 2000	X 12 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[Y] 2000	X 12 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[Y] 2000	X 12 XE	Softtop Controller	●	●	●	●

Astra-G	[Y] 2000	X 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[Y] 2000	X 14 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[Y] 2000	X 14 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[Y] 2000	X 14 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[Y] 2000	X 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[Y] 2000	X 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[Y] 2000	X 14 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[Y] 2000	X 14 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[Y] 2000	X 14 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[Y] 2000	X 14 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[Y] 2000	X 14 XE	Softtop Controller	●	●	●	●
Astra-G	[Y] 2000	X 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[Y] 2000	X 16 XEL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[Y] 2000	X 16 XEL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[Y] 2000	X 16 XEL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[Y] 2000	X 16 XEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[Y] 2000	X 16 XEL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[Y] 2000	X 16 XEL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[Y] 2000	X 16 XEL	AOH (Add On Heater)	●	●	●	●
Astra-G	[Y] 2000	X 16 XEL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[Y] 2000	X 16 XEL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[Y] 2000	X 16 XEL	Softtop Controller	●	●	●	●
Astra-G	[Y] 2000	X 16 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[Y] 2000	X 16 SZR	ECM (Engine Control Module)	●	●	●	●
Astra-G	[Y] 2000	X 16 SZR	AF 13-II/17/20/22	●	●	●	●
Astra-G	[Y] 2000	X 16 SZR	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[Y] 2000	X 16 SZR	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[Y] 2000	X 16 SZR	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[Y] 2000	X 16 SZR	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[Y] 2000	X 16 SZR	AOH (Add On Heater)	●	●	●	●
Astra-G	[Y] 2000	X 16 SZR	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[Y] 2000	X 16 SZR	IMMO (Immobiliser)	●	●	●	●
Astra-G	[Y] 2000	X 16 SZR	Softtop Controller	●	●	●	●
Astra-G	[Y] 2000	X 16 SZR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[Y] 2000	X 17 DTL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[Y] 2000	X 17 DTL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[Y] 2000	X 17 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[Y] 2000	X 17 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[Y] 2000	X 17 DTL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[Y] 2000	X 17 DTL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[Y] 2000	X 17 DTL	AOH (Add On Heater)	●	●	●	●
Astra-G	[Y] 2000	X 17 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[Y] 2000	X 17 DTL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[Y] 2000	X 17 DTL	Softtop Controller	●	●	●	●
Astra-G	[Y] 2000	X 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[Y] 2000	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Astra-G	[Y] 2000	Y 17 DT	AF 13-II/17/20/22	●	●	●	●
Astra-G	[Y] 2000	Y 17 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[Y] 2000	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[Y] 2000	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[Y] 2000	Y 17 DT	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[Y] 2000	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Astra-G	[Y] 2000	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[Y] 2000	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Astra-G	[Y] 2000	Y 17 DT	Softtop Controller	●	●	●	●
Astra-G	[Y] 2000	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●

Astra-G	[Y] 2000	X 18 XE1	ECM (Engine Control Module)	●	●	●	●
Astra-G	[Y] 2000	X 18 XE1	AF 13-II/17/20/22	●	●	●	●
Astra-G	[Y] 2000	X 18 XE1	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[Y] 2000	X 18 XE1	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[Y] 2000	X 18 XE1	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[Y] 2000	X 18 XE1	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[Y] 2000	X 18 XE1	AOH (Add On Heater)	●	●	●	●
Astra-G	[Y] 2000	X 18 XE1	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[Y] 2000	X 18 XE1	IMMO (Immobiliser)	●	●	●	●
Astra-G	[Y] 2000	X 18 XE1	Softtop Controller	●	●	●	●
Astra-G	[Y] 2000	X 18 XE1	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[Y] 2000	X 20 DTL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[Y] 2000	X 20 DTL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[Y] 2000	X 20 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[Y] 2000	X 20 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[Y] 2000	X 20 DTL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[Y] 2000	X 20 DTL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[Y] 2000	X 20 DTL	AOH (Add On Heater)	●	●	●	●
Astra-G	[Y] 2000	X 20 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[Y] 2000	X 20 DTL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[Y] 2000	X 20 DTL	Softtop Controller	●	●	●	●
Astra-G	[Y] 2000	X 20 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[Y] 2000	Y 20 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-G	[Y] 2000	Y 20 DTH	AF 13-II/17/20/22	●	●	●	●
Astra-G	[Y] 2000	Y 20 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[Y] 2000	Y 20 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[Y] 2000	Y 20 DTH	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[Y] 2000	Y 20 DTH	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[Y] 2000	Y 20 DTH	AOH (Add On Heater)	●	●	●	●
Astra-G	[Y] 2000	Y 20 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[Y] 2000	Y 20 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-G	[Y] 2000	Y 20 DTH	Softtop Controller	●	●	●	●
Astra-G	[Y] 2000	Y 20 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[Y] 2000	X 20 XEV	ECM (Engine Control Module)	●	●	●	●
Astra-G	[Y] 2000	X 20 XEV	AF 13-II/17/20/22	●	●	●	●
Astra-G	[Y] 2000	X 20 XEV	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[Y] 2000	X 20 XEV	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[Y] 2000	X 20 XEV	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[Y] 2000	X 20 XEV	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[Y] 2000	X 20 XEV	AOH (Add On Heater)	●	●	●	●
Astra-G	[Y] 2000	X 20 XEV	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[Y] 2000	X 20 XEV	IMMO (Immobiliser)	●	●	●	●
Astra-G	[Y] 2000	X 20 XEV	Softtop Controller	●	●	●	●
Astra-G	[Y] 2000	X 20 XEV	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[Y] 2000	X 20 XER	ECM (Engine Control Module)	●	●	●	●
Astra-G	[Y] 2000	X 20 XER	AF 13-II/17/20/22	●	●	●	●
Astra-G	[Y] 2000	X 20 XER	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[Y] 2000	X 20 XER	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[Y] 2000	X 20 XER	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[Y] 2000	X 20 XER	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[Y] 2000	X 20 XER	AOH (Add On Heater)	●	●	●	●
Astra-G	[Y] 2000	X 20 XER	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[Y] 2000	X 20 XER	IMMO (Immobiliser)	●	●	●	●
Astra-G	[Y] 2000	X 20 XER	Softtop Controller	●	●	●	●
Astra-G	[Y] 2000	X 20 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[Y] 2000	Z 22 SE	ECM (Engine Control Module)	●	●	●	●

Astra-G	[Y] 2000	Z 22 SE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[Y] 2000	Z 22 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[Y] 2000	Z 22 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[Y] 2000	Z 22 SE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[Y] 2000	Z 22 SE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[Y] 2000	Z 22 SE	AOH (Add On Heater)	●	●	●	●
Astra-G	[Y] 2000	Z 22 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[Y] 2000	Z 22 SE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[Y] 2000	Z 22 SE	Softtop Controller	●	●	●	●
Astra-G	[Y] 2000	Z 22 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[X] 1999	X 12 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[X] 1999	X 12 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[X] 1999	X 12 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[X] 1999	X 12 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[X] 1999	X 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[X] 1999	X 12 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[X] 1999	X 12 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[X] 1999	X 12 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[X] 1999	X 12 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[X] 1999	X 12 XE	Softtop Controller	●	●	●	●
Astra-G	[X] 1999	X 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[X] 1999	X 14 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[X] 1999	X 14 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[X] 1999	X 14 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[X] 1999	X 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[X] 1999	X 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[X] 1999	X 14 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[X] 1999	X 14 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[X] 1999	X 14 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[X] 1999	X 14 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[X] 1999	X 14 XE	Softtop Controller	●	●	●	●
Astra-G	[X] 1999	X 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[X] 1999	X 16 SZR	ECM (Engine Control Module)	●	●	●	●
Astra-G	[X] 1999	X 16 SZR	AF 13-II/17/20/22	●	●	●	●
Astra-G	[X] 1999	X 16 SZR	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[X] 1999	X 16 SZR	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[X] 1999	X 16 SZR	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[X] 1999	X 16 SZR	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[X] 1999	X 16 SZR	AOH (Add On Heater)	●	●	●	●
Astra-G	[X] 1999	X 16 SZR	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[X] 1999	X 16 SZR	IMMO (Immobiliser)	●	●	●	●
Astra-G	[X] 1999	X 16 SZR	Softtop Controller	●	●	●	●
Astra-G	[X] 1999	X 16 SZR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[X] 1999	X 16 XEL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[X] 1999	X 16 XEL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[X] 1999	X 16 XEL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[X] 1999	X 16 XEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[X] 1999	X 16 XEL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[X] 1999	X 16 XEL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[X] 1999	X 16 XEL	AOH (Add On Heater)	●	●	●	●
Astra-G	[X] 1999	X 16 XEL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[X] 1999	X 16 XEL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[X] 1999	X 16 XEL	Softtop Controller	●	●	●	●
Astra-G	[X] 1999	X 16 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[X] 1999	C 16 SEL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[X] 1999	C 16 SEL	AF 13-II/17/20/22	●	●	●	●

Astra-G	[X] 1999	C 16 SEL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[X] 1999	C 16 SEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[X] 1999	C 16 SEL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[X] 1999	C 16 SEL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[X] 1999	C 16 SEL	AOH (Add On Heater)	●	●	●	●
Astra-G	[X] 1999	C 16 SEL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[X] 1999	C 16 SEL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[X] 1999	C 16 SEL	Softtop Controller	●	●	●	●
Astra-G	[X] 1999	C 16 SEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[X] 1999	X 17 DTL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[X] 1999	X 17 DTL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[X] 1999	X 17 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[X] 1999	X 17 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[X] 1999	X 17 DTL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[X] 1999	X 17 DTL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[X] 1999	X 17 DTL	AOH (Add On Heater)	●	●	●	●
Astra-G	[X] 1999	X 17 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[X] 1999	X 17 DTL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[X] 1999	X 17 DTL	Softtop Controller	●	●	●	●
Astra-G	[X] 1999	X 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[X] 1999	X 18 XE1	ECM (Engine Control Module)	●	●	●	●
Astra-G	[X] 1999	X 18 XE1	AF 13-II/17/20/22	●	●	●	●
Astra-G	[X] 1999	X 18 XE1	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[X] 1999	X 18 XE1	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[X] 1999	X 18 XE1	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[X] 1999	X 18 XE1	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[X] 1999	X 18 XE1	AOH (Add On Heater)	●	●	●	●
Astra-G	[X] 1999	X 18 XE1	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[X] 1999	X 18 XE1	IMMO (Immobiliser)	●	●	●	●
Astra-G	[X] 1999	X 18 XE1	Softtop Controller	●	●	●	●
Astra-G	[X] 1999	X 18 XE1	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[X] 1999	X 20 DTL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[X] 1999	X 20 DTL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[X] 1999	X 20 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[X] 1999	X 20 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[X] 1999	X 20 DTL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[X] 1999	X 20 DTL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[X] 1999	X 20 DTL	AOH (Add On Heater)	●	●	●	●
Astra-G	[X] 1999	X 20 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[X] 1999	X 20 DTL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[X] 1999	X 20 DTL	Softtop Controller	●	●	●	●
Astra-G	[X] 1999	X 20 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[X] 1999	X 20 XEV	ECM (Engine Control Module)	●	●	●	●
Astra-G	[X] 1999	X 20 XEV	AF 13-II/17/20/22	●	●	●	●
Astra-G	[X] 1999	X 20 XEV	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[X] 1999	X 20 XEV	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[X] 1999	X 20 XEV	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[X] 1999	X 20 XEV	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[X] 1999	X 20 XEV	AOH (Add On Heater)	●	●	●	●
Astra-G	[X] 1999	X 20 XEV	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[X] 1999	X 20 XEV	IMMO (Immobiliser)	●	●	●	●
Astra-G	[X] 1999	X 20 XEV	Softtop Controller	●	●	●	●
Astra-G	[X] 1999	X 20 XEV	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[W] 1998	X 12 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[W] 1998	X 12 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[W] 1998	X 12 XE	AF 13-II/17/20/22 CAN	●	●	●	●

Astra-G	[W] 1998	X 12 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[W] 1998	X 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[W] 1998	X 12 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[W] 1998	X 12 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[W] 1998	X 12 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[W] 1998	X 12 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[W] 1998	X 12 XE	Softtop Controller	●	●	●	●
Astra-G	[W] 1998	X 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[W] 1998	X 14 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G	[W] 1998	X 14 XE	AF 13-II/17/20/22	●	●	●	●
Astra-G	[W] 1998	X 14 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[W] 1998	X 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[W] 1998	X 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[W] 1998	X 14 XE	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[W] 1998	X 14 XE	AOH (Add On Heater)	●	●	●	●
Astra-G	[W] 1998	X 14 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[W] 1998	X 14 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G	[W] 1998	X 14 XE	Softtop Controller	●	●	●	●
Astra-G	[W] 1998	X 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[W] 1998	X 16 SZR	ECM (Engine Control Module)	●	●	●	●
Astra-G	[W] 1998	X 16 SZR	AF 13-II/17/20/22	●	●	●	●
Astra-G	[W] 1998	X 16 SZR	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[W] 1998	X 16 SZR	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[W] 1998	X 16 SZR	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[W] 1998	X 16 SZR	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[W] 1998	X 16 SZR	AOH (Add On Heater)	●	●	●	●
Astra-G	[W] 1998	X 16 SZR	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[W] 1998	X 16 SZR	IMMO (Immobiliser)	●	●	●	●
Astra-G	[W] 1998	X 16 SZR	Softtop Controller	●	●	●	●
Astra-G	[W] 1998	X 16 SZR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[W] 1998	X 16 XEL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[W] 1998	X 16 XEL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[W] 1998	X 16 XEL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[W] 1998	X 16 XEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[W] 1998	X 16 XEL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[W] 1998	X 16 XEL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[W] 1998	X 16 XEL	AOH (Add On Heater)	●	●	●	●
Astra-G	[W] 1998	X 16 XEL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[W] 1998	X 16 XEL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[W] 1998	X 16 XEL	Softtop Controller	●	●	●	●
Astra-G	[W] 1998	X 16 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[W] 1998	X 17 DTL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[W] 1998	X 17 DTL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[W] 1998	X 17 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[W] 1998	X 17 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[W] 1998	X 17 DTL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[W] 1998	X 17 DTL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[W] 1998	X 17 DTL	AOH (Add On Heater)	●	●	●	●
Astra-G	[W] 1998	X 17 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[W] 1998	X 17 DTL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[W] 1998	X 17 DTL	Softtop Controller	●	●	●	●
Astra-G	[W] 1998	X 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[W] 1998	X 18 XE1	ECM (Engine Control Module)	●	●	●	●
Astra-G	[W] 1998	X 18 XE1	AF 13-II/17/20/22	●	●	●	●
Astra-G	[W] 1998	X 18 XE1	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[W] 1998	X 18 XE1	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●

Astra-G	[W] 1998	X 18 XE1	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[W] 1998	X 18 XE1	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[W] 1998	X 18 XE1	AOH (Add On Heater)	●	●	●	●
Astra-G	[W] 1998	X 18 XE1	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[W] 1998	X 18 XE1	IMMO (Immobiliser)	●	●	●	●
Astra-G	[W] 1998	X 18 XE1	Softtop Controller	●	●	●	●
Astra-G	[W] 1998	X 18 XE1	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[W] 1998	X 20 DTL	ECM (Engine Control Module)	●	●	●	●
Astra-G	[W] 1998	X 20 DTL	AF 13-II/17/20/22	●	●	●	●
Astra-G	[W] 1998	X 20 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[W] 1998	X 20 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[W] 1998	X 20 DTL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[W] 1998	X 20 DTL	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[W] 1998	X 20 DTL	AOH (Add On Heater)	●	●	●	●
Astra-G	[W] 1998	X 20 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[W] 1998	X 20 DTL	IMMO (Immobiliser)	●	●	●	●
Astra-G	[W] 1998	X 20 DTL	Softtop Controller	●	●	●	●
Astra-G	[W] 1998	X 20 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G	[W] 1998	X 20 XEV	ECM (Engine Control Module)	●	●	●	●
Astra-G	[W] 1998	X 20 XEV	AF 13-II/17/20/22	●	●	●	●
Astra-G	[W] 1998	X 20 XEV	AF 13-II/17/20/22 CAN	●	●	●	●
Astra-G	[W] 1998	X 20 XEV	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G	[W] 1998	X 20 XEV	EPS (Electronic Power Steering)	●	●	●	●
Astra-G	[W] 1998	X 20 XEV	ESP (Electronic Stability Program)	●	●	●	●
Astra-G	[W] 1998	X 20 XEV	AOH (Add On Heater)	●	●	●	●
Astra-G	[W] 1998	X 20 XEV	HLD (HeadLamp Levelling Device)	●	●	●	●
Astra-G	[W] 1998	X 20 XEV	IMMO (Immobiliser)	●	●	●	●
Astra-G	[W] 1998	X 20 XEV	Softtop Controller	●	●	●	●
Astra-G	[W] 1998	X 20 XEV	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-G (GMSA)	[5] 2005	C 16 SEL	ECM (Engine Control Module)	●	●	●	●
Astra-G (GMSA)	[5] 2005	C 16 SEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G (GMSA)	[5] 2005	C 16 SEL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G (GMSA)	[5] 2005	C 16 SEL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G (GMSA)	[5] 2005	C 16 SEL	IMMO (Immobiliser)	●	●	●	●
Astra-G (GMSA)	[5] 2005	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G (GMSA)	[5] 2005	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G (GMSA)	[5] 2005	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G (GMSA)	[5] 2005	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G (GMSA)	[5] 2005	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G (GMSA)	[5] 2005	Z 22 SE	ECM (Engine Control Module)	●	●	●	●
Astra-G (GMSA)	[5] 2005	Z 22 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G (GMSA)	[5] 2005	Z 22 SE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G (GMSA)	[5] 2005	Z 22 SE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G (GMSA)	[5] 2005	Z 22 SE	IMMO (Immobiliser)	●	●	●	●
Astra-G (GMSA)	[4] 2004	C 16 SEL	ECM (Engine Control Module)	●	●	●	●
Astra-G (GMSA)	[4] 2004	C 16 SEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G (GMSA)	[4] 2004	C 16 SEL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G (GMSA)	[4] 2004	C 16 SEL	EPS (Electronic Power Steering)	●	●	●	●
Astra-G (GMSA)	[4] 2004	C 16 SEL	IMMO (Immobiliser)	●	●	●	●
Astra-G (GMSA)	[4] 2004	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Astra-G (GMSA)	[4] 2004	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G (GMSA)	[4] 2004	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G (GMSA)	[4] 2004	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G (GMSA)	[4] 2004	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Astra-G (GMSA)	[4] 2004	Z 22 SE	ECM (Engine Control Module)	●	●	●	●
Astra-G (GMSA)	[4] 2004	Z 22 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G (GMSA)	[4] 2004	Z 22 SE	EPS (Electronic Power Steering)	●	●	●	●

Astra-G (GMSA)	[X] 1999	14 NE	IMMO (Immobiliser)	●	●	●	●
Astra-G (GMSA)	[W] 1998	13 NE	ECM (Engine Control Module)	●	●	●	●
Astra-G (GMSA)	[W] 1998	13 NE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G (GMSA)	[W] 1998	13 NE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G (GMSA)	[W] 1998	13 NE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G (GMSA)	[W] 1998	13 NE	IMMO (Immobiliser)	●	●	●	●
Astra-G (GMSA)	[W] 1998	14 NE	ECM (Engine Control Module)	●	●	●	●
Astra-G (GMSA)	[W] 1998	14 NE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G (GMSA)	[W] 1998	14 NE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G (GMSA)	[W] 1998	14 NE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G (GMSA)	[W] 1998	14 NE	IMMO (Immobiliser)	●	●	●	●
Astra-G (GMSA)	[V] 1997	13 NE	ECM (Engine Control Module)	●	●	●	●
Astra-G (GMSA)	[V] 1997	13 NE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G (GMSA)	[V] 1997	13 NE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G (GMSA)	[V] 1997	13 NE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G (GMSA)	[V] 1997	13 NE	IMMO (Immobiliser)	●	●	●	●
Astra-G (GMSA)	[V] 1997	14 NE	ECM (Engine Control Module)	●	●	●	●
Astra-G (GMSA)	[V] 1997	14 NE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Astra-G (GMSA)	[V] 1997	14 NE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G (GMSA)	[V] 1997	14 NE	EPS (Electronic Power Steering)	●	●	●	●
Astra-G (GMSA)	[V] 1997	14 NE	IMMO (Immobiliser)	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	AF 40-6	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	AF17-4	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	AF 22-4	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	MTA (Easytronic)	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	Interior Lighting	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	Wipers/Washer	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	CDL (Central Door Lock)	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	Electrohydraulic HardTop	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	PAS (Park Pilot)	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	PEPS (Open&Start)	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[E] 2014	Z 12 XEP	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	AF 40-6	●	●	●	●

Astra-H	[E] 2014	Y 13 DTH	AF17-4	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	AF 22-4	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	Interior Lighting	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	Wipers/Washer	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[E] 2014	Y 13 DTH	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	AF 40-6	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	AF17-4	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	AF 22-4	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	Interior Lighting	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	Wipers/Washer	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	EHS (Electrical Heater System)	●	●	●	●

Astra-H	[E] 2014	Z 13 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[E] 2014	Z 13 DTH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	ECM (Engine Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	AF 40-6	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	AF17-4	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	AF 22-4	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	MTA (Easytronic)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	Interior Lighting	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	Wipers/Washer	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	CDL (Central Door Lock)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	IMMO (Immobiliser)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	Electrohydraulic HardTop	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	PAS (Park Pilot)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	PEPS (Open&Start)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEL	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	AF 40-6	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	AF17-4	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	AF 22-4	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●

Astra-H	[E] 2014	Z 14 XEP	Interior Lighting	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	Wipers/Washer	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	CDL (Central Door Lock)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	Electrohydraulic HardTop	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	PAS (Park Pilot)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	PEPS (Open&Start)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[E] 2014	Z 14 XEP	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	ECM (Engine Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	AF 40-6	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	AF17-4	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	AF 22-4	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	MTA (Easytronic)	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	Interior Lighting	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	Wipers/Washer	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	CDL (Central Door Lock)	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	IMMO (Immobiliser)	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	Electrohydraulic HardTop	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	PAS (Park Pilot)	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	PEPS (Open&Start)	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[E] 2014	Z 16 LET	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	ECM (Engine Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	AF 40-6	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	AF17-4	●	●	●	●

Astra-H	[E] 2014	Z 16 XE1	AF 22-4	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	MTA (Easytronic)	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	Interior Lighting	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	Wipers/Washer	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	CDL (Central Door Lock)	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	IMMO (Immobiliser)	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	Electrohydraulic HardTop	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	PAS (Park Pilot)	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	PEPS (Open&Start)	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[E] 2014	Z 16 XE1	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	AF 40-6	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	AF17-4	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	AF 22-4	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	MTA (Easytronic)	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	Interior Lighting	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	Wipers/Washer	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	CDL (Central Door Lock)	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	Electrohydraulic HardTop	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	PAS (Park Pilot)	●	●	●	●

Astra-H	[E] 2014	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	PEPS (Open&Start)	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[E] 2014	Z 16 XEP	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	AF 40-6	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	AF17-4	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	AF 22-4	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	MTA (Easytronic)	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	Interior Lighting	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	Wipers/Washer	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	PAS (Park Pilot)	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	PEPS (Open&Start)	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[E] 2014	Z 16 XER	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[E] 2014	A 16 LET	ECM (Engine Control Module)	●	●	●	●
Astra-H	[E] 2014	A 16 LET	AF 40-6	●	●	●	●
Astra-H	[E] 2014	A 16 LET	AF17-4	●	●	●	●
Astra-H	[E] 2014	A 16 LET	AF 22-4	●	●	●	●
Astra-H	[E] 2014	A 16 LET	MTA (Easytronic)	●	●	●	●
Astra-H	[E] 2014	A 16 LET	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[E] 2014	A 16 LET	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[E] 2014	A 16 LET	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[E] 2014	A 16 LET	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[E] 2014	A 16 LET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	A 16 LET	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[E] 2014	A 16 LET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	A 16 LET	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[E] 2014	A 16 LET	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[E] 2014	A 16 LET	Interior Lighting	●	●	●	●

Astra-H	[E] 2014	A 16 LET	Wipers/Washer	●	●	●	●
Astra-H	[E] 2014	A 16 LET	CDL (Central Door Lock)	●	●	●	●
Astra-H	[E] 2014	A 16 LET	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	A 16 LET	IMMO (Immobiliser)	●	●	●	●
Astra-H	[E] 2014	A 16 LET	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[E] 2014	A 16 LET	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[E] 2014	A 16 LET	Electrohydraulic HardTop	●	●	●	●
Astra-H	[E] 2014	A 16 LET	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[E] 2014	A 16 LET	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	A 16 LET	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[E] 2014	A 16 LET	PAS (Park Pilot)	●	●	●	●
Astra-H	[E] 2014	A 16 LET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[E] 2014	A 16 LET	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[E] 2014	A 16 LET	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	A 16 LET	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	A 16 LET	PEPS (Open&Start)	●	●	●	●
Astra-H	[E] 2014	A 16 LET	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	A 16 LET	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[E] 2014	A 16 LET	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[E] 2014	A 16 XER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[E] 2014	A 16 XER	AF 40-6	●	●	●	●
Astra-H	[E] 2014	A 16 XER	AF17-4	●	●	●	●
Astra-H	[E] 2014	A 16 XER	AF 22-4	●	●	●	●
Astra-H	[E] 2014	A 16 XER	MTA (Easytronic)	●	●	●	●
Astra-H	[E] 2014	A 16 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[E] 2014	A 16 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[E] 2014	A 16 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[E] 2014	A 16 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[E] 2014	A 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	A 16 XER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[E] 2014	A 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	A 16 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[E] 2014	A 16 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[E] 2014	A 16 XER	Interior Lighting	●	●	●	●
Astra-H	[E] 2014	A 16 XER	Wipers/Washer	●	●	●	●
Astra-H	[E] 2014	A 16 XER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[E] 2014	A 16 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	A 16 XER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[E] 2014	A 16 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[E] 2014	A 16 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[E] 2014	A 16 XER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[E] 2014	A 16 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[E] 2014	A 16 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	A 16 XER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[E] 2014	A 16 XER	PAS (Park Pilot)	●	●	●	●
Astra-H	[E] 2014	A 16 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[E] 2014	A 16 XER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[E] 2014	A 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	A 16 XER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	A 16 XER	PEPS (Open&Start)	●	●	●	●
Astra-H	[E] 2014	A 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	A 16 XER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[E] 2014	A 16 XER	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	AF 40-6	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	AF17-4	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	AF 22-4	●	●	●	●

Astra-H	[E] 2014	Z 17 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	Interior Lighting	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	Wipers/Washer	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTH	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	ECM (Engine Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	AF 40-6	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	AF17-4	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	AF 22-4	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	MTA (Easytronic)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	Interior Lighting	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	Wipers/Washer	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	CDL (Central Door Lock)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	IMMO (Immobiliser)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	Electrohydraulic HardTop	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	PAS (Park Pilot)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●

Astra-H	[E] 2014	Z 17 DTJ	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	PEPS (Open&Start)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTJ	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	ECM (Engine Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	AF 40-6	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	AF17-4	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	AF 22-4	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	MTA (Easytronic)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	Interior Lighting	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	Wipers/Washer	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	CDL (Central Door Lock)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	IMMO (Immobiliser)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	Electrohydraulic HardTop	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	PAS (Park Pilot)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	PEPS (Open&Start)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTL	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	ECM (Engine Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	AF 40-6	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	AF17-4	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	AF 22-4	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	MTA (Easytronic)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	Interior Lighting	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	Wipers/Washer	●	●	●	●

Astra-H	[E] 2014	Z 17 DTR	CDL (Central Door Lock)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	IMMO (Immobiliser)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	Electrohydraulic HardTop	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	PAS (Park Pilot)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	PEPS (Open&Start)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[E] 2014	Z 17 DTR	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	ECM (Engine Control Module)	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	AF 40-6	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	AF17-4	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	AF 22-4	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	MTA (Easytronic)	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	Interior Lighting	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	Wipers/Washer	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	CDL (Central Door Lock)	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	IMMO (Immobiliser)	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	Electrohydraulic HardTop	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	PAS (Park Pilot)	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	PEPS (Open&Start)	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[E] 2014	A 17 DTJ	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	ECM (Engine Control Module)	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	AF 40-6	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	AF17-4	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	AF 22-4	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	MTA (Easytronic)	●	●	●	●

Astra-H	[E] 2014	A 17 DTR	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	Interior Lighting	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	Wipers/Washer	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	CDL (Central Door Lock)	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	IMMO (Immobiliser)	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	Electrohydraulic HardTop	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	PAS (Park Pilot)	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	PEPS (Open&Start)	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[E] 2014	A 17 DTR	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	AF 40-6	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	AF17-4	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	AF 22-4	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	MTA (Easytronic)	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	Interior Lighting	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	Wipers/Washer	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	CDL (Central Door Lock)	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	Electrohydraulic HardTop	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	PAS (Park Pilot)	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	SLM (Shift Lever Module)	●	●	●	●

Astra-H	[E] 2014	Z 18 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	PEPS (Open&Start)	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[E] 2014	Z 18 XE	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	AF 40-6	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	AF17-4	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	AF 22-4	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	MTA (Easytronic)	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	Interior Lighting	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	Wipers/Washer	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	PAS (Park Pilot)	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	PEPS (Open&Start)	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[E] 2014	Z 18 XER	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[E] 2014	A 18 XER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[E] 2014	A 18 XER	AF 40-6	●	●	●	●
Astra-H	[E] 2014	A 18 XER	AF17-4	●	●	●	●
Astra-H	[E] 2014	A 18 XER	AF 22-4	●	●	●	●
Astra-H	[E] 2014	A 18 XER	MTA (Easytronic)	●	●	●	●
Astra-H	[E] 2014	A 18 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[E] 2014	A 18 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[E] 2014	A 18 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[E] 2014	A 18 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[E] 2014	A 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	A 18 XER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[E] 2014	A 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	A 18 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[E] 2014	A 18 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[E] 2014	A 18 XER	Interior Lighting	●	●	●	●
Astra-H	[E] 2014	A 18 XER	Wipers/Washer	●	●	●	●
Astra-H	[E] 2014	A 18 XER	CDL (Central Door Lock)	●	●	●	●

Astra-H	[E] 2014	A 18 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	A 18 XER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[E] 2014	A 18 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[E] 2014	A 18 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[E] 2014	A 18 XER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[E] 2014	A 18 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[E] 2014	A 18 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	A 18 XER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[E] 2014	A 18 XER	PAS (Park Pilot)	●	●	●	●
Astra-H	[E] 2014	A 18 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[E] 2014	A 18 XER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[E] 2014	A 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	A 18 XER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	A 18 XER	PEPS (Open&Start)	●	●	●	●
Astra-H	[E] 2014	A 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	A 18 XER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[E] 2014	A 18 XER	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	ECM (Engine Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	AF 40-6	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	AF17-4	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	AF 22-4	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	MTA (Easytronic)	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	Interior Lighting	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	Wipers/Washer	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	CDL (Central Door Lock)	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	IMMO (Immobiliser)	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	Electrohydraulic HardTop	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	PAS (Park Pilot)	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	PEPS (Open&Start)	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[E] 2014	Z 19 DT	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	AF 40-6	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	AF17-4	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	AF 22-4	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●

Astra-H	[E] 2014	Z 19 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	Interior Lighting	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	Wipers/Washer	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[E] 2014	Z 19 DTH	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	AF 40-6	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	AF17-4	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	AF 22-4	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	MTA (Easytronic)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	Interior Lighting	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	Wipers/Washer	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	PAS (Park Pilot)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	UEC (Underhood Electrical Centre)	●	●	●	●

Astra-H	[E] 2014	Z 20 LEH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	PEPS (Open&Start)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	ECM (Engine Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	AF 40-6	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	AF17-4	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	AF 22-4	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	MTA (Easytronic)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	Interior Lighting	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	Wipers/Washer	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	CDL (Central Door Lock)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	IMMO (Immobiliser)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	Electrohydraulic HardTop	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	PAS (Park Pilot)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	PEPS (Open&Start)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[E] 2014	Z 20 LEL	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	AF 40-6	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	AF17-4	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	AF 22-4	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	MTA (Easytronic)	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	Interior Lighting	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	Wipers/Washer	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	IC (Instrument Cluster)	●	●	●	●

Astra-H	[E] 2014	Z 20 LER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	PAS (Park Pilot)	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	PEPS (Open&Start)	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[E] 2014	Z 20 LER	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	AF 40-6	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	AF17-4	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	AF 22-4	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	MTA (Easytronic)	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	Interior Lighting	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	Wipers/Washer	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	PAS (Park Pilot)	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	PEPS (Open&Start)	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[E] 2014	Z 22 YH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[E] 2014	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Astra-H	[E] 2014	Engine(default)	AF 40-6	●	●	●	●
Astra-H	[E] 2014	Engine(default)	AF17-4	●	●	●	●
Astra-H	[E] 2014	Engine(default)	AF 22-4	●	●	●	●
Astra-H	[E] 2014	Engine(default)	MTA (Easytronic)	●	●	●	●

Astra-H	[E] 2014	Engine(default)	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[E] 2014	Engine(default)	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[E] 2014	Engine(default)	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[E] 2014	Engine(default)	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[E] 2014	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Engine(default)	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[E] 2014	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[E] 2014	Engine(default)	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[E] 2014	Engine(default)	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[E] 2014	Engine(default)	Interior Lighting	●	●	●	●
Astra-H	[E] 2014	Engine(default)	Wipers/Washer	●	●	●	●
Astra-H	[E] 2014	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Astra-H	[E] 2014	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Engine(default)	IMMO (Immobiliser)	●	●	●	●
Astra-H	[E] 2014	Engine(default)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[E] 2014	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[E] 2014	Engine(default)	Electrohydraulic HardTop	●	●	●	●
Astra-H	[E] 2014	Engine(default)	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[E] 2014	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Astra-H	[E] 2014	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[E] 2014	Engine(default)	PAS (Park Pilot)	●	●	●	●
Astra-H	[E] 2014	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[E] 2014	Engine(default)	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[E] 2014	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Engine(default)	PEPS (Open&Start)	●	●	●	●
Astra-H	[E] 2014	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[E] 2014	Engine(default)	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[E] 2014	Engine(default)	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	AF 40-6	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	AF17-4	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	AF 22-4	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	MTA (Easytronic)	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	Interior Lighting	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	Wipers/Washer	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	CDL (Central Door Lock)	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	IMMO (Immobiliser)	●	●	●	●

Astra-H	[D] 2013	Z 12 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	Electrohydraulic HardTop	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	PAS (Park Pilot)	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	PEPS (Open&Start)	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[D] 2013	Z 12 XEP	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	AF 40-6	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	AF17-4	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	AF 22-4	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	Interior Lighting	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	Wipers/Washer	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[D] 2013	Y 13 DTH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	AF 40-6	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	AF17-4	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	AF 22-4	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●

Astra-H	[D] 2013	Z 13 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	Interior Lighting	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	Wipers/Washer	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[D] 2013	Z 13 DTH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	ECM (Engine Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	AF 40-6	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	AF17-4	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	AF 22-4	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	MTA (Easytronic)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	Interior Lighting	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	Wipers/Washer	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	CDL (Central Door Lock)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	IMMO (Immobiliser)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	Electrohydraulic HardTop	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	PAS (Park Pilot)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	PEPS (Open&Start)	●	●	●	●

Astra-H	[D] 2013	Z 14 XEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEL	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	AF 40-6	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	AF17-4	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	AF 22-4	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	Interior Lighting	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	Wipers/Washer	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	CDL (Central Door Lock)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	Electrohydraulic HardTop	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	PAS (Park Pilot)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	PEPS (Open&Start)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[D] 2013	Z 14 XEP	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	ECM (Engine Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	AF 40-6	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	AF17-4	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	AF 22-4	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	MTA (Easytronic)	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	Interior Lighting	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	Wipers/Washer	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	CDL (Central Door Lock)	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	IMMO (Immobiliser)	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	SCLCM (Steering Column Lock Control Module)	●	●	●	●

Astra-H	[D] 2013	Z 16 LET	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	Electrohydraulic HardTop	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	PAS (Park Pilot)	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	PEPS (Open&Start)	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[D] 2013	Z 16 LET	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	ECM (Engine Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	AF 40-6	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	AF17-4	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	AF 22-4	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	MTA (Easytronic)	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	Interior Lighting	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	Wipers/Washer	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	CDL (Central Door Lock)	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	IMMO (Immobiliser)	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	Electrohydraulic HardTop	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	PAS (Park Pilot)	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	PEPS (Open&Start)	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[D] 2013	Z 16 XE1	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	AF 40-6	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	AF17-4	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	AF 22-4	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	MTA (Easytronic)	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●

Astra-H	[D] 2013	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	Interior Lighting	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	Wipers/Washer	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	CDL (Central Door Lock)	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	Electrohydraulic HardTop	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	PAS (Park Pilot)	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	PEPS (Open&Start)	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[D] 2013	Z 16 XEP	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	AF 40-6	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	AF17-4	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	AF 22-4	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	MTA (Easytronic)	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	Interior Lighting	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	Wipers/Washer	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	PAS (Park Pilot)	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	PEPS (Open&Start)	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●

Astra-H	[D] 2013	Z 16 XER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[D] 2013	Z 16 XER	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[D] 2013	A 16 LET	ECM (Engine Control Module)	●	●	●	●
Astra-H	[D] 2013	A 16 LET	AF 40-6	●	●	●	●
Astra-H	[D] 2013	A 16 LET	AF17-4	●	●	●	●
Astra-H	[D] 2013	A 16 LET	AF 22-4	●	●	●	●
Astra-H	[D] 2013	A 16 LET	MTA (Easytronic)	●	●	●	●
Astra-H	[D] 2013	A 16 LET	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[D] 2013	A 16 LET	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[D] 2013	A 16 LET	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[D] 2013	A 16 LET	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[D] 2013	A 16 LET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	A 16 LET	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[D] 2013	A 16 LET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	A 16 LET	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[D] 2013	A 16 LET	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[D] 2013	A 16 LET	Interior Lighting	●	●	●	●
Astra-H	[D] 2013	A 16 LET	Wipers/Washer	●	●	●	●
Astra-H	[D] 2013	A 16 LET	CDL (Central Door Lock)	●	●	●	●
Astra-H	[D] 2013	A 16 LET	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	A 16 LET	IMMO (Immobiliser)	●	●	●	●
Astra-H	[D] 2013	A 16 LET	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[D] 2013	A 16 LET	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[D] 2013	A 16 LET	Electrohydraulic HardTop	●	●	●	●
Astra-H	[D] 2013	A 16 LET	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[D] 2013	A 16 LET	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	A 16 LET	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[D] 2013	A 16 LET	PAS (Park Pilot)	●	●	●	●
Astra-H	[D] 2013	A 16 LET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[D] 2013	A 16 LET	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[D] 2013	A 16 LET	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	A 16 LET	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	A 16 LET	PEPS (Open&Start)	●	●	●	●
Astra-H	[D] 2013	A 16 LET	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	A 16 LET	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[D] 2013	A 16 LET	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[D] 2013	A 16 XER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[D] 2013	A 16 XER	AF 40-6	●	●	●	●
Astra-H	[D] 2013	A 16 XER	AF17-4	●	●	●	●
Astra-H	[D] 2013	A 16 XER	AF 22-4	●	●	●	●
Astra-H	[D] 2013	A 16 XER	MTA (Easytronic)	●	●	●	●
Astra-H	[D] 2013	A 16 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[D] 2013	A 16 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[D] 2013	A 16 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[D] 2013	A 16 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[D] 2013	A 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	A 16 XER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[D] 2013	A 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	A 16 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[D] 2013	A 16 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[D] 2013	A 16 XER	Interior Lighting	●	●	●	●
Astra-H	[D] 2013	A 16 XER	Wipers/Washer	●	●	●	●
Astra-H	[D] 2013	A 16 XER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[D] 2013	A 16 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	A 16 XER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[D] 2013	A 16 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[D] 2013	A 16 XER	ATWS (Anti Theft Warning System)	●	●	●	●

Astra-H	[D] 2013	A 16 XER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[D] 2013	A 16 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[D] 2013	A 16 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	A 16 XER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[D] 2013	A 16 XER	PAS (Park Pilot)	●	●	●	●
Astra-H	[D] 2013	A 16 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[D] 2013	A 16 XER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[D] 2013	A 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	A 16 XER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	A 16 XER	PEPS (Open&Start)	●	●	●	●
Astra-H	[D] 2013	A 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	A 16 XER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[D] 2013	A 16 XER	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	AF 40-6	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	AF17-4	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	AF 22-4	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	Interior Lighting	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	Wipers/Washer	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	ECM (Engine Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	AF 40-6	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	AF17-4	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	AF 22-4	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	MTA (Easytronic)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●

Astra-H	[D] 2013	Z 17 DTJ	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	Interior Lighting	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	Wipers/Washer	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	CDL (Central Door Lock)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	IMMO (Immobiliser)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	Electrohydraulic HardTop	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	PAS (Park Pilot)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	PEPS (Open&Start)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTJ	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	ECM (Engine Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	AF 40-6	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	AF17-4	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	AF 22-4	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	MTA (Easytronic)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	Interior Lighting	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	Wipers/Washer	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	CDL (Central Door Lock)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	IMMO (Immobiliser)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	Electrohydraulic HardTop	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	PAS (Park Pilot)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	PEPS (Open&Start)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTL	EHU (Entertainment Head Unit)	●	●	●	●

Astra-H	[D] 2013	Z 17 DTL	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	ECM (Engine Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	AF 40-6	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	AF17-4	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	AF 22-4	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	MTA (Easytronic)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	Interior Lighting	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	Wipers/Washer	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	CDL (Central Door Lock)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	IMMO (Immobiliser)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	Electrohydraulic HardTop	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	PAS (Park Pilot)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	PEPS (Open&Start)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[D] 2013	Z 17 DTR	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	ECM (Engine Control Module)	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	AF 40-6	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	AF17-4	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	AF 22-4	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	MTA (Easytronic)	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	Interior Lighting	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	Wipers/Washer	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	CDL (Central Door Lock)	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	IMMO (Immobiliser)	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	Electrohydraulic HardTop	●	●	●	●

Astra-H	[D] 2013	A 17 DTJ	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	PAS (Park Pilot)	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	PEPS (Open&Start)	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[D] 2013	A 17 DTJ	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	ECM (Engine Control Module)	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	AF 40-6	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	AF17-4	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	AF 22-4	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	MTA (Easytronic)	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	Interior Lighting	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	Wipers/Washer	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	CDL (Central Door Lock)	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	IMMO (Immobiliser)	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	Electrohydraulic HardTop	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	PAS (Park Pilot)	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	PEPS (Open&Start)	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[D] 2013	A 17 DTR	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	AF 40-6	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	AF17-4	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	AF 22-4	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	MTA (Easytronic)	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	CDC (Continuous Damping Control)	●	●	●	●

Astra-H	[D] 2013	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	Interior Lighting	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	Wipers/Washer	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	CDL (Central Door Lock)	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	Electrohydraulic HardTop	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	PAS (Park Pilot)	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	PEPS (Open&Start)	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[D] 2013	Z 18 XE	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	AF 40-6	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	AF17-4	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	AF 22-4	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	MTA (Easytronic)	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	Interior Lighting	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	Wipers/Washer	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	PAS (Park Pilot)	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	PEPS (Open&Start)	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[D] 2013	Z 18 XER	DIS (Info Display TID, BID, GID, CID)	●	●	●	●

Astra-H	[D] 2013	A 18 XER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[D] 2013	A 18 XER	AF 40-6	●	●	●	●
Astra-H	[D] 2013	A 18 XER	AF17-4	●	●	●	●
Astra-H	[D] 2013	A 18 XER	AF 22-4	●	●	●	●
Astra-H	[D] 2013	A 18 XER	MTA (Easytronic)	●	●	●	●
Astra-H	[D] 2013	A 18 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[D] 2013	A 18 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[D] 2013	A 18 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[D] 2013	A 18 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[D] 2013	A 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	A 18 XER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[D] 2013	A 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	A 18 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[D] 2013	A 18 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[D] 2013	A 18 XER	Interior Lighting	●	●	●	●
Astra-H	[D] 2013	A 18 XER	Wipers/Washer	●	●	●	●
Astra-H	[D] 2013	A 18 XER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[D] 2013	A 18 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	A 18 XER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[D] 2013	A 18 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[D] 2013	A 18 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[D] 2013	A 18 XER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[D] 2013	A 18 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[D] 2013	A 18 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	A 18 XER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[D] 2013	A 18 XER	PAS (Park Pilot)	●	●	●	●
Astra-H	[D] 2013	A 18 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[D] 2013	A 18 XER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[D] 2013	A 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	A 18 XER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	A 18 XER	PEPS (Open&Start)	●	●	●	●
Astra-H	[D] 2013	A 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	A 18 XER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[D] 2013	A 18 XER	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	ECM (Engine Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	AF 40-6	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	AF17-4	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	AF 22-4	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	MTA (Easytronic)	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	Interior Lighting	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	Wipers/Washer	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	CDL (Central Door Lock)	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	IMMO (Immobiliser)	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	Electrohydraulic HardTop	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	ECC/SAC (Electronic Climate Control)	●	●	●	●

Astra-H	[D] 2013	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	PAS (Park Pilot)	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	PEPS (Open&Start)	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[D] 2013	Z 19 DT	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	AF 40-6	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	AF17-4	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	AF 22-4	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	Interior Lighting	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	Wipers/Washer	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[D] 2013	Z 19 DTH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	AF 40-6	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	AF17-4	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	AF 22-4	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	MTA (Easytronic)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●

Astra-H	[D] 2013	Z 20 LEH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	Interior Lighting	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	Wipers/Washer	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	PAS (Park Pilot)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	PEPS (Open&Start)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEH	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	ECM (Engine Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	AF 40-6	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	AF17-4	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	AF 22-4	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	MTA (Easytronic)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	Interior Lighting	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	Wipers/Washer	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	CDL (Central Door Lock)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	IMMO (Immobiliser)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	Electrohydraulic HardTop	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	PAS (Park Pilot)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	PEPS (Open&Start)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[D] 2013	Z 20 LEL	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	ECM (Engine Control Module)	●	●	●	●

Astra-H	[D] 2013	Z 20 LER	AF 40-6	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	AF17-4	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	AF 22-4	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	MTA (Easytronic)	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	Interior Lighting	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	Wipers/Washer	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	PAS (Park Pilot)	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	PEPS (Open&Start)	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[D] 2013	Z 20 LER	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	AF 40-6	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	AF17-4	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	AF 22-4	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	MTA (Easytronic)	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	Interior Lighting	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	Wipers/Washer	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	IC (Instrument Cluster)	●	●	●	●

Astra-H	[D] 2013	Z 22 YH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	PAS (Park Pilot)	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	PEPS (Open&Start)	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[D] 2013	Z 22 YH	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[D] 2013	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Astra-H	[D] 2013	Engine(default)	AF 40-6	●	●	●	●
Astra-H	[D] 2013	Engine(default)	AF17-4	●	●	●	●
Astra-H	[D] 2013	Engine(default)	AF 22-4	●	●	●	●
Astra-H	[D] 2013	Engine(default)	MTA (Easytronic)	●	●	●	●
Astra-H	[D] 2013	Engine(default)	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[D] 2013	Engine(default)	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[D] 2013	Engine(default)	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[D] 2013	Engine(default)	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[D] 2013	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Engine(default)	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[D] 2013	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[D] 2013	Engine(default)	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[D] 2013	Engine(default)	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[D] 2013	Engine(default)	Interior Lighting	●	●	●	●
Astra-H	[D] 2013	Engine(default)	Wipers/Washer	●	●	●	●
Astra-H	[D] 2013	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Astra-H	[D] 2013	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Engine(default)	IMMO (Immobiliser)	●	●	●	●
Astra-H	[D] 2013	Engine(default)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[D] 2013	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[D] 2013	Engine(default)	Electrohydraulic HardTop	●	●	●	●
Astra-H	[D] 2013	Engine(default)	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[D] 2013	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Astra-H	[D] 2013	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[D] 2013	Engine(default)	PAS (Park Pilot)	●	●	●	●
Astra-H	[D] 2013	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[D] 2013	Engine(default)	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[D] 2013	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Engine(default)	PEPS (Open&Start)	●	●	●	●
Astra-H	[D] 2013	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[D] 2013	Engine(default)	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[D] 2013	Engine(default)	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	ECM (Engine Control Module)	●	●	●	●

Astra-H	[C] 2012	Z 12 XEP	AF 40-6	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	AF17-4	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	AF 22-4	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	MTA (Easytronic)	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	Interior Lighting	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	Wipers/Washer	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	CDL (Central Door Lock)	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	Electrohydraulic HardTop	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	PAS (Park Pilot)	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	PEPS (Open&Start)	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[C] 2012	Z 12 XEP	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	AF 40-6	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	AF17-4	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	AF 22-4	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	Interior Lighting	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	Wipers/Washer	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	IC (Instrument Cluster)	●	●	●	●

Astra-H	[C] 2012	Y 13 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[C] 2012	Y 13 DTH	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	AF 40-6	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	AF17-4	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	AF 22-4	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	Interior Lighting	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	Wipers/Washer	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[C] 2012	Z 13 DTH	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	ECM (Engine Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	AF 40-6	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	AF17-4	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	AF 22-4	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	MTA (Easytronic)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●

Astra-H	[C] 2012	Z 14 XEL	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	Interior Lighting	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	Wipers/Washer	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	CDL (Central Door Lock)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	IMMO (Immobiliser)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	Electrohydraulic HardTop	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	PAS (Park Pilot)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	PEPS (Open&Start)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEL	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	AF 40-6	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	AF17-4	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	AF 22-4	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	Interior Lighting	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	Wipers/Washer	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	CDL (Central Door Lock)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	Electrohydraulic HardTop	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	PAS (Park Pilot)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	PEPS (Open&Start)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[C] 2012	Z 14 XEP	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	ECM (Engine Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	AF 40-6	●	●	●	●

Astra-H	[C] 2012	Z 16 LET	AF17-4	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	AF 22-4	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	MTA (Easytronic)	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	Interior Lighting	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	Wipers/Washer	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	CDL (Central Door Lock)	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	IMMO (Immobiliser)	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	Electrohydraulic HardTop	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	PAS (Park Pilot)	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	PEPS (Open&Start)	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[C] 2012	Z 16 LET	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	ECM (Engine Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	AF 40-6	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	AF17-4	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	AF 22-4	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	MTA (Easytronic)	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	Interior Lighting	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	Wipers/Washer	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	CDL (Central Door Lock)	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	IMMO (Immobiliser)	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	Electrohydraulic HardTop	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	EHS (Electrical Heater System)	●	●	●	●

Astra-H	[C] 2012	Z 16 XE1	PAS (Park Pilot)	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	PEPS (Open&Start)	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[C] 2012	Z 16 XE1	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	AF 40-6	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	AF17-4	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	AF 22-4	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	MTA (Easytronic)	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	Interior Lighting	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	Wipers/Washer	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	CDL (Central Door Lock)	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	Electrohydraulic HardTop	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	PAS (Park Pilot)	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	PEPS (Open&Start)	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[C] 2012	Z 16 XEP	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	AF 40-6	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	AF17-4	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	AF 22-4	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	MTA (Easytronic)	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	Exterior Lighting/Turn Indicator System	●	●	●	●

Astra-H	[C] 2012	Z 16 XER	Interior Lighting	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	Wipers/Washer	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	PAS (Park Pilot)	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	PEPS (Open&Start)	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[C] 2012	Z 16 XER	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[C] 2012	A 16 LET	ECM (Engine Control Module)	●	●	●	●
Astra-H	[C] 2012	A 16 LET	AF 40-6	●	●	●	●
Astra-H	[C] 2012	A 16 LET	AF17-4	●	●	●	●
Astra-H	[C] 2012	A 16 LET	AF 22-4	●	●	●	●
Astra-H	[C] 2012	A 16 LET	MTA (Easytronic)	●	●	●	●
Astra-H	[C] 2012	A 16 LET	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[C] 2012	A 16 LET	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[C] 2012	A 16 LET	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[C] 2012	A 16 LET	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[C] 2012	A 16 LET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	A 16 LET	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[C] 2012	A 16 LET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	A 16 LET	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[C] 2012	A 16 LET	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[C] 2012	A 16 LET	Interior Lighting	●	●	●	●
Astra-H	[C] 2012	A 16 LET	Wipers/Washer	●	●	●	●
Astra-H	[C] 2012	A 16 LET	CDL (Central Door Lock)	●	●	●	●
Astra-H	[C] 2012	A 16 LET	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	A 16 LET	IMMO (Immobiliser)	●	●	●	●
Astra-H	[C] 2012	A 16 LET	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[C] 2012	A 16 LET	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[C] 2012	A 16 LET	Electrohydraulic HardTop	●	●	●	●
Astra-H	[C] 2012	A 16 LET	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[C] 2012	A 16 LET	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	A 16 LET	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[C] 2012	A 16 LET	PAS (Park Pilot)	●	●	●	●
Astra-H	[C] 2012	A 16 LET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[C] 2012	A 16 LET	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[C] 2012	A 16 LET	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	A 16 LET	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	A 16 LET	PEPS (Open&Start)	●	●	●	●
Astra-H	[C] 2012	A 16 LET	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	A 16 LET	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[C] 2012	A 16 LET	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[C] 2012	A 16 XER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[C] 2012	A 16 XER	AF 40-6	●	●	●	●
Astra-H	[C] 2012	A 16 XER	AF17-4	●	●	●	●

Astra-H	[C] 2012	A 16 XER	AF 22-4	●	●	●	●
Astra-H	[C] 2012	A 16 XER	MTA (Easytronic)	●	●	●	●
Astra-H	[C] 2012	A 16 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[C] 2012	A 16 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[C] 2012	A 16 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[C] 2012	A 16 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[C] 2012	A 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	A 16 XER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[C] 2012	A 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	A 16 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[C] 2012	A 16 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[C] 2012	A 16 XER	Interior Lighting	●	●	●	●
Astra-H	[C] 2012	A 16 XER	Wipers/Washer	●	●	●	●
Astra-H	[C] 2012	A 16 XER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[C] 2012	A 16 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	A 16 XER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[C] 2012	A 16 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[C] 2012	A 16 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[C] 2012	A 16 XER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[C] 2012	A 16 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[C] 2012	A 16 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	A 16 XER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[C] 2012	A 16 XER	PAS (Park Pilot)	●	●	●	●
Astra-H	[C] 2012	A 16 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[C] 2012	A 16 XER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[C] 2012	A 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	A 16 XER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	A 16 XER	PEPS (Open&Start)	●	●	●	●
Astra-H	[C] 2012	A 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	A 16 XER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[C] 2012	A 16 XER	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	AF 40-6	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	AF17-4	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	AF 22-4	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	Interior Lighting	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	Wipers/Washer	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	PAS (Park Pilot)	●	●	●	●

Astra-H	[C] 2012	Z 17 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	ECM (Engine Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	AF 40-6	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	AF17-4	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	AF 22-4	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	MTA (Easytronic)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	Interior Lighting	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	Wipers/Washer	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	CDL (Central Door Lock)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	IMMO (Immobiliser)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	Electrohydraulic HardTop	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	PAS (Park Pilot)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	PEPS (Open&Start)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTJ	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	ECM (Engine Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	AF 40-6	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	AF17-4	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	AF 22-4	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	MTA (Easytronic)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	Interior Lighting	●	●	●	●

Astra-H	[C] 2012	Z 17 DTL	Wipers/Washer	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	CDL (Central Door Lock)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	IMMO (Immobiliser)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	Electrohydraulic HardTop	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	PAS (Park Pilot)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	PEPS (Open&Start)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTL	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	ECM (Engine Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	AF 40-6	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	AF17-4	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	AF 22-4	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	MTA (Easytronic)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	Interior Lighting	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	Wipers/Washer	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	CDL (Central Door Lock)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	IMMO (Immobiliser)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	Electrohydraulic HardTop	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	PAS (Park Pilot)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	PEPS (Open&Start)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[C] 2012	Z 17 DTR	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	ECM (Engine Control Module)	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	AF 40-6	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	AF17-4	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	AF 22-4	●	●	●	●

Astra-H	[C] 2012	A 17 DTJ	MTA (Easytronic)	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	Interior Lighting	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	Wipers/Washer	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	CDL (Central Door Lock)	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	IMMO (Immobiliser)	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	Electrohydraulic HardTop	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	PAS (Park Pilot)	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	PEPS (Open&Start)	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[C] 2012	A 17 DTJ	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	ECM (Engine Control Module)	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	AF 40-6	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	AF17-4	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	AF 22-4	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	MTA (Easytronic)	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	Interior Lighting	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	Wipers/Washer	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	CDL (Central Door Lock)	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	IMMO (Immobiliser)	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	Electrohydraulic HardTop	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	PAS (Park Pilot)	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●

Astra-H	[C] 2012	A 17 DTR	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	PEPS (Open&Start)	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[C] 2012	A 17 DTR	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	AF 40-6	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	AF17-4	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	AF 22-4	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	MTA (Easytronic)	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	Interior Lighting	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	Wipers/Washer	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	CDL (Central Door Lock)	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	Electrohydraulic HardTop	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	PAS (Park Pilot)	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	PEPS (Open&Start)	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[C] 2012	Z 18 XE	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	AF 40-6	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	AF17-4	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	AF 22-4	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	MTA (Easytronic)	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	Interior Lighting	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	Wipers/Washer	●	●	●	●

Astra-H	[C] 2012	Z 18 XER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	PAS (Park Pilot)	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	PEPS (Open&Start)	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[C] 2012	Z 18 XER	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[C] 2012	A 18 XER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[C] 2012	A 18 XER	AF 40-6	●	●	●	●
Astra-H	[C] 2012	A 18 XER	AF17-4	●	●	●	●
Astra-H	[C] 2012	A 18 XER	AF 22-4	●	●	●	●
Astra-H	[C] 2012	A 18 XER	MTA (Easytronic)	●	●	●	●
Astra-H	[C] 2012	A 18 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[C] 2012	A 18 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[C] 2012	A 18 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[C] 2012	A 18 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[C] 2012	A 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	A 18 XER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[C] 2012	A 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	A 18 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[C] 2012	A 18 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[C] 2012	A 18 XER	Interior Lighting	●	●	●	●
Astra-H	[C] 2012	A 18 XER	Wipers/Washer	●	●	●	●
Astra-H	[C] 2012	A 18 XER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[C] 2012	A 18 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	A 18 XER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[C] 2012	A 18 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[C] 2012	A 18 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[C] 2012	A 18 XER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[C] 2012	A 18 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[C] 2012	A 18 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	A 18 XER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[C] 2012	A 18 XER	PAS (Park Pilot)	●	●	●	●
Astra-H	[C] 2012	A 18 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[C] 2012	A 18 XER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[C] 2012	A 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	A 18 XER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	A 18 XER	PEPS (Open&Start)	●	●	●	●
Astra-H	[C] 2012	A 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	A 18 XER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[C] 2012	A 18 XER	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	ECM (Engine Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	AF 40-6	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	AF17-4	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	AF 22-4	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	MTA (Easytronic)	●	●	●	●

Astra-H	[C] 2012	Z 19 DT	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	Interior Lighting	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	Wipers/Washer	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	CDL (Central Door Lock)	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	IMMO (Immobiliser)	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	Electrohydraulic HardTop	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	PAS (Park Pilot)	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	PEPS (Open&Start)	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[C] 2012	Z 19 DT	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	AF 40-6	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	AF17-4	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	AF 22-4	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	Interior Lighting	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	Wipers/Washer	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	SLM (Shift Lever Module)	●	●	●	●

Astra-H	[C] 2012	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[C] 2012	Z 19 DTH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	AF 40-6	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	AF17-4	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	AF 22-4	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	MTA (Easytronic)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	Interior Lighting	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	Wipers/Washer	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	PAS (Park Pilot)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	PEPS (Open&Start)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	ECM (Engine Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	AF 40-6	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	AF17-4	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	AF 22-4	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	MTA (Easytronic)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	Interior Lighting	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	Wipers/Washer	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	CDL (Central Door Lock)	●	●	●	●

Astra-H	[C] 2012	Z 20 LEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	IMMO (Immobiliser)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	Electrohydraulic HardTop	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	PAS (Park Pilot)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	PEPS (Open&Start)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[C] 2012	Z 20 LEL	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	AF 40-6	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	AF17-4	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	AF 22-4	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	MTA (Easytronic)	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	Interior Lighting	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	Wipers/Washer	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	PAS (Park Pilot)	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	PEPS (Open&Start)	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[C] 2012	Z 20 LER	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	AF 40-6	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	AF17-4	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	AF 22-4	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	MTA (Easytronic)	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	MTA (Easytronic Magneti Marelli)	●	●	●	●

Astra-H	[C] 2012	Z 22 YH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	Interior Lighting	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	Wipers/Washer	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	PAS (Park Pilot)	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	PEPS (Open&Start)	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[C] 2012	Z 22 YH	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[C] 2012	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Astra-H	[C] 2012	Engine(default)	AF 40-6	●	●	●	●
Astra-H	[C] 2012	Engine(default)	AF17-4	●	●	●	●
Astra-H	[C] 2012	Engine(default)	AF 22-4	●	●	●	●
Astra-H	[C] 2012	Engine(default)	MTA (Easytronic)	●	●	●	●
Astra-H	[C] 2012	Engine(default)	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[C] 2012	Engine(default)	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[C] 2012	Engine(default)	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[C] 2012	Engine(default)	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[C] 2012	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Engine(default)	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[C] 2012	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[C] 2012	Engine(default)	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[C] 2012	Engine(default)	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[C] 2012	Engine(default)	Interior Lighting	●	●	●	●
Astra-H	[C] 2012	Engine(default)	Wipers/Washer	●	●	●	●
Astra-H	[C] 2012	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Astra-H	[C] 2012	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Engine(default)	IMMO (Immobiliser)	●	●	●	●
Astra-H	[C] 2012	Engine(default)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[C] 2012	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●

Astra-H	[C] 2012	Engine(default)	Electrohydraulic HardTop	●	●	●	●
Astra-H	[C] 2012	Engine(default)	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[C] 2012	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Astra-H	[C] 2012	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[C] 2012	Engine(default)	PAS (Park Pilot)	●	●	●	●
Astra-H	[C] 2012	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[C] 2012	Engine(default)	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[C] 2012	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Engine(default)	PEPS (Open&Start)	●	●	●	●
Astra-H	[C] 2012	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[C] 2012	Engine(default)	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[C] 2012	Engine(default)	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	AF 40-6	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	AF17-4	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	AF 22-4	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	MTA (Easytronic)	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	Interior Lighting	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	Wipers/Washer	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	CDL (Central Door Lock)	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	Electrohydraulic HardTop	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	PAS (Park Pilot)	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	PEPS (Open&Start)	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[B] 2011	Z 12 XEP	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	AF 40-6	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	AF17-4	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	AF 22-4	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●

Astra-H	[B] 2011	Y 13 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	Interior Lighting	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	Wipers/Washer	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[B] 2011	Y 13 DTH	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	AF 40-6	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	AF17-4	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	AF 22-4	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	Interior Lighting	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	Wipers/Washer	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●

Astra-H	[B] 2011	Z 13 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[B] 2011	Z 13 DTH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	ECM (Engine Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	AF 40-6	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	AF17-4	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	AF 22-4	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	MTA (Easytronic)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	Interior Lighting	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	Wipers/Washer	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	CDL (Central Door Lock)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	IMMO (Immobiliser)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	Electrohydraulic HardTop	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	PAS (Park Pilot)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	PEPS (Open&Start)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEL	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	AF 40-6	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	AF17-4	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	AF 22-4	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	Interior Lighting	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	Wipers/Washer	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	CDL (Central Door Lock)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	IC (Instrument Cluster)	●	●	●	●

Astra-H	[B] 2011	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	Electrohydraulic HardTop	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	PAS (Park Pilot)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	PEPS (Open&Start)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[B] 2011	Z 14 XEP	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	ECM (Engine Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	AF 40-6	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	AF17-4	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	AF 22-4	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	MTA (Easytronic)	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	Interior Lighting	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	Wipers/Washer	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	CDL (Central Door Lock)	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	IMMO (Immobiliser)	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	Electrohydraulic HardTop	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	PAS (Park Pilot)	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	PEPS (Open&Start)	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[B] 2011	Z 16 LET	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	ECM (Engine Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	AF 40-6	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	AF17-4	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	AF 22-4	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	MTA (Easytronic)	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	TPM (Tyre Pressure Monitoring)	●	●	●	●

Astra-H	[B] 2011	Z 16 XE1	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	Interior Lighting	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	Wipers/Washer	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	CDL (Central Door Lock)	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	IMMO (Immobiliser)	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	Electrohydraulic HardTop	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	PAS (Park Pilot)	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	PEPS (Open&Start)	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[B] 2011	Z 16 XE1	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	AF 40-6	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	AF17-4	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	AF 22-4	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	MTA (Easytronic)	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	Interior Lighting	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	Wipers/Washer	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	CDL (Central Door Lock)	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	Electrohydraulic HardTop	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	PAS (Park Pilot)	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	REC (Rear Electrical Centre)	●	●	●	●

Astra-H	[B] 2011	Z 16 XEP	PEPS (Open&Start)	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[B] 2011	Z 16 XEP	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	AF 40-6	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	AF17-4	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	AF 22-4	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	MTA (Easytronic)	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	Interior Lighting	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	Wipers/Washer	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	PAS (Park Pilot)	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	PEPS (Open&Start)	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[B] 2011	Z 16 XER	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[B] 2011	A 16 LET	ECM (Engine Control Module)	●	●	●	●
Astra-H	[B] 2011	A 16 LET	AF 40-6	●	●	●	●
Astra-H	[B] 2011	A 16 LET	AF17-4	●	●	●	●
Astra-H	[B] 2011	A 16 LET	AF 22-4	●	●	●	●
Astra-H	[B] 2011	A 16 LET	MTA (Easytronic)	●	●	●	●
Astra-H	[B] 2011	A 16 LET	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[B] 2011	A 16 LET	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[B] 2011	A 16 LET	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[B] 2011	A 16 LET	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[B] 2011	A 16 LET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	A 16 LET	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[B] 2011	A 16 LET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	A 16 LET	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[B] 2011	A 16 LET	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[B] 2011	A 16 LET	Interior Lighting	●	●	●	●
Astra-H	[B] 2011	A 16 LET	Wipers/Washer	●	●	●	●
Astra-H	[B] 2011	A 16 LET	CDL (Central Door Lock)	●	●	●	●
Astra-H	[B] 2011	A 16 LET	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	A 16 LET	IMMO (Immobiliser)	●	●	●	●

Astra-H	[B] 2011	A 16 LET	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[B] 2011	A 16 LET	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[B] 2011	A 16 LET	Electrohydraulic HardTop	●	●	●	●
Astra-H	[B] 2011	A 16 LET	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[B] 2011	A 16 LET	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	A 16 LET	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[B] 2011	A 16 LET	PAS (Park Pilot)	●	●	●	●
Astra-H	[B] 2011	A 16 LET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[B] 2011	A 16 LET	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[B] 2011	A 16 LET	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	A 16 LET	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	A 16 LET	PEPS (Open&Start)	●	●	●	●
Astra-H	[B] 2011	A 16 LET	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	A 16 LET	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[B] 2011	A 16 LET	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[B] 2011	A 16 XER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[B] 2011	A 16 XER	AF 40-6	●	●	●	●
Astra-H	[B] 2011	A 16 XER	AF17-4	●	●	●	●
Astra-H	[B] 2011	A 16 XER	AF 22-4	●	●	●	●
Astra-H	[B] 2011	A 16 XER	MTA (Easytronic)	●	●	●	●
Astra-H	[B] 2011	A 16 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[B] 2011	A 16 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[B] 2011	A 16 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[B] 2011	A 16 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[B] 2011	A 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	A 16 XER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[B] 2011	A 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	A 16 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[B] 2011	A 16 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[B] 2011	A 16 XER	Interior Lighting	●	●	●	●
Astra-H	[B] 2011	A 16 XER	Wipers/Washer	●	●	●	●
Astra-H	[B] 2011	A 16 XER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[B] 2011	A 16 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	A 16 XER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[B] 2011	A 16 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[B] 2011	A 16 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[B] 2011	A 16 XER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[B] 2011	A 16 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[B] 2011	A 16 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	A 16 XER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[B] 2011	A 16 XER	PAS (Park Pilot)	●	●	●	●
Astra-H	[B] 2011	A 16 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[B] 2011	A 16 XER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[B] 2011	A 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	A 16 XER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	A 16 XER	PEPS (Open&Start)	●	●	●	●
Astra-H	[B] 2011	A 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	A 16 XER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[B] 2011	A 16 XER	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	AF 40-6	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	AF17-4	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	AF 22-4	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●

Astra-H	[B] 2011	Z 17 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	Interior Lighting	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	Wipers/Washer	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	ECM (Engine Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	AF 40-6	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	AF17-4	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	AF 22-4	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	MTA (Easytronic)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	Interior Lighting	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	Wipers/Washer	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	CDL (Central Door Lock)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	IMMO (Immobiliser)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	Electrohydraulic HardTop	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	PAS (Park Pilot)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	PEPS (Open&Start)	●	●	●	●

Astra-H	[B] 2011	Z 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTJ	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	ECM (Engine Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	AF 40-6	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	AF17-4	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	AF 22-4	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	MTA (Easytronic)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	Interior Lighting	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	Wipers/Washer	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	CDL (Central Door Lock)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	IMMO (Immobiliser)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	Electrohydraulic HardTop	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	PAS (Park Pilot)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	PEPS (Open&Start)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTL	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	ECM (Engine Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	AF 40-6	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	AF17-4	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	AF 22-4	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	MTA (Easytronic)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	Interior Lighting	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	Wipers/Washer	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	CDL (Central Door Lock)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	IMMO (Immobiliser)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	SCLCM (Steering Column Lock Control Module)	●	●	●	●

Astra-H	[B] 2011	Z 17 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	Electrohydraulic HardTop	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	PAS (Park Pilot)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	PEPS (Open&Start)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[B] 2011	Z 17 DTR	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	ECM (Engine Control Module)	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	AF 40-6	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	AF17-4	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	AF 22-4	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	MTA (Easytronic)	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	Interior Lighting	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	Wipers/Washer	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	CDL (Central Door Lock)	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	IMMO (Immobiliser)	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	Electrohydraulic HardTop	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	PAS (Park Pilot)	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	PEPS (Open&Start)	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[B] 2011	A 17 DTJ	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	ECM (Engine Control Module)	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	AF 40-6	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	AF17-4	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	AF 22-4	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	MTA (Easytronic)	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	EHPS (Electrohydraulic Power Steering)	●	●	●	●

Astra-H	[B] 2011	A 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	Interior Lighting	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	Wipers/Washer	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	CDL (Central Door Lock)	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	IMMO (Immobiliser)	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	Electrohydraulic HardTop	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	PAS (Park Pilot)	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	PEPS (Open&Start)	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[B] 2011	A 17 DTR	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	AF 40-6	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	AF17-4	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	AF 22-4	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	MTA (Easytronic)	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	Interior Lighting	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	Wipers/Washer	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	CDL (Central Door Lock)	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	Electrohydraulic HardTop	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	PAS (Park Pilot)	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	PEPS (Open&Start)	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	UEC (Underhood Electrical Centre)	●	●	●	●

Astra-H	[B] 2011	Z 18 XE	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[B] 2011	Z 18 XE	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	AF 40-6	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	AF17-4	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	AF 22-4	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	MTA (Easytronic)	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	Interior Lighting	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	Wipers/Washer	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	PAS (Park Pilot)	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	PEPS (Open&Start)	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[B] 2011	Z 18 XER	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[B] 2011	A 18 XER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[B] 2011	A 18 XER	AF 40-6	●	●	●	●
Astra-H	[B] 2011	A 18 XER	AF17-4	●	●	●	●
Astra-H	[B] 2011	A 18 XER	AF 22-4	●	●	●	●
Astra-H	[B] 2011	A 18 XER	MTA (Easytronic)	●	●	●	●
Astra-H	[B] 2011	A 18 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[B] 2011	A 18 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[B] 2011	A 18 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[B] 2011	A 18 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[B] 2011	A 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	A 18 XER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[B] 2011	A 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	A 18 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[B] 2011	A 18 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[B] 2011	A 18 XER	Interior Lighting	●	●	●	●
Astra-H	[B] 2011	A 18 XER	Wipers/Washer	●	●	●	●
Astra-H	[B] 2011	A 18 XER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[B] 2011	A 18 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	A 18 XER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[B] 2011	A 18 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[B] 2011	A 18 XER	ATWS (Anti Theft Warning System)	●	●	●	●

Astra-H	[B] 2011	A 18 XER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[B] 2011	A 18 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[B] 2011	A 18 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	A 18 XER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[B] 2011	A 18 XER	PAS (Park Pilot)	●	●	●	●
Astra-H	[B] 2011	A 18 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[B] 2011	A 18 XER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[B] 2011	A 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	A 18 XER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	A 18 XER	PEPS (Open&Start)	●	●	●	●
Astra-H	[B] 2011	A 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	A 18 XER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[B] 2011	A 18 XER	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	ECM (Engine Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	AF 40-6	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	AF17-4	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	AF 22-4	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	MTA (Easytronic)	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	Interior Lighting	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	Wipers/Washer	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	CDL (Central Door Lock)	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	IMMO (Immobiliser)	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	Electrohydraulic HardTop	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	PAS (Park Pilot)	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	PEPS (Open&Start)	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[B] 2011	Z 19 DT	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	AF 40-6	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	AF17-4	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	AF 22-4	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●

Astra-H	[B] 2011	Z 19 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	Interior Lighting	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	Wipers/Washer	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[B] 2011	Z 19 DTH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	AF 40-6	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	AF17-4	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	AF 22-4	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	MTA (Easytronic)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	Interior Lighting	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	Wipers/Washer	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	PAS (Park Pilot)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	PEPS (Open&Start)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEH	EHU (Entertainment Head Unit)	●	●	●	●

Astra-H	[B] 2011	Z 20 LEH	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	ECM (Engine Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	AF 40-6	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	AF17-4	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	AF 22-4	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	MTA (Easytronic)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	Interior Lighting	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	Wipers/Washer	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	CDL (Central Door Lock)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	IMMO (Immobiliser)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	Electrohydraulic HardTop	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	PAS (Park Pilot)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	PEPS (Open&Start)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[B] 2011	Z 20 LEL	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	AF 40-6	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	AF17-4	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	AF 22-4	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	MTA (Easytronic)	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	Interior Lighting	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	Wipers/Washer	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	Electrohydraulic HardTop	●	●	●	●

Astra-H	[B] 2011	Z 20 LER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	PAS (Park Pilot)	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	PEPS (Open&Start)	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[B] 2011	Z 20 LER	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	AF 40-6	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	AF17-4	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	AF 22-4	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	MTA (Easytronic)	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	Interior Lighting	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	Wipers/Washer	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	PAS (Park Pilot)	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	PEPS (Open&Start)	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[B] 2011	Z 22 YH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[B] 2011	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Astra-H	[B] 2011	Engine(default)	AF 40-6	●	●	●	●
Astra-H	[B] 2011	Engine(default)	AF17-4	●	●	●	●
Astra-H	[B] 2011	Engine(default)	AF 22-4	●	●	●	●
Astra-H	[B] 2011	Engine(default)	MTA (Easytronic)	●	●	●	●
Astra-H	[B] 2011	Engine(default)	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[B] 2011	Engine(default)	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[B] 2011	Engine(default)	TPMS (Tyre Pressure Monitoring System)	●	●	●	●

Astra-H	[B] 2011	Engine(default)	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[B] 2011	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Engine(default)	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[B] 2011	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[B] 2011	Engine(default)	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[B] 2011	Engine(default)	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[B] 2011	Engine(default)	Interior Lighting	●	●	●	●
Astra-H	[B] 2011	Engine(default)	Wipers/Washer	●	●	●	●
Astra-H	[B] 2011	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Astra-H	[B] 2011	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Engine(default)	IMMO (Immobiliser)	●	●	●	●
Astra-H	[B] 2011	Engine(default)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[B] 2011	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[B] 2011	Engine(default)	Electrohydraulic HardTop	●	●	●	●
Astra-H	[B] 2011	Engine(default)	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[B] 2011	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Astra-H	[B] 2011	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[B] 2011	Engine(default)	PAS (Park Pilot)	●	●	●	●
Astra-H	[B] 2011	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[B] 2011	Engine(default)	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[B] 2011	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Engine(default)	PEPS (Open&Start)	●	●	●	●
Astra-H	[B] 2011	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[B] 2011	Engine(default)	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[B] 2011	Engine(default)	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	AF 40-6	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	AF17-4	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	AF 22-4	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	Interior Lighting	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	Wipers/Washer	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	Electrohydraulic HardTop	●	●	●	●

Astra-H	[A] 2010	Z 13 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[A] 2010	Z 13 DTH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	AF 40-6	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	AF17-4	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	AF 22-4	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	Interior Lighting	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	Wipers/Washer	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	CDL (Central Door Lock)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	Electrohydraulic HardTop	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	PAS (Park Pilot)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	PEPS (Open&Start)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEP	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	AF 40-6	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	AF17-4	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	AF 22-4	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	CDC (Continuous Damping Control)	●	●	●	●

Astra-H	[A] 2010	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	Interior Lighting	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	Wipers/Washer	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[A] 2010	Z 19 DTH	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	ECM (Engine Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	AF 40-6	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	AF17-4	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	AF 22-4	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	MTA (Easytronic)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	Interior Lighting	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	Wipers/Washer	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	CDL (Central Door Lock)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	IMMO (Immobiliser)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	Electrohydraulic HardTop	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	PAS (Park Pilot)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	PEPS (Open&Start)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTL	DIS (Info Display TID, BID, GID, CID)	●	●	●	●

Astra-H	[A] 2010	Z 16 XER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	AF 40-6	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	AF17-4	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	AF 22-4	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	MTA (Easytronic)	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	Interior Lighting	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	Wipers/Washer	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	PAS (Park Pilot)	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	PEPS (Open&Start)	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[A] 2010	Z 16 XER	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	ECM (Engine Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	AF 40-6	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	AF17-4	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	AF 22-4	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	MTA (Easytronic)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	Interior Lighting	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	Wipers/Washer	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	CDL (Central Door Lock)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	IMMO (Immobiliser)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	Electrohydraulic HardTop	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	ECC/SAC (Electronic Climate Control)	●	●	●	●

Astra-H	[A] 2010	Z 14 XEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	PAS (Park Pilot)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	PEPS (Open&Start)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[A] 2010	Z 14 XEL	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	AF 40-6	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	AF17-4	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	AF 22-4	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	Interior Lighting	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	Wipers/Washer	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[A] 2010	Y 13 DTH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	AF 40-6	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	AF17-4	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	AF 22-4	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	MTA (Easytronic)	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●

Astra-H	[A] 2010	Z 12 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	Interior Lighting	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	Wipers/Washer	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	CDL (Central Door Lock)	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	Electrohydraulic HardTop	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	PAS (Park Pilot)	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	PEPS (Open&Start)	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[A] 2010	Z 12 XEP	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	AF 40-6	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	AF17-4	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	AF 22-4	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	Interior Lighting	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	Wipers/Washer	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTH	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	ECM (Engine Control Module)	●	●	●	●

Astra-H	[A] 2010	Z 17 DTR	AF 40-6	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	AF17-4	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	AF 22-4	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	MTA (Easytronic)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	Interior Lighting	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	Wipers/Washer	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	CDL (Central Door Lock)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	IMMO (Immobiliser)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	Electrohydraulic HardTop	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	PAS (Park Pilot)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	PEPS (Open&Start)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTR	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	ECM (Engine Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	AF 40-6	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	AF17-4	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	AF 22-4	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	MTA (Easytronic)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	Interior Lighting	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	Wipers/Washer	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	CDL (Central Door Lock)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	IMMO (Immobiliser)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	Electrohydraulic HardTop	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	IC (Instrument Cluster)	●	●	●	●

Astra-H	[A] 2010	Z 17 DTJ	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	PAS (Park Pilot)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	PEPS (Open&Start)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[A] 2010	Z 17 DTJ	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	ECM (Engine Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	AF 40-6	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	AF17-4	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	AF 22-4	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	MTA (Easytronic)	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	Interior Lighting	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	Wipers/Washer	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	CDL (Central Door Lock)	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	IMMO (Immobiliser)	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	Electrohydraulic HardTop	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	PAS (Park Pilot)	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	PEPS (Open&Start)	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[A] 2010	Z 16 LET	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	AF 40-6	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	AF17-4	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	AF 22-4	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	MTA (Easytronic)	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●

Astra-H	[A] 2010	Z 18 XE	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	Interior Lighting	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	Wipers/Washer	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	CDL (Central Door Lock)	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	Electrohydraulic HardTop	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	PAS (Park Pilot)	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	PEPS (Open&Start)	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[A] 2010	Z 18 XE	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	AF 40-6	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	AF17-4	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	AF 22-4	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	MTA (Easytronic)	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	Interior Lighting	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	Wipers/Washer	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	PAS (Park Pilot)	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	PEPS (Open&Start)	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[A] 2010	Z 18 XER	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	ECM (Engine Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	AF 40-6	●	●	●	●

Astra-H	[A] 2010	Z 19 DT	AF17-4	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	AF 22-4	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	MTA (Easytronic)	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	Interior Lighting	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	Wipers/Washer	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	CDL (Central Door Lock)	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	IMMO (Immobiliser)	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	Electrohydraulic HardTop	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	PAS (Park Pilot)	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	PEPS (Open&Start)	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[A] 2010	Z 19 DT	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	AF 40-6	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	AF17-4	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	AF 22-4	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	MTA (Easytronic)	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	Interior Lighting	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	Wipers/Washer	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	CDL (Central Door Lock)	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	Electrohydraulic HardTop	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	EHS (Electrical Heater System)	●	●	●	●

Astra-H	[A] 2010	Z 16 XEP	PAS (Park Pilot)	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	PEPS (Open&Start)	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[A] 2010	Z 16 XEP	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	ECM (Engine Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	AF 40-6	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	AF17-4	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	AF 22-4	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	MTA (Easytronic)	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	Interior Lighting	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	Wipers/Washer	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	CDL (Central Door Lock)	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	IMMO (Immobiliser)	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	Electrohydraulic HardTop	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	PAS (Park Pilot)	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	PEPS (Open&Start)	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[A] 2010	Z 16 XE1	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	AF 40-6	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	AF17-4	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	AF 22-4	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	MTA (Easytronic)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	Exterior Lighting/Turn Indicator System	●	●	●	●

Astra-H	[A] 2010	Z 20 LEH	Interior Lighting	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	Wipers/Washer	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	PAS (Park Pilot)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	PEPS (Open&Start)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	ECM (Engine Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	AF 40-6	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	AF17-4	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	AF 22-4	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	MTA (Easytronic)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	Interior Lighting	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	Wipers/Washer	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	CDL (Central Door Lock)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	IMMO (Immobiliser)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	Electrohydraulic HardTop	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	PAS (Park Pilot)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	PEPS (Open&Start)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[A] 2010	Z 20 LEL	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	AF 40-6	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	AF17-4	●	●	●	●

Astra-H	[A] 2010	Z 20 LER	AF 22-4	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	MTA (Easytronic)	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	Interior Lighting	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	Wipers/Washer	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	PAS (Park Pilot)	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	PEPS (Open&Start)	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[A] 2010	Z 20 LER	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	AF 40-6	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	AF17-4	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	AF 22-4	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	MTA (Easytronic)	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	Interior Lighting	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	Wipers/Washer	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	PAS (Park Pilot)	●	●	●	●

Astra-H	[A] 2010	Z 22 YH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	PEPS (Open&Start)	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[A] 2010	Z 22 YH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[A] 2010	A 16 LET	ECM (Engine Control Module)	●	●	●	●
Astra-H	[A] 2010	A 16 LET	AF 40-6	●	●	●	●
Astra-H	[A] 2010	A 16 LET	AF17-4	●	●	●	●
Astra-H	[A] 2010	A 16 LET	AF 22-4	●	●	●	●
Astra-H	[A] 2010	A 16 LET	MTA (Easytronic)	●	●	●	●
Astra-H	[A] 2010	A 16 LET	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[A] 2010	A 16 LET	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[A] 2010	A 16 LET	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[A] 2010	A 16 LET	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[A] 2010	A 16 LET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	A 16 LET	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[A] 2010	A 16 LET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	A 16 LET	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[A] 2010	A 16 LET	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[A] 2010	A 16 LET	Interior Lighting	●	●	●	●
Astra-H	[A] 2010	A 16 LET	Wipers/Washer	●	●	●	●
Astra-H	[A] 2010	A 16 LET	CDL (Central Door Lock)	●	●	●	●
Astra-H	[A] 2010	A 16 LET	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	A 16 LET	IMMO (Immobiliser)	●	●	●	●
Astra-H	[A] 2010	A 16 LET	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[A] 2010	A 16 LET	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[A] 2010	A 16 LET	Electrohydraulic HardTop	●	●	●	●
Astra-H	[A] 2010	A 16 LET	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[A] 2010	A 16 LET	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	A 16 LET	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[A] 2010	A 16 LET	PAS (Park Pilot)	●	●	●	●
Astra-H	[A] 2010	A 16 LET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[A] 2010	A 16 LET	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[A] 2010	A 16 LET	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	A 16 LET	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	A 16 LET	PEPS (Open&Start)	●	●	●	●
Astra-H	[A] 2010	A 16 LET	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	A 16 LET	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[A] 2010	A 16 LET	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	ECM (Engine Control Module)	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	AF 40-6	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	AF17-4	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	AF 22-4	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	MTA (Easytronic)	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	Interior Lighting	●	●	●	●

Astra-H	[A] 2010	A 17 DTJ	Wipers/Washer	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	CDL (Central Door Lock)	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	IMMO (Immobiliser)	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	Electrohydraulic HardTop	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	PAS (Park Pilot)	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	PEPS (Open&Start)	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[A] 2010	A 17 DTJ	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	ECM (Engine Control Module)	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	AF 40-6	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	AF17-4	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	AF 22-4	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	MTA (Easytronic)	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	Interior Lighting	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	Wipers/Washer	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	CDL (Central Door Lock)	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	IMMO (Immobiliser)	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	Electrohydraulic HardTop	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	PAS (Park Pilot)	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	PEPS (Open&Start)	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[A] 2010	A 17 DTR	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[A] 2010	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Astra-H	[A] 2010	Engine(default)	AF 40-6	●	●	●	●
Astra-H	[A] 2010	Engine(default)	AF17-4	●	●	●	●

Astra-H	[A] 2010	Engine(default)	AF 22-4	●	●	●	●
Astra-H	[A] 2010	Engine(default)	MTA (Easytronic)	●	●	●	●
Astra-H	[A] 2010	Engine(default)	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[A] 2010	Engine(default)	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[A] 2010	Engine(default)	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[A] 2010	Engine(default)	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[A] 2010	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Engine(default)	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[A] 2010	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[A] 2010	Engine(default)	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[A] 2010	Engine(default)	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[A] 2010	Engine(default)	Interior Lighting	●	●	●	●
Astra-H	[A] 2010	Engine(default)	Wipers/Washer	●	●	●	●
Astra-H	[A] 2010	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Astra-H	[A] 2010	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Engine(default)	IMMO (Immobiliser)	●	●	●	●
Astra-H	[A] 2010	Engine(default)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[A] 2010	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[A] 2010	Engine(default)	Electrohydraulic HardTop	●	●	●	●
Astra-H	[A] 2010	Engine(default)	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[A] 2010	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Astra-H	[A] 2010	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[A] 2010	Engine(default)	PAS (Park Pilot)	●	●	●	●
Astra-H	[A] 2010	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[A] 2010	Engine(default)	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[A] 2010	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Engine(default)	PEPS (Open&Start)	●	●	●	●
Astra-H	[A] 2010	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[A] 2010	Engine(default)	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[A] 2010	Engine(default)	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	AF 40-6	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	AF17-4	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	AF 22-4	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	Interior Lighting	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	Wipers/Washer	●	●	●	●

Astra-H	[9] 2009	Z 13 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[9] 2009	Z 13 DTH	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	AF 40-6	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	AF17-4	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	AF 22-4	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	Interior Lighting	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	Wipers/Washer	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	CDL (Central Door Lock)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	Electrohydraulic HardTop	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	PAS (Park Pilot)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	PEPS (Open&Start)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEP	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	AF 40-6	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	AF17-4	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	AF 22-4	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	MTA (Easytronic)	●	●	●	●

Astra-H	[9] 2009	Z 19 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	Interior Lighting	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	Wipers/Washer	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[9] 2009	Z 19 DTH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	ECM (Engine Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	AF 40-6	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	AF17-4	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	AF 22-4	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	MTA (Easytronic)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	Interior Lighting	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	Wipers/Washer	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	CDL (Central Door Lock)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	IMMO (Immobiliser)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	Electrohydraulic HardTop	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	PAS (Park Pilot)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	SLM (Shift Lever Module)	●	●	●	●

Astra-H	[9] 2009	Z 17 DTL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	PEPS (Open&Start)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTL	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	AF 40-6	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	AF17-4	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	AF 22-4	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	MTA (Easytronic)	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	Interior Lighting	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	Wipers/Washer	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	PAS (Park Pilot)	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	PEPS (Open&Start)	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[9] 2009	Z 16 XER	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	ECM (Engine Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	AF 40-6	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	AF17-4	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	AF 22-4	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	MTA (Easytronic)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	Interior Lighting	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	Wipers/Washer	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	CDL (Central Door Lock)	●	●	●	●

Astra-H	[9] 2009	Z 14 XEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	IMMO (Immobiliser)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	Electrohydraulic HardTop	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	PAS (Park Pilot)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	PEPS (Open&Start)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[9] 2009	Z 14 XEL	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	AF 40-6	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	AF17-4	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	AF 22-4	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	Interior Lighting	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	Wipers/Washer	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[9] 2009	Y 13 DTH	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	AF 40-6	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	AF17-4	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	AF 22-4	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	MTA (Easytronic)	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●

Astra-H	[9] 2009	Z 12 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	Interior Lighting	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	Wipers/Washer	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	CDL (Central Door Lock)	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	Electrohydraulic HardTop	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	PAS (Park Pilot)	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	PEPS (Open&Start)	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[9] 2009	Z 12 XEP	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	AF 40-6	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	AF17-4	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	AF 22-4	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	Interior Lighting	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	Wipers/Washer	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	UEC (Underhood Electrical Centre)	●	●	●	●

Astra-H	[9] 2009	Z 17 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	ECM (Engine Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	AF 40-6	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	AF17-4	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	AF 22-4	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	MTA (Easytronic)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	Interior Lighting	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	Wipers/Washer	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	CDL (Central Door Lock)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	IMMO (Immobiliser)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	Electrohydraulic HardTop	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	PAS (Park Pilot)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	PEPS (Open&Start)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTR	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	ECM (Engine Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	AF 40-6	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	AF17-4	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	AF 22-4	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	MTA (Easytronic)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	Interior Lighting	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	Wipers/Washer	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	CDL (Central Door Lock)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	IC (Instrument Cluster)	●	●	●	●

Astra-H	[9] 2009	Z 17 DTJ	IMMO (Immobiliser)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	Electrohydraulic HardTop	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	PAS (Park Pilot)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	PEPS (Open&Start)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[9] 2009	Z 17 DTJ	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	ECM (Engine Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	AF 40-6	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	AF17-4	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	AF 22-4	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	MTA (Easytronic)	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	Interior Lighting	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	Wipers/Washer	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	CDL (Central Door Lock)	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	IMMO (Immobiliser)	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	Electrohydraulic HardTop	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	PAS (Park Pilot)	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	PEPS (Open&Start)	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[9] 2009	Z 16 LET	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	AF 40-6	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	AF17-4	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	AF 22-4	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	MTA (Easytronic)	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	TPM (Tyre Pressure Monitoring)	●	●	●	●

Astra-H	[9] 2009	Z 18 XE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	Interior Lighting	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	Wipers/Washer	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	CDL (Central Door Lock)	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	Electrohydraulic HardTop	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	PAS (Park Pilot)	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	PEPS (Open&Start)	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[9] 2009	Z 18 XE	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	AF 40-6	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	AF17-4	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	AF 22-4	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	MTA (Easytronic)	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	Interior Lighting	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	Wipers/Washer	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	PAS (Park Pilot)	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	REC (Rear Electrical Centre)	●	●	●	●

Astra-H	[9] 2009	Z 18 XER	PEPS (Open&Start)	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[9] 2009	Z 18 XER	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	ECM (Engine Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	AF 40-6	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	AF17-4	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	AF 22-4	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	MTA (Easytronic)	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	Interior Lighting	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	Wipers/Washer	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	CDL (Central Door Lock)	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	IMMO (Immobiliser)	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	Electrohydraulic HardTop	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	PAS (Park Pilot)	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	PEPS (Open&Start)	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[9] 2009	Z 19 DT	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	AF 40-6	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	AF17-4	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	AF 22-4	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	MTA (Easytronic)	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	Interior Lighting	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	Wipers/Washer	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	CDL (Central Door Lock)	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●

Astra-H	[9] 2009	Z 16 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	Electrohydraulic HardTop	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	PAS (Park Pilot)	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	PEPS (Open&Start)	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[9] 2009	Z 16 XEP	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	ECM (Engine Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	AF 40-6	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	AF17-4	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	AF 22-4	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	MTA (Easytronic)	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	Interior Lighting	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	Wipers/Washer	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	CDL (Central Door Lock)	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	IMMO (Immobiliser)	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	Electrohydraulic HardTop	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	PAS (Park Pilot)	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	PEPS (Open&Start)	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[9] 2009	Z 16 XE1	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	AF 40-6	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	AF17-4	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	AF 22-4	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	MTA (Easytronic)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●

Astra-H	[9] 2009	Z 20 LEH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	Interior Lighting	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	Wipers/Washer	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	PAS (Park Pilot)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	PEPS (Open&Start)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEL	ECM (Engine Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEL	AF 40-6	●	●	●	●
Astra-H	[9] 2009	Z 20 LEL	AF17-4	●	●	●	●
Astra-H	[9] 2009	Z 20 LEL	AF 22-4	●	●	●	●
Astra-H	[9] 2009	Z 20 LEL	MTA (Easytronic)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEL	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEL	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEL	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[9] 2009	Z 20 LEL	Interior Lighting	●	●	●	●
Astra-H	[9] 2009	Z 20 LEL	Wipers/Washer	●	●	●	●
Astra-H	[9] 2009	Z 20 LEL	CDL (Central Door Lock)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEL	IMMO (Immobiliser)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEL	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEL	Electrohydraulic HardTop	●	●	●	●
Astra-H	[9] 2009	Z 20 LEL	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEL	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEL	PAS (Park Pilot)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEL	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEL	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 20 LEL	PEPS (Open&Start)	●	●	●	●

Astra-H	[9] 2009	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	AF 40-6	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	AF17-4	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	AF 22-4	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	MTA (Easytronic)	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	Interior Lighting	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	Wipers/Washer	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	PAS (Park Pilot)	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	PEPS (Open&Start)	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[9] 2009	Z 20 LER	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	AF 40-6	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	AF17-4	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	AF 22-4	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	MTA (Easytronic)	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	Interior Lighting	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	Wipers/Washer	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	SCLCM (Steering Column Lock Control Module)	●	●	●	●

Astra-H	[9] 2009	Z 22 YH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	PAS (Park Pilot)	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	PEPS (Open&Start)	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[9] 2009	Z 22 YH	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[9] 2009	A 16 LET	ECM (Engine Control Module)	●	●	●	●
Astra-H	[9] 2009	A 16 LET	AF 40-6	●	●	●	●
Astra-H	[9] 2009	A 16 LET	AF17-4	●	●	●	●
Astra-H	[9] 2009	A 16 LET	AF 22-4	●	●	●	●
Astra-H	[9] 2009	A 16 LET	MTA (Easytronic)	●	●	●	●
Astra-H	[9] 2009	A 16 LET	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[9] 2009	A 16 LET	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[9] 2009	A 16 LET	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[9] 2009	A 16 LET	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[9] 2009	A 16 LET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	A 16 LET	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[9] 2009	A 16 LET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	A 16 LET	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[9] 2009	A 16 LET	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[9] 2009	A 16 LET	Interior Lighting	●	●	●	●
Astra-H	[9] 2009	A 16 LET	Wipers/Washer	●	●	●	●
Astra-H	[9] 2009	A 16 LET	CDL (Central Door Lock)	●	●	●	●
Astra-H	[9] 2009	A 16 LET	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	A 16 LET	IMMO (Immobiliser)	●	●	●	●
Astra-H	[9] 2009	A 16 LET	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[9] 2009	A 16 LET	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[9] 2009	A 16 LET	Electrohydraulic HardTop	●	●	●	●
Astra-H	[9] 2009	A 16 LET	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[9] 2009	A 16 LET	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	A 16 LET	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[9] 2009	A 16 LET	PAS (Park Pilot)	●	●	●	●
Astra-H	[9] 2009	A 16 LET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[9] 2009	A 16 LET	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[9] 2009	A 16 LET	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	A 16 LET	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	A 16 LET	PEPS (Open&Start)	●	●	●	●
Astra-H	[9] 2009	A 16 LET	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	A 16 LET	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[9] 2009	A 16 LET	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	ECM (Engine Control Module)	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	AF 40-6	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	AF17-4	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	AF 22-4	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	MTA (Easytronic)	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	EHPS (Electrohydraulic Power Steering)	●	●	●	●

Astra-H	[9] 2009	A 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	Interior Lighting	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	Wipers/Washer	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	CDL (Central Door Lock)	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	IMMO (Immobiliser)	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	Electrohydraulic HardTop	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	PAS (Park Pilot)	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	PEPS (Open&Start)	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[9] 2009	A 17 DTJ	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	ECM (Engine Control Module)	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	AF 40-6	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	AF17-4	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	AF 22-4	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	MTA (Easytronic)	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	Interior Lighting	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	Wipers/Washer	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	CDL (Central Door Lock)	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	IMMO (Immobiliser)	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	Electrohydraulic HardTop	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	PAS (Park Pilot)	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	PEPS (Open&Start)	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●

Astra-H	[9] 2009	A 17 DTR	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[9] 2009	A 17 DTR	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[9] 2009	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Astra-H	[9] 2009	Engine(default)	AF 40-6	●	●	●	●
Astra-H	[9] 2009	Engine(default)	AF17-4	●	●	●	●
Astra-H	[9] 2009	Engine(default)	AF 22-4	●	●	●	●
Astra-H	[9] 2009	Engine(default)	MTA (Easytronic)	●	●	●	●
Astra-H	[9] 2009	Engine(default)	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[9] 2009	Engine(default)	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[9] 2009	Engine(default)	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[9] 2009	Engine(default)	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[9] 2009	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Engine(default)	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[9] 2009	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[9] 2009	Engine(default)	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[9] 2009	Engine(default)	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[9] 2009	Engine(default)	Interior Lighting	●	●	●	●
Astra-H	[9] 2009	Engine(default)	Wipers/Washer	●	●	●	●
Astra-H	[9] 2009	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Astra-H	[9] 2009	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Engine(default)	IMMO (Immobiliser)	●	●	●	●
Astra-H	[9] 2009	Engine(default)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[9] 2009	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[9] 2009	Engine(default)	Electrohydraulic HardTop	●	●	●	●
Astra-H	[9] 2009	Engine(default)	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[9] 2009	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Astra-H	[9] 2009	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[9] 2009	Engine(default)	PAS (Park Pilot)	●	●	●	●
Astra-H	[9] 2009	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[9] 2009	Engine(default)	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[9] 2009	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Engine(default)	PEPS (Open&Start)	●	●	●	●
Astra-H	[9] 2009	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[9] 2009	Engine(default)	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[9] 2009	Engine(default)	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	ECM (Engine Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	AF 40-6	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	AF17-4	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	AF 22-4	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	MTA (Easytronic)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●

Astra-H	[8] 2008	Z 17 DTR	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	Interior Lighting	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	Wipers/Washer	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	CDL (Central Door Lock)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	IMMO (Immobiliser)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	Electrohydraulic HardTop	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	PAS (Park Pilot)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	PEPS (Open&Start)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTR	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	ECM (Engine Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	AF 40-6	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	AF17-4	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	AF 22-4	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	MTA (Easytronic)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	Interior Lighting	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	Wipers/Washer	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	CDL (Central Door Lock)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	IMMO (Immobiliser)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	Electrohydraulic HardTop	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	PAS (Park Pilot)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	PEPS (Open&Start)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTJ	EHU (Entertainment Head Unit)	●	●	●	●

Astra-H	[8] 2008	Z 17 DTJ	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	ECM (Engine Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	AF 40-6	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	AF17-4	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	AF 22-4	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	MTA (Easytronic)	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	Interior Lighting	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	Wipers/Washer	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	CDL (Central Door Lock)	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	IMMO (Immobiliser)	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	Electrohydraulic HardTop	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	PAS (Park Pilot)	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	PEPS (Open&Start)	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[8] 2008	Z 16 LET	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	AF 40-6	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	AF17-4	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	AF 22-4	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	MTA (Easytronic)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	Interior Lighting	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	Wipers/Washer	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	Electrohydraulic HardTop	●	●	●	●

Astra-H	[8] 2008	Z 20 LEH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	PAS (Park Pilot)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	PEPS (Open&Start)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	AF 40-6	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	AF17-4	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	AF 22-4	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	MTA (Easytronic)	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	Interior Lighting	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	Wipers/Washer	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	PAS (Park Pilot)	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	PEPS (Open&Start)	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[8] 2008	Z 22 YH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	AF 40-6	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	AF17-4	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	AF 22-4	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	MTA (Easytronic)	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	CDC (Continuous Damping Control)	●	●	●	●

Astra-H	[8] 2008	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	Interior Lighting	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	Wipers/Washer	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	PAS (Park Pilot)	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	PEPS (Open&Start)	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[8] 2008	Z 18 XER	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	ECM (Engine Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	AF 40-6	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	AF17-4	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	AF 22-4	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	MTA (Easytronic)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	Interior Lighting	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	Wipers/Washer	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	CDL (Central Door Lock)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	IMMO (Immobiliser)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	Electrohydraulic HardTop	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	PAS (Park Pilot)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	PEPS (Open&Start)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTL	DIS (Info Display TID, BID, GID, CID)	●	●	●	●

Astra-H	[8] 2008	Z 16 XE1	ECM (Engine Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	AF 40-6	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	AF17-4	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	AF 22-4	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	MTA (Easytronic)	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	Interior Lighting	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	Wipers/Washer	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	CDL (Central Door Lock)	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	IMMO (Immobiliser)	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	Electrohydraulic HardTop	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	PAS (Park Pilot)	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	PEPS (Open&Start)	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[8] 2008	Z 16 XE1	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	AF 40-6	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	AF17-4	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	AF 22-4	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	Interior Lighting	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	Wipers/Washer	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	CDL (Central Door Lock)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	Electrohydraulic HardTop	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●

Astra-H	[8] 2008	Z 14 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	PAS (Park Pilot)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	PEPS (Open&Start)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEP	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	ECM (Engine Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	AF 40-6	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	AF17-4	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	AF 22-4	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	MTA (Easytronic)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	Interior Lighting	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	Wipers/Washer	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	CDL (Central Door Lock)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	IMMO (Immobiliser)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	Electrohydraulic HardTop	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	PAS (Park Pilot)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	PEPS (Open&Start)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[8] 2008	Z 14 XEL	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	AF 40-6	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	AF17-4	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	AF 22-4	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	MTA (Easytronic)	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●

Astra-H	[8] 2008	Z 12 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	Interior Lighting	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	Wipers/Washer	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	CDL (Central Door Lock)	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	Electrohydraulic HardTop	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	PAS (Park Pilot)	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	PEPS (Open&Start)	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[8] 2008	Z 12 XEP	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	AF 40-6	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	AF17-4	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	AF 22-4	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	Interior Lighting	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	Wipers/Washer	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[8] 2008	Y 13 DTH	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	ECM (Engine Control Module)	●	●	●	●

Astra-H	[8] 2008	Z 13 DTH	AF 40-6	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	AF17-4	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	AF 22-4	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	Interior Lighting	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	Wipers/Washer	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[8] 2008	Z 13 DTH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	AF 40-6	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	AF17-4	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	AF 22-4	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	MTA (Easytronic)	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	Interior Lighting	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	Wipers/Washer	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	CDL (Central Door Lock)	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	Electrohydraulic HardTop	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●

Astra-H	[8] 2008	Z 16 XEP	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	PAS (Park Pilot)	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	PEPS (Open&Start)	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[8] 2008	Z 16 XEP	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	AF 40-6	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	AF17-4	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	AF 22-4	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	MTA (Easytronic)	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	Interior Lighting	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	Wipers/Washer	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	PAS (Park Pilot)	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	PEPS (Open&Start)	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[8] 2008	Z 16 XER	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	AF 40-6	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	AF17-4	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	AF 22-4	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●

Astra-H	[8] 2008	Z 17 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	Interior Lighting	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	Wipers/Washer	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[8] 2008	Z 17 DTH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	AF 40-6	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	AF17-4	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	AF 22-4	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	MTA (Easytronic)	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	Interior Lighting	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	Wipers/Washer	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	CDL (Central Door Lock)	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	Electrohydraulic HardTop	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	PAS (Park Pilot)	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	PEPS (Open&Start)	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[8] 2008	Z 18 XE	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	ECM (Engine Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	AF 40-6	●	●	●	●

Astra-H	[8] 2008	Z 19 DT	AF17-4	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	AF 22-4	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	MTA (Easytronic)	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	Interior Lighting	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	Wipers/Washer	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	CDL (Central Door Lock)	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	IMMO (Immobiliser)	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	Electrohydraulic HardTop	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	PAS (Park Pilot)	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	PEPS (Open&Start)	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[8] 2008	Z 19 DT	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	AF 40-6	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	AF17-4	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	AF 22-4	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	Interior Lighting	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	Wipers/Washer	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	EHS (Electrical Heater System)	●	●	●	●

Astra-H	[8] 2008	Z 19 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	ECM (Engine Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	AF 40-6	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	AF17-4	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	AF 22-4	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	MTA (Easytronic)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	Interior Lighting	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	Wipers/Washer	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	CDL (Central Door Lock)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	IMMO (Immobiliser)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	Electrohydraulic HardTop	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	PAS (Park Pilot)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	PEPS (Open&Start)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[8] 2008	Z 19 DTJ	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	ECM (Engine Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	AF 40-6	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	AF17-4	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	AF 22-4	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	MTA (Easytronic)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	Exterior Lighting/Turn Indicator System	●	●	●	●

Astra-H	[8] 2008	Z 20 LEL	Interior Lighting	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	Wipers/Washer	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	CDL (Central Door Lock)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	IMMO (Immobiliser)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	Electrohydraulic HardTop	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	PAS (Park Pilot)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	PEPS (Open&Start)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[8] 2008	Z 20 LEL	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	AF 40-6	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	AF17-4	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	AF 22-4	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	MTA (Easytronic)	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	Interior Lighting	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	Wipers/Washer	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	PAS (Park Pilot)	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	PEPS (Open&Start)	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[8] 2008	Z 20 LER	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[8] 2008	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Astra-H	[8] 2008	Engine(default)	AF 40-6	●	●	●	●

Astra-H	[8] 2008	Engine(default)	AF17-4	●	●	●	●
Astra-H	[8] 2008	Engine(default)	AF 22-4	●	●	●	●
Astra-H	[8] 2008	Engine(default)	MTA (Easytronic)	●	●	●	●
Astra-H	[8] 2008	Engine(default)	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[8] 2008	Engine(default)	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[8] 2008	Engine(default)	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[8] 2008	Engine(default)	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[8] 2008	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Engine(default)	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[8] 2008	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[8] 2008	Engine(default)	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[8] 2008	Engine(default)	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[8] 2008	Engine(default)	Interior Lighting	●	●	●	●
Astra-H	[8] 2008	Engine(default)	Wipers/Washer	●	●	●	●
Astra-H	[8] 2008	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Astra-H	[8] 2008	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Engine(default)	IMMO (Immobiliser)	●	●	●	●
Astra-H	[8] 2008	Engine(default)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[8] 2008	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[8] 2008	Engine(default)	Electrohydraulic HardTop	●	●	●	●
Astra-H	[8] 2008	Engine(default)	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[8] 2008	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Astra-H	[8] 2008	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[8] 2008	Engine(default)	PAS (Park Pilot)	●	●	●	●
Astra-H	[8] 2008	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[8] 2008	Engine(default)	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[8] 2008	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Engine(default)	PEPS (Open&Start)	●	●	●	●
Astra-H	[8] 2008	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[8] 2008	Engine(default)	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[8] 2008	Engine(default)	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	ECM (Engine Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	AF 40-6	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	AF17-4	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	AF 22-4	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	MTA (Easytronic)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	Interior Lighting	●	●	●	●

Astra-H	[7] 2007	Z 17 DTR	Wipers/Washer	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	CDL (Central Door Lock)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	IMMO (Immobiliser)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	Electrohydraulic HardTop	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	PAS (Park Pilot)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	PEPS (Open&Start)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTR	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	ECM (Engine Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	AF 40-6	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	AF17-4	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	AF 22-4	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	MTA (Easytronic)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	Interior Lighting	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	Wipers/Washer	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	CDL (Central Door Lock)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	IMMO (Immobiliser)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	Electrohydraulic HardTop	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	PAS (Park Pilot)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	PEPS (Open&Start)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTJ	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	ECM (Engine Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	AF 40-6	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	AF17-4	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	AF 22-4	●	●	●	●

Astra-H	[7] 2007	Z 16 LET	MTA (Easytronic)	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	Interior Lighting	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	Wipers/Washer	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	CDL (Central Door Lock)	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	IMMO (Immobiliser)	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	Electrohydraulic HardTop	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	PAS (Park Pilot)	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	PEPS (Open&Start)	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[7] 2007	Z 16 LET	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	AF 40-6	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	AF17-4	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	AF 22-4	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	MTA (Easytronic)	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	Interior Lighting	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	Wipers/Washer	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	PAS (Park Pilot)	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●

Astra-H	[7] 2007	Z 22 YH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	PEPS (Open&Start)	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[7] 2007	Z 22 YH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	AF 40-6	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	AF17-4	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	AF 22-4	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	MTA (Easytronic)	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	Interior Lighting	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	Wipers/Washer	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	PAS (Park Pilot)	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	PEPS (Open&Start)	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[7] 2007	Z 18 XER	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	ECM (Engine Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	AF 40-6	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	AF17-4	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	AF 22-4	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	MTA (Easytronic)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	Interior Lighting	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	Wipers/Washer	●	●	●	●

Astra-H	[7] 2007	Z 17 DTL	CDL (Central Door Lock)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	IMMO (Immobiliser)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	Electrohydraulic HardTop	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	PAS (Park Pilot)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	PEPS (Open&Start)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTL	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	ECM (Engine Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	AF 40-6	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	AF17-4	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	AF 22-4	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	MTA (Easytronic)	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	Interior Lighting	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	Wipers/Washer	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	CDL (Central Door Lock)	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	IMMO (Immobiliser)	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	Electrohydraulic HardTop	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	PAS (Park Pilot)	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	PEPS (Open&Start)	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[7] 2007	Z 16 XE1	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	AF 40-6	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	AF17-4	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	AF 22-4	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	MTA (Easytronic)	●	●	●	●

Astra-H	[7] 2007	Z 14 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	Interior Lighting	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	Wipers/Washer	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	CDL (Central Door Lock)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	Electrohydraulic HardTop	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	PAS (Park Pilot)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	PEPS (Open&Start)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEP	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	ECM (Engine Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	AF 40-6	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	AF17-4	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	AF 22-4	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	MTA (Easytronic)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	Interior Lighting	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	Wipers/Washer	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	CDL (Central Door Lock)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	IMMO (Immobiliser)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	Electrohydraulic HardTop	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	PAS (Park Pilot)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	SLM (Shift Lever Module)	●	●	●	●

Astra-H	[7] 2007	Z 14 XEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	PEPS (Open&Start)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[7] 2007	Z 14 XEL	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	AF 40-6	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	AF17-4	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	AF 22-4	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	Interior Lighting	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	Wipers/Washer	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[7] 2007	Y 13 DTH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	AF 40-6	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	AF17-4	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	AF 22-4	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	MTA (Easytronic)	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	Interior Lighting	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	Wipers/Washer	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	CDL (Central Door Lock)	●	●	●	●

Astra-H	[7] 2007	Z 12 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	Electrohydraulic HardTop	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	PAS (Park Pilot)	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	PEPS (Open&Start)	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[7] 2007	Z 12 XEP	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	AF 40-6	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	AF17-4	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	AF 22-4	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	Interior Lighting	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	Wipers/Washer	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[7] 2007	Z 13 DTH	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	AF 40-6	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	AF17-4	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	AF 22-4	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	MTA (Easytronic)	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●

Astra-H	[7] 2007	Z 16 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	Interior Lighting	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	Wipers/Washer	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	CDL (Central Door Lock)	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	Electrohydraulic HardTop	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	PAS (Park Pilot)	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	PEPS (Open&Start)	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[7] 2007	Z 16 XEP	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	AF 40-6	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	AF17-4	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	AF 22-4	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	MTA (Easytronic)	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	Interior Lighting	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	Wipers/Washer	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	PAS (Park Pilot)	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●

Astra-H	[7] 2007	Z 16 XER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	PEPS (Open&Start)	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[7] 2007	Z 16 XER	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	AF 40-6	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	AF17-4	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	AF 22-4	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	Interior Lighting	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	Wipers/Washer	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[7] 2007	Z 17 DTH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	AF 40-6	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	AF17-4	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	AF 22-4	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	MTA (Easytronic)	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	Interior Lighting	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	Wipers/Washer	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	CDL (Central Door Lock)	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	IC (Instrument Cluster)	●	●	●	●

Astra-H	[7] 2007	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	Electrohydraulic HardTop	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	PAS (Park Pilot)	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	PEPS (Open&Start)	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[7] 2007	Z 18 XE	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	ECM (Engine Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	AF 40-6	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	AF17-4	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	AF 22-4	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	MTA (Easytronic)	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	Interior Lighting	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	Wipers/Washer	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	CDL (Central Door Lock)	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	IMMO (Immobiliser)	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	Electrohydraulic HardTop	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	PAS (Park Pilot)	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	PEPS (Open&Start)	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[7] 2007	Z 19 DT	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	AF 40-6	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	AF17-4	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	AF 22-4	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●

Astra-H	[7] 2007	Z 19 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	Interior Lighting	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	Wipers/Washer	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTH	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	ECM (Engine Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	AF 40-6	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	AF17-4	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	AF 22-4	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	MTA (Easytronic)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	Interior Lighting	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	Wipers/Washer	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	CDL (Central Door Lock)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	IMMO (Immobiliser)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	Electrohydraulic HardTop	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	PAS (Park Pilot)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	REC (Rear Electrical Centre)	●	●	●	●

Astra-H	[7] 2007	Z 19 DTJ	PEPS (Open&Start)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[7] 2007	Z 19 DTJ	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	ECM (Engine Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	AF 40-6	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	AF17-4	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	AF 22-4	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	MTA (Easytronic)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	Interior Lighting	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	Wipers/Washer	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	CDL (Central Door Lock)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	IMMO (Immobiliser)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	Electrohydraulic HardTop	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	PAS (Park Pilot)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	PEPS (Open&Start)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEL	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	AF 40-6	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	AF17-4	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	AF 22-4	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	MTA (Easytronic)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	Interior Lighting	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	Wipers/Washer	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	IMMO (Immobiliser)	●	●	●	●

Astra-H	[7] 2007	Z 20 LEH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	PAS (Park Pilot)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	PEPS (Open&Start)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[7] 2007	Z 20 LEH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	AF 40-6	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	AF17-4	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	AF 22-4	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	MTA (Easytronic)	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	Interior Lighting	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	Wipers/Washer	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	PAS (Park Pilot)	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	PEPS (Open&Start)	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[7] 2007	Z 20 LER	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[7] 2007	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Astra-H	[7] 2007	Engine(default)	AF 40-6	●	●	●	●
Astra-H	[7] 2007	Engine(default)	AF17-4	●	●	●	●
Astra-H	[7] 2007	Engine(default)	AF 22-4	●	●	●	●
Astra-H	[7] 2007	Engine(default)	MTA (Easytronic)	●	●	●	●
Astra-H	[7] 2007	Engine(default)	MTA (Easytronic Magneti Marelli)	●	●	●	●

Astra-H	[7] 2007	Engine(default)	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[7] 2007	Engine(default)	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[7] 2007	Engine(default)	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[7] 2007	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Engine(default)	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[7] 2007	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[7] 2007	Engine(default)	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[7] 2007	Engine(default)	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[7] 2007	Engine(default)	Interior Lighting	●	●	●	●
Astra-H	[7] 2007	Engine(default)	Wipers/Washer	●	●	●	●
Astra-H	[7] 2007	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Astra-H	[7] 2007	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Engine(default)	IMMO (Immobiliser)	●	●	●	●
Astra-H	[7] 2007	Engine(default)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[7] 2007	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[7] 2007	Engine(default)	Electrohydraulic HardTop	●	●	●	●
Astra-H	[7] 2007	Engine(default)	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[7] 2007	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Astra-H	[7] 2007	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[7] 2007	Engine(default)	PAS (Park Pilot)	●	●	●	●
Astra-H	[7] 2007	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[7] 2007	Engine(default)	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[7] 2007	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Engine(default)	PEPS (Open&Start)	●	●	●	●
Astra-H	[7] 2007	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[7] 2007	Engine(default)	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[7] 2007	Engine(default)	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	AF 40-6	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	AF17-4	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	AF 22-4	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	MTA (Easytronic)	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	Interior Lighting	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	Wipers/Washer	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●

Astra-H	[6] 2006	Z 18 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	PAS (Park Pilot)	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	PEPS (Open&Start)	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[6] 2006	Z 18 XER	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	AF 40-6	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	AF17-4	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	AF 22-4	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	Interior Lighting	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	Wipers/Washer	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[6] 2006	Y 13 DTH	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	AF 40-6	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	AF17-4	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	AF 22-4	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●

Astra-H	[6] 2006	Z 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	Interior Lighting	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	Wipers/Washer	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[6] 2006	Z 13 DTH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	AF 40-6	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	AF17-4	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	AF 22-4	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	MTA (Easytronic)	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	Interior Lighting	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	Wipers/Washer	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	CDL (Central Door Lock)	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	Electrohydraulic HardTop	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	PAS (Park Pilot)	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	PEPS (Open&Start)	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	UEC (Underhood Electrical Centre)	●	●	●	●

Astra-H	[6] 2006	Z 12 XEP	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[6] 2006	Z 12 XEP	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	ECM (Engine Control Module)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	AF 40-6	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	AF17-4	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	AF 22-4	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	MTA (Easytronic)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	Interior Lighting	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	Wipers/Washer	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	CDL (Central Door Lock)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	IMMO (Immobiliser)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	Electrohydraulic HardTop	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	PAS (Park Pilot)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	PEPS (Open&Start)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEL	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	AF 40-6	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	AF17-4	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	AF 22-4	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	Interior Lighting	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	Wipers/Washer	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	CDL (Central Door Lock)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	ATWS (Anti Theft Warning System)	●	●	●	●

Astra-H	[6] 2006	Z 14 XEP	Electrohydraulic HardTop	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	PAS (Park Pilot)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	PEPS (Open&Start)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[6] 2006	Z 14 XEP	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	AF 40-6	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	AF17-4	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	AF 22-4	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	MTA (Easytronic)	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	Interior Lighting	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	Wipers/Washer	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	CDL (Central Door Lock)	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	Electrohydraulic HardTop	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	PAS (Park Pilot)	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	PEPS (Open&Start)	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[6] 2006	Z 16 XEP	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	AF 40-6	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	AF17-4	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	AF 22-4	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	MTA (Easytronic)	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●

Astra-H	[6] 2006	Z 16 XER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	Interior Lighting	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	Wipers/Washer	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	PAS (Park Pilot)	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	PEPS (Open&Start)	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[6] 2006	Z 16 XER	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	ECM (Engine Control Module)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	AF 40-6	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	AF17-4	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	AF 22-4	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	MTA (Easytronic)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	Interior Lighting	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	Wipers/Washer	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	CDL (Central Door Lock)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	IMMO (Immobiliser)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	Electrohydraulic HardTop	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	PAS (Park Pilot)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	PEPS (Open&Start)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTL	EHU (Entertainment Head Unit)	●	●	●	●

Astra-H	[6] 2006	Z 17 DTL	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	AF 40-6	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	AF17-4	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	AF 22-4	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	Interior Lighting	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	Wipers/Washer	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[6] 2006	Z 17 DTH	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	AF 40-6	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	AF17-4	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	AF 22-4	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	MTA (Easytronic)	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	Interior Lighting	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	Wipers/Washer	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	CDL (Central Door Lock)	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	Electrohydraulic HardTop	●	●	●	●

Astra-H	[6] 2006	Z 18 XE	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	PAS (Park Pilot)	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	PEPS (Open&Start)	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[6] 2006	Z 18 XE	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	ECM (Engine Control Module)	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	AF 40-6	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	AF17-4	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	AF 22-4	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	MTA (Easytronic)	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	Interior Lighting	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	Wipers/Washer	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	CDL (Central Door Lock)	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	IMMO (Immobiliser)	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	Electrohydraulic HardTop	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	PAS (Park Pilot)	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	PEPS (Open&Start)	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[6] 2006	Z 19 DT	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	AF 40-6	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	AF17-4	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	AF 22-4	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	CDC (Continuous Damping Control)	●	●	●	●

Astra-H	[6] 2006	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	Interior Lighting	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	Wipers/Washer	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTH	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	ECM (Engine Control Module)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	AF 40-6	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	AF17-4	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	AF 22-4	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	MTA (Easytronic)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	Interior Lighting	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	Wipers/Washer	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	CDL (Central Door Lock)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	IMMO (Immobiliser)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	Electrohydraulic HardTop	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	PAS (Park Pilot)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	PEPS (Open&Start)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[6] 2006	Z 19 DTJ	DIS (Info Display TID, BID, GID, CID)	●	●	●	●

Astra-H	[6] 2006	Z 20 LEH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	AF 40-6	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	AF17-4	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	AF 22-4	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	MTA (Easytronic)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	Interior Lighting	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	Wipers/Washer	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	PAS (Park Pilot)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	PEPS (Open&Start)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEH	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	ECM (Engine Control Module)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	AF 40-6	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	AF17-4	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	AF 22-4	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	MTA (Easytronic)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	Interior Lighting	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	Wipers/Washer	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	CDL (Central Door Lock)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	IMMO (Immobiliser)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	Electrohydraulic HardTop	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	ECC/SAC (Electronic Climate Control)	●	●	●	●

Astra-H	[6] 2006	Z 20 LEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	PAS (Park Pilot)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	PEPS (Open&Start)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[6] 2006	Z 20 LEL	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	AF 40-6	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	AF17-4	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	AF 22-4	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	MTA (Easytronic)	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	Interior Lighting	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	Wipers/Washer	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	PAS (Park Pilot)	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	PEPS (Open&Start)	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[6] 2006	Z 20 LER	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[6] 2006	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Astra-H	[6] 2006	Engine(default)	AF 40-6	●	●	●	●
Astra-H	[6] 2006	Engine(default)	AF17-4	●	●	●	●
Astra-H	[6] 2006	Engine(default)	AF 22-4	●	●	●	●
Astra-H	[6] 2006	Engine(default)	MTA (Easytronic)	●	●	●	●
Astra-H	[6] 2006	Engine(default)	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[6] 2006	Engine(default)	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[6] 2006	Engine(default)	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[6] 2006	Engine(default)	EHPS (Electrohydraulic Power Steering)	●	●	●	●

Astra-H	[6] 2006	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Engine(default)	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[6] 2006	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[6] 2006	Engine(default)	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[6] 2006	Engine(default)	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[6] 2006	Engine(default)	Interior Lighting	●	●	●	●
Astra-H	[6] 2006	Engine(default)	Wipers/Washer	●	●	●	●
Astra-H	[6] 2006	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Astra-H	[6] 2006	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Engine(default)	IMMO (Immobiliser)	●	●	●	●
Astra-H	[6] 2006	Engine(default)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[6] 2006	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[6] 2006	Engine(default)	Electrohydraulic HardTop	●	●	●	●
Astra-H	[6] 2006	Engine(default)	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[6] 2006	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Astra-H	[6] 2006	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[6] 2006	Engine(default)	PAS (Park Pilot)	●	●	●	●
Astra-H	[6] 2006	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[6] 2006	Engine(default)	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[6] 2006	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Engine(default)	PEPS (Open&Start)	●	●	●	●
Astra-H	[6] 2006	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[6] 2006	Engine(default)	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[6] 2006	Engine(default)	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	ECM (Engine Control Module)	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	AF 40-6	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	AF17-4	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	AF 22-4	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	MTA (Easytronic)	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	Interior Lighting	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	Wipers/Washer	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	CDL (Central Door Lock)	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	IMMO (Immobiliser)	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	Electrohydraulic HardTop	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	IC (Instrument Cluster)	●	●	●	●

Astra-H	[5] 2005	Z 17 DTL	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	PAS (Park Pilot)	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	PEPS (Open&Start)	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[5] 2005	Z 17 DTL	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	AF 40-6	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	AF17-4	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	AF 22-4	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	Interior Lighting	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	Wipers/Washer	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	CDL (Central Door Lock)	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	Electrohydraulic HardTop	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	PAS (Park Pilot)	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	PEPS (Open&Start)	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[5] 2005	Z 14 XEP	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	AF 40-6	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	AF17-4	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	AF 22-4	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●

Astra-H	[5] 2005	Z 13 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	Interior Lighting	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	Wipers/Washer	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[5] 2005	Z 13 DTH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	AF 40-6	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	AF17-4	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	AF 22-4	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	MTA (Easytronic)	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	Interior Lighting	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	Wipers/Washer	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	CDL (Central Door Lock)	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	Electrohydraulic HardTop	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	PAS (Park Pilot)	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	PEPS (Open&Start)	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[5] 2005	Z 16 XEP	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	AF 40-6	●	●	●	●

Astra-H	[5] 2005	Z 16 XER	AF17-4	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	AF 22-4	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	MTA (Easytronic)	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	Interior Lighting	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	Wipers/Washer	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	PAS (Park Pilot)	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	PEPS (Open&Start)	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[5] 2005	Z 16 XER	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	AF 40-6	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	AF17-4	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	AF 22-4	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	MTA (Easytronic)	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	Interior Lighting	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	Wipers/Washer	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	CDL (Central Door Lock)	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	IC (Instrument Cluster)	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	Electrohydraulic HardTop	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	IC (Instrument Cluster)	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	EHS (Electrical Heater System)	●	●	●	●

Astra-H	[5] 2005	Z 18 XE	PAS (Park Pilot)	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	PEPS (Open&Start)	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[5] 2005	Z 18 XE	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	ECM (Engine Control Module)	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	AF 40-6	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	AF17-4	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	AF 22-4	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	MTA (Easytronic)	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	Interior Lighting	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	Wipers/Washer	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	CDL (Central Door Lock)	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	IMMO (Immobiliser)	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	Electrohydraulic HardTop	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	PAS (Park Pilot)	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	PEPS (Open&Start)	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[5] 2005	Z 19 DT	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	AF 40-6	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	AF17-4	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	AF 22-4	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	MTA (Easytronic)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●

Astra-H	[5] 2005	Z 19 DTH	Interior Lighting	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	Wipers/Washer	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	PAS (Park Pilot)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	PEPS (Open&Start)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTH	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	ECM (Engine Control Module)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	AF 40-6	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	AF17-4	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	AF 22-4	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	MTA (Easytronic)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	Interior Lighting	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	Wipers/Washer	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	CDL (Central Door Lock)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	IMMO (Immobiliser)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	Electrohydraulic HardTop	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	IC (Instrument Cluster)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	PAS (Park Pilot)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	PEPS (Open&Start)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[5] 2005	Z 19 DTJ	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	ECM (Engine Control Module)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	AF 40-6	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	AF17-4	●	●	●	●

Astra-H	[5] 2005	Z 20 LEL	AF 22-4	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	MTA (Easytronic)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	Interior Lighting	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	Wipers/Washer	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	CDL (Central Door Lock)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	IMMO (Immobiliser)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	Electrohydraulic HardTop	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	PAS (Park Pilot)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	PEPS (Open&Start)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEL	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	ECM (Engine Control Module)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	AF 40-6	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	AF17-4	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	AF 22-4	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	MTA (Easytronic)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	Interior Lighting	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	Wipers/Washer	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	CDL (Central Door Lock)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	IMMO (Immobiliser)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	Electrohydraulic HardTop	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	PAS (Park Pilot)	●	●	●	●

Astra-H	[5] 2005	Z 20 LEH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	PEPS (Open&Start)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[5] 2005	Z 20 LEH	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	AF 40-6	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	AF17-4	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	AF 22-4	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	MTA (Easytronic)	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	Interior Lighting	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	Wipers/Washer	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	PAS (Park Pilot)	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	PEPS (Open&Start)	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[5] 2005	Z 20 LER	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[5] 2005	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Astra-H	[5] 2005	Engine(default)	AF 40-6	●	●	●	●
Astra-H	[5] 2005	Engine(default)	AF17-4	●	●	●	●
Astra-H	[5] 2005	Engine(default)	AF 22-4	●	●	●	●
Astra-H	[5] 2005	Engine(default)	MTA (Easytronic)	●	●	●	●
Astra-H	[5] 2005	Engine(default)	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[5] 2005	Engine(default)	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[5] 2005	Engine(default)	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[5] 2005	Engine(default)	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[5] 2005	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[5] 2005	Engine(default)	CDC (Continuous Damping Control)	●	●	●	●

Astra-H	[5] 2005	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[5] 2005	Engine(default)	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[5] 2005	Engine(default)	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[5] 2005	Engine(default)	Interior Lighting	●	●	●	●
Astra-H	[5] 2005	Engine(default)	Wipers/Washer	●	●	●	●
Astra-H	[5] 2005	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Astra-H	[5] 2005	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Astra-H	[5] 2005	Engine(default)	IMMO (Immobiliser)	●	●	●	●
Astra-H	[5] 2005	Engine(default)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[5] 2005	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[5] 2005	Engine(default)	Electrohydraulic HardTop	●	●	●	●
Astra-H	[5] 2005	Engine(default)	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[5] 2005	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Astra-H	[5] 2005	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[5] 2005	Engine(default)	PAS (Park Pilot)	●	●	●	●
Astra-H	[5] 2005	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[5] 2005	Engine(default)	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[5] 2005	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Engine(default)	PEPS (Open&Start)	●	●	●	●
Astra-H	[5] 2005	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[5] 2005	Engine(default)	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[5] 2005	Engine(default)	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	ECM (Engine Control Module)	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	AF 40-6	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	AF17-4	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	AF 22-4	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	MTA (Easytronic)	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	Interior Lighting	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	Wipers/Washer	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	CDL (Central Door Lock)	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	IMMO (Immobiliser)	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	Electrohydraulic HardTop	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	PAS (Park Pilot)	●	●	●	●

Astra-H	[4] 2004	Z 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	PEPS (Open&Start)	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[4] 2004	Z 17 DTL	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	AF 40-6	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	AF17-4	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	AF 22-4	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	MTA (Easytronic)	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	Interior Lighting	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	Wipers/Washer	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	PAS (Park Pilot)	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	PEPS (Open&Start)	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[4] 2004	Z 16 XER	DIS (Info Display TID,BID,GID,CID)	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	AF 40-6	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	AF17-4	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	AF 22-4	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	MTA (Easytronic)	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	Interior Lighting	●	●	●	●

Astra-H	[4] 2004	Z 16 XEP	Wipers/Washer	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	CDL (Central Door Lock)	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	Electrohydraulic HardTop	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	PAS (Park Pilot)	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	PEPS (Open&Start)	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[4] 2004	Z 16 XEP	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	AF 40-6	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	AF17-4	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	AF 22-4	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	MTA (Easytronic)	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	Interior Lighting	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	Wipers/Washer	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	CDL (Central Door Lock)	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	IC (Instrument Cluster)	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	Electrohydraulic HardTop	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	IC (Instrument Cluster)	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	PAS (Park Pilot)	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	PEPS (Open&Start)	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[4] 2004	Z 18 XE	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	ECM (Engine Control Module)	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	AF 40-6	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	AF17-4	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	AF 22-4	●	●	●	●

Astra-H	[4] 2004	Z 19 DT	MTA (Easytronic)	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	Interior Lighting	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	Wipers/Washer	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	CDL (Central Door Lock)	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	IMMO (Immobiliser)	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	Electrohydraulic HardTop	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	PAS (Park Pilot)	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	PEPS (Open&Start)	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[4] 2004	Z 19 DT	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	ECM (Engine Control Module)	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	AF 40-6	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	AF17-4	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	AF 22-4	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	MTA (Easytronic)	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	Interior Lighting	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	Wipers/Washer	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	CDL (Central Door Lock)	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	IMMO (Immobiliser)	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	Electrohydraulic HardTop	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	IC (Instrument Cluster)	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	PAS (Park Pilot)	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●

Astra-H	[4] 2004	Z 20 LEL	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	PEPS (Open&Start)	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[4] 2004	Z 20 LEL	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	ECM (Engine Control Module)	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	AF 40-6	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	AF17-4	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	AF 22-4	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	MTA (Easytronic)	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	Interior Lighting	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	Wipers/Washer	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	CDL (Central Door Lock)	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	IMMO (Immobiliser)	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	Electrohydraulic HardTop	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	PAS (Park Pilot)	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	PEPS (Open&Start)	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[4] 2004	Z 20 LER	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-H	[4] 2004	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Astra-H	[4] 2004	Engine(default)	AF 40-6	●	●	●	●
Astra-H	[4] 2004	Engine(default)	AF17-4	●	●	●	●
Astra-H	[4] 2004	Engine(default)	AF 22-4	●	●	●	●
Astra-H	[4] 2004	Engine(default)	MTA (Easytronic)	●	●	●	●
Astra-H	[4] 2004	Engine(default)	MTA (Easytronic Magneti Marelli)	●	●	●	●
Astra-H	[4] 2004	Engine(default)	TPM (Tyre Pressure Monitoring)	●	●	●	●
Astra-H	[4] 2004	Engine(default)	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Astra-H	[4] 2004	Engine(default)	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Astra-H	[4] 2004	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Astra-H	[4] 2004	Engine(default)	CDC (Continuous Damping Control)	●	●	●	●
Astra-H	[4] 2004	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●

Astra-H	[4] 2004	Engine(default)	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Astra-H	[4] 2004	Engine(default)	Exterior Lighting/Turn Indicator System	●	●	●	●
Astra-H	[4] 2004	Engine(default)	Interior Lighting	●	●	●	●
Astra-H	[4] 2004	Engine(default)	Wipers/Washer	●	●	●	●
Astra-H	[4] 2004	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Astra-H	[4] 2004	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Astra-H	[4] 2004	Engine(default)	IMMO (Immobiliser)	●	●	●	●
Astra-H	[4] 2004	Engine(default)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-H	[4] 2004	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Astra-H	[4] 2004	Engine(default)	Electrohydraulic HardTop	●	●	●	●
Astra-H	[4] 2004	Engine(default)	ECC/SAC (Electronic Climate Control)	●	●	●	●
Astra-H	[4] 2004	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Astra-H	[4] 2004	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Astra-H	[4] 2004	Engine(default)	PAS (Park Pilot)	●	●	●	●
Astra-H	[4] 2004	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-H	[4] 2004	Engine(default)	SLM (Shift Lever Module)	●	●	●	●
Astra-H	[4] 2004	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[4] 2004	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Astra-H	[4] 2004	Engine(default)	PEPS (Open&Start)	●	●	●	●
Astra-H	[4] 2004	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Astra-H	[4] 2004	Engine(default)	EHU (Entertainment Head Unit)	●	●	●	●
Astra-H	[4] 2004	Engine(default)	DIS (Info Display TID, BID, GID, CID)	●	●	●	●
Astra-J	[G] 2016	1.3L (LSF)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[G] 2016	1.3L (LSF)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[G] 2016	1.3L (LSF)	TCM (Transmission Control Module) - T76 (MH7 M8 M89 MHH MHI MHK MHB MHC MNP MNR)	●	●	●	●
Astra-J	[G] 2016	1.3L (LSF)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[G] 2016	1.3L (LSF)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[G] 2016	1.3L (LSF)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[G] 2016	1.3L (LSF)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[G] 2016	1.3L (LSF)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[G] 2016	1.3L (LSF)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[G] 2016	1.3L (LSF)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[G] 2016	1.3L (LSF)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[G] 2016	1.3L (LSF)	BCM (Body Control Module)	●	●	●	●
Astra-J	[G] 2016	1.3L (LSF)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[G] 2016	1.3L (LSF)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[G] 2016	1.3L (LSF)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[G] 2016	1.3L (LSF)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[G] 2016	1.3L (LSF)	Radio	●	●	●	●
Astra-J	[G] 2016	1.3L (LSF)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[G] 2016	1.3L (LSF)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Astra-J	[G] 2016	1.3L (LSF)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[G] 2016	1.3L (LSF)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[G] 2016	1.3L (LSF)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[G] 2016	1.3L (LSF)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[G] 2016	1.4L (LDD) with Sart/Stop System(KI9)	ECM (Engine Control Module)	●	●	●	●

Astra-J	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNP MNR)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	Radio	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)witho ut Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)witho ut Sart/Stop System(KL9)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)witho ut Sart/Stop System(KL9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNP MNR)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)witho ut Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)witho ut Sart/Stop System(KL9)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)witho ut Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●

Astra-J	[G] 2016	1.4L(LDD)without Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)without Sart/Stop System(KL9)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)without Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)without Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)without Sart/Stop System(KL9)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)without Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)without Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)without Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)without Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)without Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)without Sart/Stop System(KL9)	Radio	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)without Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)without Sart/Stop System(KL9)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)without Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)without Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)without Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L(LDD)without Sart/Stop System(KL9)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[G] 2016	1.4L (LUJ)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L (LUJ)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[G] 2016	1.4L (LUJ)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNP MNR)	●	●	●	●
Astra-J	[G] 2016	1.4L (LUJ)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L (LUJ)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L (LUJ)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L (LUJ)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[G] 2016	1.4L (LUJ)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L (LUJ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[G] 2016	1.4L (LUJ)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[G] 2016	1.4L (LUJ)	BCM (Body Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[G] 2016	1.4L (LUJ)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[G] 2016	1.4L (LUJ)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L (LUJ)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[G] 2016	1.4L (LUJ)	Radio	●	●	●	●
Astra-J	[G] 2016	1.4L (LUJ)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L (LUJ)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L (LUJ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●

Astra-J	[G] 2016	1.4L (LUJ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[G] 2016	1.4L (LUJ)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) with Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) with Sart/Stop System(KL9)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) with Sart/Stop System(KL9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNP MNR)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) with Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) with Sart/Stop System(KL9)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) with Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) with Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) with Sart/Stop System(KL9)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) with Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) with Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) with Sart/Stop System(KL9)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) with Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) with Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) with Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) with Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) with Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) with Sart/Stop System(KL9)	Radio	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) with Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) with Sart/Stop System(KL9)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) with Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) with Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) with Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) with Sart/Stop System(KL9)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) without Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) without Sart/Stop System(KL9)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) without Sart/Stop System(KL9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNP MNR)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) without Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●

Astra-J	[G] 2016	1.6L (LDE) without Sart/Stop System(KL9)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) without Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) without Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) without Sart/Stop System(KL9)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) without Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) without Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) without Sart/Stop System(KL9)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) without Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) without Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) without Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) without Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) without Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) without Sart/Stop System(KL9)	Radio	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) without Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) without Sart/Stop System(KL9)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) without Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) without Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) without Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LDE) without Sart/Stop System(KL9)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVL)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVL)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVL)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNP MNR)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVL)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVL)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVL)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVL)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVL)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVL)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVL)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVL)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVL)	BCM (Body Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVL)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVL)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVL)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVL)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVL)	Radio	●	●	●	●

Astra-J	[G] 2016	1.6L (LVL)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVL)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVL)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVL)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVL)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVL)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVM)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVM)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVM)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNP MNR)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVM)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVM)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVM)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVM)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVM)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVM)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVM)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVM)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVM)	BCM (Body Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVM)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVM)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVM)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVM)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVM)	Radio	●	●	●	●
Astra-J	[G] 2016	1.6L (LVM)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVM)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVM)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVM)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVM)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVM)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVC)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVC)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVC)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNP MNR)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVC)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVC)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVC)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVC)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVC)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVC)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVC)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVC)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVC)	BCM (Body Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVC)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVC)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVC)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVC)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVC)	Radio	●	●	●	●
Astra-J	[G] 2016	1.6L (LVC)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVC)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVC)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVC)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[G] 2016	1.6L (LVC)	PACM (Parking Assist Control Module)	●	●	●	●

Astra-J	[G] 2016	1.6L (LWC)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[G] 2016	1.8L (2H0)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[G] 2016	1.8L (2H0)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[G] 2016	1.8L (2H0)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNP MNR)	●	●	●	●
Astra-J	[G] 2016	1.8L (2H0)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[G] 2016	1.8L (2H0)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[G] 2016	1.8L (2H0)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[G] 2016	1.8L (2H0)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[G] 2016	1.8L (2H0)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[G] 2016	1.8L (2H0)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[G] 2016	1.8L (2H0)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[G] 2016	1.8L (2H0)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[G] 2016	1.8L (2H0)	BCM (Body Control Module)	●	●	●	●
Astra-J	[G] 2016	1.8L (2H0)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[G] 2016	1.8L (2H0)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[G] 2016	1.8L (2H0)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[G] 2016	1.8L (2H0)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[G] 2016	1.8L (2H0)	Radio	●	●	●	●
Astra-J	[G] 2016	1.8L (2H0)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[G] 2016	1.8L (2H0)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Astra-J	[G] 2016	1.8L (2H0)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[G] 2016	1.8L (2H0)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[G] 2016	1.8L (2H0)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[G] 2016	1.8L (2H0)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LBX)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LBX)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[G] 2016	2.0L (LBX)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNP MNR)	●	●	●	●
Astra-J	[G] 2016	2.0L (LBX)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LBX)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LBX)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LBX)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LBX)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LBX)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LBX)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LBX)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[G] 2016	2.0L (LBX)	BCM (Body Control Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LBX)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LBX)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[G] 2016	2.0L (LBX)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LBX)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LBX)	Radio	●	●	●	●
Astra-J	[G] 2016	2.0L (LBX)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LBX)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LBX)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[G] 2016	2.0L (LBX)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LBX)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LBX)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LHU)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LHU)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[G] 2016	2.0L (LHU)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNP MNR)	●	●	●	●
Astra-J	[G] 2016	2.0L (LHU)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LHU)	CCM (Chassis Control Module)	●	●	●	●

Astra-J	[G] 2016	2.0L (LHU)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LHU)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LHU)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LHU)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LHU)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LHU)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[G] 2016	2.0L (LHU)	BCM (Body Control Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LHU)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LHU)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[G] 2016	2.0L (LHU)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LHU)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LHU)	Radio	●	●	●	●
Astra-J	[G] 2016	2.0L (LHU)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LHU)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LHU)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[G] 2016	2.0L (LHU)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LHU)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[G] 2016	2.0L (LHU)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[F] 2015	1.3L (LSF)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[F] 2015	1.3L (LSF)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[F] 2015	1.3L (LSF)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[F] 2015	1.3L (LSF)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[F] 2015	1.3L (LSF)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[F] 2015	1.3L (LSF)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	1.3L (LSF)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[F] 2015	1.3L (LSF)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	1.3L (LSF)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[F] 2015	1.3L (LSF)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[F] 2015	1.3L (LSF)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[F] 2015	1.3L (LSF)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[F] 2015	1.3L (LSF)	BCM (Body Control Module)	●	●	●	●
Astra-J	[F] 2015	1.3L (LSF)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[F] 2015	1.3L (LSF)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[F] 2015	1.3L (LSF)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[F] 2015	1.3L (LSF)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[F] 2015	1.3L (LSF)	Radio	●	●	●	●
Astra-J	[F] 2015	1.3L (LSF)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[F] 2015	1.3L (LSF)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[F] 2015	1.3L (LSF)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[F] 2015	1.3L (LSF)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[F] 2015	1.3L (LSF)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[F] 2015	1.3L (LSF)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[F] 2015	1.3L (LSF)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[F] 2015	1.4L (LDD) with Sart/Stop System (KL9)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L (LDD) with Sart/Stop System (KL9)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[F] 2015	1.4L (LDD) with Sart/Stop System (KL9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[F] 2015	1.4L (LDD) with Sart/Stop System (KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L (LDD) with Sart/Stop System (KL9)	CCM (Chassis Control Module)	●	●	●	●

Astra-J	[F] 2015	1.4L(LDD)with Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)with Sart/Stop System(KL9)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)with Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)with Sart/Stop System(KL9)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)with Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)with Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)with Sart/Stop System(KL9)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)with Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)with Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)with Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)with Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)with Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)with Sart/Stop System(KL9)	Radio	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)with Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)with Sart/Stop System(KL9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)with Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)with Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)with Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)with Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)with Sart/Stop System(KL9)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)witho ut Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)witho ut Sart/Stop System(KL9)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)witho ut Sart/Stop System(KL9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)witho ut Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)witho ut Sart/Stop System(KL9)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)witho ut Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)witho ut Sart/Stop System(KL9)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)witho ut Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●

Astra-J	[F] 2015	1.4L(LDD)without Sart/Stop System(KL9)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)without Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)without Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)without Sart/Stop System(KL9)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)without Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)without Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)without Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)without Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)without Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)without Sart/Stop System(KL9)	Radio	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)without Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)without Sart/Stop System(KL9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)without Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)without Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)without Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)without Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L(LDD)without Sart/Stop System(KL9)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[F] 2015	1.4L (LUJ)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L (LUJ)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[F] 2015	1.4L (LUJ)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[F] 2015	1.4L (LUJ)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L (LUJ)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L (LUJ)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L (LUJ)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L (LUJ)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[F] 2015	1.4L (LUJ)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L (LUJ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[F] 2015	1.4L (LUJ)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[F] 2015	1.4L (LUJ)	BCM (Body Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[F] 2015	1.4L (LUJ)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[F] 2015	1.4L (LUJ)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L (LUJ)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[F] 2015	1.4L (LUJ)	Radio	●	●	●	●
Astra-J	[F] 2015	1.4L (LUJ)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L (LUJ)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[F] 2015	1.4L (LUJ)	MTCM (Mobile Telephone Control Module)	●	●	●	●

Astra-J	[F] 2015	1.4L (LUJ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[F] 2015	1.4L (LUJ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[F] 2015	1.4L (LUJ)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LDE) with Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LDE) with Sart/Stop System(KL9)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[F] 2015	1.6L (LDE) with Sart/Stop System(KL9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[F] 2015	1.6L (LDE) with Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LDE) with Sart/Stop System(KL9)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LDE) with Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LDE) with Sart/Stop System(KL9)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LDE) with Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LDE) with Sart/Stop System(KL9)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LDE) with Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LDE) with Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LDE) with Sart/Stop System(KL9)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[F] 2015	1.6L (LDE) with Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LDE) with Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LDE) with Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[F] 2015	1.6L (LDE) with Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LDE) with Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LDE) with Sart/Stop System(KL9)	Radio	●	●	●	●
Astra-J	[F] 2015	1.6L (LDE) with Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LDE) with Sart/Stop System(KL9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LDE) with Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LDE) with Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[F] 2015	1.6L (LDE) with Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LDE) with Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LDE) with Sart/Stop System(KL9)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LDE) without Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●

Astra-J	[F] 2015	1.6L(LDE)without Sart/Stop System(KL9)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[F] 2015	1.6L(LDE)without Sart/Stop System(KL9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[F] 2015	1.6L(LDE)without Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L(LDE)without Sart/Stop System(KL9)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L(LDE)without Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L(LDE)without Sart/Stop System(KL9)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L(LDE)without Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L(LDE)without Sart/Stop System(KL9)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[F] 2015	1.6L(LDE)without Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L(LDE)without Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[F] 2015	1.6L(LDE)without Sart/Stop System(KL9)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[F] 2015	1.6L(LDE)without Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L(LDE)without Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[F] 2015	1.6L(LDE)without Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[F] 2015	1.6L(LDE)without Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L(LDE)without Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[F] 2015	1.6L(LDE)without Sart/Stop System(KL9)	Radio	●	●	●	●
Astra-J	[F] 2015	1.6L(LDE)without Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L(LDE)without Sart/Stop System(KL9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[F] 2015	1.6L(LDE)without Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L(LDE)without Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[F] 2015	1.6L(LDE)without Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L(LDE)without Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L(LDE)without Sart/Stop System(KL9)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LLU)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LLU)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[F] 2015	1.6L (LLU)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[F] 2015	1.6L (LLU)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LLU)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LLU)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LLU)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LLU)	PBCM (Parking Brake Control Module)	●	●	●	●

Astra-J	[F] 2015	1.6L (LLU)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LLU)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LLU)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LLU)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[F] 2015	1.6L (LLU)	BCM (Body Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LLU)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LLU)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[F] 2015	1.6L (LLU)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LLU)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LLU)	Radio	●	●	●	●
Astra-J	[F] 2015	1.6L (LLU)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LLU)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LLU)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LLU)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[F] 2015	1.6L (LLU)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LLU)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LLU)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVL)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVL)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVL)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVL)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVL)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVL)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVL)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVL)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVL)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVL)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVL)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVL)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVL)	BCM (Body Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVL)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVL)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVL)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVL)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVL)	Radio	●	●	●	●
Astra-J	[F] 2015	1.6L (LVL)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVL)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVL)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVL)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVL)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVL)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVL)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVM)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVM)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVM)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVM)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVM)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVM)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVM)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVM)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVM)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVM)	PSCM (Power Steering Control Module)	●	●	●	●

Astra-J	[F] 2015	1.6L (LVM)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVM)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVM)	BCM (Body Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVM)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVM)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVM)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVM)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVM)	Radio	●	●	●	●
Astra-J	[F] 2015	1.6L (LVM)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVM)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVM)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVM)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVM)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVM)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVM)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVP)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVP)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVP)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVP)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVP)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVP)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVP)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVP)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVP)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVP)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVP)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVP)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVP)	BCM (Body Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVP)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVP)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVP)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVP)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVP)	Radio	●	●	●	●
Astra-J	[F] 2015	1.6L (LVP)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVP)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVP)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVP)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVP)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVP)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LVP)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LWC)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LWC)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[F] 2015	1.6L (LWC)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[F] 2015	1.6L (LWC)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LWC)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LWC)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LWC)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LWC)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LWC)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LWC)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LWC)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LWC)	ESC (Electronic Suspension Control)	●	●	●	●

Astra-J	[F] 2015	1.6L (LWC)	BCM (Body Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LWC)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LWC)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[F] 2015	1.6L (LWC)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LWC)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LWC)	Radio	●	●	●	●
Astra-J	[F] 2015	1.6L (LWC)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LWC)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LWC)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LWC)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[F] 2015	1.6L (LWC)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LWC)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[F] 2015	1.6L (LWC)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LKR)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LKR)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[F] 2015	1.7L (LKR)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[F] 2015	1.7L (LKR)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LKR)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LKR)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LKR)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LKR)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LKR)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LKR)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LKR)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LKR)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[F] 2015	1.7L (LKR)	BCM (Body Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LKR)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LKR)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[F] 2015	1.7L (LKR)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LKR)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LKR)	Radio	●	●	●	●
Astra-J	[F] 2015	1.7L (LKR)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LKR)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LKR)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LKR)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[F] 2015	1.7L (LKR)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LKR)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LKR)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUD)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUD)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUD)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUD)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUD)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUD)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUD)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUD)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUD)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUD)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUD)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUD)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUD)	BCM (Body Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUD)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●

Astra-J	[F] 2015	1.7L (LUD)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUD)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUD)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUD)	Radio	●	●	●	●
Astra-J	[F] 2015	1.7L (LUD)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUD)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUD)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUD)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUD)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUD)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUD)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUE)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUE)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUE)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUE)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUE)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUE)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUE)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUE)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUE)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUE)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUE)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUE)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUE)	BCM (Body Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUE)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUE)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUE)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUE)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUE)	Radio	●	●	●	●
Astra-J	[F] 2015	1.7L (LUE)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUE)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUE)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUE)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUE)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUE)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[F] 2015	1.7L (LUE)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[F] 2015	1.8L (2H0)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[F] 2015	1.8L (2H0)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[F] 2015	1.8L (2H0)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[F] 2015	1.8L (2H0)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[F] 2015	1.8L (2H0)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[F] 2015	1.8L (2H0)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	1.8L (2H0)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[F] 2015	1.8L (2H0)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	1.8L (2H0)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[F] 2015	1.8L (2H0)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[F] 2015	1.8L (2H0)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[F] 2015	1.8L (2H0)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[F] 2015	1.8L (2H0)	BCM (Body Control Module)	●	●	●	●
Astra-J	[F] 2015	1.8L (2H0)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[F] 2015	1.8L (2H0)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[F] 2015	1.8L (2H0)	HCM (Headlamp Control Module)	●	●	●	●

Astra-J	[F] 2015	1.8L (2H0)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[F] 2015	1.8L (2H0)	Radio	●	●	●	●
Astra-J	[F] 2015	1.8L (2H0)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[F] 2015	1.8L (2H0)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[F] 2015	1.8L (2H0)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[F] 2015	1.8L (2H0)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[F] 2015	1.8L (2H0)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[F] 2015	1.8L (2H0)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[F] 2015	1.8L (2H0)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBS)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBS)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBS)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBS)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBS)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBS)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBS)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBS)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBS)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBS)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBS)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBS)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBS)	BCM (Body Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBS)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBS)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBS)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBS)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBS)	Radio	●	●	●	●
Astra-J	[F] 2015	2.0L (LBS)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBS)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBS)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBS)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBS)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBS)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBS)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBX)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBX)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBX)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBX)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBX)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBX)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBX)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBX)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBX)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBX)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBX)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBX)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBX)	BCM (Body Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBX)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBX)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBX)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBX)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBX)	Radio	●	●	●	●

Astra-J	[F] 2015	2.0L (LBX)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBX)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBX)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBX)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBX)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBX)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBX)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBY)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBY)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBY)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBY)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBY)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBY)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBY)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBY)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBY)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBY)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBY)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBY)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBY)	BCM (Body Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBY)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBY)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBY)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBY)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBY)	Radio	●	●	●	●
Astra-J	[F] 2015	2.0L (LBY)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBY)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBY)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBY)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBY)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBY)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LBY)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LHU)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LHU)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[F] 2015	2.0L (LHU)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[F] 2015	2.0L (LHU)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LHU)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LHU)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LHU)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LHU)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LHU)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LHU)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LHU)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LHU)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[F] 2015	2.0L (LHU)	BCM (Body Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LHU)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LHU)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[F] 2015	2.0L (LHU)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LHU)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LHU)	Radio	●	●	●	●
Astra-J	[F] 2015	2.0L (LHU)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LHU)	MPIM (Multimedia Player Interface Module)	●	●	●	●

Astra-J	[F] 2015	2.0L (LHU)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LHU)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[F] 2015	2.0L (LHU)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LHU)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[F] 2015	2.0L (LHU)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[E] 2014	1.3L (LSF)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[E] 2014	1.3L (LSF)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[E] 2014	1.3L (LSF)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[E] 2014	1.3L (LSF)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[E] 2014	1.3L (LSF)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[E] 2014	1.3L (LSF)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	1.3L (LSF)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[E] 2014	1.3L (LSF)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	1.3L (LSF)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[E] 2014	1.3L (LSF)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[E] 2014	1.3L (LSF)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[E] 2014	1.3L (LSF)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[E] 2014	1.3L (LSF)	BCM (Body Control Module)	●	●	●	●
Astra-J	[E] 2014	1.3L (LSF)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[E] 2014	1.3L (LSF)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[E] 2014	1.3L (LSF)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[E] 2014	1.3L (LSF)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[E] 2014	1.3L (LSF)	Radio	●	●	●	●
Astra-J	[E] 2014	1.3L (LSF)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[E] 2014	1.3L (LSF)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[E] 2014	1.3L (LSF)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[E] 2014	1.3L (LSF)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[E] 2014	1.3L (LSF)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[E] 2014	1.3L (LSF)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[E] 2014	1.3L (LSF)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[E] 2014	1.4L (LDD) without Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[E] 2014	1.4L (LDD) without Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[E] 2014	1.4L (LDD) without Sart/Stop System(KL9)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[E] 2014	1.4L (LDD) without Sart/Stop System(KL9)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[E] 2014	1.4L (LDD) without Sart/Stop System(KL9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[E] 2014	1.4L (LDD) without Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	1.4L (LDD) without Sart/Stop System(KL9)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[E] 2014	1.4L (LDD) without Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	1.4L (LDD) without Sart/Stop System(KL9)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[E] 2014	1.4L (LDD) without Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[E] 2014	1.4L (LDD) without Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[E] 2014	1.4L (LDD) without Sart/Stop System(KL9)	ESC (Electronic Suspension Control)	●	●	●	●

Astra-J	[E] 2014	1.4L(LDD)without Sart/Stop System(KI.9)	BCM (Body Control Module)	●	●	●	●
Astra-J	[E] 2014	1.4L(LDD)without Sart/Stop System(KI.9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[E] 2014	1.4L(LDD)without Sart/Stop System(KI.9)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[E] 2014	1.4L(LDD)without Sart/Stop System(KI.9)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[E] 2014	1.4L(LDD)without Sart/Stop System(KI.9)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[E] 2014	1.4L(LDD)without Sart/Stop System(KI.9)	Radio	●	●	●	●
Astra-J	[E] 2014	1.4L(LDD)without Sart/Stop System(KI.9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[E] 2014	1.4L(LDD)without Sart/Stop System(KI.9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[E] 2014	1.4L(LDD)without Sart/Stop System(KI.9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[E] 2014	1.4L(LDD)without Sart/Stop System(KI.9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[E] 2014	1.4L(LDD)without Sart/Stop System(KI.9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[E] 2014	1.4L(LDD)without Sart/Stop System(KI.9)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[E] 2014	1.4L(LDD)without Sart/Stop System(KI.9)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[E] 2014	1.4L (LUJ)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[E] 2014	1.4L (LUJ)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[E] 2014	1.4L (LUJ)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[E] 2014	1.4L (LUJ)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[E] 2014	1.4L (LUJ)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[E] 2014	1.4L (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	1.4L (LUJ)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[E] 2014	1.4L (LUJ)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	1.4L (LUJ)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[E] 2014	1.4L (LUJ)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[E] 2014	1.4L (LUJ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[E] 2014	1.4L (LUJ)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[E] 2014	1.4L (LUJ)	BCM (Body Control Module)	●	●	●	●
Astra-J	[E] 2014	1.4L (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[E] 2014	1.4L (LUJ)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[E] 2014	1.4L (LUJ)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[E] 2014	1.4L (LUJ)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[E] 2014	1.4L (LUJ)	Radio	●	●	●	●
Astra-J	[E] 2014	1.4L (LUJ)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[E] 2014	1.4L (LUJ)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[E] 2014	1.4L (LUJ)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[E] 2014	1.4L (LUJ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[E] 2014	1.4L (LUJ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[E] 2014	1.4L (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[E] 2014	1.4L (LUJ)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[E] 2014	1.6L(LDE)with Sart/Stop System(KI.9)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L(LDE)with Sart/Stop System(KI.9)	FICM (Fuel Injector Control Module)	●	●	●	●

Astra-J	[E] 2014	1.6L(LDE)with Sart/Stop System(KL9)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L(LDE)with Sart/Stop System(KL9)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[E] 2014	1.6L(LDE)with Sart/Stop System(KL9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[E] 2014	1.6L(LDE)with Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L(LDE)with Sart/Stop System(KL9)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L(LDE)with Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L(LDE)with Sart/Stop System(KL9)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[E] 2014	1.6L(LDE)with Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L(LDE)with Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[E] 2014	1.6L(LDE)with Sart/Stop System(KL9)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[E] 2014	1.6L(LDE)with Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L(LDE)with Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[E] 2014	1.6L(LDE)with Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[E] 2014	1.6L(LDE)with Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L(LDE)with Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[E] 2014	1.6L(LDE)with Sart/Stop System(KL9)	Radio	●	●	●	●
Astra-J	[E] 2014	1.6L(LDE)with Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L(LDE)with Sart/Stop System(KL9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[E] 2014	1.6L(LDE)with Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L(LDE)with Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[E] 2014	1.6L(LDE)with Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L(LDE)with Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L(LDE)with Sart/Stop System(KL9)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[E] 2014	1.6L(LDE)witho ut Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L(LDE)witho ut Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L(LDE)witho ut Sart/Stop System(KL9)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L(LDE)witho ut Sart/Stop System(KL9)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[E] 2014	1.6L(LDE)witho ut Sart/Stop System(KL9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●

Astra-J	[E] 2014	1.6L (LDE) without Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LDE) without Sart/Stop System(KL9)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LDE) without Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LDE) without Sart/Stop System(KL9)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LDE) without Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LDE) without Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LDE) without Sart/Stop System(KL9)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[E] 2014	1.6L (LDE) without Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LDE) without Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LDE) without Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[E] 2014	1.6L (LDE) without Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LDE) without Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LDE) without Sart/Stop System(KL9)	Radio	●	●	●	●
Astra-J	[E] 2014	1.6L (LDE) without Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LDE) without Sart/Stop System(KL9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LDE) without Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LDE) without Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[E] 2014	1.6L (LDE) without Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LDE) without Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LDE) without Sart/Stop System(KL9)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LLU)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LLU)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LLU)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LLU)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[E] 2014	1.6L (LLU)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[E] 2014	1.6L (LLU)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LLU)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LLU)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LLU)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LLU)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LLU)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LLU)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[E] 2014	1.6L (LLU)	BCM (Body Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LLU)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LLU)	IC (Instrument Cluster)	●	●	●	●

Astra-J	[E] 2014	1.6L (LLU)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LLU)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LLU)	Radio	●	●	●	●
Astra-J	[E] 2014	1.6L (LLU)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LLU)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LLU)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LLU)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[E] 2014	1.6L (LLU)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LLU)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LLU)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVL)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVL)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVL)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVL)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVL)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVL)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVL)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVL)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVL)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVL)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVL)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVL)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVL)	BCM (Body Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVL)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVL)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVL)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVL)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVL)	Radio	●	●	●	●
Astra-J	[E] 2014	1.6L (LVL)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVL)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVL)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVL)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVL)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVL)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVL)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVM)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVM)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVM)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVM)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVM)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVM)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVM)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVM)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVM)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVM)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVM)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVM)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVM)	BCM (Body Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVM)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVM)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVM)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVM)	TIM (Trailer Interface Module)	●	●	●	●

Astra-J	[E] 2014	1.6L (LVM)	Radio	●	●	●	●
Astra-J	[E] 2014	1.6L (LVM)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVM)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVM)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVM)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVM)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVM)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVM)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVP)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVP)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVP)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVP)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVP)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVP)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVP)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVP)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVP)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVP)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVP)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVP)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVP)	BCM (Body Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVP)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVP)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVP)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVP)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVP)	Radio	●	●	●	●
Astra-J	[E] 2014	1.6L (LVP)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVP)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVP)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVP)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVP)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVP)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LVP)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LWC)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LWC)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LWC)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LWC)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[E] 2014	1.6L (LWC)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[E] 2014	1.6L (LWC)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LWC)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LWC)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LWC)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LWC)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LWC)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LWC)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[E] 2014	1.6L (LWC)	BCM (Body Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LWC)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LWC)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[E] 2014	1.6L (LWC)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LWC)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LWC)	Radio	●	●	●	●
Astra-J	[E] 2014	1.6L (LWC)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●

Astra-J	[E] 2014	1.6L (LWC)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LWC)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LWC)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[E] 2014	1.6L (LWC)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LWC)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[E] 2014	1.6L (LWC)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LKR)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LKR)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LKR)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LKR)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[E] 2014	1.7L (LKR)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[E] 2014	1.7L (LKR)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LKR)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LKR)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LKR)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LKR)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LKR)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LKR)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[E] 2014	1.7L (LKR)	BCM (Body Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LKR)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LKR)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[E] 2014	1.7L (LKR)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LKR)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LKR)	Radio	●	●	●	●
Astra-J	[E] 2014	1.7L (LKR)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LKR)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LKR)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LKR)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[E] 2014	1.7L (LKR)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LKR)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LKR)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUD)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUD)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUD)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUD)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUD)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUD)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUD)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUD)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUD)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUD)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUD)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUD)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUD)	BCM (Body Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUD)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUD)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUD)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUD)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUD)	Radio	●	●	●	●
Astra-J	[E] 2014	1.7L (LUD)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUD)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUD)	MTCM (Mobile Telephone Control Module)	●	●	●	●

Astra-J	[E] 2014	1.7L (LUD)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUD)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUD)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUD)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUE)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUE)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUE)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUE)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUE)	TCM (Transmission Control Module) - T76 (MH7 M8 M9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUE)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUE)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUE)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUE)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUE)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUE)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUE)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUE)	BCM (Body Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUE)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUE)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUE)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUE)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUE)	Radio	●	●	●	●
Astra-J	[E] 2014	1.7L (LUE)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUE)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUE)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUE)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUE)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUE)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[E] 2014	1.7L (LUE)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[E] 2014	1.8L (2H0)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[E] 2014	1.8L (2H0)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[E] 2014	1.8L (2H0)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[E] 2014	1.8L (2H0)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[E] 2014	1.8L (2H0)	TCM (Transmission Control Module) - T76 (MH7 M8 M9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[E] 2014	1.8L (2H0)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	1.8L (2H0)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[E] 2014	1.8L (2H0)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	1.8L (2H0)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[E] 2014	1.8L (2H0)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[E] 2014	1.8L (2H0)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[E] 2014	1.8L (2H0)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[E] 2014	1.8L (2H0)	BCM (Body Control Module)	●	●	●	●
Astra-J	[E] 2014	1.8L (2H0)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[E] 2014	1.8L (2H0)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[E] 2014	1.8L (2H0)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[E] 2014	1.8L (2H0)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[E] 2014	1.8L (2H0)	Radio	●	●	●	●
Astra-J	[E] 2014	1.8L (2H0)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[E] 2014	1.8L (2H0)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[E] 2014	1.8L (2H0)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[E] 2014	1.8L (2H0)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[E] 2014	1.8L (2H0)	FSHCM (Front Seat Heating Control Module)	●	●	●	●

Astra-J	[E] 2014	1.8L (2H0)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[E] 2014	1.8L (2H0)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBS)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBS)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBS)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBS)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBS)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBS)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBS)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBS)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBS)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBS)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBS)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBS)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBS)	BCM (Body Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBS)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBS)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBS)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBS)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBS)	Radio	●	●	●	●
Astra-J	[E] 2014	2.0L (LBS)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBS)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBS)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBS)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBS)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBS)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBS)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBX)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBX)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBX)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBX)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBX)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBX)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBX)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBX)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBX)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBX)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBX)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBX)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBX)	BCM (Body Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBX)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBX)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBX)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBX)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBX)	Radio	●	●	●	●
Astra-J	[E] 2014	2.0L (LBX)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBX)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBX)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBX)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBX)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBX)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBX)	FCM (Frontview Camera Module)	●	●	●	●

Astra-J	[E] 2014	2.0L (LBY)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBY)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBY)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBY)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBY)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBY)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBY)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBY)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBY)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBY)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBY)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBY)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBY)	BCM (Body Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBY)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBY)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBY)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBY)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBY)	Radio	●	●	●	●
Astra-J	[E] 2014	2.0L (LBY)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBY)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBY)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBY)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBY)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBY)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LBY)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LHU)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LHU)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LHU)	CCM (Chassis Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LHU)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[E] 2014	2.0L (LHU)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[E] 2014	2.0L (LHU)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LHU)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LHU)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LHU)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LHU)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LHU)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LHU)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[E] 2014	2.0L (LHU)	BCM (Body Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LHU)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LHU)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[E] 2014	2.0L (LHU)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LHU)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LHU)	Radio	●	●	●	●
Astra-J	[E] 2014	2.0L (LHU)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LHU)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LHU)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LHU)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[E] 2014	2.0L (LHU)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LHU)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[E] 2014	2.0L (LHU)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[D] 2013	1.3L (LSF)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[D] 2013	1.3L (LSF)	FICM (Fuel Injector Control Module)	●	●	●	●

Astra-J	[D] 2013	1. 3L (LSF)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[D] 2013	1. 3L (LSF)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[D] 2013	1. 3L (LSF)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[D] 2013	1. 3L (LSF)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[D] 2013	1. 3L (LSF)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[D] 2013	1. 3L (LSF)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[D] 2013	1. 3L (LSF)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[D] 2013	1. 3L (LSF)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[D] 2013	1. 3L (LSF)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[D] 2013	1. 3L (LSF)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[D] 2013	1. 3L (LSF)	BCM (Body Control Module)	●	●	●	●
Astra-J	[D] 2013	1. 3L (LSF)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[D] 2013	1. 3L (LSF)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[D] 2013	1. 3L (LSF)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[D] 2013	1. 3L (LSF)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[D] 2013	1. 3L (LSF)	Radio	●	●	●	●
Astra-J	[D] 2013	1. 3L (LSF)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[D] 2013	1. 3L (LSF)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[D] 2013	1. 3L (LSF)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[D] 2013	1. 3L (LSF)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[D] 2013	1. 3L (LSF)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[D] 2013	1. 3L (LSF)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[D] 2013	1. 3L (LSF)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[D] 2013	1. 4L (LDD) with Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[D] 2013	1. 4L (LDD) with Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[D] 2013	1. 4L (LDD) with Sart/Stop System(KL9)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[D] 2013	1. 4L (LDD) with Sart/Stop System(KL9)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[D] 2013	1. 4L (LDD) with Sart/Stop System(KL9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[D] 2013	1. 4L (LDD) with Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[D] 2013	1. 4L (LDD) with Sart/Stop System(KL9)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[D] 2013	1. 4L (LDD) with Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[D] 2013	1. 4L (LDD) with Sart/Stop System(KL9)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[D] 2013	1. 4L (LDD) with Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[D] 2013	1. 4L (LDD) with Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[D] 2013	1. 4L (LDD) with Sart/Stop System(KL9)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[D] 2013	1. 4L (LDD) with Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Astra-J	[D] 2013	1. 4L (LDD) with Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[D] 2013	1. 4L (LDD) with Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[D] 2013	1. 4L (LDD) with Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●

Astra-J	[D] 2013	1.4L(LDD)with Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[D] 2013	1.4L(LDD)with Sart/Stop System(KL9)	Radio	●	●	●	●
Astra-J	[D] 2013	1.4L(LDD)with Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[D] 2013	1.4L(LDD)with Sart/Stop System(KL9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[D] 2013	1.4L(LDD)with Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[D] 2013	1.4L(LDD)with Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[D] 2013	1.4L(LDD)with Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[D] 2013	1.4L(LDD)with Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[D] 2013	1.4L(LDD)with Sart/Stop System(KL9)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[D] 2013	1.4L(LDD)with out Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[D] 2013	1.4L(LDD)with out Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[D] 2013	1.4L(LDD)with out Sart/Stop System(KL9)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[D] 2013	1.4L(LDD)with out Sart/Stop System(KL9)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[D] 2013	1.4L(LDD)with out Sart/Stop System(KL9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[D] 2013	1.4L(LDD)with out Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[D] 2013	1.4L(LDD)with out Sart/Stop System(KL9)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[D] 2013	1.4L(LDD)with out Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[D] 2013	1.4L(LDD)with out Sart/Stop System(KL9)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[D] 2013	1.4L(LDD)with out Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[D] 2013	1.4L(LDD)with out Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[D] 2013	1.4L(LDD)with out Sart/Stop System(KL9)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[D] 2013	1.4L(LDD)with out Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Astra-J	[D] 2013	1.4L(LDD)with out Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[D] 2013	1.4L(LDD)with out Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[D] 2013	1.4L(LDD)with out Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[D] 2013	1.4L(LDD)with out Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[D] 2013	1.4L(LDD)with out Sart/Stop System(KL9)	Radio	●	●	●	●
Astra-J	[D] 2013	1.4L(LDD)with out Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●

Astra-J	[D] 2013	1.4L(LDD)without Sart/Stop System(KI.9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[D] 2013	1.4L(LDD)without Sart/Stop System(KI.9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[D] 2013	1.4L(LDD)without Sart/Stop System(KI.9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[D] 2013	1.4L(LDD)without Sart/Stop System(KI.9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[D] 2013	1.4L(LDD)without Sart/Stop System(KI.9)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[D] 2013	1.4L(LDD)without Sart/Stop System(KI.9)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[D] 2013	1.4L (LUJ)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[D] 2013	1.4L (LUJ)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[D] 2013	1.4L (LUJ)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[D] 2013	1.4L (LUJ)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[D] 2013	1.4L (LUJ)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[D] 2013	1.4L (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[D] 2013	1.4L (LUJ)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[D] 2013	1.4L (LUJ)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[D] 2013	1.4L (LUJ)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[D] 2013	1.4L (LUJ)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[D] 2013	1.4L (LUJ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[D] 2013	1.4L (LUJ)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[D] 2013	1.4L (LUJ)	BCM (Body Control Module)	●	●	●	●
Astra-J	[D] 2013	1.4L (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[D] 2013	1.4L (LUJ)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[D] 2013	1.4L (LUJ)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[D] 2013	1.4L (LUJ)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[D] 2013	1.4L (LUJ)	Radio	●	●	●	●
Astra-J	[D] 2013	1.4L (LUJ)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[D] 2013	1.4L (LUJ)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[D] 2013	1.4L (LUJ)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[D] 2013	1.4L (LUJ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[D] 2013	1.4L (LUJ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[D] 2013	1.4L (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[D] 2013	1.4L (LUJ)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with Sart/Stop System(KI.9)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with Sart/Stop System(KI.9)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with Sart/Stop System(KI.9)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with Sart/Stop System(KI.9)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with Sart/Stop System(KI.9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with Sart/Stop System(KI.9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with Sart/Stop System(KI.9)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with Sart/Stop System(KI.9)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with Sart/Stop System(KI.9)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●

Astra-J	[D] 2013	1.6L(LDE)with Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with Sart/Stop System(KL9)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with Sart/Stop System(KL9)	Radio	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with Sart/Stop System(KL9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with Sart/Stop System(KL9)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with out Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with out Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with out Sart/Stop System(KL9)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with out Sart/Stop System(KL9)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with out Sart/Stop System(KL9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with out Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with out Sart/Stop System(KL9)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with out Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with out Sart/Stop System(KL9)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with out Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with out Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[D] 2013	1.6L(LDE)with out Sart/Stop System(KL9)	ESC (Electronic Suspension Control)	●	●	●	●

Astra-J	[D] 2013	1.6L (LDE) without Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LDE) without Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LDE) without Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[D] 2013	1.6L (LDE) without Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LDE) without Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LDE) without Sart/Stop System(KL9)	Radio	●	●	●	●
Astra-J	[D] 2013	1.6L (LDE) without Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LDE) without Sart/Stop System(KL9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LDE) without Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LDE) without Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[D] 2013	1.6L (LDE) without Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LDE) without Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LDE) without Sart/Stop System(KL9)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LLU)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LLU)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LLU)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LLU)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[D] 2013	1.6L (LLU)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[D] 2013	1.6L (LLU)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LLU)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LLU)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LLU)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LLU)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LLU)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LLU)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[D] 2013	1.6L (LLU)	BCM (Body Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LLU)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LLU)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[D] 2013	1.6L (LLU)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LLU)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LLU)	Radio	●	●	●	●
Astra-J	[D] 2013	1.6L (LLU)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LLU)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LLU)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LLU)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[D] 2013	1.6L (LLU)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LLU)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LLU)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LVP)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LVP)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LVP)	FPCM (Fuel Pump Control Module)	●	●	●	●

Astra-J	[D] 2013	1.6L (LVP)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[D] 2013	1.6L (LVP)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHT MHK MHB MHC MNR)	●	●	●	●
Astra-J	[D] 2013	1.6L (LVP)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LVP)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LVP)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LVP)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LVP)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LVP)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LVP)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[D] 2013	1.6L (LVP)	BCM (Body Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LVP)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LVP)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[D] 2013	1.6L (LVP)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LVP)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LVP)	Radio	●	●	●	●
Astra-J	[D] 2013	1.6L (LVP)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LVP)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LVP)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LVP)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[D] 2013	1.6L (LVP)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LVP)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[D] 2013	1.6L (LVP)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LKR)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LKR)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LKR)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LKR)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[D] 2013	1.7L (LKR)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHT MHK MHB MHC MNR)	●	●	●	●
Astra-J	[D] 2013	1.7L (LKR)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LKR)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LKR)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LKR)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LKR)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LKR)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LKR)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[D] 2013	1.7L (LKR)	BCM (Body Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LKR)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LKR)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[D] 2013	1.7L (LKR)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LKR)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LKR)	Radio	●	●	●	●
Astra-J	[D] 2013	1.7L (LKR)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LKR)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LKR)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LKR)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[D] 2013	1.7L (LKR)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LKR)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LKR)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUD)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUD)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUD)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUD)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUD)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHT MHK MHB MHC MNR)	●	●	●	●

Astra-J	[D] 2013	1.7L (LUD)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUD)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUD)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUD)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUD)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUD)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUD)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUD)	BCM (Body Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUD)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUD)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUD)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUD)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUD)	Radio	●	●	●	●
Astra-J	[D] 2013	1.7L (LUD)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUD)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUD)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUD)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUD)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUD)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUD)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUE)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUE)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUE)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUE)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUE)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUE)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUE)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUE)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUE)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUE)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUE)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUE)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUE)	BCM (Body Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUE)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUE)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUE)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUE)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUE)	Radio	●	●	●	●
Astra-J	[D] 2013	1.7L (LUE)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUE)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUE)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUE)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUE)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUE)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[D] 2013	1.7L (LUE)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[D] 2013	1.8L (2H0)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[D] 2013	1.8L (2H0)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[D] 2013	1.8L (2H0)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[D] 2013	1.8L (2H0)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[D] 2013	1.8L (2H0)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[D] 2013	1.8L (2H0)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[D] 2013	1.8L (2H0)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●

Astra-J	[D] 2013	1.8L (2H0)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[D] 2013	1.8L (2H0)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[D] 2013	1.8L (2H0)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[D] 2013	1.8L (2H0)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[D] 2013	1.8L (2H0)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[D] 2013	1.8L (2H0)	BCM (Body Control Module)	●	●	●	●
Astra-J	[D] 2013	1.8L (2H0)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[D] 2013	1.8L (2H0)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[D] 2013	1.8L (2H0)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[D] 2013	1.8L (2H0)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[D] 2013	1.8L (2H0)	Radio	●	●	●	●
Astra-J	[D] 2013	1.8L (2H0)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[D] 2013	1.8L (2H0)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[D] 2013	1.8L (2H0)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[D] 2013	1.8L (2H0)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[D] 2013	1.8L (2H0)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[D] 2013	1.8L (2H0)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[D] 2013	1.8L (2H0)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	TCM (Transmission Control Module) - T76 (MH7 M8 M9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	BCM (Body Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	Radio	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	TCM (Transmission Control Module) - T76 (MH7 M8 M9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBS)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●

Astra-J	[D] 2013	2.0L (LBX)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBX)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBX)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBX)	BCM (Body Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBX)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBX)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBX)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBX)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBX)	Radio	●	●	●	●
Astra-J	[D] 2013	2.0L (LBX)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBX)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBX)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBX)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBX)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBX)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBX)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBY)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBY)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBY)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBY)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBY)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBY)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBY)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBY)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBY)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBY)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBY)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBY)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBY)	BCM (Body Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBY)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBY)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBY)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBY)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBY)	Radio	●	●	●	●
Astra-J	[D] 2013	2.0L (LBY)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBY)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBY)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBY)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBY)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBY)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LBY)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LHU)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LHU)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LHU)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LHU)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Astra-J	[D] 2013	2.0L (LHU)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[D] 2013	2.0L (LHU)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LHU)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LHU)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LHU)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LHU)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LHU)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●

Astra-J	[D] 2013	2.0L (LHU)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[D] 2013	2.0L (LHU)	BCM (Body Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LHU)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LHU)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[D] 2013	2.0L (LHU)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LHU)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LHU)	Radio	●	●	●	●
Astra-J	[D] 2013	2.0L (LHU)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LHU)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LHU)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LHU)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-J	[D] 2013	2.0L (LHU)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LHU)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[D] 2013	2.0L (LHU)	FCM (Frontview Camera Module)	●	●	●	●
Astra-J	[C] 2012	1.3L (LSF)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[C] 2012	1.3L (LSF)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[C] 2012	1.3L (LSF)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[C] 2012	1.3L (LSF)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[C] 2012	1.3L (LSF)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[C] 2012	1.3L (LSF)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[C] 2012	1.3L (LSF)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK)	●	●	●	●
Astra-J	[C] 2012	1.3L (LSF)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	1.3L (LSF)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	1.3L (LSF)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[C] 2012	1.3L (LSF)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[C] 2012	1.3L (LSF)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[C] 2012	1.3L (LSF)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[C] 2012	1.3L (LSF)	BCM (Body Control Module)	●	●	●	●
Astra-J	[C] 2012	1.3L (LSF)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[C] 2012	1.3L (LSF)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[C] 2012	1.3L (LSF)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[C] 2012	1.3L (LSF)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[C] 2012	1.3L (LSF)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[C] 2012	1.3L (LSF)	Radio	●	●	●	●
Astra-J	[C] 2012	1.3L (LSF)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[C] 2012	1.3L (LSF)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[C] 2012	1.3L (LSF)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[C] 2012	1.3L (LSF)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[C] 2012	1.3L (LSF)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[C] 2012	1.3L (LSF)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[C] 2012	1.3L (LSF)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L (LDD) with Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L (LDD) with Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L (LDD) with Sart/Stop System(KL9)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L (LDD) with Sart/Stop System(KL9)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[C] 2012	1.4L (LDD) with Sart/Stop System(KL9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[C] 2012	1.4L (LDD) with Sart/Stop System(KL9)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●

Astra-J	[C] 2012	1.4L(LDD)with Sart/Stop System(KL9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)with Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)with Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)with Sart/Stop System(KL9)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)with Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)with Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)with Sart/Stop System(KL9)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)with Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)with Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)with Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)with Sart/Stop System(KL9)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)with Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)with Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)with Sart/Stop System(KL9)	Radio	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)with Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)with Sart/Stop System(KL9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)with Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)with Sart/Stop System(KL9)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)with Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)with Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)with Sart/Stop System(KL9)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)witho ut Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)witho ut Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)witho ut Sart/Stop System(KL9)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)witho ut Sart/Stop System(KL9)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)witho ut Sart/Stop System(KL9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)witho ut Sart/Stop System(KL9)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)witho ut Sart/Stop System(KL9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK)	●	●	●	●

Astra-J	[C] 2012	1.4L(LDD)without Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)without Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)without Sart/Stop System(KL9)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)without Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)without Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)without Sart/Stop System(KL9)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)without Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)without Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)without Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)without Sart/Stop System(KL9)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)without Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)without Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)without Sart/Stop System(KL9)	Radio	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)without Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)without Sart/Stop System(KL9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)without Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)without Sart/Stop System(KL9)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)without Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)without Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L(LDD)without Sart/Stop System(KL9)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L (LUJ)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L (LUJ)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L (LUJ)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L (LUJ)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[C] 2012	1.4L (LUJ)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[C] 2012	1.4L (LUJ)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[C] 2012	1.4L (LUJ)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK)	●	●	●	●
Astra-J	[C] 2012	1.4L (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L (LUJ)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L (LUJ)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[C] 2012	1.4L (LUJ)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L (LUJ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[C] 2012	1.4L (LUJ)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[C] 2012	1.4L (LUJ)	BCM (Body Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●

Astra-J	[C] 2012	1.4L (LUJ)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[C] 2012	1.4L (LUJ)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L (LUJ)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L (LUJ)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[C] 2012	1.4L (LUJ)	Radio	●	●	●	●
Astra-J	[C] 2012	1.4L (LUJ)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L (LUJ)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[C] 2012	1.4L (LUJ)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L (LUJ)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L (LUJ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[C] 2012	1.4L (LUJ)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LDE) with Sart/Stop System(KI.9)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LDE) with Sart/Stop System(KI.9)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LDE) with Sart/Stop System(KI.9)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LDE) with Sart/Stop System(KI.9)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[C] 2012	1.6L (LDE) with Sart/Stop System(KI.9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[C] 2012	1.6L (LDE) with Sart/Stop System(KI.9)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[C] 2012	1.6L (LDE) with Sart/Stop System(KI.9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK)	●	●	●	●
Astra-J	[C] 2012	1.6L (LDE) with Sart/Stop System(KI.9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LDE) with Sart/Stop System(KI.9)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LDE) with Sart/Stop System(KI.9)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LDE) with Sart/Stop System(KI.9)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LDE) with Sart/Stop System(KI.9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LDE) with Sart/Stop System(KI.9)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[C] 2012	1.6L (LDE) with Sart/Stop System(KI.9)	BCM (Body Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LDE) with Sart/Stop System(KI.9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LDE) with Sart/Stop System(KI.9)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[C] 2012	1.6L (LDE) with Sart/Stop System(KI.9)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LDE) with Sart/Stop System(KI.9)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LDE) with Sart/Stop System(KI.9)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LDE) with Sart/Stop System(KI.9)	Radio	●	●	●	●
Astra-J	[C] 2012	1.6L (LDE) with Sart/Stop System(KI.9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LDE) with Sart/Stop System(KI.9)	MPIM (Multimedia Player Interface Module)	●	●	●	●

Astra-J	[C] 2012	1.6L(LDE)with Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L(LDE)with Sart/Stop System(KL9)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L(LDE)with Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L(LDE)with Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L(LDE)with Sart/Stop System(KL9)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L(LDE)with out Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L(LDE)with out Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L(LDE)with out Sart/Stop System(KL9)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L(LDE)with out Sart/Stop System(KL9)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[C] 2012	1.6L(LDE)with out Sart/Stop System(KL9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[C] 2012	1.6L(LDE)with out Sart/Stop System(KL9)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[C] 2012	1.6L(LDE)with out Sart/Stop System(KL9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK)	●	●	●	●
Astra-J	[C] 2012	1.6L(LDE)with out Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L(LDE)with out Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L(LDE)with out Sart/Stop System(KL9)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[C] 2012	1.6L(LDE)with out Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L(LDE)with out Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[C] 2012	1.6L(LDE)with out Sart/Stop System(KL9)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[C] 2012	1.6L(LDE)with out Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L(LDE)with out Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[C] 2012	1.6L(LDE)with out Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[C] 2012	1.6L(LDE)with out Sart/Stop System(KL9)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L(LDE)with out Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L(LDE)with out Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[C] 2012	1.6L(LDE)with out Sart/Stop System(KL9)	Radio	●	●	●	●
Astra-J	[C] 2012	1.6L(LDE)with out Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L(LDE)with out Sart/Stop System(KL9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[C] 2012	1.6L(LDE)with out Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●

Astra-J	[C] 2012	1.6L (LDE) without Start/Stop System (KL9)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LDE) without Start/Stop System (KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LDE) without Start/Stop System (KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LDE) without Start/Stop System (KL9)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LLU)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LLU)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LLU)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LLU)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[C] 2012	1.6L (LLU)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[C] 2012	1.6L (LLU)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[C] 2012	1.6L (LLU)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK)	●	●	●	●
Astra-J	[C] 2012	1.6L (LLU)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LLU)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LLU)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LLU)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LLU)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LLU)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[C] 2012	1.6L (LLU)	BCM (Body Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LLU)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LLU)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[C] 2012	1.6L (LLU)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LLU)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LLU)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LLU)	Radio	●	●	●	●
Astra-J	[C] 2012	1.6L (LLU)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LLU)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LLU)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LLU)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LLU)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LLU)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[C] 2012	1.6L (LLU)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LKR)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LKR)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LKR)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LKR)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[C] 2012	1.7L (LKR)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[C] 2012	1.7L (LKR)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[C] 2012	1.7L (LKR)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK)	●	●	●	●
Astra-J	[C] 2012	1.7L (LKR)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LKR)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LKR)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LKR)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LKR)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LKR)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[C] 2012	1.7L (LKR)	BCM (Body Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LKR)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LKR)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[C] 2012	1.7L (LKR)	CACM (Chime Alarm Control Module)	●	●	●	●

Astra-J	[C] 2012	1.7L (LKR)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LKR)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LKR)	Radio	●	●	●	●
Astra-J	[C] 2012	1.7L (LKR)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LKR)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LKR)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LKR)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LKR)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LKR)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LKR)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPL)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPL)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPL)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPL)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPL)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPL)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPL)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPL)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPL)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPL)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPL)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPL)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPL)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPL)	BCM (Body Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPL)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPL)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPL)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPL)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPL)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPL)	Radio	●	●	●	●
Astra-J	[C] 2012	1.7L (LPL)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPL)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPL)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPL)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPL)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPL)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPL)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPV)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPV)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPV)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPV)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPV)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPV)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPV)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPV)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPV)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPV)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPV)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPV)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPV)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPV)	BCM (Body Control Module)	●	●	●	●

Astra-J	[C] 2012	1.7L (LPV)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPV)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPV)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPV)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPV)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPV)	Radio	●	●	●	●
Astra-J	[C] 2012	1.7L (LPV)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPV)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPV)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPV)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPV)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPV)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LPV)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUD)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUD)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUD)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUD)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUD)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUD)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUD)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUD)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUD)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUD)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUD)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUD)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUD)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUD)	BCM (Body Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUD)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUD)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUD)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUD)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUD)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUD)	Radio	●	●	●	●
Astra-J	[C] 2012	1.7L (LUD)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUD)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUD)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUD)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUD)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUD)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUD)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUE)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUE)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUE)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUE)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUE)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUE)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUE)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUE)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUE)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUE)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUE)	PSCM (Power Steering Control Module)	●	●	●	●

Astra-J	[C] 2012	1.7L (LUE)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUE)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUE)	BCM (Body Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUE)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUE)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUE)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUE)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUE)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUE)	Radio	●	●	●	●
Astra-J	[C] 2012	1.7L (LUE)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUE)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUE)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUE)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUE)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUE)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[C] 2012	1.7L (LUE)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[C] 2012	1.8L (2H0)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[C] 2012	1.8L (2H0)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[C] 2012	1.8L (2H0)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[C] 2012	1.8L (2H0)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[C] 2012	1.8L (2H0)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[C] 2012	1.8L (2H0)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[C] 2012	1.8L (2H0)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK)	●	●	●	●
Astra-J	[C] 2012	1.8L (2H0)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	1.8L (2H0)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	1.8L (2H0)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[C] 2012	1.8L (2H0)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[C] 2012	1.8L (2H0)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[C] 2012	1.8L (2H0)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[C] 2012	1.8L (2H0)	BCM (Body Control Module)	●	●	●	●
Astra-J	[C] 2012	1.8L (2H0)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[C] 2012	1.8L (2H0)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[C] 2012	1.8L (2H0)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[C] 2012	1.8L (2H0)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[C] 2012	1.8L (2H0)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[C] 2012	1.8L (2H0)	Radio	●	●	●	●
Astra-J	[C] 2012	1.8L (2H0)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[C] 2012	1.8L (2H0)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[C] 2012	1.8L (2H0)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[C] 2012	1.8L (2H0)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[C] 2012	1.8L (2H0)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[C] 2012	1.8L (2H0)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[C] 2012	1.8L (2H0)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBS)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBS)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBS)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBS)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBS)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBS)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBS)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBS)	EBCM (Electronic Brake Control Module)	●	●	●	●

Astra-J	[C] 2012	2.0L (LBS)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBS)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBS)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBS)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBS)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBS)	BCM (Body Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBS)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBS)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBS)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBS)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBS)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBS)	Radio	●	●	●	●
Astra-J	[C] 2012	2.0L (LBS)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBS)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBS)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBS)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBS)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBS)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBS)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBX)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBX)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBX)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBX)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBX)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBX)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBX)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBX)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBX)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBX)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBX)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBX)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBX)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBX)	BCM (Body Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBX)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBX)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBX)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBX)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBX)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBX)	Radio	●	●	●	●
Astra-J	[C] 2012	2.0L (LBX)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBX)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBX)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBX)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBX)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBX)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBX)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBY)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBY)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBY)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBY)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBY)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●

Astra-J	[C] 2012	2.0L (LBY)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBY)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBY)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBY)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBY)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBY)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBY)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBY)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBY)	BCM (Body Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBY)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBY)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBY)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBY)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBY)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBY)	Radio	●	●	●	●
Astra-J	[C] 2012	2.0L (LBY)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBY)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBY)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBY)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBY)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBY)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LBY)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LHU)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LHU)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LHU)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LHU)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[C] 2012	2.0L (LHU)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[C] 2012	2.0L (LHU)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[C] 2012	2.0L (LHU)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK)	●	●	●	●
Astra-J	[C] 2012	2.0L (LHU)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LHU)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LHU)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LHU)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LHU)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LHU)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[C] 2012	2.0L (LHU)	BCM (Body Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LHU)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LHU)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[C] 2012	2.0L (LHU)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LHU)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LHU)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LHU)	Radio	●	●	●	●
Astra-J	[C] 2012	2.0L (LHU)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LHU)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LHU)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LHU)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LHU)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LHU)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[C] 2012	2.0L (LHU)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[B] 2011	1.3L (LSF)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[B] 2011	1.3L (LSF)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[B] 2011	1.3L (LSF)	FPCM (Fuel Pump Control Module)	●	●	●	●

Astra-J	[B] 2011	1.3L (LSF)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[B] 2011	1.3L (LSF)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[B] 2011	1.3L (LSF)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[B] 2011	1.3L (LSF)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK)	●	●	●	●
Astra-J	[B] 2011	1.3L (LSF)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[B] 2011	1.3L (LSF)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[B] 2011	1.3L (LSF)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[B] 2011	1.3L (LSF)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[B] 2011	1.3L (LSF)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[B] 2011	1.3L (LSF)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[B] 2011	1.3L (LSF)	BCM (Body Control Module)	●	●	●	●
Astra-J	[B] 2011	1.3L (LSF)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[B] 2011	1.3L (LSF)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[B] 2011	1.3L (LSF)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[B] 2011	1.3L (LSF)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[B] 2011	1.3L (LSF)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[B] 2011	1.3L (LSF)	Radio	●	●	●	●
Astra-J	[B] 2011	1.3L (LSF)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[B] 2011	1.3L (LSF)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[B] 2011	1.3L (LSF)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[B] 2011	1.3L (LSF)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[B] 2011	1.3L (LSF)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[B] 2011	1.3L (LSF)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[B] 2011	1.3L (LSF)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L (LDD) with Sart/Stop System (K1.9)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L (LDD) with Sart/Stop System (K1.9)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L (LDD) with Sart/Stop System (K1.9)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L (LDD) with Sart/Stop System (K1.9)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[B] 2011	1.4L (LDD) with Sart/Stop System (K1.9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[B] 2011	1.4L (LDD) with Sart/Stop System (K1.9)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[B] 2011	1.4L (LDD) with Sart/Stop System (K1.9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK)	●	●	●	●
Astra-J	[B] 2011	1.4L (LDD) with Sart/Stop System (K1.9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L (LDD) with Sart/Stop System (K1.9)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L (LDD) with Sart/Stop System (K1.9)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[B] 2011	1.4L (LDD) with Sart/Stop System (K1.9)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L (LDD) with Sart/Stop System (K1.9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[B] 2011	1.4L (LDD) with Sart/Stop System (K1.9)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[B] 2011	1.4L (LDD) with Sart/Stop System (K1.9)	BCM (Body Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L (LDD) with Sart/Stop System (K1.9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●

Astra-J	[B] 2011	1.4L(LDD)with Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)with Sart/Stop System(KL9)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)with Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)with Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)with Sart/Stop System(KL9)	Radio	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)with Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)with Sart/Stop System(KL9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)with Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)with Sart/Stop System(KL9)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)with Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)with Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)with Sart/Stop System(KL9)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)with out Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)with out Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)with out Sart/Stop System(KL9)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)with out Sart/Stop System(KL9)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)with out Sart/Stop System(KL9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)with out Sart/Stop System(KL9)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)with out Sart/Stop System(KL9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)with out Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)with out Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)with out Sart/Stop System(KL9)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)with out Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)with out Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)with out Sart/Stop System(KL9)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)with out Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)with out Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)with out Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●

Astra-J	[B] 2011	1.4L(LDD)without Sart/Stop System(KL9)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)without Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)without Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)without Sart/Stop System(KL9)	Radio	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)without Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)without Sart/Stop System(KL9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)without Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)without Sart/Stop System(KL9)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)without Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)without Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L(LDD)without Sart/Stop System(KL9)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L (LUJ)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L (LUJ)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L (LUJ)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L (LUJ)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[B] 2011	1.4L (LUJ)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[B] 2011	1.4L (LUJ)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[B] 2011	1.4L (LUJ)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHJ MHK)	●	●	●	●
Astra-J	[B] 2011	1.4L (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L (LUJ)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L (LUJ)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[B] 2011	1.4L (LUJ)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L (LUJ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[B] 2011	1.4L (LUJ)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[B] 2011	1.4L (LUJ)	BCM (Body Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[B] 2011	1.4L (LUJ)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[B] 2011	1.4L (LUJ)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L (LUJ)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L (LUJ)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[B] 2011	1.4L (LUJ)	Radio	●	●	●	●
Astra-J	[B] 2011	1.4L (LUJ)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L (LUJ)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[B] 2011	1.4L (LUJ)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L (LUJ)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L (LUJ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[B] 2011	1.4L (LUJ)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)with Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)with Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●

Astra-J	[B] 2011	1.6L(LDE)with Sart/Stop System(KL9)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)with Sart/Stop System(KL9)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)with Sart/Stop System(KL9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)with Sart/Stop System(KL9)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)with Sart/Stop System(KL9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)with Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)with Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)with Sart/Stop System(KL9)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)with Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)with Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)with Sart/Stop System(KL9)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)with Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)with Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)with Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)with Sart/Stop System(KL9)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)with Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)with Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)with Sart/Stop System(KL9)	Radio	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)with Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)with Sart/Stop System(KL9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)with Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)with Sart/Stop System(KL9)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)with Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)with Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)with Sart/Stop System(KL9)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)witho ut Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)witho ut Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)witho ut Sart/Stop System(KL9)	FPCM (Fuel Pump Control Module)	●	●	●	●

Astra-J	[B] 2011	1.6L(LDE)without Sart/Stop System(KL9)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)without Sart/Stop System(KL9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)without Sart/Stop System(KL9)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)without Sart/Stop System(KL9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)without Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)without Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)without Sart/Stop System(KL9)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)without Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)without Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)without Sart/Stop System(KL9)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)without Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)without Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)without Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)without Sart/Stop System(KL9)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)without Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)without Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)without Sart/Stop System(KL9)	Radio	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)without Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)without Sart/Stop System(KL9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)without Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)without Sart/Stop System(KL9)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)without Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)without Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L(LDE)without Sart/Stop System(KL9)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L (LLU)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L (LLU)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L (LLU)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L (LLU)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[B] 2011	1.6L (LLU)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[B] 2011	1.6L (LLU)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[B] 2011	1.6L (LLU)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK)	●	●	●	●
Astra-J	[B] 2011	1.6L (LLU)	EBCM (Electronic Brake Control Module)	●	●	●	●

Astra-J	[B] 2011	1.6L (LLU)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L (LLU)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[B] 2011	1.6L (LLU)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L (LLU)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[B] 2011	1.6L (LLU)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[B] 2011	1.6L (LLU)	BCM (Body Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L (LLU)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[B] 2011	1.6L (LLU)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[B] 2011	1.6L (LLU)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L (LLU)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L (LLU)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[B] 2011	1.6L (LLU)	Radio	●	●	●	●
Astra-J	[B] 2011	1.6L (LLU)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L (LLU)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[B] 2011	1.6L (LLU)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L (LLU)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L (LLU)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L (LLU)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[B] 2011	1.6L (LLU)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPL)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPL)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPL)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPL)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPL)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPL)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPL)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPL)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPL)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPL)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPL)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPL)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPL)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPL)	BCM (Body Control Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPL)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPL)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPL)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPL)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPL)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPL)	Radio	●	●	●	●
Astra-J	[B] 2011	1.7L (LPL)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPL)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPL)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPL)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPL)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPL)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPL)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPV)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPV)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPV)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPV)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPV)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●

Astra-J	[B] 2011	1.7L (LPV)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPV)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPV)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPV)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPV)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPV)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPV)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPV)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPV)	BCM (Body Control Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPV)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPV)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPV)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPV)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPV)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPV)	Radio	●	●	●	●
Astra-J	[B] 2011	1.7L (LPV)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPV)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPV)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPV)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPV)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPV)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[B] 2011	1.7L (LPV)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[B] 2011	2.0L (LBS)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[B] 2011	2.0L (LBS)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[B] 2011	2.0L (LBS)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[B] 2011	2.0L (LBS)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[B] 2011	2.0L (LBS)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[B] 2011	2.0L (LBS)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[B] 2011	2.0L (LBS)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK)	●	●	●	●
Astra-J	[B] 2011	2.0L (LBS)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[B] 2011	2.0L (LBS)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[B] 2011	2.0L (LBS)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[B] 2011	2.0L (LBS)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[B] 2011	2.0L (LBS)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[B] 2011	2.0L (LBS)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[B] 2011	2.0L (LBS)	BCM (Body Control Module)	●	●	●	●
Astra-J	[B] 2011	2.0L (LBS)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[B] 2011	2.0L (LBS)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[B] 2011	2.0L (LBS)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[B] 2011	2.0L (LBS)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[B] 2011	2.0L (LBS)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[B] 2011	2.0L (LBS)	Radio	●	●	●	●
Astra-J	[B] 2011	2.0L (LBS)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[B] 2011	2.0L (LBS)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[B] 2011	2.0L (LBS)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[B] 2011	2.0L (LBS)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[B] 2011	2.0L (LBS)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[B] 2011	2.0L (LBS)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[B] 2011	2.0L (LBS)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[A] 2010	1.3L (LSF)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[A] 2010	1.3L (LSF)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[A] 2010	1.3L (LSF)	FPCM (Fuel Pump Control Module)	●	●	●	●

Astra-J	[A] 2010	1.3L (LSF)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[A] 2010	1.3L (LSF)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[A] 2010	1.3L (LSF)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[A] 2010	1.3L (LSF)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK)	●	●	●	●
Astra-J	[A] 2010	1.3L (LSF)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[A] 2010	1.3L (LSF)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[A] 2010	1.3L (LSF)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[A] 2010	1.3L (LSF)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[A] 2010	1.3L (LSF)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[A] 2010	1.3L (LSF)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[A] 2010	1.3L (LSF)	BCM (Body Control Module)	●	●	●	●
Astra-J	[A] 2010	1.3L (LSF)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[A] 2010	1.3L (LSF)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[A] 2010	1.3L (LSF)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[A] 2010	1.3L (LSF)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[A] 2010	1.3L (LSF)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[A] 2010	1.3L (LSF)	Radio	●	●	●	●
Astra-J	[A] 2010	1.3L (LSF)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[A] 2010	1.3L (LSF)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[A] 2010	1.3L (LSF)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[A] 2010	1.3L (LSF)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[A] 2010	1.3L (LSF)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[A] 2010	1.3L (LSF)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[A] 2010	1.3L (LSF)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L (LDD) with Sart/Stop System (K1.9)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L (LDD) with Sart/Stop System (K1.9)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L (LDD) with Sart/Stop System (K1.9)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L (LDD) with Sart/Stop System (K1.9)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[A] 2010	1.4L (LDD) with Sart/Stop System (K1.9)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[A] 2010	1.4L (LDD) with Sart/Stop System (K1.9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[A] 2010	1.4L (LDD) with Sart/Stop System (K1.9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK)	●	●	●	●
Astra-J	[A] 2010	1.4L (LDD) with Sart/Stop System (K1.9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L (LDD) with Sart/Stop System (K1.9)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L (LDD) with Sart/Stop System (K1.9)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[A] 2010	1.4L (LDD) with Sart/Stop System (K1.9)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L (LDD) with Sart/Stop System (K1.9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[A] 2010	1.4L (LDD) with Sart/Stop System (K1.9)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[A] 2010	1.4L (LDD) with Sart/Stop System (K1.9)	BCM (Body Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L (LDD) with Sart/Stop System (K1.9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●

Astra-J	[A] 2010	1.4L(LDD)with Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)with Sart/Stop System(KL9)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)with Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)with Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)with Sart/Stop System(KL9)	Radio	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)with Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)with Sart/Stop System(KL9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)with Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)with Sart/Stop System(KL9)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)with Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)with Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)with Sart/Stop System(KL9)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)with out Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)with out Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)with out Sart/Stop System(KL9)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)with out Sart/Stop System(KL9)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)with out Sart/Stop System(KL9)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)with out Sart/Stop System(KL9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)with out Sart/Stop System(KL9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)with out Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)with out Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)with out Sart/Stop System(KL9)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)with out Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)with out Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)with out Sart/Stop System(KL9)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)with out Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)with out Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)with out Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●

Astra-J	[A] 2010	1.4L(LDD)without Sart/Stop System(KL9)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)without Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)without Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)without Sart/Stop System(KL9)	Radio	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)without Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)without Sart/Stop System(KL9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)without Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)without Sart/Stop System(KL9)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)without Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)without Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L(LDD)without Sart/Stop System(KL9)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L (LUJ)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L (LUJ)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L (LUJ)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L (LUJ)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[A] 2010	1.4L (LUJ)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[A] 2010	1.4L (LUJ)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[A] 2010	1.4L (LUJ)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK)	●	●	●	●
Astra-J	[A] 2010	1.4L (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L (LUJ)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L (LUJ)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[A] 2010	1.4L (LUJ)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L (LUJ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[A] 2010	1.4L (LUJ)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[A] 2010	1.4L (LUJ)	BCM (Body Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[A] 2010	1.4L (LUJ)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[A] 2010	1.4L (LUJ)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L (LUJ)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L (LUJ)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[A] 2010	1.4L (LUJ)	Radio	●	●	●	●
Astra-J	[A] 2010	1.4L (LUJ)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L (LUJ)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[A] 2010	1.4L (LUJ)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L (LUJ)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L (LUJ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[A] 2010	1.4L (LUJ)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L(LDE)with Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L(LDE)with Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●

Astra-J	[A] 2010	1.6L(LDE)with Sart/Stop System(KL9)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L(LDE)with Sart/Stop System(KL9)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[A] 2010	1.6L(LDE)with Sart/Stop System(KL9)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[A] 2010	1.6L(LDE)with Sart/Stop System(KL9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[A] 2010	1.6L(LDE)with Sart/Stop System(KL9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK)	●	●	●	●
Astra-J	[A] 2010	1.6L(LDE)with Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L(LDE)with Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L(LDE)with Sart/Stop System(KL9)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[A] 2010	1.6L(LDE)with Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L(LDE)with Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[A] 2010	1.6L(LDE)with Sart/Stop System(KL9)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[A] 2010	1.6L(LDE)with Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L(LDE)with Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[A] 2010	1.6L(LDE)with Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[A] 2010	1.6L(LDE)with Sart/Stop System(KL9)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L(LDE)with Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L(LDE)with Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[A] 2010	1.6L(LDE)with Sart/Stop System(KL9)	Radio	●	●	●	●
Astra-J	[A] 2010	1.6L(LDE)with Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L(LDE)with Sart/Stop System(KL9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[A] 2010	1.6L(LDE)with Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L(LDE)with Sart/Stop System(KL9)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L(LDE)with Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L(LDE)with Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L(LDE)with Sart/Stop System(KL9)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L(LDE)witho ut Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L(LDE)witho ut Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L(LDE)witho ut Sart/Stop System(KL9)	FPCM (Fuel Pump Control Module)	●	●	●	●

Astra-J	[A] 2010	1.6L (LDE) without Sart/Stop System(KL9)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[A] 2010	1.6L (LDE) without Sart/Stop System(KL9)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[A] 2010	1.6L (LDE) without Sart/Stop System(KL9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[A] 2010	1.6L (LDE) without Sart/Stop System(KL9)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK)	●	●	●	●
Astra-J	[A] 2010	1.6L (LDE) without Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LDE) without Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LDE) without Sart/Stop System(KL9)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LDE) without Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LDE) without Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LDE) without Sart/Stop System(KL9)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[A] 2010	1.6L (LDE) without Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LDE) without Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LDE) without Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[A] 2010	1.6L (LDE) without Sart/Stop System(KL9)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LDE) without Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LDE) without Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LDE) without Sart/Stop System(KL9)	Radio	●	●	●	●
Astra-J	[A] 2010	1.6L (LDE) without Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LDE) without Sart/Stop System(KL9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LDE) without Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LDE) without Sart/Stop System(KL9)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LDE) without Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LDE) without Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LDE) without Sart/Stop System(KL9)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LLU)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LLU)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LLU)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LLU)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[A] 2010	1.6L (LLU)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[A] 2010	1.6L (LLU)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Astra-J	[A] 2010	1.6L (LLU)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK)	●	●	●	●
Astra-J	[A] 2010	1.6L (LLU)	EBCM (Electronic Brake Control Module)	●	●	●	●

Astra-J	[A] 2010	1.6L (LLU)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LLU)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LLU)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LLU)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LLU)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[A] 2010	1.6L (LLU)	BCM (Body Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LLU)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LLU)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[A] 2010	1.6L (LLU)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LLU)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LLU)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LLU)	Radio	●	●	●	●
Astra-J	[A] 2010	1.6L (LLU)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LLU)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LLU)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LLU)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LLU)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LLU)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[A] 2010	1.6L (LLU)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPL)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPL)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPL)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPL)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPL)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPL)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPL)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPL)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPL)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPL)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPL)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPL)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPL)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPL)	BCM (Body Control Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPL)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPL)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPL)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPL)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPL)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPL)	Radio	●	●	●	●
Astra-J	[A] 2010	1.7L (LPL)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPL)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPL)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPL)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPL)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPL)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPL)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPV)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPV)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPV)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPV)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPV)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●

Astra-J	[A] 2010	1.7L (LPV)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPV)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPV)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPV)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPV)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPV)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPV)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPV)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPV)	BCM (Body Control Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPV)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPV)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPV)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPV)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPV)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPV)	Radio	●	●	●	●
Astra-J	[A] 2010	1.7L (LPV)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPV)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPV)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPV)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPV)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPV)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[A] 2010	1.7L (LPV)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS)	FICM (Fuel Injector Control Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS)	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS)	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS)	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS)	BCM (Body Control Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS)	IC (Instrument Cluster)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS)	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS)	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS)	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS)	Radio	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS)	ECM (Engine Control Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS) ecoFLEX	FICM (Fuel Injector Control Module)	●	●	●	●

Astra-J	[A] 2010	2.0L (LBS) ecoFLEX	FPCM (Fuel Pump Control Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS) ecoFLEX	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS) ecoFLEX	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS) ecoFLEX	TCM (Transmission Control Module) - T76 (MH7 M88 MH9 MHH MHT MHK MHB MHC MNR)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS) ecoFLEX	TCM (Transmission Control Module) - T76 (MH7 M88 MH9 MHH MHT MHK)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS) ecoFLEX	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS) ecoFLEX	PBCM (Parking Brake Control Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS) ecoFLEX	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS) ecoFLEX	PSCM (Power Steering Control Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS) ecoFLEX	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS) ecoFLEX	ESC (Electronic Suspension Control)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS) ecoFLEX	BCM (Body Control Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS) ecoFLEX	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS) ecoFLEX	IC (Instrument Cluster)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS) ecoFLEX	CACM (Chime Alarm Control Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS) ecoFLEX	HCM (Headlamp Control Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS) ecoFLEX	TIM (Trailer Interface Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS) ecoFLEX	Radio	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS) ecoFLEX	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS) ecoFLEX	MPIM (Multimedia Player Interface Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS) ecoFLEX	MTCM (Mobile Telephone Control Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS) ecoFLEX	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS) ecoFLEX	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS) ecoFLEX	PACM (Parking Assist Control Module)	●	●	●	●
Astra-J	[A] 2010	2.0L (LBS) ecoFLEX	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Astra-K	[G] 2016	1.0L (LE1)	ECM (Engine Control Module)	●	●	●	●
Astra-K	[G] 2016	1.0L (LE1)	MTAS (Manual Transmission Automatically Shifted)	●	●	●	●
Astra-K	[G] 2016	1.0L (LE1)	AT (Automatic Transmission T-76)	●	●	●	●
Astra-K	[G] 2016	1.0L (LE1)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-K	[G] 2016	1.0L (LE1)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-K	[G] 2016	1.0L (LE1)	BCM (Body Control Module)	●	●	●	●
Astra-K	[G] 2016	1.0L (LE1)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-K	[G] 2016	1.0L (LE1)	IC (Instrument Cluster)	●	●	●	●
Astra-K	[G] 2016	1.0L (LE1)	Radio	●	●	●	●
Astra-K	[G] 2016	1.0L (LE1)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-K	[G] 2016	1.0L (LE1)	HCM (Headlamp Control Module)	●	●	●	●
Astra-K	[G] 2016	1.0L (LE1)	TIM (Trailer Interface Module)	●	●	●	●
Astra-K	[G] 2016	1.0L (LE1)	Radio	●	●	●	●
Astra-K	[G] 2016	1.0L (LE1)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Astra-K	[G] 2016	1.0L (LE1)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Astra-K	[G] 2016	1.0L (LE1)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-K	[G] 2016	1.0L (LE1)	LCM (Liftgate Control Module)	●	●	●	●
Astra-K	[G] 2016	1.0L (LE1)	SMCM (Seat Memory Control Module)	●	●	●	●
Astra-K	[G] 2016	1.0L (LE1)	KECM (Keyless Entry Control Module)	●	●	●	●
Astra-K	[G] 2016	1.0L (LE1)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-K	[G] 2016	1.0L (LE1)	FCM (Frontview Camera Module)	●	●	●	●
Astra-K	[G] 2016	1.0L (LE1)	SCLCM (Steering Column Lock Control Module)	●	●	●	●

Astra-K	[G] 2016	1.0L (LE1)	PST (Power Supply Transformer)	●	●	●	●
Astra-K	[G] 2016	1.4L (LE2)	ECM (Engine Control Module)	●	●	●	●
Astra-K	[G] 2016	1.4L (LE2)	MTAS (Manual Transmission Automatically Shifted)	●	●	●	●
Astra-K	[G] 2016	1.4L (LE2)	AT (Automatic Transmission T-76)	●	●	●	●
Astra-K	[G] 2016	1.4L (LE2)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-K	[G] 2016	1.4L (LE2)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-K	[G] 2016	1.4L (LE2)	BCM (Body Control Module)	●	●	●	●
Astra-K	[G] 2016	1.4L (LE2)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-K	[G] 2016	1.4L (LE2)	IC (Instrument Cluster)	●	●	●	●
Astra-K	[G] 2016	1.4L (LE2)	Radio	●	●	●	●
Astra-K	[G] 2016	1.4L (LE2)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-K	[G] 2016	1.4L (LE2)	HCM (Headlamp Control Module)	●	●	●	●
Astra-K	[G] 2016	1.4L (LE2)	TIM (Trailer Interface Module)	●	●	●	●
Astra-K	[G] 2016	1.4L (LE2)	Radio	●	●	●	●
Astra-K	[G] 2016	1.4L (LE2)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Astra-K	[G] 2016	1.4L (LE2)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Astra-K	[G] 2016	1.4L (LE2)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-K	[G] 2016	1.4L (LE2)	LCM (Liftgate Control Module)	●	●	●	●
Astra-K	[G] 2016	1.4L (LE2)	SMCM (Seat Memory Control Module)	●	●	●	●
Astra-K	[G] 2016	1.4L (LE2)	KECM (Keyless Entry Control Module)	●	●	●	●
Astra-K	[G] 2016	1.4L (LE2)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-K	[G] 2016	1.4L (LE2)	FCM (Frontview Camera Module)	●	●	●	●
Astra-K	[G] 2016	1.4L (LE2)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-K	[G] 2016	1.4L (LE2)	PST (Power Supply Transformer)	●	●	●	●
Astra-K	[G] 2016	1.4L (LV7)	ECM (Engine Control Module)	●	●	●	●
Astra-K	[G] 2016	1.4L (LV7)	MTAS (Manual Transmission Automatically Shifted)	●	●	●	●
Astra-K	[G] 2016	1.4L (LV7)	AT (Automatic Transmission T-76)	●	●	●	●
Astra-K	[G] 2016	1.4L (LV7)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-K	[G] 2016	1.4L (LV7)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-K	[G] 2016	1.4L (LV7)	BCM (Body Control Module)	●	●	●	●
Astra-K	[G] 2016	1.4L (LV7)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-K	[G] 2016	1.4L (LV7)	IC (Instrument Cluster)	●	●	●	●
Astra-K	[G] 2016	1.4L (LV7)	Radio	●	●	●	●
Astra-K	[G] 2016	1.4L (LV7)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-K	[G] 2016	1.4L (LV7)	HCM (Headlamp Control Module)	●	●	●	●
Astra-K	[G] 2016	1.4L (LV7)	TIM (Trailer Interface Module)	●	●	●	●
Astra-K	[G] 2016	1.4L (LV7)	Radio	●	●	●	●
Astra-K	[G] 2016	1.4L (LV7)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Astra-K	[G] 2016	1.4L (LV7)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Astra-K	[G] 2016	1.4L (LV7)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-K	[G] 2016	1.4L (LV7)	LCM (Liftgate Control Module)	●	●	●	●
Astra-K	[G] 2016	1.4L (LV7)	SMCM (Seat Memory Control Module)	●	●	●	●
Astra-K	[G] 2016	1.4L (LV7)	KECM (Keyless Entry Control Module)	●	●	●	●
Astra-K	[G] 2016	1.4L (LV7)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-K	[G] 2016	1.4L (LV7)	FCM (Frontview Camera Module)	●	●	●	●
Astra-K	[G] 2016	1.4L (LV7)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-K	[G] 2016	1.4L (LV7)	PST (Power Supply Transformer)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVK)	ECM (Engine Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVK)	MTAS (Manual Transmission Automatically Shifted)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVK)	AT (Automatic Transmission T-76)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVK)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVK)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVK)	BCM (Body Control Module)	●	●	●	●

Astra-K	[G] 2016	1.6L (LVK)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVK)	IC (Instrument Cluster)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVK)	Radio	●	●	●	●
Astra-K	[G] 2016	1.6L (LVK)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVK)	HCM (Headlamp Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVK)	TIM (Trailer Interface Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVK)	Radio	●	●	●	●
Astra-K	[G] 2016	1.6L (LVK)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVK)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVK)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVK)	LCM (Liftgate Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVK)	SMCM (Seat Memory Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVK)	KECM (Keyless Entry Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVK)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVK)	FCM (Frontview Camera Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVK)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVK)	PST (Power Supply Transformer)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVL)	ECM (Engine Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVL)	MTAS (Manual Transmission Automatically Shifted)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVL)	AT (Automatic Transmission T-76)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVL)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVL)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVL)	BCM (Body Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVL)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVL)	IC (Instrument Cluster)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVL)	Radio	●	●	●	●
Astra-K	[G] 2016	1.6L (LVL)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVL)	HCM (Headlamp Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVL)	TIM (Trailer Interface Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVL)	Radio	●	●	●	●
Astra-K	[G] 2016	1.6L (LVL)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVL)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVL)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVL)	LCM (Liftgate Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVL)	SMCM (Seat Memory Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVL)	KECM (Keyless Entry Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVL)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVL)	FCM (Frontview Camera Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVL)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LVL)	PST (Power Supply Transformer)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWC)	ECM (Engine Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWC)	MTAS (Manual Transmission Automatically Shifted)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWC)	AT (Automatic Transmission T-76)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWC)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWC)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWC)	BCM (Body Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWC)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWC)	IC (Instrument Cluster)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWC)	Radio	●	●	●	●
Astra-K	[G] 2016	1.6L (LWC)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWC)	HCM (Headlamp Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWC)	TIM (Trailer Interface Module)	●	●	●	●

Astra-K	[G] 2016	1.6L (LWC)	Radio	●	●	●	●
Astra-K	[G] 2016	1.6L (LWC)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWC)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWC)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWC)	LCM (Liftgate Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWC)	SMCM (Seat Memory Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWC)	KECM (Keyless Entry Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWC)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWC)	FCM (Frontview Camera Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWC)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWC)	PST (Power Supply Transformer)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWQ)	ECM (Engine Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWQ)	MTAS (Manual Transmission Automatically Shifted)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWQ)	AT (Automatic Transmission T-76)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWQ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWQ)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWQ)	BCM (Body Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWQ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWQ)	IC (Instrument Cluster)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWQ)	Radio	●	●	●	●
Astra-K	[G] 2016	1.6L (LWQ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWQ)	HCM (Headlamp Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWQ)	TIM (Trailer Interface Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWQ)	Radio	●	●	●	●
Astra-K	[G] 2016	1.6L (LWQ)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWQ)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWQ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWQ)	LCM (Liftgate Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWQ)	SMCM (Seat Memory Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWQ)	KECM (Keyless Entry Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWQ)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWQ)	FCM (Frontview Camera Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWQ)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWQ)	PST (Power Supply Transformer)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWV)	ECM (Engine Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWV)	MTAS (Manual Transmission Automatically Shifted)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWV)	AT (Automatic Transmission T-76)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWV)	EBCM (Electronic Brake Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWV)	PSCM (Power Steering Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWV)	BCM (Body Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWV)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWV)	IC (Instrument Cluster)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWV)	Radio	●	●	●	●
Astra-K	[G] 2016	1.6L (LWV)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWV)	HCM (Headlamp Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWV)	TIM (Trailer Interface Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWV)	Radio	●	●	●	●
Astra-K	[G] 2016	1.6L (LWV)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWV)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWV)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWV)	LCM (Liftgate Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWV)	SMCM (Seat Memory Control Module)	●	●	●	●

Astra-K	[G] 2016	1.6L (LWV)	KECM (Keyless Entry Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWV)	PACM (Parking Assist Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWV)	FCM (Frontview Camera Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWV)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Astra-K	[G] 2016	1.6L (LWV)	PST (Power Supply Transformer)	●	●	●	●
Captiva(Long Body)	[A] 2010	2.0 L (Diesel)	ECM (Engine Control Module)	●	●	●	●
Captiva(Long Body)	[A] 2010	2.0 L (Diesel)	TCCM (Transfer Case Control Module)	●	●	●	●
Captiva(Long Body)	[A] 2010	2.0 L (Diesel)	AT (Automatic Transmission)	●	●	●	●
Captiva(Long Body)	[A] 2010	2.0 L (Diesel)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Captiva(Long Body)	[A] 2010	2.0 L (Diesel)	FPCM (Fuel Pump Control Module)	●	●	●	●
Captiva(Long Body)	[A] 2010	2.0 L (Diesel)	BCM (Body Control Module)	●	●	●	●
Captiva(Long Body)	[A] 2010	2.0 L (Diesel)	ECC (Electronic Climate Control)	●	●	●	●
Captiva(Long Body)	[A] 2010	2.0 L (Diesel)	IMMO (Immobiliser)	●	●	●	●
Captiva(Long Body)	[A] 2010	2.0 L (Diesel)	IC (Instrument Cluster)	●	●	●	●
Captiva(Long Body)	[A] 2010	2.0 L (Diesel)	PAS (Park Pilot)	●	●	●	●
Captiva(Long Body)	[A] 2010	2.0 L (Diesel)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Captiva(Long Body)	[A] 2010	2.0 L (Diesel)	RFA (Multipurpose Receiver Module)	●	●	●	●
Captiva(Long Body)	[A] 2010	Z 32 SE	ECM (Engine Control Module)	●	●	●	●
Captiva(Long Body)	[A] 2010	Z 32 SE	TCCM (Transfer Case Control Module)	●	●	●	●
Captiva(Long Body)	[A] 2010	Z 32 SE	AT (Automatic Transmission)	●	●	●	●
Captiva(Long Body)	[A] 2010	Z 32 SE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Captiva(Long Body)	[A] 2010	Z 32 SE	BCM (Body Control Module)	●	●	●	●
Captiva(Long Body)	[A] 2010	Z 32 SE	ECC (Electronic Climate Control)	●	●	●	●
Captiva(Long Body)	[A] 2010	Z 32 SE	IMMO (Immobiliser)	●	●	●	●
Captiva(Long Body)	[A] 2010	Z 32 SE	IC (Instrument Cluster)	●	●	●	●
Captiva(Long Body)	[A] 2010	Z 32 SE	ABCM (Auxiliary Body Control Module)	●	●	●	●
Captiva(Long Body)	[A] 2010	Z 32 SE	RFA (Multipurpose Receiver Module)	●	●	●	●
Captiva(Long Body)	[9] 2009	2.0 L (Diesel)	ECM (Engine Control Module)	●	●	●	●
Captiva(Long Body)	[9] 2009	2.0 L (Diesel)	TCCM (Transfer Case Control Module)	●	●	●	●
Captiva(Long Body)	[9] 2009	2.0 L (Diesel)	AT (Automatic Transmission)	●	●	●	●
Captiva(Long Body)	[9] 2009	2.0 L (Diesel)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Captiva(Long Body)	[9] 2009	2.0 L (Diesel)	FPCM (Fuel Pump Control Module)	●	●	●	●
Captiva(Long Body)	[9] 2009	2.0 L (Diesel)	BCM (Body Control Module)	●	●	●	●
Captiva(Long Body)	[9] 2009	2.0 L (Diesel)	ECC (Electronic Climate Control)	●	●	●	●
Captiva(Long Body)	[9] 2009	2.0 L (Diesel)	IMMO (Immobiliser)	●	●	●	●
Captiva(Long Body)	[9] 2009	2.0 L (Diesel)	IC (Instrument Cluster)	●	●	●	●
Captiva(Long Body)	[9] 2009	2.0 L (Diesel)	PAS (Park Pilot)	●	●	●	●
Captiva(Long Body)	[9] 2009	2.0 L (Diesel)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Captiva(Long Body)	[9] 2009	2.0 L (Diesel)	RFA (Multipurpose Receiver Module)	●	●	●	●
Captiva(Long Body)	[9] 2009	Z 32 SE	ECM (Engine Control Module)	●	●	●	●
Captiva(Long Body)	[9] 2009	Z 32 SE	TCCM (Transfer Case Control Module)	●	●	●	●
Captiva(Long Body)	[9] 2009	Z 32 SE	AT (Automatic Transmission)	●	●	●	●
Captiva(Long Body)	[9] 2009	Z 32 SE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Captiva(Long Body)	[9] 2009	Z 32 SE	BCM (Body Control Module)	●	●	●	●

Captiva(Long Body)	[9] 2009	Z 32 SE	ECC (Electronic Climate Control)	●	●	●	●
Captiva(Long Body)	[9] 2009	Z 32 SE	IMMO (Immobiliser)	●	●	●	●
Captiva(Long Body)	[9] 2009	Z 32 SE	IC (Instrument Cluster)	●	●	●	●
Captiva(Long Body)	[9] 2009	Z 32 SE	ABCM (Auxiliary Body Control Module)	●	●	●	●
Captiva(Long Body)	[9] 2009	Z 32 SE	RFA (Multipurpose Receiver Module)	●	●	●	●
Captiva(Long Body)	[8] 2008	2.0 L (Diesel)	ECM (Engine Control Module)	●	●	●	●
Captiva(Long Body)	[8] 2008	2.0 L (Diesel)	TCCM (Transfer Case Control Module)	●	●	●	●
Captiva(Long Body)	[8] 2008	2.0 L (Diesel)	AT (Automatic Transmission)	●	●	●	●
Captiva(Long Body)	[8] 2008	2.0 L (Diesel)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Captiva(Long Body)	[8] 2008	2.0 L (Diesel)	FPCM (Fuel Pump Control Module)	●	●	●	●
Captiva(Long Body)	[8] 2008	2.0 L (Diesel)	BCM (Body Control Module)	●	●	●	●
Captiva(Long Body)	[8] 2008	2.0 L (Diesel)	ECC (Electronic Climate Control)	●	●	●	●
Captiva(Long Body)	[8] 2008	2.0 L (Diesel)	IMMO (Immobiliser)	●	●	●	●
Captiva(Long Body)	[8] 2008	2.0 L (Diesel)	IC (Instrument Cluster)	●	●	●	●
Captiva(Long Body)	[8] 2008	2.0 L (Diesel)	PAS (Park Pilot)	●	●	●	●
Captiva(Long Body)	[8] 2008	2.0 L (Diesel)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Captiva(Long Body)	[8] 2008	2.0 L (Diesel)	RFA (Multipurpose Receiver Module)	●	●	●	●
Captiva(Long Body)	[8] 2008	Z 32 SE	ECM (Engine Control Module)	●	●	●	●
Captiva(Long Body)	[8] 2008	Z 32 SE	TCCM (Transfer Case Control Module)	●	●	●	●
Captiva(Long Body)	[8] 2008	Z 32 SE	AT (Automatic Transmission)	●	●	●	●
Captiva(Long Body)	[8] 2008	Z 32 SE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Captiva(Long Body)	[8] 2008	Z 32 SE	BCM (Body Control Module)	●	●	●	●
Captiva(Long Body)	[8] 2008	Z 32 SE	ECC (Electronic Climate Control)	●	●	●	●
Captiva(Long Body)	[8] 2008	Z 32 SE	IMMO (Immobiliser)	●	●	●	●
Captiva(Long Body)	[8] 2008	Z 32 SE	IC (Instrument Cluster)	●	●	●	●
Captiva(Long Body)	[8] 2008	Z 32 SE	ABCM (Auxiliary Body Control Module)	●	●	●	●
Captiva(Long Body)	[8] 2008	Z 32 SE	RFA (Multipurpose Receiver Module)	●	●	●	●
Captiva(Long Body)	[7] 2007	2.0 L (Diesel)	ECM (Engine Control Module)	●	●	●	●
Captiva(Long Body)	[7] 2007	2.0 L (Diesel)	TCCM (Transfer Case Control Module)	●	●	●	●
Captiva(Long Body)	[7] 2007	2.0 L (Diesel)	AT (Automatic Transmission)	●	●	●	●
Captiva(Long Body)	[7] 2007	2.0 L (Diesel)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Captiva(Long Body)	[7] 2007	2.0 L (Diesel)	FPCM (Fuel Pump Control Module)	●	●	●	●
Captiva(Long Body)	[7] 2007	2.0 L (Diesel)	BCM (Body Control Module)	●	●	●	●
Captiva(Long Body)	[7] 2007	2.0 L (Diesel)	ECC (Electronic Climate Control)	●	●	●	●
Captiva(Long Body)	[7] 2007	2.0 L (Diesel)	IMMO (Immobiliser)	●	●	●	●
Captiva(Long Body)	[7] 2007	2.0 L (Diesel)	IC (Instrument Cluster)	●	●	●	●
Captiva(Long Body)	[7] 2007	2.0 L (Diesel)	PAS (Park Pilot)	●	●	●	●
Captiva(Long Body)	[7] 2007	2.0 L (Diesel)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Captiva(Long Body)	[7] 2007	2.0 L (Diesel)	RFA (Multipurpose Receiver Module)	●	●	●	●
Captiva(Long Body)	[7] 2007	Z 32 SE	ECM (Engine Control Module)	●	●	●	●
Captiva(Long Body)	[7] 2007	Z 32 SE	TCCM (Transfer Case Control Module)	●	●	●	●
Captiva(Long Body)	[7] 2007	Z 32 SE	AT (Automatic Transmission)	●	●	●	●
Captiva(Long Body)	[7] 2007	Z 32 SE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●

Captiva(Long Body)	[7] 2007	Z 32 SE	BCM (Body Control Module)	●	●	●	●
Captiva(Long Body)	[7] 2007	Z 32 SE	ECC (Electronic Climate Control)	●	●	●	●
Captiva(Long Body)	[7] 2007	Z 32 SE	IMMO (Immobiliser)	●	●	●	●
Captiva(Long Body)	[7] 2007	Z 32 SE	IC (Instrument Cluster)	●	●	●	●
Captiva(Long Body)	[7] 2007	Z 32 SE	ABCM (Auxiliary Body Control Module)	●	●	●	●
Captiva(Long Body)	[7] 2007	Z 32 SE	RFA (Multipurpose Receiver Module)	●	●	●	●
Cascada	[G] 2016	1.4L (LUJ)	ECM (Engine Control Module)	●	●	●	●
Cascada	[G] 2016	1.4L (LUJ)	CCM (Chassis Control Module)	●	●	●	●
Cascada	[G] 2016	1.4L (LUJ)	TCM (Transmission Control Module)	●	●	●	●
Cascada	[G] 2016	1.4L (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Cascada	[G] 2016	1.4L (LUJ)	PBCM (Parking Brake Control Module)	●	●	●	●
Cascada	[G] 2016	1.4L (LUJ)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Cascada	[G] 2016	1.4L (LUJ)	PSCM (Power Steering Control Module)	●	●	●	●
Cascada	[G] 2016	1.4L (LUJ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Cascada	[G] 2016	1.4L (LUJ)	SCM (Suspension Control Module)	●	●	●	●
Cascada	[G] 2016	1.4L (LUJ)	BCM (Body Control Module)	●	●	●	●
Cascada	[G] 2016	1.4L (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Cascada	[G] 2016	1.4L (LUJ)	IC (Instrument Cluster)	●	●	●	●
Cascada	[G] 2016	1.4L (LUJ)	HCM (Headlamp Control Module)	●	●	●	●
Cascada	[G] 2016	1.4L (LUJ)	Radio	●	●	●	●
Cascada	[G] 2016	1.4L (LUJ)	Digital Radio	●	●	●	●
Cascada	[G] 2016	1.4L (LUJ)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Cascada	[G] 2016	1.4L (LUJ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Cascada	[G] 2016	1.4L (LUJ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Cascada	[G] 2016	1.4L (LUJ)	FTC (Folding Top Control)	●	●	●	●
Cascada	[G] 2016	1.4L (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Cascada	[G] 2016	1.4L (LUJ)	FCM (Frontview Camera Module)	●	●	●	●
Cascada	[G] 2016	1.6L (LWC)	ECM (Engine Control Module)	●	●	●	●
Cascada	[G] 2016	1.6L (LWC)	CCM (Chassis Control Module)	●	●	●	●
Cascada	[G] 2016	1.6L (LWC)	TCM (Transmission Control Module)	●	●	●	●
Cascada	[G] 2016	1.6L (LWC)	EBCM (Electronic Brake Control Module)	●	●	●	●
Cascada	[G] 2016	1.6L (LWC)	PBCM (Parking Brake Control Module)	●	●	●	●
Cascada	[G] 2016	1.6L (LWC)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Cascada	[G] 2016	1.6L (LWC)	PSCM (Power Steering Control Module)	●	●	●	●
Cascada	[G] 2016	1.6L (LWC)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Cascada	[G] 2016	1.6L (LWC)	SCM (Suspension Control Module)	●	●	●	●
Cascada	[G] 2016	1.6L (LWC)	BCM (Body Control Module)	●	●	●	●
Cascada	[G] 2016	1.6L (LWC)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Cascada	[G] 2016	1.6L (LWC)	IC (Instrument Cluster)	●	●	●	●
Cascada	[G] 2016	1.6L (LWC)	HCM (Headlamp Control Module)	●	●	●	●
Cascada	[G] 2016	1.6L (LWC)	Radio	●	●	●	●
Cascada	[G] 2016	1.6L (LWC)	Digital Radio	●	●	●	●
Cascada	[G] 2016	1.6L (LWC)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Cascada	[G] 2016	1.6L (LWC)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Cascada	[G] 2016	1.6L (LWC)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Cascada	[G] 2016	1.6L (LWC)	FTC (Folding Top Control)	●	●	●	●
Cascada	[G] 2016	1.6L (LWC)	PACM (Parking Assist Control Module)	●	●	●	●
Cascada	[G] 2016	1.6L (LWC)	FCM (Frontview Camera Module)	●	●	●	●
Cascada	[G] 2016	2.0L (LFS)	ECM (Engine Control Module)	●	●	●	●
Cascada	[G] 2016	2.0L (LFS)	CCM (Chassis Control Module)	●	●	●	●
Cascada	[G] 2016	2.0L (LFS)	TCM (Transmission Control Module)	●	●	●	●
Cascada	[G] 2016	2.0L (LFS)	EBCM (Electronic Brake Control Module)	●	●	●	●

Cascada	[G] 2016	2.0L (LFS)	PBCM (Parking Brake Control Module)	●	●	●	●
Cascada	[G] 2016	2.0L (LFS)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Cascada	[G] 2016	2.0L (LFS)	PSCM (Power Steering Control Module)	●	●	●	●
Cascada	[G] 2016	2.0L (LFS)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Cascada	[G] 2016	2.0L (LFS)	SCM (Suspension Control Module)	●	●	●	●
Cascada	[G] 2016	2.0L (LFS)	BCM (Body Control Module)	●	●	●	●
Cascada	[G] 2016	2.0L (LFS)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Cascada	[G] 2016	2.0L (LFS)	IC (Instrument Cluster)	●	●	●	●
Cascada	[G] 2016	2.0L (LFS)	HCM (Headlamp Control Module)	●	●	●	●
Cascada	[G] 2016	2.0L (LFS)	Radio	●	●	●	●
Cascada	[G] 2016	2.0L (LFS)	Digital Radio	●	●	●	●
Cascada	[G] 2016	2.0L (LFS)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Cascada	[G] 2016	2.0L (LFS)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Cascada	[G] 2016	2.0L (LFS)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Cascada	[G] 2016	2.0L (LFS)	FTC (Folding Top Control)	●	●	●	●
Cascada	[G] 2016	2.0L (LFS)	PACM (Parking Assist Control Module)	●	●	●	●
Cascada	[G] 2016	2.0L (LFS)	FCM (Frontview Camera Module)	●	●	●	●
Cascada	[F] 2015	1.4L (LUJ)	ECM (Engine Control Module)	●	●	●	●
Cascada	[F] 2015	1.4L (LUJ)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Cascada	[F] 2015	1.4L (LUJ)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Cascada	[F] 2015	1.4L (LUJ)	CCM (Chassis Control Module)	●	●	●	●
Cascada	[F] 2015	1.4L (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Cascada	[F] 2015	1.4L (LUJ)	PBCM (Parking Brake Control Module)	●	●	●	●
Cascada	[F] 2015	1.4L (LUJ)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Cascada	[F] 2015	1.4L (LUJ)	PSCM (Power Steering Control Module)	●	●	●	●
Cascada	[F] 2015	1.4L (LUJ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Cascada	[F] 2015	1.4L (LUJ)	ESC (Electronic Suspension Control)	●	●	●	●
Cascada	[F] 2015	1.4L (LUJ)	BCM (Body Control Module)	●	●	●	●
Cascada	[F] 2015	1.4L (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Cascada	[F] 2015	1.4L (LUJ)	IC (Instrument Cluster)	●	●	●	●
Cascada	[F] 2015	1.4L (LUJ)	HCM (Headlamp Control Module)	●	●	●	●
Cascada	[F] 2015	1.4L (LUJ)	Radio	●	●	●	●
Cascada	[F] 2015	1.4L (LUJ)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Cascada	[F] 2015	1.4L (LUJ)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Cascada	[F] 2015	1.4L (LUJ)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Cascada	[F] 2015	1.4L (LUJ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Cascada	[F] 2015	1.4L (LUJ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Cascada	[F] 2015	1.4L (LUJ)	FTC (Folding Top Control)	●	●	●	●
Cascada	[F] 2015	1.4L (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Cascada	[F] 2015	1.4L (LUJ)	FCM (Frontview Camera Module)	●	●	●	●
Cascada	[F] 2015	1.6L (LVP)	ECM (Engine Control Module)	●	●	●	●
Cascada	[F] 2015	1.6L (LVP)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Cascada	[F] 2015	1.6L (LVP)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Cascada	[F] 2015	1.6L (LVP)	CCM (Chassis Control Module)	●	●	●	●
Cascada	[F] 2015	1.6L (LVP)	EBCM (Electronic Brake Control Module)	●	●	●	●
Cascada	[F] 2015	1.6L (LVP)	PBCM (Parking Brake Control Module)	●	●	●	●
Cascada	[F] 2015	1.6L (LVP)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Cascada	[F] 2015	1.6L (LVP)	PSCM (Power Steering Control Module)	●	●	●	●
Cascada	[F] 2015	1.6L (LVP)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Cascada	[F] 2015	1.6L (LVP)	ESC (Electronic Suspension Control)	●	●	●	●
Cascada	[F] 2015	1.6L (LVP)	BCM (Body Control Module)	●	●	●	●
Cascada	[F] 2015	1.6L (LVP)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●

Cascada	[F] 2015	1.6L (LVP)	IC (Instrument Cluster)	●	●	●	●
Cascada	[F] 2015	1.6L (LVP)	HCM (Headlamp Control Module)	●	●	●	●
Cascada	[F] 2015	1.6L (LVP)	Radio	●	●	●	●
Cascada	[F] 2015	1.6L (LVP)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Cascada	[F] 2015	1.6L (LVP)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Cascada	[F] 2015	1.6L (LVP)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Cascada	[F] 2015	1.6L (LVP)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Cascada	[F] 2015	1.6L (LVP)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Cascada	[F] 2015	1.6L (LVP)	FTC (Folding Top Control)	●	●	●	●
Cascada	[F] 2015	1.6L (LVP)	PACM (Parking Assist Control Module)	●	●	●	●
Cascada	[F] 2015	1.6L (LVP)	FCM (Frontview Camera Module)	●	●	●	●
Cascada	[F] 2015	1.6L (LWC)	ECM (Engine Control Module)	●	●	●	●
Cascada	[F] 2015	1.6L (LWC)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Cascada	[F] 2015	1.6L (LWC)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Cascada	[F] 2015	1.6L (LWC)	CCM (Chassis Control Module)	●	●	●	●
Cascada	[F] 2015	1.6L (LWC)	EBCM (Electronic Brake Control Module)	●	●	●	●
Cascada	[F] 2015	1.6L (LWC)	PBCM (Parking Brake Control Module)	●	●	●	●
Cascada	[F] 2015	1.6L (LWC)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Cascada	[F] 2015	1.6L (LWC)	PSCM (Power Steering Control Module)	●	●	●	●
Cascada	[F] 2015	1.6L (LWC)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Cascada	[F] 2015	1.6L (LWC)	ESC (Electronic Suspension Control)	●	●	●	●
Cascada	[F] 2015	1.6L (LWC)	BCM (Body Control Module)	●	●	●	●
Cascada	[F] 2015	1.6L (LWC)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Cascada	[F] 2015	1.6L (LWC)	IC (Instrument Cluster)	●	●	●	●
Cascada	[F] 2015	1.6L (LWC)	HCM (Headlamp Control Module)	●	●	●	●
Cascada	[F] 2015	1.6L (LWC)	Radio	●	●	●	●
Cascada	[F] 2015	1.6L (LWC)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Cascada	[F] 2015	1.6L (LWC)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Cascada	[F] 2015	1.6L (LWC)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Cascada	[F] 2015	1.6L (LWC)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Cascada	[F] 2015	1.6L (LWC)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Cascada	[F] 2015	1.6L (LWC)	FTC (Folding Top Control)	●	●	●	●
Cascada	[F] 2015	1.6L (LWC)	PACM (Parking Assist Control Module)	●	●	●	●
Cascada	[F] 2015	1.6L (LWC)	FCM (Frontview Camera Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LBS)	ECM (Engine Control Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LBS)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Cascada	[F] 2015	2.0L (LBS)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Cascada	[F] 2015	2.0L (LBS)	CCM (Chassis Control Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LBS)	EBCM (Electronic Brake Control Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LBS)	PBCM (Parking Brake Control Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LBS)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LBS)	PSCM (Power Steering Control Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LBS)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LBS)	ESC (Electronic Suspension Control)	●	●	●	●
Cascada	[F] 2015	2.0L (LBS)	BCM (Body Control Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LBS)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LBS)	IC (Instrument Cluster)	●	●	●	●
Cascada	[F] 2015	2.0L (LBS)	HCM (Headlamp Control Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LBS)	Radio	●	●	●	●
Cascada	[F] 2015	2.0L (LBS)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LBS)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LBS)	MTCM (Mobile Telephone Control Module)	●	●	●	●

Cascada	[F] 2015	2.0L (LBS)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Cascada	[F] 2015	2.0L (LBS)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LBS)	FTC (Folding Top Control)	●	●	●	●
Cascada	[F] 2015	2.0L (LBS)	PACM (Parking Assist Control Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LBS)	FCM (Frontview Camera Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LBY)	ECM (Engine Control Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LBY)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Cascada	[F] 2015	2.0L (LBY)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Cascada	[F] 2015	2.0L (LBY)	CCM (Chassis Control Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LBY)	EBCM (Electronic Brake Control Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LBY)	PBCM (Parking Brake Control Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LBY)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LBY)	PSCM (Power Steering Control Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LBY)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LBY)	ESC (Electronic Suspension Control)	●	●	●	●
Cascada	[F] 2015	2.0L (LBY)	BCM (Body Control Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LBY)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LBY)	IC (Instrument Cluster)	●	●	●	●
Cascada	[F] 2015	2.0L (LBY)	HCM (Headlamp Control Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LBY)	Radio	●	●	●	●
Cascada	[F] 2015	2.0L (LBY)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LBY)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LBY)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LBY)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Cascada	[F] 2015	2.0L (LBY)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LBY)	FTC (Folding Top Control)	●	●	●	●
Cascada	[F] 2015	2.0L (LBY)	PACM (Parking Assist Control Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LBY)	FCM (Frontview Camera Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LFS)	ECM (Engine Control Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LFS)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Cascada	[F] 2015	2.0L (LFS)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Cascada	[F] 2015	2.0L (LFS)	CCM (Chassis Control Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LFS)	EBCM (Electronic Brake Control Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LFS)	PBCM (Parking Brake Control Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LFS)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LFS)	PSCM (Power Steering Control Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LFS)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LFS)	ESC (Electronic Suspension Control)	●	●	●	●
Cascada	[F] 2015	2.0L (LFS)	BCM (Body Control Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LFS)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LFS)	IC (Instrument Cluster)	●	●	●	●
Cascada	[F] 2015	2.0L (LFS)	HCM (Headlamp Control Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LFS)	Radio	●	●	●	●
Cascada	[F] 2015	2.0L (LFS)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LFS)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LFS)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LFS)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Cascada	[F] 2015	2.0L (LFS)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LFS)	FTC (Folding Top Control)	●	●	●	●
Cascada	[F] 2015	2.0L (LFS)	PACM (Parking Assist Control Module)	●	●	●	●
Cascada	[F] 2015	2.0L (LFS)	FCM (Frontview Camera Module)	●	●	●	●
Cascada	[E] 2014	1.4L (LUJ)	ECM (Engine Control Module)	●	●	●	●
Cascada	[E] 2014	1.4L (LUJ)	CCM (Chassis Control Module)	●	●	●	●

Cascada	[E] 2014	1.4L (LUJ)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Cascada	[E] 2014	1.4L (LUJ)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Cascada	[E] 2014	1.4L (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Cascada	[E] 2014	1.4L (LUJ)	PBCM (Parking Brake Control Module)	●	●	●	●
Cascada	[E] 2014	1.4L (LUJ)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Cascada	[E] 2014	1.4L (LUJ)	PSCM (Power Steering Control Module)	●	●	●	●
Cascada	[E] 2014	1.4L (LUJ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Cascada	[E] 2014	1.4L (LUJ)	ESC (Electronic Suspension Control)	●	●	●	●
Cascada	[E] 2014	1.4L (LUJ)	BCM (Body Control Module)	●	●	●	●
Cascada	[E] 2014	1.4L (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Cascada	[E] 2014	1.4L (LUJ)	IC (Instrument Cluster)	●	●	●	●
Cascada	[E] 2014	1.4L (LUJ)	HCM (Headlamp Control Module)	●	●	●	●
Cascada	[E] 2014	1.4L (LUJ)	Radio	●	●	●	●
Cascada	[E] 2014	1.4L (LUJ)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Cascada	[E] 2014	1.4L (LUJ)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Cascada	[E] 2014	1.4L (LUJ)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Cascada	[E] 2014	1.4L (LUJ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Cascada	[E] 2014	1.4L (LUJ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Cascada	[E] 2014	1.4L (LUJ)	FTC (Folding Top Control)	●	●	●	●
Cascada	[E] 2014	1.4L (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Cascada	[E] 2014	1.4L (LUJ)	FCM (Frontview Camera Module)	●	●	●	●
Cascada	[E] 2014	1.6L (LVP)	ECM (Engine Control Module)	●	●	●	●
Cascada	[E] 2014	1.6L (LVP)	CCM (Chassis Control Module)	●	●	●	●
Cascada	[E] 2014	1.6L (LVP)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Cascada	[E] 2014	1.6L (LVP)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Cascada	[E] 2014	1.6L (LVP)	EBCM (Electronic Brake Control Module)	●	●	●	●
Cascada	[E] 2014	1.6L (LVP)	PBCM (Parking Brake Control Module)	●	●	●	●
Cascada	[E] 2014	1.6L (LVP)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Cascada	[E] 2014	1.6L (LVP)	PSCM (Power Steering Control Module)	●	●	●	●
Cascada	[E] 2014	1.6L (LVP)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Cascada	[E] 2014	1.6L (LVP)	ESC (Electronic Suspension Control)	●	●	●	●
Cascada	[E] 2014	1.6L (LVP)	BCM (Body Control Module)	●	●	●	●
Cascada	[E] 2014	1.6L (LVP)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Cascada	[E] 2014	1.6L (LVP)	IC (Instrument Cluster)	●	●	●	●
Cascada	[E] 2014	1.6L (LVP)	HCM (Headlamp Control Module)	●	●	●	●
Cascada	[E] 2014	1.6L (LVP)	Radio	●	●	●	●
Cascada	[E] 2014	1.6L (LVP)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Cascada	[E] 2014	1.6L (LVP)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Cascada	[E] 2014	1.6L (LVP)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Cascada	[E] 2014	1.6L (LVP)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Cascada	[E] 2014	1.6L (LVP)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Cascada	[E] 2014	1.6L (LVP)	FTC (Folding Top Control)	●	●	●	●
Cascada	[E] 2014	1.6L (LVP)	PACM (Parking Assist Control Module)	●	●	●	●
Cascada	[E] 2014	1.6L (LVP)	FCM (Frontview Camera Module)	●	●	●	●
Cascada	[E] 2014	1.6L (LWC)	ECM (Engine Control Module)	●	●	●	●
Cascada	[E] 2014	1.6L (LWC)	CCM (Chassis Control Module)	●	●	●	●
Cascada	[E] 2014	1.6L (LWC)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Cascada	[E] 2014	1.6L (LWC)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Cascada	[E] 2014	1.6L (LWC)	EBCM (Electronic Brake Control Module)	●	●	●	●
Cascada	[E] 2014	1.6L (LWC)	PBCM (Parking Brake Control Module)	●	●	●	●
Cascada	[E] 2014	1.6L (LWC)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Cascada	[E] 2014	1.6L (LWC)	PSCM (Power Steering Control Module)	●	●	●	●

Cascada	[E] 2014	1.6L (LWC)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Cascada	[E] 2014	1.6L (LWC)	ESC (Electronic Suspension Control)	●	●	●	●
Cascada	[E] 2014	1.6L (LWC)	BCM (Body Control Module)	●	●	●	●
Cascada	[E] 2014	1.6L (LWC)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Cascada	[E] 2014	1.6L (LWC)	IC (Instrument Cluster)	●	●	●	●
Cascada	[E] 2014	1.6L (LWC)	HCM (Headlamp Control Module)	●	●	●	●
Cascada	[E] 2014	1.6L (LWC)	Radio	●	●	●	●
Cascada	[E] 2014	1.6L (LWC)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Cascada	[E] 2014	1.6L (LWC)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Cascada	[E] 2014	1.6L (LWC)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Cascada	[E] 2014	1.6L (LWC)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Cascada	[E] 2014	1.6L (LWC)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Cascada	[E] 2014	1.6L (LWC)	FTC (Folding Top Control)	●	●	●	●
Cascada	[E] 2014	1.6L (LWC)	PACM (Parking Assist Control Module)	●	●	●	●
Cascada	[E] 2014	1.6L (LWC)	FCM (Frontview Camera Module)	●	●	●	●
Cascada	[E] 2014	2.0L (LBS)	ECM (Engine Control Module)	●	●	●	●
Cascada	[E] 2014	2.0L (LBS)	CCM (Chassis Control Module)	●	●	●	●
Cascada	[E] 2014	2.0L (LBS)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Cascada	[E] 2014	2.0L (LBS)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Cascada	[E] 2014	2.0L (LBS)	EBCM (Electronic Brake Control Module)	●	●	●	●
Cascada	[E] 2014	2.0L (LBS)	PBCM (Parking Brake Control Module)	●	●	●	●
Cascada	[E] 2014	2.0L (LBS)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Cascada	[E] 2014	2.0L (LBS)	PSCM (Power Steering Control Module)	●	●	●	●
Cascada	[E] 2014	2.0L (LBS)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Cascada	[E] 2014	2.0L (LBS)	ESC (Electronic Suspension Control)	●	●	●	●
Cascada	[E] 2014	2.0L (LBS)	BCM (Body Control Module)	●	●	●	●
Cascada	[E] 2014	2.0L (LBS)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Cascada	[E] 2014	2.0L (LBS)	IC (Instrument Cluster)	●	●	●	●
Cascada	[E] 2014	2.0L (LBS)	HCM (Headlamp Control Module)	●	●	●	●
Cascada	[E] 2014	2.0L (LBS)	Radio	●	●	●	●
Cascada	[E] 2014	2.0L (LBS)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Cascada	[E] 2014	2.0L (LBS)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Cascada	[E] 2014	2.0L (LBS)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Cascada	[E] 2014	2.0L (LBS)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Cascada	[E] 2014	2.0L (LBS)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Cascada	[E] 2014	2.0L (LBS)	FTC (Folding Top Control)	●	●	●	●
Cascada	[E] 2014	2.0L (LBS)	PACM (Parking Assist Control Module)	●	●	●	●
Cascada	[E] 2014	2.0L (LBS)	FCM (Frontview Camera Module)	●	●	●	●
Cascada	[E] 2014	2.0L (LBY)	ECM (Engine Control Module)	●	●	●	●
Cascada	[E] 2014	2.0L (LBY)	CCM (Chassis Control Module)	●	●	●	●
Cascada	[E] 2014	2.0L (LBY)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Cascada	[E] 2014	2.0L (LBY)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Cascada	[E] 2014	2.0L (LBY)	EBCM (Electronic Brake Control Module)	●	●	●	●
Cascada	[E] 2014	2.0L (LBY)	PBCM (Parking Brake Control Module)	●	●	●	●
Cascada	[E] 2014	2.0L (LBY)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Cascada	[E] 2014	2.0L (LBY)	PSCM (Power Steering Control Module)	●	●	●	●
Cascada	[E] 2014	2.0L (LBY)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Cascada	[E] 2014	2.0L (LBY)	ESC (Electronic Suspension Control)	●	●	●	●
Cascada	[E] 2014	2.0L (LBY)	BCM (Body Control Module)	●	●	●	●
Cascada	[E] 2014	2.0L (LBY)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Cascada	[E] 2014	2.0L (LBY)	IC (Instrument Cluster)	●	●	●	●
Cascada	[E] 2014	2.0L (LBY)	HCM (Headlamp Control Module)	●	●	●	●

Cascada	[E] 2014	2.0L (LBY)	Radio	●	●	●	●
Cascada	[E] 2014	2.0L (LBY)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Cascada	[E] 2014	2.0L (LBY)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Cascada	[E] 2014	2.0L (LBY)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Cascada	[E] 2014	2.0L (LBY)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Cascada	[E] 2014	2.0L (LBY)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Cascada	[E] 2014	2.0L (LBY)	FTC (Folding Top Control)	●	●	●	●
Cascada	[E] 2014	2.0L (LBY)	PACM (Parking Assist Control Module)	●	●	●	●
Cascada	[E] 2014	2.0L (LBY)	FCM (Frontview Camera Module)	●	●	●	●
Cascada	[D] 2013	1.4L (LUJ)	ECM (Engine Control Module)	●	●	●	●
Cascada	[D] 2013	1.4L (LUJ)	FPCM (Fuel Pump Control Module)	●	●	●	●
Cascada	[D] 2013	1.4L (LUJ)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Cascada	[D] 2013	1.4L (LUJ)	TCM (Transmission Control Module) - T76 (MH7 M8 M9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Cascada	[D] 2013	1.4L (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Cascada	[D] 2013	1.4L (LUJ)	PBCM (Parking Brake Control Module)	●	●	●	●
Cascada	[D] 2013	1.4L (LUJ)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Cascada	[D] 2013	1.4L (LUJ)	PSCM (Power Steering Control Module)	●	●	●	●
Cascada	[D] 2013	1.4L (LUJ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Cascada	[D] 2013	1.4L (LUJ)	ESC (Electronic Suspension Control)	●	●	●	●
Cascada	[D] 2013	1.4L (LUJ)	BCM (Body Control Module)	●	●	●	●
Cascada	[D] 2013	1.4L (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Cascada	[D] 2013	1.4L (LUJ)	IC (Instrument Cluster)	●	●	●	●
Cascada	[D] 2013	1.4L (LUJ)	HCM (Headlamp Control Module)	●	●	●	●
Cascada	[D] 2013	1.4L (LUJ)	Radio	●	●	●	●
Cascada	[D] 2013	1.4L (LUJ)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Cascada	[D] 2013	1.4L (LUJ)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Cascada	[D] 2013	1.4L (LUJ)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Cascada	[D] 2013	1.4L (LUJ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Cascada	[D] 2013	1.4L (LUJ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Cascada	[D] 2013	1.4L (LUJ)	FTC (Folding Top Control)	●	●	●	●
Cascada	[D] 2013	1.4L (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Cascada	[D] 2013	1.4L (LUJ)	FCM (Frontview Camera Module)	●	●	●	●
Cascada	[D] 2013	1.6L (LVP)	ECM (Engine Control Module)	●	●	●	●
Cascada	[D] 2013	1.6L (LVP)	FPCM (Fuel Pump Control Module)	●	●	●	●
Cascada	[D] 2013	1.6L (LVP)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Cascada	[D] 2013	1.6L (LVP)	TCM (Transmission Control Module) - T76 (MH7 M8 M9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Cascada	[D] 2013	1.6L (LVP)	EBCM (Electronic Brake Control Module)	●	●	●	●
Cascada	[D] 2013	1.6L (LVP)	PBCM (Parking Brake Control Module)	●	●	●	●
Cascada	[D] 2013	1.6L (LVP)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Cascada	[D] 2013	1.6L (LVP)	PSCM (Power Steering Control Module)	●	●	●	●
Cascada	[D] 2013	1.6L (LVP)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Cascada	[D] 2013	1.6L (LVP)	ESC (Electronic Suspension Control)	●	●	●	●
Cascada	[D] 2013	1.6L (LVP)	BCM (Body Control Module)	●	●	●	●
Cascada	[D] 2013	1.6L (LVP)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Cascada	[D] 2013	1.6L (LVP)	IC (Instrument Cluster)	●	●	●	●
Cascada	[D] 2013	1.6L (LVP)	HCM (Headlamp Control Module)	●	●	●	●
Cascada	[D] 2013	1.6L (LVP)	Radio	●	●	●	●
Cascada	[D] 2013	1.6L (LVP)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Cascada	[D] 2013	1.6L (LVP)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Cascada	[D] 2013	1.6L (LVP)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Cascada	[D] 2013	1.6L (LVP)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Cascada	[D] 2013	1.6L (LVP)	FSHCM (Front Seat Heating Control Module)	●	●	●	●

Cascada	[D] 2013	1.6L (LVP)	FTC (Folding Top Control)	●	●	●	●
Cascada	[D] 2013	1.6L (LVP)	PACM (Parking Assist Control Module)	●	●	●	●
Cascada	[D] 2013	1.6L (LVP)	FCM (Frontview Camera Module)	●	●	●	●
Cascada	[D] 2013	2.0L (LBS)	ECM (Engine Control Module)	●	●	●	●
Cascada	[D] 2013	2.0L (LBS)	FPCM (Fuel Pump Control Module)	●	●	●	●
Cascada	[D] 2013	2.0L (LBS)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Cascada	[D] 2013	2.0L (LBS)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Cascada	[D] 2013	2.0L (LBS)	EBCM (Electronic Brake Control Module)	●	●	●	●
Cascada	[D] 2013	2.0L (LBS)	PBCM (Parking Brake Control Module)	●	●	●	●
Cascada	[D] 2013	2.0L (LBS)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Cascada	[D] 2013	2.0L (LBS)	PSCM (Power Steering Control Module)	●	●	●	●
Cascada	[D] 2013	2.0L (LBS)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Cascada	[D] 2013	2.0L (LBS)	ESC (Electronic Suspension Control)	●	●	●	●
Cascada	[D] 2013	2.0L (LBS)	BCM (Body Control Module)	●	●	●	●
Cascada	[D] 2013	2.0L (LBS)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Cascada	[D] 2013	2.0L (LBS)	IC (Instrument Cluster)	●	●	●	●
Cascada	[D] 2013	2.0L (LBS)	HCM (Headlamp Control Module)	●	●	●	●
Cascada	[D] 2013	2.0L (LBS)	Radio	●	●	●	●
Cascada	[D] 2013	2.0L (LBS)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Cascada	[D] 2013	2.0L (LBS)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Cascada	[D] 2013	2.0L (LBS)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Cascada	[D] 2013	2.0L (LBS)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Cascada	[D] 2013	2.0L (LBS)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Cascada	[D] 2013	2.0L (LBS)	FTC (Folding Top Control)	●	●	●	●
Cascada	[D] 2013	2.0L (LBS)	PACM (Parking Assist Control Module)	●	●	●	●
Cascada	[D] 2013	2.0L (LBS)	FCM (Frontview Camera Module)	●	●	●	●
Cascada	[D] 2013	2.0L (LBY)	ECM (Engine Control Module)	●	●	●	●
Cascada	[D] 2013	2.0L (LBY)	FPCM (Fuel Pump Control Module)	●	●	●	●
Cascada	[D] 2013	2.0L (LBY)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Cascada	[D] 2013	2.0L (LBY)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Cascada	[D] 2013	2.0L (LBY)	EBCM (Electronic Brake Control Module)	●	●	●	●
Cascada	[D] 2013	2.0L (LBY)	PBCM (Parking Brake Control Module)	●	●	●	●
Cascada	[D] 2013	2.0L (LBY)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Cascada	[D] 2013	2.0L (LBY)	PSCM (Power Steering Control Module)	●	●	●	●
Cascada	[D] 2013	2.0L (LBY)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Cascada	[D] 2013	2.0L (LBY)	ESC (Electronic Suspension Control)	●	●	●	●
Cascada	[D] 2013	2.0L (LBY)	BCM (Body Control Module)	●	●	●	●
Cascada	[D] 2013	2.0L (LBY)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Cascada	[D] 2013	2.0L (LBY)	IC (Instrument Cluster)	●	●	●	●
Cascada	[D] 2013	2.0L (LBY)	HCM (Headlamp Control Module)	●	●	●	●
Cascada	[D] 2013	2.0L (LBY)	Radio	●	●	●	●
Cascada	[D] 2013	2.0L (LBY)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Cascada	[D] 2013	2.0L (LBY)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Cascada	[D] 2013	2.0L (LBY)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Cascada	[D] 2013	2.0L (LBY)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Cascada	[D] 2013	2.0L (LBY)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Cascada	[D] 2013	2.0L (LBY)	FTC (Folding Top Control)	●	●	●	●
Cascada	[D] 2013	2.0L (LBY)	PACM (Parking Assist Control Module)	●	●	●	●
Cascada	[D] 2013	2.0L (LBY)	FCM (Frontview Camera Module)	●	●	●	●
Combo	[7] 2007	Z 10 XEP	ECM (Engine Control Module)	●	●	●	●
Combo	[7] 2007	Z 10 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[7] 2007	Z 10 XEP	MTA (Easytronic)	●	●	●	●
Combo	[7] 2007	Z 10 XEP	AF 13-II/17/20/22	●	●	●	●

Combo	[7] 2007	Z 10 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[7] 2007	Z 10 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[7] 2007	Z 10 XEP	EPS (Electronic Power Steering)	●	●	●	●
Combo	[7] 2007	Z 10 XEP	AOH (Add On Heater)	●	●	●	●
Combo	[7] 2007	Z 10 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[7] 2007	Z 10 XEP	BCM (Body Control Module)	●	●	●	●
Combo	[7] 2007	Z 10 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[7] 2007	Z 10 XEP	IMMO (Immobiliser)	●	●	●	●
Combo	[7] 2007	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Combo	[7] 2007	Z 12 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[7] 2007	Z 12 XE	MTA (Easytronic)	●	●	●	●
Combo	[7] 2007	Z 12 XE	AF 13-II/17/20/22	●	●	●	●
Combo	[7] 2007	Z 12 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[7] 2007	Z 12 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[7] 2007	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Combo	[7] 2007	Z 12 XE	AOH (Add On Heater)	●	●	●	●
Combo	[7] 2007	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[7] 2007	Z 12 XE	BCM (Body Control Module)	●	●	●	●
Combo	[7] 2007	Z 12 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[7] 2007	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Combo	[7] 2007	Z 12 XEP	ECM (Engine Control Module)	●	●	●	●
Combo	[7] 2007	Z 12 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[7] 2007	Z 12 XEP	MTA (Easytronic)	●	●	●	●
Combo	[7] 2007	Z 12 XEP	AF 13-II/17/20/22	●	●	●	●
Combo	[7] 2007	Z 12 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[7] 2007	Z 12 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[7] 2007	Z 12 XEP	EPS (Electronic Power Steering)	●	●	●	●
Combo	[7] 2007	Z 12 XEP	AOH (Add On Heater)	●	●	●	●
Combo	[7] 2007	Z 12 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[7] 2007	Z 12 XEP	BCM (Body Control Module)	●	●	●	●
Combo	[7] 2007	Z 12 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[7] 2007	Z 12 XEP	IMMO (Immobiliser)	●	●	●	●
Combo	[7] 2007	Y 13 DT	ECM (Engine Control Module)	●	●	●	●
Combo	[7] 2007	Y 13 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[7] 2007	Y 13 DT	MTA (Easytronic)	●	●	●	●
Combo	[7] 2007	Y 13 DT	AF 13-II/17/20/22	●	●	●	●
Combo	[7] 2007	Y 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[7] 2007	Y 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[7] 2007	Y 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Combo	[7] 2007	Y 13 DT	AOH (Add On Heater)	●	●	●	●
Combo	[7] 2007	Y 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[7] 2007	Y 13 DT	BCM (Body Control Module)	●	●	●	●
Combo	[7] 2007	Y 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[7] 2007	Y 13 DT	IMMO (Immobiliser)	●	●	●	●
Combo	[7] 2007	Z 13 DT	ECM (Engine Control Module)	●	●	●	●
Combo	[7] 2007	Z 13 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[7] 2007	Z 13 DT	MTA (Easytronic)	●	●	●	●
Combo	[7] 2007	Z 13 DT	AF 13-II/17/20/22	●	●	●	●
Combo	[7] 2007	Z 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[7] 2007	Z 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[7] 2007	Z 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Combo	[7] 2007	Z 13 DT	AOH (Add On Heater)	●	●	●	●
Combo	[7] 2007	Z 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[7] 2007	Z 13 DT	BCM (Body Control Module)	●	●	●	●
Combo	[7] 2007	Z 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[7] 2007	Z 13 DT	IMMO (Immobiliser)	●	●	●	●

Combo	[7] 2007	Z 13 DTJ	ECM (Engine Control Module)	●	●	●	●
Combo	[7] 2007	Z 13 DTJ	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[7] 2007	Z 13 DTJ	MTA (Easytronic)	●	●	●	●
Combo	[7] 2007	Z 13 DTJ	AF 13-II/17/20/22	●	●	●	●
Combo	[7] 2007	Z 13 DTJ	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[7] 2007	Z 13 DTJ	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[7] 2007	Z 13 DTJ	EPS (Electronic Power Steering)	●	●	●	●
Combo	[7] 2007	Z 13 DTJ	AOH (Add On Heater)	●	●	●	●
Combo	[7] 2007	Z 13 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[7] 2007	Z 13 DTJ	BCM (Body Control Module)	●	●	●	●
Combo	[7] 2007	Z 13 DTJ	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[7] 2007	Z 13 DTJ	IMMO (Immobiliser)	●	●	●	●
Combo	[7] 2007	Z 14 XE	ECM (Engine Control Module)	●	●	●	●
Combo	[7] 2007	Z 14 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[7] 2007	Z 14 XE	MTA (Easytronic)	●	●	●	●
Combo	[7] 2007	Z 14 XE	AF 13-II/17/20/22	●	●	●	●
Combo	[7] 2007	Z 14 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[7] 2007	Z 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[7] 2007	Z 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Combo	[7] 2007	Z 14 XE	AOH (Add On Heater)	●	●	●	●
Combo	[7] 2007	Z 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[7] 2007	Z 14 XE	BCM (Body Control Module)	●	●	●	●
Combo	[7] 2007	Z 14 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[7] 2007	Z 14 XE	IMMO (Immobiliser)	●	●	●	●
Combo	[7] 2007	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Combo	[7] 2007	Z 14 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[7] 2007	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Combo	[7] 2007	Z 14 XEP	AF 13-II/17/20/22	●	●	●	●
Combo	[7] 2007	Z 14 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[7] 2007	Z 14 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[7] 2007	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Combo	[7] 2007	Z 14 XEP	AOH (Add On Heater)	●	●	●	●
Combo	[7] 2007	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[7] 2007	Z 14 XEP	BCM (Body Control Module)	●	●	●	●
Combo	[7] 2007	Z 14 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[7] 2007	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Combo	[7] 2007	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Combo	[7] 2007	Z 16 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[7] 2007	Z 16 SE	MTA (Easytronic)	●	●	●	●
Combo	[7] 2007	Z 16 SE	AF 13-II/17/20/22	●	●	●	●
Combo	[7] 2007	Z 16 SE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[7] 2007	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[7] 2007	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Combo	[7] 2007	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Combo	[7] 2007	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[7] 2007	Z 16 SE	BCM (Body Control Module)	●	●	●	●
Combo	[7] 2007	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[7] 2007	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Combo	[7] 2007	Z 16 YNG	ECM (Engine Control Module)	●	●	●	●
Combo	[7] 2007	Z 16 YNG	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[7] 2007	Z 16 YNG	MTA (Easytronic)	●	●	●	●
Combo	[7] 2007	Z 16 YNG	AF 13-II/17/20/22	●	●	●	●
Combo	[7] 2007	Z 16 YNG	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[7] 2007	Z 16 YNG	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[7] 2007	Z 16 YNG	EPS (Electronic Power Steering)	●	●	●	●
Combo	[7] 2007	Z 16 YNG	AOH (Add On Heater)	●	●	●	●

Combo	[7] 2007	Z 16 YNG	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[7] 2007	Z 16 YNG	BCM (Body Control Module)	●	●	●	●
Combo	[7] 2007	Z 16 YNG	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[7] 2007	Z 16 YNG	IMMO (Immobiliser)	●	●	●	●
Combo	[7] 2007	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Combo	[7] 2007	Y 17 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[7] 2007	Y 17 DT	MTA (Easytronic)	●	●	●	●
Combo	[7] 2007	Y 17 DT	AF 13-II/17/20/22	●	●	●	●
Combo	[7] 2007	Y 17 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[7] 2007	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[7] 2007	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Combo	[7] 2007	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Combo	[7] 2007	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[7] 2007	Y 17 DT	BCM (Body Control Module)	●	●	●	●
Combo	[7] 2007	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[7] 2007	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Combo	[7] 2007	Y 17 DTL	ECM (Engine Control Module)	●	●	●	●
Combo	[7] 2007	Y 17 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[7] 2007	Y 17 DTL	MTA (Easytronic)	●	●	●	●
Combo	[7] 2007	Y 17 DTL	AF 13-II/17/20/22	●	●	●	●
Combo	[7] 2007	Y 17 DTL	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[7] 2007	Y 17 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[7] 2007	Y 17 DTL	EPS (Electronic Power Steering)	●	●	●	●
Combo	[7] 2007	Y 17 DTL	AOH (Add On Heater)	●	●	●	●
Combo	[7] 2007	Y 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[7] 2007	Y 17 DTL	BCM (Body Control Module)	●	●	●	●
Combo	[7] 2007	Y 17 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[7] 2007	Y 17 DTL	IMMO (Immobiliser)	●	●	●	●
Combo	[7] 2007	Z 17 DTH	ECM (Engine Control Module)	●	●	●	●
Combo	[7] 2007	Z 17 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[7] 2007	Z 17 DTH	MTA (Easytronic)	●	●	●	●
Combo	[7] 2007	Z 17 DTH	AF 13-II/17/20/22	●	●	●	●
Combo	[7] 2007	Z 17 DTH	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[7] 2007	Z 17 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[7] 2007	Z 17 DTH	EPS (Electronic Power Steering)	●	●	●	●
Combo	[7] 2007	Z 17 DTH	AOH (Add On Heater)	●	●	●	●
Combo	[7] 2007	Z 17 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[7] 2007	Z 17 DTH	BCM (Body Control Module)	●	●	●	●
Combo	[7] 2007	Z 17 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[7] 2007	Z 17 DTH	IMMO (Immobiliser)	●	●	●	●
Combo	[7] 2007	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Combo	[7] 2007	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[7] 2007	Z 18 XE	MTA (Easytronic)	●	●	●	●
Combo	[7] 2007	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Combo	[7] 2007	Z 18 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[7] 2007	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[7] 2007	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Combo	[7] 2007	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Combo	[7] 2007	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[7] 2007	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Combo	[7] 2007	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[7] 2007	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Combo	[6] 2006	Z 10 XEP	ECM (Engine Control Module)	●	●	●	●
Combo	[6] 2006	Z 10 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[6] 2006	Z 10 XEP	MTA (Easytronic)	●	●	●	●
Combo	[6] 2006	Z 10 XEP	AF 13-II/17/20/22	●	●	●	●

Combo	[6] 2006	Z 10 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[6] 2006	Z 10 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[6] 2006	Z 10 XEP	EPS (Electronic Power Steering)	●	●	●	●
Combo	[6] 2006	Z 10 XEP	AOH (Add On Heater)	●	●	●	●
Combo	[6] 2006	Z 10 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[6] 2006	Z 10 XEP	BCM (Body Control Module)	●	●	●	●
Combo	[6] 2006	Z 10 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[6] 2006	Z 10 XEP	IMMO (Immobiliser)	●	●	●	●
Combo	[6] 2006	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Combo	[6] 2006	Z 12 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[6] 2006	Z 12 XE	MTA (Easytronic)	●	●	●	●
Combo	[6] 2006	Z 12 XE	AF 13-II/17/20/22	●	●	●	●
Combo	[6] 2006	Z 12 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[6] 2006	Z 12 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[6] 2006	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Combo	[6] 2006	Z 12 XE	AOH (Add On Heater)	●	●	●	●
Combo	[6] 2006	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[6] 2006	Z 12 XE	BCM (Body Control Module)	●	●	●	●
Combo	[6] 2006	Z 12 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[6] 2006	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Combo	[6] 2006	Z 12 XEP	ECM (Engine Control Module)	●	●	●	●
Combo	[6] 2006	Z 12 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[6] 2006	Z 12 XEP	MTA (Easytronic)	●	●	●	●
Combo	[6] 2006	Z 12 XEP	AF 13-II/17/20/22	●	●	●	●
Combo	[6] 2006	Z 12 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[6] 2006	Z 12 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[6] 2006	Z 12 XEP	EPS (Electronic Power Steering)	●	●	●	●
Combo	[6] 2006	Z 12 XEP	AOH (Add On Heater)	●	●	●	●
Combo	[6] 2006	Z 12 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[6] 2006	Z 12 XEP	BCM (Body Control Module)	●	●	●	●
Combo	[6] 2006	Z 12 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[6] 2006	Z 12 XEP	IMMO (Immobiliser)	●	●	●	●
Combo	[6] 2006	Y 13 DT	ECM (Engine Control Module)	●	●	●	●
Combo	[6] 2006	Y 13 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[6] 2006	Y 13 DT	MTA (Easytronic)	●	●	●	●
Combo	[6] 2006	Y 13 DT	AF 13-II/17/20/22	●	●	●	●
Combo	[6] 2006	Y 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[6] 2006	Y 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[6] 2006	Y 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Combo	[6] 2006	Y 13 DT	AOH (Add On Heater)	●	●	●	●
Combo	[6] 2006	Y 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[6] 2006	Y 13 DT	BCM (Body Control Module)	●	●	●	●
Combo	[6] 2006	Y 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[6] 2006	Y 13 DT	IMMO (Immobiliser)	●	●	●	●
Combo	[6] 2006	Z 13 DT	ECM (Engine Control Module)	●	●	●	●
Combo	[6] 2006	Z 13 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[6] 2006	Z 13 DT	MTA (Easytronic)	●	●	●	●
Combo	[6] 2006	Z 13 DT	AF 13-II/17/20/22	●	●	●	●
Combo	[6] 2006	Z 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[6] 2006	Z 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[6] 2006	Z 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Combo	[6] 2006	Z 13 DT	AOH (Add On Heater)	●	●	●	●
Combo	[6] 2006	Z 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[6] 2006	Z 13 DT	BCM (Body Control Module)	●	●	●	●
Combo	[6] 2006	Z 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[6] 2006	Z 13 DT	IMMO (Immobiliser)	●	●	●	●

Combo	[6] 2006	Z 14 XE	ECM (Engine Control Module)	●	●	●	●
Combo	[6] 2006	Z 14 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[6] 2006	Z 14 XE	MTA (Easytronic)	●	●	●	●
Combo	[6] 2006	Z 14 XE	AF 13-II/17/20/22	●	●	●	●
Combo	[6] 2006	Z 14 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[6] 2006	Z 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[6] 2006	Z 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Combo	[6] 2006	Z 14 XE	AOH (Add On Heater)	●	●	●	●
Combo	[6] 2006	Z 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[6] 2006	Z 14 XE	BCM (Body Control Module)	●	●	●	●
Combo	[6] 2006	Z 14 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[6] 2006	Z 14 XE	IMMO (Immobiliser)	●	●	●	●
Combo	[6] 2006	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Combo	[6] 2006	Z 14 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[6] 2006	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Combo	[6] 2006	Z 14 XEP	AF 13-II/17/20/22	●	●	●	●
Combo	[6] 2006	Z 14 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[6] 2006	Z 14 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[6] 2006	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Combo	[6] 2006	Z 14 XEP	AOH (Add On Heater)	●	●	●	●
Combo	[6] 2006	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[6] 2006	Z 14 XEP	BCM (Body Control Module)	●	●	●	●
Combo	[6] 2006	Z 14 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[6] 2006	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Combo	[6] 2006	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Combo	[6] 2006	Z 16 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[6] 2006	Z 16 SE	MTA (Easytronic)	●	●	●	●
Combo	[6] 2006	Z 16 SE	AF 13-II/17/20/22	●	●	●	●
Combo	[6] 2006	Z 16 SE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[6] 2006	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[6] 2006	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Combo	[6] 2006	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Combo	[6] 2006	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[6] 2006	Z 16 SE	BCM (Body Control Module)	●	●	●	●
Combo	[6] 2006	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[6] 2006	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Combo	[6] 2006	Z 16 YNG	ECM (Engine Control Module)	●	●	●	●
Combo	[6] 2006	Z 16 YNG	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[6] 2006	Z 16 YNG	MTA (Easytronic)	●	●	●	●
Combo	[6] 2006	Z 16 YNG	AF 13-II/17/20/22	●	●	●	●
Combo	[6] 2006	Z 16 YNG	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[6] 2006	Z 16 YNG	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[6] 2006	Z 16 YNG	EPS (Electronic Power Steering)	●	●	●	●
Combo	[6] 2006	Z 16 YNG	AOH (Add On Heater)	●	●	●	●
Combo	[6] 2006	Z 16 YNG	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[6] 2006	Z 16 YNG	BCM (Body Control Module)	●	●	●	●
Combo	[6] 2006	Z 16 YNG	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[6] 2006	Z 16 YNG	IMMO (Immobiliser)	●	●	●	●
Combo	[6] 2006	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Combo	[6] 2006	Y 17 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[6] 2006	Y 17 DT	MTA (Easytronic)	●	●	●	●
Combo	[6] 2006	Y 17 DT	AF 13-II/17/20/22	●	●	●	●
Combo	[6] 2006	Y 17 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[6] 2006	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[6] 2006	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Combo	[6] 2006	Y 17 DT	AOH (Add On Heater)	●	●	●	●

Combo	[6] 2006	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[6] 2006	Y 17 DT	BCM (Body Control Module)	●	●	●	●
Combo	[6] 2006	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[6] 2006	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Combo	[6] 2006	Y 17 DTL	ECM (Engine Control Module)	●	●	●	●
Combo	[6] 2006	Y 17 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[6] 2006	Y 17 DTL	MTA (Easytronic)	●	●	●	●
Combo	[6] 2006	Y 17 DTL	AF 13-II/17/20/22	●	●	●	●
Combo	[6] 2006	Y 17 DTL	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[6] 2006	Y 17 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[6] 2006	Y 17 DTL	EPS (Electronic Power Steering)	●	●	●	●
Combo	[6] 2006	Y 17 DTL	AOH (Add On Heater)	●	●	●	●
Combo	[6] 2006	Y 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[6] 2006	Y 17 DTL	BCM (Body Control Module)	●	●	●	●
Combo	[6] 2006	Y 17 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[6] 2006	Y 17 DTL	IMMO (Immobiliser)	●	●	●	●
Combo	[6] 2006	Z 17 DTH	ECM (Engine Control Module)	●	●	●	●
Combo	[6] 2006	Z 17 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[6] 2006	Z 17 DTH	MTA (Easytronic)	●	●	●	●
Combo	[6] 2006	Z 17 DTH	AF 13-II/17/20/22	●	●	●	●
Combo	[6] 2006	Z 17 DTH	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[6] 2006	Z 17 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[6] 2006	Z 17 DTH	EPS (Electronic Power Steering)	●	●	●	●
Combo	[6] 2006	Z 17 DTH	AOH (Add On Heater)	●	●	●	●
Combo	[6] 2006	Z 17 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[6] 2006	Z 17 DTH	BCM (Body Control Module)	●	●	●	●
Combo	[6] 2006	Z 17 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[6] 2006	Z 17 DTH	IMMO (Immobiliser)	●	●	●	●
Combo	[6] 2006	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Combo	[6] 2006	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[6] 2006	Z 18 XE	MTA (Easytronic)	●	●	●	●
Combo	[6] 2006	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Combo	[6] 2006	Z 18 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[6] 2006	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[6] 2006	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Combo	[6] 2006	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Combo	[6] 2006	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[6] 2006	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Combo	[6] 2006	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[6] 2006	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Combo	[5] 2005	Z 10 XEP	ECM (Engine Control Module)	●	●	●	●
Combo	[5] 2005	Z 10 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[5] 2005	Z 10 XEP	MTA (Easytronic)	●	●	●	●
Combo	[5] 2005	Z 10 XEP	AF 13-II/17/20/22	●	●	●	●
Combo	[5] 2005	Z 10 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[5] 2005	Z 10 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[5] 2005	Z 10 XEP	EPS (Electronic Power Steering)	●	●	●	●
Combo	[5] 2005	Z 10 XEP	AOH (Add On Heater)	●	●	●	●
Combo	[5] 2005	Z 10 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[5] 2005	Z 10 XEP	BCM (Body Control Module)	●	●	●	●
Combo	[5] 2005	Z 10 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[5] 2005	Z 10 XEP	IMMO (Immobiliser)	●	●	●	●
Combo	[5] 2005	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Combo	[5] 2005	Z 12 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[5] 2005	Z 12 XE	MTA (Easytronic)	●	●	●	●
Combo	[5] 2005	Z 12 XE	AF 13-II/17/20/22	●	●	●	●

Combo	[5] 2005	Z 12 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[5] 2005	Z 12 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[5] 2005	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Combo	[5] 2005	Z 12 XE	AOH (Add On Heater)	●	●	●	●
Combo	[5] 2005	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[5] 2005	Z 12 XE	BCM (Body Control Module)	●	●	●	●
Combo	[5] 2005	Z 12 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[5] 2005	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Combo	[5] 2005	Z 12 XEP	ECM (Engine Control Module)	●	●	●	●
Combo	[5] 2005	Z 12 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[5] 2005	Z 12 XEP	MTA (Easytronic)	●	●	●	●
Combo	[5] 2005	Z 12 XEP	AF 13-II/17/20/22	●	●	●	●
Combo	[5] 2005	Z 12 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[5] 2005	Z 12 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[5] 2005	Z 12 XEP	EPS (Electronic Power Steering)	●	●	●	●
Combo	[5] 2005	Z 12 XEP	AOH (Add On Heater)	●	●	●	●
Combo	[5] 2005	Z 12 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[5] 2005	Z 12 XEP	BCM (Body Control Module)	●	●	●	●
Combo	[5] 2005	Z 12 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[5] 2005	Z 12 XEP	IMMO (Immobiliser)	●	●	●	●
Combo	[5] 2005	Y 13 DT	ECM (Engine Control Module)	●	●	●	●
Combo	[5] 2005	Y 13 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[5] 2005	Y 13 DT	MTA (Easytronic)	●	●	●	●
Combo	[5] 2005	Y 13 DT	AF 13-II/17/20/22	●	●	●	●
Combo	[5] 2005	Y 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[5] 2005	Y 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[5] 2005	Y 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Combo	[5] 2005	Y 13 DT	AOH (Add On Heater)	●	●	●	●
Combo	[5] 2005	Y 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[5] 2005	Y 13 DT	BCM (Body Control Module)	●	●	●	●
Combo	[5] 2005	Y 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[5] 2005	Y 13 DT	IMMO (Immobiliser)	●	●	●	●
Combo	[5] 2005	Z 13 DT	ECM (Engine Control Module)	●	●	●	●
Combo	[5] 2005	Z 13 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[5] 2005	Z 13 DT	MTA (Easytronic)	●	●	●	●
Combo	[5] 2005	Z 13 DT	AF 13-II/17/20/22	●	●	●	●
Combo	[5] 2005	Z 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[5] 2005	Z 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[5] 2005	Z 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Combo	[5] 2005	Z 13 DT	AOH (Add On Heater)	●	●	●	●
Combo	[5] 2005	Z 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[5] 2005	Z 13 DT	BCM (Body Control Module)	●	●	●	●
Combo	[5] 2005	Z 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[5] 2005	Z 13 DT	IMMO (Immobiliser)	●	●	●	●
Combo	[5] 2005	Z 14 XE	ECM (Engine Control Module)	●	●	●	●
Combo	[5] 2005	Z 14 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[5] 2005	Z 14 XE	MTA (Easytronic)	●	●	●	●
Combo	[5] 2005	Z 14 XE	AF 13-II/17/20/22	●	●	●	●
Combo	[5] 2005	Z 14 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[5] 2005	Z 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[5] 2005	Z 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Combo	[5] 2005	Z 14 XE	AOH (Add On Heater)	●	●	●	●
Combo	[5] 2005	Z 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[5] 2005	Z 14 XE	BCM (Body Control Module)	●	●	●	●
Combo	[5] 2005	Z 14 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[5] 2005	Z 14 XE	IMMO (Immobiliser)	●	●	●	●

Combo	[5] 2005	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Combo	[5] 2005	Z 14 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[5] 2005	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Combo	[5] 2005	Z 14 XEP	AF 13-II/17/20/22	●	●	●	●
Combo	[5] 2005	Z 14 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[5] 2005	Z 14 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[5] 2005	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Combo	[5] 2005	Z 14 XEP	AOH (Add On Heater)	●	●	●	●
Combo	[5] 2005	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[5] 2005	Z 14 XEP	BCM (Body Control Module)	●	●	●	●
Combo	[5] 2005	Z 14 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[5] 2005	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Combo	[5] 2005	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Combo	[5] 2005	Z 16 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[5] 2005	Z 16 SE	MTA (Easytronic)	●	●	●	●
Combo	[5] 2005	Z 16 SE	AF 13-II/17/20/22	●	●	●	●
Combo	[5] 2005	Z 16 SE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[5] 2005	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[5] 2005	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Combo	[5] 2005	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Combo	[5] 2005	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[5] 2005	Z 16 SE	BCM (Body Control Module)	●	●	●	●
Combo	[5] 2005	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[5] 2005	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Combo	[5] 2005	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Combo	[5] 2005	Y 17 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[5] 2005	Y 17 DT	MTA (Easytronic)	●	●	●	●
Combo	[5] 2005	Y 17 DT	AF 13-II/17/20/22	●	●	●	●
Combo	[5] 2005	Y 17 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[5] 2005	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[5] 2005	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Combo	[5] 2005	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Combo	[5] 2005	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[5] 2005	Y 17 DT	BCM (Body Control Module)	●	●	●	●
Combo	[5] 2005	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[5] 2005	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Combo	[5] 2005	Y 17 DTL	ECM (Engine Control Module)	●	●	●	●
Combo	[5] 2005	Y 17 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[5] 2005	Y 17 DTL	MTA (Easytronic)	●	●	●	●
Combo	[5] 2005	Y 17 DTL	AF 13-II/17/20/22	●	●	●	●
Combo	[5] 2005	Y 17 DTL	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[5] 2005	Y 17 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[5] 2005	Y 17 DTL	EPS (Electronic Power Steering)	●	●	●	●
Combo	[5] 2005	Y 17 DTL	AOH (Add On Heater)	●	●	●	●
Combo	[5] 2005	Y 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[5] 2005	Y 17 DTL	BCM (Body Control Module)	●	●	●	●
Combo	[5] 2005	Y 17 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[5] 2005	Y 17 DTL	IMMO (Immobiliser)	●	●	●	●
Combo	[5] 2005	Z 17 DTH	ECM (Engine Control Module)	●	●	●	●
Combo	[5] 2005	Z 17 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[5] 2005	Z 17 DTH	MTA (Easytronic)	●	●	●	●
Combo	[5] 2005	Z 17 DTH	AF 13-II/17/20/22	●	●	●	●
Combo	[5] 2005	Z 17 DTH	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[5] 2005	Z 17 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[5] 2005	Z 17 DTH	EPS (Electronic Power Steering)	●	●	●	●
Combo	[5] 2005	Z 17 DTH	AOH (Add On Heater)	●	●	●	●

Combo	[5] 2005	Z 17 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[5] 2005	Z 17 DTH	BCM (Body Control Module)	●	●	●	●
Combo	[5] 2005	Z 17 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[5] 2005	Z 17 DTH	IMMO (Immobiliser)	●	●	●	●
Combo	[5] 2005	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Combo	[5] 2005	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[5] 2005	Z 18 XE	MTA (Easytronic)	●	●	●	●
Combo	[5] 2005	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Combo	[5] 2005	Z 18 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[5] 2005	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[5] 2005	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Combo	[5] 2005	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Combo	[5] 2005	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[5] 2005	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Combo	[5] 2005	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[5] 2005	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Combo	[4] 2004	Z 10 XEP	ECM (Engine Control Module)	●	●	●	●
Combo	[4] 2004	Z 10 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[4] 2004	Z 10 XEP	MTA (Easytronic)	●	●	●	●
Combo	[4] 2004	Z 10 XEP	AF 13-II/17/20/22	●	●	●	●
Combo	[4] 2004	Z 10 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[4] 2004	Z 10 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[4] 2004	Z 10 XEP	EPS (Electronic Power Steering)	●	●	●	●
Combo	[4] 2004	Z 10 XEP	AOH (Add On Heater)	●	●	●	●
Combo	[4] 2004	Z 10 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[4] 2004	Z 10 XEP	BCM (Body Control Module)	●	●	●	●
Combo	[4] 2004	Z 10 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[4] 2004	Z 10 XEP	IMMO (Immobiliser)	●	●	●	●
Combo	[4] 2004	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Combo	[4] 2004	Z 12 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[4] 2004	Z 12 XE	MTA (Easytronic)	●	●	●	●
Combo	[4] 2004	Z 12 XE	AF 13-II/17/20/22	●	●	●	●
Combo	[4] 2004	Z 12 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[4] 2004	Z 12 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[4] 2004	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Combo	[4] 2004	Z 12 XE	AOH (Add On Heater)	●	●	●	●
Combo	[4] 2004	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[4] 2004	Z 12 XE	BCM (Body Control Module)	●	●	●	●
Combo	[4] 2004	Z 12 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[4] 2004	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Combo	[4] 2004	Z 13 DT	ECM (Engine Control Module)	●	●	●	●
Combo	[4] 2004	Z 13 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[4] 2004	Z 13 DT	MTA (Easytronic)	●	●	●	●
Combo	[4] 2004	Z 13 DT	AF 13-II/17/20/22	●	●	●	●
Combo	[4] 2004	Z 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[4] 2004	Z 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[4] 2004	Z 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Combo	[4] 2004	Z 13 DT	AOH (Add On Heater)	●	●	●	●
Combo	[4] 2004	Z 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[4] 2004	Z 13 DT	BCM (Body Control Module)	●	●	●	●
Combo	[4] 2004	Z 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[4] 2004	Z 13 DT	IMMO (Immobiliser)	●	●	●	●
Combo	[4] 2004	Z 14 XE	ECM (Engine Control Module)	●	●	●	●
Combo	[4] 2004	Z 14 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[4] 2004	Z 14 XE	MTA (Easytronic)	●	●	●	●
Combo	[4] 2004	Z 14 XE	AF 13-II/17/20/22	●	●	●	●

Combo	[4] 2004	Z 14 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[4] 2004	Z 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[4] 2004	Z 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Combo	[4] 2004	Z 14 XE	AOH (Add On Heater)	●	●	●	●
Combo	[4] 2004	Z 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[4] 2004	Z 14 XE	BCM (Body Control Module)	●	●	●	●
Combo	[4] 2004	Z 14 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[4] 2004	Z 14 XE	IMMO (Immobiliser)	●	●	●	●
Combo	[4] 2004	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Combo	[4] 2004	Z 14 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[4] 2004	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Combo	[4] 2004	Z 14 XEP	AF 13-II/17/20/22	●	●	●	●
Combo	[4] 2004	Z 14 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[4] 2004	Z 14 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[4] 2004	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Combo	[4] 2004	Z 14 XEP	AOH (Add On Heater)	●	●	●	●
Combo	[4] 2004	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[4] 2004	Z 14 XEP	BCM (Body Control Module)	●	●	●	●
Combo	[4] 2004	Z 14 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[4] 2004	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Combo	[4] 2004	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Combo	[4] 2004	Z 16 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[4] 2004	Z 16 SE	MTA (Easytronic)	●	●	●	●
Combo	[4] 2004	Z 16 SE	AF 13-II/17/20/22	●	●	●	●
Combo	[4] 2004	Z 16 SE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[4] 2004	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[4] 2004	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Combo	[4] 2004	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Combo	[4] 2004	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[4] 2004	Z 16 SE	BCM (Body Control Module)	●	●	●	●
Combo	[4] 2004	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[4] 2004	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Combo	[4] 2004	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Combo	[4] 2004	Y 17 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[4] 2004	Y 17 DT	MTA (Easytronic)	●	●	●	●
Combo	[4] 2004	Y 17 DT	AF 13-II/17/20/22	●	●	●	●
Combo	[4] 2004	Y 17 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[4] 2004	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[4] 2004	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Combo	[4] 2004	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Combo	[4] 2004	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[4] 2004	Y 17 DT	BCM (Body Control Module)	●	●	●	●
Combo	[4] 2004	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[4] 2004	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Combo	[4] 2004	Y 17 DTL	ECM (Engine Control Module)	●	●	●	●
Combo	[4] 2004	Y 17 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[4] 2004	Y 17 DTL	MTA (Easytronic)	●	●	●	●
Combo	[4] 2004	Y 17 DTL	AF 13-II/17/20/22	●	●	●	●
Combo	[4] 2004	Y 17 DTL	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[4] 2004	Y 17 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[4] 2004	Y 17 DTL	EPS (Electronic Power Steering)	●	●	●	●
Combo	[4] 2004	Y 17 DTL	AOH (Add On Heater)	●	●	●	●
Combo	[4] 2004	Y 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[4] 2004	Y 17 DTL	BCM (Body Control Module)	●	●	●	●
Combo	[4] 2004	Y 17 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[4] 2004	Y 17 DTL	IMMO (Immobiliser)	●	●	●	●

Combo	[4] 2004	Z 17 DTH	ECM (Engine Control Module)	●	●	●	●
Combo	[4] 2004	Z 17 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[4] 2004	Z 17 DTH	MTA (Easytronic)	●	●	●	●
Combo	[4] 2004	Z 17 DTH	AF 13-II/17/20/22	●	●	●	●
Combo	[4] 2004	Z 17 DTH	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[4] 2004	Z 17 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[4] 2004	Z 17 DTH	EPS (Electronic Power Steering)	●	●	●	●
Combo	[4] 2004	Z 17 DTH	AOH (Add On Heater)	●	●	●	●
Combo	[4] 2004	Z 17 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[4] 2004	Z 17 DTH	BCM (Body Control Module)	●	●	●	●
Combo	[4] 2004	Z 17 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[4] 2004	Z 17 DTH	IMMO (Immobiliser)	●	●	●	●
Combo	[4] 2004	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Combo	[4] 2004	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[4] 2004	Z 18 XE	MTA (Easytronic)	●	●	●	●
Combo	[4] 2004	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Combo	[4] 2004	Z 18 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[4] 2004	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[4] 2004	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Combo	[4] 2004	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Combo	[4] 2004	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[4] 2004	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Combo	[4] 2004	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[4] 2004	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Combo	[3] 2003	Z 10 XE	ECM (Engine Control Module)	●	●	●	●
Combo	[3] 2003	Z 10 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[3] 2003	Z 10 XE	MTA (Easytronic)	●	●	●	●
Combo	[3] 2003	Z 10 XE	AF 13-II/17/20/22	●	●	●	●
Combo	[3] 2003	Z 10 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[3] 2003	Z 10 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[3] 2003	Z 10 XE	EPS (Electronic Power Steering)	●	●	●	●
Combo	[3] 2003	Z 10 XE	AOH (Add On Heater)	●	●	●	●
Combo	[3] 2003	Z 10 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[3] 2003	Z 10 XE	BCM (Body Control Module)	●	●	●	●
Combo	[3] 2003	Z 10 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[3] 2003	Z 10 XE	IMMO (Immobiliser)	●	●	●	●
Combo	[3] 2003	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Combo	[3] 2003	Z 12 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[3] 2003	Z 12 XE	MTA (Easytronic)	●	●	●	●
Combo	[3] 2003	Z 12 XE	AF 13-II/17/20/22	●	●	●	●
Combo	[3] 2003	Z 12 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[3] 2003	Z 12 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[3] 2003	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Combo	[3] 2003	Z 12 XE	AOH (Add On Heater)	●	●	●	●
Combo	[3] 2003	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[3] 2003	Z 12 XE	BCM (Body Control Module)	●	●	●	●
Combo	[3] 2003	Z 12 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[3] 2003	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Combo	[3] 2003	Z 14 XE	ECM (Engine Control Module)	●	●	●	●
Combo	[3] 2003	Z 14 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[3] 2003	Z 14 XE	MTA (Easytronic)	●	●	●	●
Combo	[3] 2003	Z 14 XE	AF 13-II/17/20/22	●	●	●	●
Combo	[3] 2003	Z 14 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[3] 2003	Z 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[3] 2003	Z 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Combo	[3] 2003	Z 14 XE	AOH (Add On Heater)	●	●	●	●

Combo	[3] 2003	Z 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[3] 2003	Z 14 XE	BCM (Body Control Module)	●	●	●	●
Combo	[3] 2003	Z 14 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[3] 2003	Z 14 XE	IMMO (Immobiliser)	●	●	●	●
Combo	[3] 2003	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Combo	[3] 2003	Z 16 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[3] 2003	Z 16 SE	MTA (Easytronic)	●	●	●	●
Combo	[3] 2003	Z 16 SE	AF 13-II/17/20/22	●	●	●	●
Combo	[3] 2003	Z 16 SE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[3] 2003	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[3] 2003	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Combo	[3] 2003	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Combo	[3] 2003	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[3] 2003	Z 16 SE	BCM (Body Control Module)	●	●	●	●
Combo	[3] 2003	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[3] 2003	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Combo	[3] 2003	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Combo	[3] 2003	Y 17 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[3] 2003	Y 17 DT	MTA (Easytronic)	●	●	●	●
Combo	[3] 2003	Y 17 DT	AF 13-II/17/20/22	●	●	●	●
Combo	[3] 2003	Y 17 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[3] 2003	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[3] 2003	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Combo	[3] 2003	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Combo	[3] 2003	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[3] 2003	Y 17 DT	BCM (Body Control Module)	●	●	●	●
Combo	[3] 2003	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[3] 2003	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Combo	[3] 2003	Y 17 DTL	ECM (Engine Control Module)	●	●	●	●
Combo	[3] 2003	Y 17 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[3] 2003	Y 17 DTL	MTA (Easytronic)	●	●	●	●
Combo	[3] 2003	Y 17 DTL	AF 13-II/17/20/22	●	●	●	●
Combo	[3] 2003	Y 17 DTL	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[3] 2003	Y 17 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[3] 2003	Y 17 DTL	EPS (Electronic Power Steering)	●	●	●	●
Combo	[3] 2003	Y 17 DTL	AOH (Add On Heater)	●	●	●	●
Combo	[3] 2003	Y 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[3] 2003	Y 17 DTL	BCM (Body Control Module)	●	●	●	●
Combo	[3] 2003	Y 17 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[3] 2003	Y 17 DTL	IMMO (Immobiliser)	●	●	●	●
Combo	[3] 2003	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Combo	[3] 2003	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[3] 2003	Z 18 XE	MTA (Easytronic)	●	●	●	●
Combo	[3] 2003	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Combo	[3] 2003	Z 18 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[3] 2003	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[3] 2003	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Combo	[3] 2003	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Combo	[3] 2003	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[3] 2003	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Combo	[3] 2003	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[3] 2003	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Combo	[2] 2002	Z 10 XE	ECM (Engine Control Module)	●	●	●	●
Combo	[2] 2002	Z 10 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[2] 2002	Z 10 XE	MTA (Easytronic)	●	●	●	●
Combo	[2] 2002	Z 10 XE	AF 13-II/17/20/22	●	●	●	●

Combo	[2] 2002	Z 10 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[2] 2002	Z 10 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[2] 2002	Z 10 XE	EPS (Electronic Power Steering)	●	●	●	●
Combo	[2] 2002	Z 10 XE	AOH (Add On Heater)	●	●	●	●
Combo	[2] 2002	Z 10 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[2] 2002	Z 10 XE	BCM (Body Control Module)	●	●	●	●
Combo	[2] 2002	Z 10 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[2] 2002	Z 10 XE	IMMO (Immobiliser)	●	●	●	●
Combo	[2] 2002	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Combo	[2] 2002	Z 12 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[2] 2002	Z 12 XE	MTA (Easytronic)	●	●	●	●
Combo	[2] 2002	Z 12 XE	AF 13-II/17/20/22	●	●	●	●
Combo	[2] 2002	Z 12 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[2] 2002	Z 12 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[2] 2002	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Combo	[2] 2002	Z 12 XE	AOH (Add On Heater)	●	●	●	●
Combo	[2] 2002	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[2] 2002	Z 12 XE	BCM (Body Control Module)	●	●	●	●
Combo	[2] 2002	Z 12 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[2] 2002	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Combo	[2] 2002	Z 13 DT	ECM (Engine Control Module)	●	●	●	●
Combo	[2] 2002	Z 13 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[2] 2002	Z 13 DT	MTA (Easytronic)	●	●	●	●
Combo	[2] 2002	Z 13 DT	AF 13-II/17/20/22	●	●	●	●
Combo	[2] 2002	Z 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[2] 2002	Z 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[2] 2002	Z 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Combo	[2] 2002	Z 13 DT	AOH (Add On Heater)	●	●	●	●
Combo	[2] 2002	Z 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[2] 2002	Z 13 DT	BCM (Body Control Module)	●	●	●	●
Combo	[2] 2002	Z 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[2] 2002	Z 13 DT	IMMO (Immobiliser)	●	●	●	●
Combo	[2] 2002	Z 14 XE	ECM (Engine Control Module)	●	●	●	●
Combo	[2] 2002	Z 14 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[2] 2002	Z 14 XE	MTA (Easytronic)	●	●	●	●
Combo	[2] 2002	Z 14 XE	AF 13-II/17/20/22	●	●	●	●
Combo	[2] 2002	Z 14 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[2] 2002	Z 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[2] 2002	Z 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Combo	[2] 2002	Z 14 XE	AOH (Add On Heater)	●	●	●	●
Combo	[2] 2002	Z 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[2] 2002	Z 14 XE	BCM (Body Control Module)	●	●	●	●
Combo	[2] 2002	Z 14 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[2] 2002	Z 14 XE	IMMO (Immobiliser)	●	●	●	●
Combo	[2] 2002	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Combo	[2] 2002	Z 16 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[2] 2002	Z 16 SE	MTA (Easytronic)	●	●	●	●
Combo	[2] 2002	Z 16 SE	AF 13-II/17/20/22	●	●	●	●
Combo	[2] 2002	Z 16 SE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[2] 2002	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[2] 2002	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Combo	[2] 2002	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Combo	[2] 2002	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[2] 2002	Z 16 SE	BCM (Body Control Module)	●	●	●	●
Combo	[2] 2002	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[2] 2002	Z 16 SE	IMMO (Immobiliser)	●	●	●	●

Combo	[2] 2002	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Combo	[2] 2002	Y 17 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[2] 2002	Y 17 DT	MTA (Easytronic)	●	●	●	●
Combo	[2] 2002	Y 17 DT	AF 13-II/17/20/22	●	●	●	●
Combo	[2] 2002	Y 17 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[2] 2002	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[2] 2002	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Combo	[2] 2002	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Combo	[2] 2002	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[2] 2002	Y 17 DT	BCM (Body Control Module)	●	●	●	●
Combo	[2] 2002	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[2] 2002	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Combo	[2] 2002	Y 17 DTL	ECM (Engine Control Module)	●	●	●	●
Combo	[2] 2002	Y 17 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Combo	[2] 2002	Y 17 DTL	MTA (Easytronic)	●	●	●	●
Combo	[2] 2002	Y 17 DTL	AF 13-II/17/20/22	●	●	●	●
Combo	[2] 2002	Y 17 DTL	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Combo	[2] 2002	Y 17 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Combo	[2] 2002	Y 17 DTL	EPS (Electronic Power Steering)	●	●	●	●
Combo	[2] 2002	Y 17 DTL	AOH (Add On Heater)	●	●	●	●
Combo	[2] 2002	Y 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo	[2] 2002	Y 17 DTL	BCM (Body Control Module)	●	●	●	●
Combo	[2] 2002	Y 17 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●
Combo	[2] 2002	Y 17 DTL	IMMO (Immobiliser)	●	●	●	●
Combo-D	[G] 2016	1.3L (LN9)	ECM (Engine Control Module)	●	●	●	●
Combo-D	[G] 2016	1.3L (LN9)	TCM (Transmission Control Module)	●	●	●	●
Combo-D	[G] 2016	1.3L (LN9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Combo-D	[G] 2016	1.3L (LN9)	BCM (Body Control Module)	●	●	●	●
Combo-D	[G] 2016	1.3L (LN9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo-D	[G] 2016	1.3L (LN9)	IC (Instrument Cluster)	●	●	●	●
Combo-D	[G] 2016	1.3L (LN9)	TPIM (Tire Pressure Indicator Module)	●	●	●	●
Combo-D	[G] 2016	1.3L (LN9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Combo-D	[G] 2016	1.3L (LN9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Combo-D	[G] 2016	1.3L (LN9)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Combo-D	[G] 2016	1.3L (LN9)	PACM (Parking Assist Control Module)	●	●	●	●
Combo-D	[G] 2016	1.4L (LJA)	ECM (Engine Control Module)	●	●	●	●
Combo-D	[G] 2016	1.4L (LJA)	TCM (Transmission Control Module)	●	●	●	●
Combo-D	[G] 2016	1.4L (LJA)	EBCM (Electronic Brake Control Module)	●	●	●	●
Combo-D	[G] 2016	1.4L (LJA)	BCM (Body Control Module)	●	●	●	●
Combo-D	[G] 2016	1.4L (LJA)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo-D	[G] 2016	1.4L (LJA)	IC (Instrument Cluster)	●	●	●	●
Combo-D	[G] 2016	1.4L (LJA)	TPIM (Tire Pressure Indicator Module)	●	●	●	●
Combo-D	[G] 2016	1.4L (LJA)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Combo-D	[G] 2016	1.4L (LJA)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Combo-D	[G] 2016	1.4L (LJA)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Combo-D	[G] 2016	1.4L (LJA)	PACM (Parking Assist Control Module)	●	●	●	●
Combo-D	[G] 2016	1.4L (LJD)	ECM (Engine Control Module)	●	●	●	●
Combo-D	[G] 2016	1.4L (LJD)	TCM (Transmission Control Module)	●	●	●	●
Combo-D	[G] 2016	1.4L (LJD)	EBCM (Electronic Brake Control Module)	●	●	●	●
Combo-D	[G] 2016	1.4L (LJD)	BCM (Body Control Module)	●	●	●	●
Combo-D	[G] 2016	1.4L (LJD)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo-D	[G] 2016	1.4L (LJD)	IC (Instrument Cluster)	●	●	●	●
Combo-D	[G] 2016	1.4L (LJD)	TPIM (Tire Pressure Indicator Module)	●	●	●	●
Combo-D	[G] 2016	1.4L (LJD)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Combo-D	[G] 2016	1.4L (LJD)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●

Combo-D	[G] 2016	1.4L (LJD)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Combo-D	[G] 2016	1.4L (LJD)	PACM (Parking Assist Control Module)	●	●	●	●
Combo-D	[G] 2016	1.4L (LUS)	ECM (Engine Control Module)	●	●	●	●
Combo-D	[G] 2016	1.4L (LUS)	TCM (Transmission Control Module)	●	●	●	●
Combo-D	[G] 2016	1.4L (LUS)	EBCM (Electronic Brake Control Module)	●	●	●	●
Combo-D	[G] 2016	1.4L (LUS)	BCM (Body Control Module)	●	●	●	●
Combo-D	[G] 2016	1.4L (LUS)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo-D	[G] 2016	1.4L (LUS)	IC (Instrument Cluster)	●	●	●	●
Combo-D	[G] 2016	1.4L (LUS)	TPIM (Tire Pressure Indicator Module)	●	●	●	●
Combo-D	[G] 2016	1.4L (LUS)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Combo-D	[G] 2016	1.4L (LUS)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Combo-D	[G] 2016	1.4L (LUS)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Combo-D	[G] 2016	1.4L (LUS)	PACM (Parking Assist Control Module)	●	●	●	●
Combo-D	[G] 2016	1.6L (LJ5) (Euro 6 NTA)	ECM (Engine Control Module)	●	●	●	●
Combo-D	[G] 2016	1.6L (LJ5) (Euro 6 NTA)	TCM (Transmission Control Module)	●	●	●	●
Combo-D	[G] 2016	1.6L (LJ5) (Euro 6 NTA)	EBCM (Electronic Brake Control Module)	●	●	●	●
Combo-D	[G] 2016	1.6L (LJ5) (Euro 6 NTA)	BCM (Body Control Module)	●	●	●	●
Combo-D	[G] 2016	1.6L (LJ5) (Euro 6 NTA)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo-D	[G] 2016	1.6L (LJ5) (Euro 6 NTA)	IC (Instrument Cluster)	●	●	●	●
Combo-D	[G] 2016	1.6L (LJ5) (Euro 6 NTA)	TPIM (Tire Pressure Indicator Module)	●	●	●	●
Combo-D	[G] 2016	1.6L (LJ5) (Euro 6 NTA)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Combo-D	[G] 2016	1.6L (LJ5) (Euro 6 NTA)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Combo-D	[G] 2016	1.6L (LJ5) (Euro 6 NTA)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Combo-D	[G] 2016	1.6L (LJ5) (Euro 6 NTA)	PACM (Parking Assist Control Module)	●	●	●	●
Combo-D	[G] 2016	1.6L (LJ5) (Euro 5B NCM)	ECM (Engine Control Module)	●	●	●	●
Combo-D	[G] 2016	1.6L (LJ5) (Euro 5B NCM)	TCM (Transmission Control Module)	●	●	●	●
Combo-D	[G] 2016	1.6L (LJ5) (Euro 5B NCM)	EBCM (Electronic Brake Control Module)	●	●	●	●
Combo-D	[G] 2016	1.6L (LJ5) (Euro 5B NCM)	BCM (Body Control Module)	●	●	●	●
Combo-D	[G] 2016	1.6L (LJ5) (Euro 5B NCM)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo-D	[G] 2016	1.6L (LJ5) (Euro 5B NCM)	IC (Instrument Cluster)	●	●	●	●
Combo-D	[G] 2016	1.6L (LJ5) (Euro 5B NCM)	TPIM (Tire Pressure Indicator Module)	●	●	●	●
Combo-D	[G] 2016	1.6L (LJ5) (Euro 5B NCM)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Combo-D	[G] 2016	1.6L (LJ5) (Euro 5B NCM)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Combo-D	[G] 2016	1.6L (LJ5) (Euro 5B NCM)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Combo-D	[G] 2016	1.6L (LJ5) (Euro 5B NCM)	PACM (Parking Assist Control Module)	●	●	●	●
Combo-D	[G] 2016	2.0L (LHZ)	ECM (Engine Control Module)	●	●	●	●
Combo-D	[G] 2016	2.0L (LHZ)	TCM (Transmission Control Module)	●	●	●	●
Combo-D	[G] 2016	2.0L (LHZ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Combo-D	[G] 2016	2.0L (LHZ)	BCM (Body Control Module)	●	●	●	●
Combo-D	[G] 2016	2.0L (LHZ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo-D	[G] 2016	2.0L (LHZ)	IC (Instrument Cluster)	●	●	●	●
Combo-D	[G] 2016	2.0L (LHZ)	TPIM (Tire Pressure Indicator Module)	●	●	●	●
Combo-D	[G] 2016	2.0L (LHZ)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Combo-D	[G] 2016	2.0L (LHZ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Combo-D	[G] 2016	2.0L (LHZ)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Combo-D	[G] 2016	2.0L (LHZ)	PACM (Parking Assist Control Module)	●	●	●	●
Combo-D	[F] 2015	1.3L (LN9)	ECM (Engine Control Module)	●	●	●	●
Combo-D	[F] 2015	1.3L (LN9)	TCM (Transmission Control Module)	●	●	●	●
Combo-D	[F] 2015	1.3L (LN9)	EBCM (Electronic Brake Control Module)	●	●	●	●

Combo-D	[F] 2015	1.3L (LN9)	BCM (Body Control Module)	●	●	●	●
Combo-D	[F] 2015	1.3L (LN9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo-D	[F] 2015	1.3L (LN9)	IC (Instrument Cluster)	●	●	●	●
Combo-D	[F] 2015	1.3L (LN9)	TPIM (Tire Pressure Indicator Module)	●	●	●	●
Combo-D	[F] 2015	1.3L (LN9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Combo-D	[F] 2015	1.3L (LN9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Combo-D	[F] 2015	1.3L (LN9)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Combo-D	[F] 2015	1.3L (LN9)	PACM (Parking Assist Control Module)	●	●	●	●
Combo-D	[F] 2015	1.4L (LJA)	ECM (Engine Control Module)	●	●	●	●
Combo-D	[F] 2015	1.4L (LJA)	TCM (Transmission Control Module)	●	●	●	●
Combo-D	[F] 2015	1.4L (LJA)	EBCM (Electronic Brake Control Module)	●	●	●	●
Combo-D	[F] 2015	1.4L (LJA)	BCM (Body Control Module)	●	●	●	●
Combo-D	[F] 2015	1.4L (LJA)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo-D	[F] 2015	1.4L (LJA)	IC (Instrument Cluster)	●	●	●	●
Combo-D	[F] 2015	1.4L (LJA)	TPIM (Tire Pressure Indicator Module)	●	●	●	●
Combo-D	[F] 2015	1.4L (LJA)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Combo-D	[F] 2015	1.4L (LJA)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Combo-D	[F] 2015	1.4L (LJA)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Combo-D	[F] 2015	1.4L (LJA)	PACM (Parking Assist Control Module)	●	●	●	●
Combo-D	[F] 2015	1.4L (LJD)	ECM (Engine Control Module)	●	●	●	●
Combo-D	[F] 2015	1.4L (LJD)	TCM (Transmission Control Module)	●	●	●	●
Combo-D	[F] 2015	1.4L (LJD)	EBCM (Electronic Brake Control Module)	●	●	●	●
Combo-D	[F] 2015	1.4L (LJD)	BCM (Body Control Module)	●	●	●	●
Combo-D	[F] 2015	1.4L (LJD)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo-D	[F] 2015	1.4L (LJD)	IC (Instrument Cluster)	●	●	●	●
Combo-D	[F] 2015	1.4L (LJD)	TPIM (Tire Pressure Indicator Module)	●	●	●	●
Combo-D	[F] 2015	1.4L (LJD)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Combo-D	[F] 2015	1.4L (LJD)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Combo-D	[F] 2015	1.4L (LJD)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Combo-D	[F] 2015	1.4L (LJD)	PACM (Parking Assist Control Module)	●	●	●	●
Combo-D	[F] 2015	1.4L (LUS)	ECM (Engine Control Module)	●	●	●	●
Combo-D	[F] 2015	1.4L (LUS)	TCM (Transmission Control Module)	●	●	●	●
Combo-D	[F] 2015	1.4L (LUS)	EBCM (Electronic Brake Control Module)	●	●	●	●
Combo-D	[F] 2015	1.4L (LUS)	BCM (Body Control Module)	●	●	●	●
Combo-D	[F] 2015	1.4L (LUS)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo-D	[F] 2015	1.4L (LUS)	IC (Instrument Cluster)	●	●	●	●
Combo-D	[F] 2015	1.4L (LUS)	TPIM (Tire Pressure Indicator Module)	●	●	●	●
Combo-D	[F] 2015	1.4L (LUS)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Combo-D	[F] 2015	1.4L (LUS)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Combo-D	[F] 2015	1.4L (LUS)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Combo-D	[F] 2015	1.4L (LUS)	PACM (Parking Assist Control Module)	●	●	●	●
Combo-D	[F] 2015	1.6L (LJ5)	ECM (Engine Control Module)	●	●	●	●
Combo-D	[F] 2015	1.6L (LJ5)	TCM (Transmission Control Module)	●	●	●	●
Combo-D	[F] 2015	1.6L (LJ5)	EBCM (Electronic Brake Control Module)	●	●	●	●
Combo-D	[F] 2015	1.6L (LJ5)	BCM (Body Control Module)	●	●	●	●
Combo-D	[F] 2015	1.6L (LJ5)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo-D	[F] 2015	1.6L (LJ5)	IC (Instrument Cluster)	●	●	●	●
Combo-D	[F] 2015	1.6L (LJ5)	TPIM (Tire Pressure Indicator Module)	●	●	●	●
Combo-D	[F] 2015	1.6L (LJ5)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Combo-D	[F] 2015	1.6L (LJ5)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Combo-D	[F] 2015	1.6L (LJ5)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Combo-D	[F] 2015	1.6L (LJ5)	PACM (Parking Assist Control Module)	●	●	●	●
Combo-D	[F] 2015	2.0L (LHZ)	ECM (Engine Control Module)	●	●	●	●
Combo-D	[F] 2015	2.0L (LHZ)	TCM (Transmission Control Module)	●	●	●	●
Combo-D	[F] 2015	2.0L (LHZ)	EBCM (Electronic Brake Control Module)	●	●	●	●

Combo-D	[F] 2015	2.0L (LHZ)	BCM (Body Control Module)	●	●	●	●
Combo-D	[F] 2015	2.0L (LHZ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo-D	[F] 2015	2.0L (LHZ)	IC (Instrument Cluster)	●	●	●	●
Combo-D	[F] 2015	2.0L (LHZ)	TPIM (Tire Pressure Indicator Module)	●	●	●	●
Combo-D	[F] 2015	2.0L (LHZ)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Combo-D	[F] 2015	2.0L (LHZ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Combo-D	[F] 2015	2.0L (LHZ)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Combo-D	[F] 2015	2.0L (LHZ)	PACM (Parking Assist Control Module)	●	●	●	●
Combo-D	[E] 2014	1.3L (LN9)	ECM (Engine Control Module)	●	●	●	●
Combo-D	[E] 2014	1.3L (LN9)	TCM (Transmission Control Module)	●	●	●	●
Combo-D	[E] 2014	1.3L (LN9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Combo-D	[E] 2014	1.3L (LN9)	BCM (Body Control Module)	●	●	●	●
Combo-D	[E] 2014	1.3L (LN9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo-D	[E] 2014	1.3L (LN9)	IC (Instrument Cluster)	●	●	●	●
Combo-D	[E] 2014	1.3L (LN9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Combo-D	[E] 2014	1.3L (LN9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Combo-D	[E] 2014	1.3L (LN9)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Combo-D	[E] 2014	1.3L (LN9)	PACM (Parking Assist Control Module)	●	●	●	●
Combo-D	[E] 2014	1.4L (LJA)	ECM (Engine Control Module)	●	●	●	●
Combo-D	[E] 2014	1.4L (LJA)	TCM (Transmission Control Module)	●	●	●	●
Combo-D	[E] 2014	1.4L (LJA)	EBCM (Electronic Brake Control Module)	●	●	●	●
Combo-D	[E] 2014	1.4L (LJA)	BCM (Body Control Module)	●	●	●	●
Combo-D	[E] 2014	1.4L (LJA)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo-D	[E] 2014	1.4L (LJA)	IC (Instrument Cluster)	●	●	●	●
Combo-D	[E] 2014	1.4L (LJA)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Combo-D	[E] 2014	1.4L (LJA)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Combo-D	[E] 2014	1.4L (LJA)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Combo-D	[E] 2014	1.4L (LJA)	PACM (Parking Assist Control Module)	●	●	●	●
Combo-D	[E] 2014	1.4L (LJD)	ECM (Engine Control Module)	●	●	●	●
Combo-D	[E] 2014	1.4L (LJD)	TCM (Transmission Control Module)	●	●	●	●
Combo-D	[E] 2014	1.4L (LJD)	EBCM (Electronic Brake Control Module)	●	●	●	●
Combo-D	[E] 2014	1.4L (LJD)	BCM (Body Control Module)	●	●	●	●
Combo-D	[E] 2014	1.4L (LJD)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo-D	[E] 2014	1.4L (LJD)	IC (Instrument Cluster)	●	●	●	●
Combo-D	[E] 2014	1.4L (LJD)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Combo-D	[E] 2014	1.4L (LJD)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Combo-D	[E] 2014	1.4L (LJD)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Combo-D	[E] 2014	1.4L (LJD)	PACM (Parking Assist Control Module)	●	●	●	●
Combo-D	[E] 2014	1.4L (LUS)	ECM (Engine Control Module)	●	●	●	●
Combo-D	[E] 2014	1.4L (LUS)	TCM (Transmission Control Module)	●	●	●	●
Combo-D	[E] 2014	1.4L (LUS)	EBCM (Electronic Brake Control Module)	●	●	●	●
Combo-D	[E] 2014	1.4L (LUS)	BCM (Body Control Module)	●	●	●	●
Combo-D	[E] 2014	1.4L (LUS)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo-D	[E] 2014	1.4L (LUS)	IC (Instrument Cluster)	●	●	●	●
Combo-D	[E] 2014	1.4L (LUS)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Combo-D	[E] 2014	1.4L (LUS)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Combo-D	[E] 2014	1.4L (LUS)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Combo-D	[E] 2014	1.4L (LUS)	PACM (Parking Assist Control Module)	●	●	●	●
Combo-D	[E] 2014	1.6L (LJ5)	ECM (Engine Control Module)	●	●	●	●
Combo-D	[E] 2014	1.6L (LJ5)	TCM (Transmission Control Module)	●	●	●	●
Combo-D	[E] 2014	1.6L (LJ5)	EBCM (Electronic Brake Control Module)	●	●	●	●
Combo-D	[E] 2014	1.6L (LJ5)	BCM (Body Control Module)	●	●	●	●
Combo-D	[E] 2014	1.6L (LJ5)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo-D	[E] 2014	1.6L (LJ5)	IC (Instrument Cluster)	●	●	●	●

Combo-D	[E] 2014	1.6L (LJ5)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Combo-D	[E] 2014	1.6L (LJ5)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Combo-D	[E] 2014	1.6L (LJ5)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Combo-D	[E] 2014	1.6L (LJ5)	PACM (Parking Assist Control Module)	●	●	●	●
Combo-D	[E] 2014	2.0L (LHZ)	ECM (Engine Control Module)	●	●	●	●
Combo-D	[E] 2014	2.0L (LHZ)	TCM (Transmission Control Module)	●	●	●	●
Combo-D	[E] 2014	2.0L (LHZ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Combo-D	[E] 2014	2.0L (LHZ)	BCM (Body Control Module)	●	●	●	●
Combo-D	[E] 2014	2.0L (LHZ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo-D	[E] 2014	2.0L (LHZ)	IC (Instrument Cluster)	●	●	●	●
Combo-D	[E] 2014	2.0L (LHZ)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Combo-D	[E] 2014	2.0L (LHZ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Combo-D	[E] 2014	2.0L (LHZ)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Combo-D	[E] 2014	2.0L (LHZ)	PACM (Parking Assist Control Module)	●	●	●	●
Combo-D	[D] 2013	1.3L (LN9)	ECM (Engine Control Module)	●	●	●	●
Combo-D	[D] 2013	1.3L (LN9)	TCM (Transmission Control Module)	●	●	●	●
Combo-D	[D] 2013	1.3L (LN9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Combo-D	[D] 2013	1.3L (LN9)	BCM (Body Control Module)	●	●	●	●
Combo-D	[D] 2013	1.3L (LN9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo-D	[D] 2013	1.3L (LN9)	IC (Instrument Cluster)	●	●	●	●
Combo-D	[D] 2013	1.3L (LN9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Combo-D	[D] 2013	1.3L (LN9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Combo-D	[D] 2013	1.3L (LN9)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Combo-D	[D] 2013	1.3L (LN9)	PACM (Parking Assist Control Module)	●	●	●	●
Combo-D	[D] 2013	1.4L (LJA)	ECM (Engine Control Module)	●	●	●	●
Combo-D	[D] 2013	1.4L (LJA)	TCM (Transmission Control Module)	●	●	●	●
Combo-D	[D] 2013	1.4L (LJA)	EBCM (Electronic Brake Control Module)	●	●	●	●
Combo-D	[D] 2013	1.4L (LJA)	BCM (Body Control Module)	●	●	●	●
Combo-D	[D] 2013	1.4L (LJA)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo-D	[D] 2013	1.4L (LJA)	IC (Instrument Cluster)	●	●	●	●
Combo-D	[D] 2013	1.4L (LJA)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Combo-D	[D] 2013	1.4L (LJA)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Combo-D	[D] 2013	1.4L (LJA)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Combo-D	[D] 2013	1.4L (LJA)	PACM (Parking Assist Control Module)	●	●	●	●
Combo-D	[D] 2013	1.4L (LJD)	ECM (Engine Control Module)	●	●	●	●
Combo-D	[D] 2013	1.4L (LJD)	TCM (Transmission Control Module)	●	●	●	●
Combo-D	[D] 2013	1.4L (LJD)	EBCM (Electronic Brake Control Module)	●	●	●	●
Combo-D	[D] 2013	1.4L (LJD)	BCM (Body Control Module)	●	●	●	●
Combo-D	[D] 2013	1.4L (LJD)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo-D	[D] 2013	1.4L (LJD)	IC (Instrument Cluster)	●	●	●	●
Combo-D	[D] 2013	1.4L (LJD)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Combo-D	[D] 2013	1.4L (LJD)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Combo-D	[D] 2013	1.4L (LJD)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Combo-D	[D] 2013	1.4L (LJD)	PACM (Parking Assist Control Module)	●	●	●	●
Combo-D	[D] 2013	1.6L (LJ5)	ECM (Engine Control Module)	●	●	●	●
Combo-D	[D] 2013	1.6L (LJ5)	TCM (Transmission Control Module)	●	●	●	●
Combo-D	[D] 2013	1.6L (LJ5)	EBCM (Electronic Brake Control Module)	●	●	●	●
Combo-D	[D] 2013	1.6L (LJ5)	BCM (Body Control Module)	●	●	●	●
Combo-D	[D] 2013	1.6L (LJ5)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo-D	[D] 2013	1.6L (LJ5)	IC (Instrument Cluster)	●	●	●	●
Combo-D	[D] 2013	1.6L (LJ5)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Combo-D	[D] 2013	1.6L (LJ5)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Combo-D	[D] 2013	1.6L (LJ5)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Combo-D	[D] 2013	1.6L (LJ5)	PACM (Parking Assist Control Module)	●	●	●	●

Combo-D	[D] 2013	2.0L (LHZ)	ECM (Engine Control Module)	●	●	●	●
Combo-D	[D] 2013	2.0L (LHZ)	TCM (Transmission Control Module)	●	●	●	●
Combo-D	[D] 2013	2.0L (LHZ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Combo-D	[D] 2013	2.0L (LHZ)	BCM (Body Control Module)	●	●	●	●
Combo-D	[D] 2013	2.0L (LHZ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo-D	[D] 2013	2.0L (LHZ)	IC (Instrument Cluster)	●	●	●	●
Combo-D	[D] 2013	2.0L (LHZ)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Combo-D	[D] 2013	2.0L (LHZ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Combo-D	[D] 2013	2.0L (LHZ)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Combo-D	[D] 2013	2.0L (LHZ)	PACM (Parking Assist Control Module)	●	●	●	●
Combo-D	[C] 2012	1.3L (LN9)	ECM (Engine Control Module)	●	●	●	●
Combo-D	[C] 2012	1.3L (LN9)	TCM (Transmission Control Module)	●	●	●	●
Combo-D	[C] 2012	1.3L (LN9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Combo-D	[C] 2012	1.3L (LN9)	BCM (Body Control Module)	●	●	●	●
Combo-D	[C] 2012	1.3L (LN9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo-D	[C] 2012	1.3L (LN9)	IC (Instrument Cluster)	●	●	●	●
Combo-D	[C] 2012	1.3L (LN9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Combo-D	[C] 2012	1.3L (LN9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Combo-D	[C] 2012	1.3L (LN9)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Combo-D	[C] 2012	1.3L (LN9)	PACM (Parking Assist Control Module)	●	●	●	●
Combo-D	[C] 2012	1.4L (LJA)	ECM (Engine Control Module)	●	●	●	●
Combo-D	[C] 2012	1.4L (LJA)	TCM (Transmission Control Module)	●	●	●	●
Combo-D	[C] 2012	1.4L (LJA)	EBCM (Electronic Brake Control Module)	●	●	●	●
Combo-D	[C] 2012	1.4L (LJA)	BCM (Body Control Module)	●	●	●	●
Combo-D	[C] 2012	1.4L (LJA)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo-D	[C] 2012	1.4L (LJA)	IC (Instrument Cluster)	●	●	●	●
Combo-D	[C] 2012	1.4L (LJA)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Combo-D	[C] 2012	1.4L (LJA)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Combo-D	[C] 2012	1.4L (LJA)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Combo-D	[C] 2012	1.4L (LJA)	PACM (Parking Assist Control Module)	●	●	●	●
Combo-D	[C] 2012	1.4L (LJA) (Euro 6 NTA)	ECM (Engine Control Module)	●	●	●	●
Combo-D	[C] 2012	1.4L (LJA) (Euro 6 NTA)	TCM (Transmission Control Module)	●	●	●	●
Combo-D	[C] 2012	1.4L (LJA) (Euro 6 NTA)	EBCM (Electronic Brake Control Module)	●	●	●	●
Combo-D	[C] 2012	1.4L (LJA) (Euro 6 NTA)	BCM (Body Control Module)	●	●	●	●
Combo-D	[C] 2012	1.4L (LJA) (Euro 6 NTA)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo-D	[C] 2012	1.4L (LJA) (Euro 6 NTA)	IC (Instrument Cluster)	●	●	●	●
Combo-D	[C] 2012	1.4L (LJA) (Euro 6 NTA)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Combo-D	[C] 2012	1.4L (LJA) (Euro 6 NTA)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Combo-D	[C] 2012	1.4L (LJA) (Euro 6 NTA)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Combo-D	[C] 2012	1.4L (LJA) (Euro 6 NTA)	PACM (Parking Assist Control Module)	●	●	●	●
Combo-D	[C] 2012	1.4L (LJD)	ECM (Engine Control Module)	●	●	●	●
Combo-D	[C] 2012	1.4L (LJD)	TCM (Transmission Control Module)	●	●	●	●
Combo-D	[C] 2012	1.4L (LJD)	EBCM (Electronic Brake Control Module)	●	●	●	●
Combo-D	[C] 2012	1.4L (LJD)	BCM (Body Control Module)	●	●	●	●
Combo-D	[C] 2012	1.4L (LJD)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo-D	[C] 2012	1.4L (LJD)	IC (Instrument Cluster)	●	●	●	●
Combo-D	[C] 2012	1.4L (LJD)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Combo-D	[C] 2012	1.4L (LJD)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Combo-D	[C] 2012	1.4L (LJD)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Combo-D	[C] 2012	1.4L (LJD)	PACM (Parking Assist Control Module)	●	●	●	●
Combo-D	[C] 2012	1.6L (LJ5)	ECM (Engine Control Module)	●	●	●	●
Combo-D	[C] 2012	1.6L (LJ5)	TCM (Transmission Control Module)	●	●	●	●

Combo-D	[C] 2012	1.6L (LJ5)	EBCM (Electronic Brake Control Module)	●	●	●	●
Combo-D	[C] 2012	1.6L (LJ5)	BCM (Body Control Module)	●	●	●	●
Combo-D	[C] 2012	1.6L (LJ5)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo-D	[C] 2012	1.6L (LJ5)	IC (Instrument Cluster)	●	●	●	●
Combo-D	[C] 2012	1.6L (LJ5)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Combo-D	[C] 2012	1.6L (LJ5)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Combo-D	[C] 2012	1.6L (LJ5)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Combo-D	[C] 2012	1.6L (LJ5)	PACM (Parking Assist Control Module)	●	●	●	●
Combo-D	[C] 2012	1.6L (LJ5) (Euro 5B NCM)	ECM (Engine Control Module)	●	●	●	●
Combo-D	[C] 2012	1.6L (LJ5) (Euro 5B NCM)	TCM (Transmission Control Module)	●	●	●	●
Combo-D	[C] 2012	1.6L (LJ5) (Euro 5B NCM)	EBCM (Electronic Brake Control Module)	●	●	●	●
Combo-D	[C] 2012	1.6L (LJ5) (Euro 5B NCM)	BCM (Body Control Module)	●	●	●	●
Combo-D	[C] 2012	1.6L (LJ5) (Euro 5B NCM)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo-D	[C] 2012	1.6L (LJ5) (Euro 5B NCM)	IC (Instrument Cluster)	●	●	●	●
Combo-D	[C] 2012	1.6L (LJ5) (Euro 5B NCM)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Combo-D	[C] 2012	1.6L (LJ5) (Euro 5B NCM)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Combo-D	[C] 2012	1.6L (LJ5) (Euro 5B NCM)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Combo-D	[C] 2012	1.6L (LJ5) (Euro 5B NCM)	PACM (Parking Assist Control Module)	●	●	●	●
Combo-D	[C] 2012	2.0L (LHZ)	ECM (Engine Control Module)	●	●	●	●
Combo-D	[C] 2012	2.0L (LHZ)	TCM (Transmission Control Module)	●	●	●	●
Combo-D	[C] 2012	2.0L (LHZ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Combo-D	[C] 2012	2.0L (LHZ)	BCM (Body Control Module)	●	●	●	●
Combo-D	[C] 2012	2.0L (LHZ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo-D	[C] 2012	2.0L (LHZ)	IC (Instrument Cluster)	●	●	●	●
Combo-D	[C] 2012	2.0L (LHZ)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Combo-D	[C] 2012	2.0L (LHZ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Combo-D	[C] 2012	2.0L (LHZ)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Combo-D	[C] 2012	2.0L (LHZ)	PACM (Parking Assist Control Module)	●	●	●	●
Combo-D	[C] 2012	2.0L (LHZ) (Euro 5B NCM)	ECM (Engine Control Module)	●	●	●	●
Combo-D	[C] 2012	2.0L (LHZ) (Euro 5B NCM)	TCM (Transmission Control Module)	●	●	●	●
Combo-D	[C] 2012	2.0L (LHZ) (Euro 5B NCM)	EBCM (Electronic Brake Control Module)	●	●	●	●
Combo-D	[C] 2012	2.0L (LHZ) (Euro 5B NCM)	BCM (Body Control Module)	●	●	●	●
Combo-D	[C] 2012	2.0L (LHZ) (Euro 5B NCM)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Combo-D	[C] 2012	2.0L (LHZ) (Euro 5B NCM)	IC (Instrument Cluster)	●	●	●	●
Combo-D	[C] 2012	2.0L (LHZ) (Euro 5B NCM)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Combo-D	[C] 2012	2.0L (LHZ) (Euro 5B NCM)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Combo-D	[C] 2012	2.0L (LHZ) (Euro 5B NCM)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Combo-D	[C] 2012	2.0L (LHZ) (Euro 5B NCM)	PACM (Parking Assist Control Module)	●	●	●	●
Corsa-B	[3] 2003	X 14 SZ	ECM (Engine Control Module)	●	●	●	●
Corsa-B	[3] 2003	X 14 SZ	EPS (Electronic Power Steering)	●	●	●	●
Corsa-B	[3] 2003	X 14 SZ	IMMO (Immobiliser)	●	●	●	●
Corsa-B	[2] 2002	X 14 SZ	ECM (Engine Control Module)	●	●	●	●
Corsa-B	[2] 2002	X 14 SZ	EPS (Electronic Power Steering)	●	●	●	●
Corsa-B	[2] 2002	X 14 SZ	IMMO (Immobiliser)	●	●	●	●
Corsa-B	[1] 2001	X 14 SZ	ECM (Engine Control Module)	●	●	●	●
Corsa-B	[1] 2001	X 14 SZ	EPS (Electronic Power Steering)	●	●	●	●
Corsa-B	[1] 2001	X 14 SZ	IMMO (Immobiliser)	●	●	●	●
Corsa-B	[Y] 2000	X 10 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-B	[Y] 2000	X 10 XE	EPS (Electronic Power Steering)	●	●	●	●

Corsa-B	[V] 1997	X 16 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-B	[V] 1997	X 16 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-B	[V] 1997	X 16 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-B (GMSA)	[5] 2005	14 NE	ECM (Engine Control Module)	●	●	●	●
Corsa-B (GMSA)	[5] 2005	14 NE	IMMO (Immobiliser)	●	●	●	●
Corsa-B (GMSA)	[4] 2004	14 NE	ECM (Engine Control Module)	●	●	●	●
Corsa-B (GMSA)	[4] 2004	14 NE	IMMO (Immobiliser)	●	●	●	●
Corsa-B (GMSA)	[3] 2003	14 NE	ECM (Engine Control Module)	●	●	●	●
Corsa-B (GMSA)	[3] 2003	14 NE	IMMO (Immobiliser)	●	●	●	●
Corsa-B (GMSA)	[2] 2002	14 NE	ECM (Engine Control Module)	●	●	●	●
Corsa-B (GMSA)	[2] 2002	14 NE	IMMO (Immobiliser)	●	●	●	●
Corsa-B (GMSA)	[1] 2001	14 NE	ECM (Engine Control Module)	●	●	●	●
Corsa-B (GMSA)	[1] 2001	14 NE	IMMO (Immobiliser)	●	●	●	●
Corsa-B (GMSA)	[Y] 2000	13 NE	ECM (Engine Control Module)	●	●	●	●
Corsa-B (GMSA)	[Y] 2000	13 NE	IMMO (Immobiliser)	●	●	●	●
Corsa-B (GMSA)	[Y] 2000	14 NE	ECM (Engine Control Module)	●	●	●	●
Corsa-B (GMSA)	[Y] 2000	14 NE	IMMO (Immobiliser)	●	●	●	●
Corsa-B (GMSA)	[X] 1999	13 NE	ECM (Engine Control Module)	●	●	●	●
Corsa-B (GMSA)	[X] 1999	13 NE	IMMO (Immobiliser)	●	●	●	●
Corsa-B (GMSA)	[X] 1999	14 NE	ECM (Engine Control Module)	●	●	●	●
Corsa-B (GMSA)	[X] 1999	14 NE	IMMO (Immobiliser)	●	●	●	●
Corsa-B (GMSA)	[W] 1998	13 NE	ECM (Engine Control Module)	●	●	●	●
Corsa-B (GMSA)	[W] 1998	13 NE	IMMO (Immobiliser)	●	●	●	●
Corsa-B (GMSA)	[W] 1998	14 NE	ECM (Engine Control Module)	●	●	●	●
Corsa-B (GMSA)	[W] 1998	14 NE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[C] 2012	Z 10 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[C] 2012	Z 10 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[C] 2012	Z 10 XEP	MTA (Easytronic)	●	●	●	●
Corsa-C	[C] 2012	Z 10 XEP	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[C] 2012	Z 10 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[C] 2012	Z 10 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[C] 2012	Z 10 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[C] 2012	Z 10 XEP	AOH (Add On Heater)	●	●	●	●
Corsa-C	[C] 2012	Z 10 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[C] 2012	Z 10 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-C	[C] 2012	Z 10 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[C] 2012	Z 10 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[C] 2012	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[C] 2012	Z 12 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[C] 2012	Z 12 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[C] 2012	Z 12 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[C] 2012	Z 12 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[C] 2012	Z 12 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[C] 2012	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[C] 2012	Z 12 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[C] 2012	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[C] 2012	Z 12 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[C] 2012	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[C] 2012	Z 12 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[C] 2012	Z 12 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[C] 2012	Z 12 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[C] 2012	Z 12 XEP	MTA (Easytronic)	●	●	●	●
Corsa-C	[C] 2012	Z 12 XEP	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[C] 2012	Z 12 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[C] 2012	Z 12 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[C] 2012	Z 12 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[C] 2012	Z 12 XEP	AOH (Add On Heater)	●	●	●	●

Corsa-C	[C] 2012	Z 12 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[C] 2012	Z 12 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-C	[C] 2012	Z 12 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[C] 2012	Z 12 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[C] 2012	Y 13 DT	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[C] 2012	Y 13 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[C] 2012	Y 13 DT	MTA (Easytronic)	●	●	●	●
Corsa-C	[C] 2012	Y 13 DT	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[C] 2012	Y 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[C] 2012	Y 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[C] 2012	Y 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[C] 2012	Y 13 DT	AOH (Add On Heater)	●	●	●	●
Corsa-C	[C] 2012	Y 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[C] 2012	Y 13 DT	BCM (Body Control Module)	●	●	●	●
Corsa-C	[C] 2012	Y 13 DT	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[C] 2012	Y 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[C] 2012	Z 13 DT	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[C] 2012	Z 13 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[C] 2012	Z 13 DT	MTA (Easytronic)	●	●	●	●
Corsa-C	[C] 2012	Z 13 DT	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[C] 2012	Z 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[C] 2012	Z 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[C] 2012	Z 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[C] 2012	Z 13 DT	AOH (Add On Heater)	●	●	●	●
Corsa-C	[C] 2012	Z 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[C] 2012	Z 13 DT	BCM (Body Control Module)	●	●	●	●
Corsa-C	[C] 2012	Z 13 DT	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[C] 2012	Z 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[C] 2012	Z 13 DTJ	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[C] 2012	Z 13 DTJ	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[C] 2012	Z 13 DTJ	MTA (Easytronic)	●	●	●	●
Corsa-C	[C] 2012	Z 13 DTJ	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[C] 2012	Z 13 DTJ	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[C] 2012	Z 13 DTJ	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[C] 2012	Z 13 DTJ	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[C] 2012	Z 13 DTJ	AOH (Add On Heater)	●	●	●	●
Corsa-C	[C] 2012	Z 13 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[C] 2012	Z 13 DTJ	BCM (Body Control Module)	●	●	●	●
Corsa-C	[C] 2012	Z 13 DTJ	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[C] 2012	Z 13 DTJ	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[C] 2012	Z 14 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[C] 2012	Z 14 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[C] 2012	Z 14 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[C] 2012	Z 14 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[C] 2012	Z 14 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[C] 2012	Z 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[C] 2012	Z 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[C] 2012	Z 14 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[C] 2012	Z 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[C] 2012	Z 14 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[C] 2012	Z 14 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[C] 2012	Z 14 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[C] 2012	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[C] 2012	Z 14 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[C] 2012	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Corsa-C	[C] 2012	Z 14 XEP	AF 13-II/17/20/22	●	●	●	●

Corsa-C	[C] 2012	Z 14 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[C] 2012	Z 14 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[C] 2012	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[C] 2012	Z 14 XEP	AOH (Add On Heater)	●	●	●	●
Corsa-C	[C] 2012	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[C] 2012	Z 14 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-C	[C] 2012	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[C] 2012	Z 14 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[C] 2012	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[C] 2012	Z 16 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[C] 2012	Z 16 SE	MTA (Easytronic)	●	●	●	●
Corsa-C	[C] 2012	Z 16 SE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[C] 2012	Z 16 SE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[C] 2012	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[C] 2012	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[C] 2012	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[C] 2012	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[C] 2012	Z 16 SE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[C] 2012	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[C] 2012	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[C] 2012	Z 16 YNG	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[C] 2012	Z 16 YNG	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[C] 2012	Z 16 YNG	MTA (Easytronic)	●	●	●	●
Corsa-C	[C] 2012	Z 16 YNG	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[C] 2012	Z 16 YNG	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[C] 2012	Z 16 YNG	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[C] 2012	Z 16 YNG	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[C] 2012	Z 16 YNG	AOH (Add On Heater)	●	●	●	●
Corsa-C	[C] 2012	Z 16 YNG	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[C] 2012	Z 16 YNG	BCM (Body Control Module)	●	●	●	●
Corsa-C	[C] 2012	Z 16 YNG	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[C] 2012	Z 16 YNG	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[C] 2012	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[C] 2012	Y 17 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[C] 2012	Y 17 DT	MTA (Easytronic)	●	●	●	●
Corsa-C	[C] 2012	Y 17 DT	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[C] 2012	Y 17 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[C] 2012	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[C] 2012	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[C] 2012	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Corsa-C	[C] 2012	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[C] 2012	Y 17 DT	BCM (Body Control Module)	●	●	●	●
Corsa-C	[C] 2012	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[C] 2012	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[C] 2012	Y 17 DTL	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[C] 2012	Y 17 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[C] 2012	Y 17 DTL	MTA (Easytronic)	●	●	●	●
Corsa-C	[C] 2012	Y 17 DTL	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[C] 2012	Y 17 DTL	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[C] 2012	Y 17 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[C] 2012	Y 17 DTL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[C] 2012	Y 17 DTL	AOH (Add On Heater)	●	●	●	●
Corsa-C	[C] 2012	Y 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[C] 2012	Y 17 DTL	BCM (Body Control Module)	●	●	●	●
Corsa-C	[C] 2012	Y 17 DTL	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[C] 2012	Y 17 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●

Corsa-C	[C] 2012	Z 17 DTH	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[C] 2012	Z 17 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[C] 2012	Z 17 DTH	MTA (Easytronic)	●	●	●	●
Corsa-C	[C] 2012	Z 17 DTH	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[C] 2012	Z 17 DTH	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[C] 2012	Z 17 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[C] 2012	Z 17 DTH	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[C] 2012	Z 17 DTH	AOH (Add On Heater)	●	●	●	●
Corsa-C	[C] 2012	Z 17 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[C] 2012	Z 17 DTH	BCM (Body Control Module)	●	●	●	●
Corsa-C	[C] 2012	Z 17 DTH	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[C] 2012	Z 17 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[C] 2012	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[C] 2012	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[C] 2012	Z 18 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[C] 2012	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[C] 2012	Z 18 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[C] 2012	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[C] 2012	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[C] 2012	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[C] 2012	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[C] 2012	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[C] 2012	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[C] 2012	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[B] 2011	Z 10 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[B] 2011	Z 10 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[B] 2011	Z 10 XEP	MTA (Easytronic)	●	●	●	●
Corsa-C	[B] 2011	Z 10 XEP	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[B] 2011	Z 10 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[B] 2011	Z 10 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[B] 2011	Z 10 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[B] 2011	Z 10 XEP	AOH (Add On Heater)	●	●	●	●
Corsa-C	[B] 2011	Z 10 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[B] 2011	Z 10 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-C	[B] 2011	Z 10 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[B] 2011	Z 10 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[B] 2011	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[B] 2011	Z 12 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[B] 2011	Z 12 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[B] 2011	Z 12 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[B] 2011	Z 12 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[B] 2011	Z 12 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[B] 2011	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[B] 2011	Z 12 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[B] 2011	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[B] 2011	Z 12 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[B] 2011	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[B] 2011	Z 12 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[B] 2011	Z 12 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[B] 2011	Z 12 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[B] 2011	Z 12 XEP	MTA (Easytronic)	●	●	●	●
Corsa-C	[B] 2011	Z 12 XEP	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[B] 2011	Z 12 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[B] 2011	Z 12 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[B] 2011	Z 12 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[B] 2011	Z 12 XEP	AOH (Add On Heater)	●	●	●	●

Corsa-C	[B] 2011	Z 12 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[B] 2011	Z 12 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-C	[B] 2011	Z 12 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[B] 2011	Z 12 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[B] 2011	Y 13 DT	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[B] 2011	Y 13 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[B] 2011	Y 13 DT	MTA (Easytronic)	●	●	●	●
Corsa-C	[B] 2011	Y 13 DT	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[B] 2011	Y 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[B] 2011	Y 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[B] 2011	Y 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[B] 2011	Y 13 DT	AOH (Add On Heater)	●	●	●	●
Corsa-C	[B] 2011	Y 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[B] 2011	Y 13 DT	BCM (Body Control Module)	●	●	●	●
Corsa-C	[B] 2011	Y 13 DT	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[B] 2011	Y 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[B] 2011	Z 13 DT	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[B] 2011	Z 13 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[B] 2011	Z 13 DT	MTA (Easytronic)	●	●	●	●
Corsa-C	[B] 2011	Z 13 DT	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[B] 2011	Z 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[B] 2011	Z 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[B] 2011	Z 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[B] 2011	Z 13 DT	AOH (Add On Heater)	●	●	●	●
Corsa-C	[B] 2011	Z 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[B] 2011	Z 13 DT	BCM (Body Control Module)	●	●	●	●
Corsa-C	[B] 2011	Z 13 DT	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[B] 2011	Z 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[B] 2011	Z 13 DTJ	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[B] 2011	Z 13 DTJ	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[B] 2011	Z 13 DTJ	MTA (Easytronic)	●	●	●	●
Corsa-C	[B] 2011	Z 13 DTJ	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[B] 2011	Z 13 DTJ	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[B] 2011	Z 13 DTJ	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[B] 2011	Z 13 DTJ	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[B] 2011	Z 13 DTJ	AOH (Add On Heater)	●	●	●	●
Corsa-C	[B] 2011	Z 13 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[B] 2011	Z 13 DTJ	BCM (Body Control Module)	●	●	●	●
Corsa-C	[B] 2011	Z 13 DTJ	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[B] 2011	Z 13 DTJ	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[B] 2011	Z 14 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[B] 2011	Z 14 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[B] 2011	Z 14 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[B] 2011	Z 14 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[B] 2011	Z 14 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[B] 2011	Z 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[B] 2011	Z 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[B] 2011	Z 14 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[B] 2011	Z 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[B] 2011	Z 14 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[B] 2011	Z 14 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[B] 2011	Z 14 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[B] 2011	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[B] 2011	Z 14 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[B] 2011	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Corsa-C	[B] 2011	Z 14 XEP	AF 13-II/17/20/22	●	●	●	●

Corsa-C	[B] 2011	Z 14 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[B] 2011	Z 14 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[B] 2011	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[B] 2011	Z 14 XEP	AOH (Add On Heater)	●	●	●	●
Corsa-C	[B] 2011	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[B] 2011	Z 14 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-C	[B] 2011	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[B] 2011	Z 14 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[B] 2011	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[B] 2011	Z 16 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[B] 2011	Z 16 SE	MTA (Easytronic)	●	●	●	●
Corsa-C	[B] 2011	Z 16 SE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[B] 2011	Z 16 SE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[B] 2011	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[B] 2011	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[B] 2011	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[B] 2011	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[B] 2011	Z 16 SE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[B] 2011	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[B] 2011	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[B] 2011	Z 16 YNG	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[B] 2011	Z 16 YNG	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[B] 2011	Z 16 YNG	MTA (Easytronic)	●	●	●	●
Corsa-C	[B] 2011	Z 16 YNG	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[B] 2011	Z 16 YNG	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[B] 2011	Z 16 YNG	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[B] 2011	Z 16 YNG	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[B] 2011	Z 16 YNG	AOH (Add On Heater)	●	●	●	●
Corsa-C	[B] 2011	Z 16 YNG	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[B] 2011	Z 16 YNG	BCM (Body Control Module)	●	●	●	●
Corsa-C	[B] 2011	Z 16 YNG	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[B] 2011	Z 16 YNG	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[B] 2011	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[B] 2011	Y 17 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[B] 2011	Y 17 DT	MTA (Easytronic)	●	●	●	●
Corsa-C	[B] 2011	Y 17 DT	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[B] 2011	Y 17 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[B] 2011	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[B] 2011	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[B] 2011	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Corsa-C	[B] 2011	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[B] 2011	Y 17 DT	BCM (Body Control Module)	●	●	●	●
Corsa-C	[B] 2011	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[B] 2011	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[B] 2011	Y 17 DTL	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[B] 2011	Y 17 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[B] 2011	Y 17 DTL	MTA (Easytronic)	●	●	●	●
Corsa-C	[B] 2011	Y 17 DTL	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[B] 2011	Y 17 DTL	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[B] 2011	Y 17 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[B] 2011	Y 17 DTL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[B] 2011	Y 17 DTL	AOH (Add On Heater)	●	●	●	●
Corsa-C	[B] 2011	Y 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[B] 2011	Y 17 DTL	BCM (Body Control Module)	●	●	●	●
Corsa-C	[B] 2011	Y 17 DTL	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[B] 2011	Y 17 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●

Corsa-C	[B] 2011	Z 17 DTH	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[B] 2011	Z 17 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[B] 2011	Z 17 DTH	MTA (Easytronic)	●	●	●	●
Corsa-C	[B] 2011	Z 17 DTH	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[B] 2011	Z 17 DTH	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[B] 2011	Z 17 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[B] 2011	Z 17 DTH	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[B] 2011	Z 17 DTH	AOH (Add On Heater)	●	●	●	●
Corsa-C	[B] 2011	Z 17 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[B] 2011	Z 17 DTH	BCM (Body Control Module)	●	●	●	●
Corsa-C	[B] 2011	Z 17 DTH	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[B] 2011	Z 17 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[B] 2011	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[B] 2011	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[B] 2011	Z 18 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[B] 2011	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[B] 2011	Z 18 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[B] 2011	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[B] 2011	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[B] 2011	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[B] 2011	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[B] 2011	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[B] 2011	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[B] 2011	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[A] 2010	Z 10 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[A] 2010	Z 10 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[A] 2010	Z 10 XEP	MTA (Easytronic)	●	●	●	●
Corsa-C	[A] 2010	Z 10 XEP	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[A] 2010	Z 10 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[A] 2010	Z 10 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[A] 2010	Z 10 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[A] 2010	Z 10 XEP	AOH (Add On Heater)	●	●	●	●
Corsa-C	[A] 2010	Z 10 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[A] 2010	Z 10 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-C	[A] 2010	Z 10 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[A] 2010	Z 10 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[A] 2010	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[A] 2010	Z 12 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[A] 2010	Z 12 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[A] 2010	Z 12 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[A] 2010	Z 12 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[A] 2010	Z 12 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[A] 2010	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[A] 2010	Z 12 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[A] 2010	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[A] 2010	Z 12 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[A] 2010	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[A] 2010	Z 12 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[A] 2010	Z 12 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[A] 2010	Z 12 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[A] 2010	Z 12 XEP	MTA (Easytronic)	●	●	●	●
Corsa-C	[A] 2010	Z 12 XEP	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[A] 2010	Z 12 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[A] 2010	Z 12 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[A] 2010	Z 12 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[A] 2010	Z 12 XEP	AOH (Add On Heater)	●	●	●	●

Corsa-C	[A] 2010	Z 12 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[A] 2010	Z 12 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-C	[A] 2010	Z 12 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[A] 2010	Z 12 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[A] 2010	Y 13 DT	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[A] 2010	Y 13 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[A] 2010	Y 13 DT	MTA (Easytronic)	●	●	●	●
Corsa-C	[A] 2010	Y 13 DT	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[A] 2010	Y 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[A] 2010	Y 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[A] 2010	Y 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[A] 2010	Y 13 DT	AOH (Add On Heater)	●	●	●	●
Corsa-C	[A] 2010	Y 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[A] 2010	Y 13 DT	BCM (Body Control Module)	●	●	●	●
Corsa-C	[A] 2010	Y 13 DT	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[A] 2010	Y 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[A] 2010	Z 13 DT	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[A] 2010	Z 13 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[A] 2010	Z 13 DT	MTA (Easytronic)	●	●	●	●
Corsa-C	[A] 2010	Z 13 DT	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[A] 2010	Z 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[A] 2010	Z 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[A] 2010	Z 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[A] 2010	Z 13 DT	AOH (Add On Heater)	●	●	●	●
Corsa-C	[A] 2010	Z 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[A] 2010	Z 13 DT	BCM (Body Control Module)	●	●	●	●
Corsa-C	[A] 2010	Z 13 DT	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[A] 2010	Z 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[A] 2010	Z 13 DTJ	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[A] 2010	Z 13 DTJ	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[A] 2010	Z 13 DTJ	MTA (Easytronic)	●	●	●	●
Corsa-C	[A] 2010	Z 13 DTJ	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[A] 2010	Z 13 DTJ	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[A] 2010	Z 13 DTJ	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[A] 2010	Z 13 DTJ	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[A] 2010	Z 13 DTJ	AOH (Add On Heater)	●	●	●	●
Corsa-C	[A] 2010	Z 13 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[A] 2010	Z 13 DTJ	BCM (Body Control Module)	●	●	●	●
Corsa-C	[A] 2010	Z 13 DTJ	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[A] 2010	Z 13 DTJ	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[A] 2010	Z 14 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[A] 2010	Z 14 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[A] 2010	Z 14 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[A] 2010	Z 14 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[A] 2010	Z 14 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[A] 2010	Z 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[A] 2010	Z 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[A] 2010	Z 14 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[A] 2010	Z 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[A] 2010	Z 14 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[A] 2010	Z 14 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[A] 2010	Z 14 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[A] 2010	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[A] 2010	Z 14 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[A] 2010	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Corsa-C	[A] 2010	Z 14 XEP	AF 13-II/17/20/22	●	●	●	●

Corsa-C	[A] 2010	Z 14 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[A] 2010	Z 14 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[A] 2010	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[A] 2010	Z 14 XEP	AOH (Add On Heater)	●	●	●	●
Corsa-C	[A] 2010	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[A] 2010	Z 14 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-C	[A] 2010	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[A] 2010	Z 14 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[A] 2010	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[A] 2010	Z 16 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[A] 2010	Z 16 SE	MTA (Easytronic)	●	●	●	●
Corsa-C	[A] 2010	Z 16 SE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[A] 2010	Z 16 SE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[A] 2010	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[A] 2010	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[A] 2010	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[A] 2010	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[A] 2010	Z 16 SE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[A] 2010	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[A] 2010	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[A] 2010	Z 16 YNG	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[A] 2010	Z 16 YNG	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[A] 2010	Z 16 YNG	MTA (Easytronic)	●	●	●	●
Corsa-C	[A] 2010	Z 16 YNG	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[A] 2010	Z 16 YNG	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[A] 2010	Z 16 YNG	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[A] 2010	Z 16 YNG	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[A] 2010	Z 16 YNG	AOH (Add On Heater)	●	●	●	●
Corsa-C	[A] 2010	Z 16 YNG	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[A] 2010	Z 16 YNG	BCM (Body Control Module)	●	●	●	●
Corsa-C	[A] 2010	Z 16 YNG	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[A] 2010	Z 16 YNG	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[A] 2010	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[A] 2010	Y 17 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[A] 2010	Y 17 DT	MTA (Easytronic)	●	●	●	●
Corsa-C	[A] 2010	Y 17 DT	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[A] 2010	Y 17 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[A] 2010	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[A] 2010	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[A] 2010	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Corsa-C	[A] 2010	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[A] 2010	Y 17 DT	BCM (Body Control Module)	●	●	●	●
Corsa-C	[A] 2010	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[A] 2010	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[A] 2010	Y 17 DTL	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[A] 2010	Y 17 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[A] 2010	Y 17 DTL	MTA (Easytronic)	●	●	●	●
Corsa-C	[A] 2010	Y 17 DTL	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[A] 2010	Y 17 DTL	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[A] 2010	Y 17 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[A] 2010	Y 17 DTL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[A] 2010	Y 17 DTL	AOH (Add On Heater)	●	●	●	●
Corsa-C	[A] 2010	Y 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[A] 2010	Y 17 DTL	BCM (Body Control Module)	●	●	●	●
Corsa-C	[A] 2010	Y 17 DTL	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[A] 2010	Y 17 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●

Corsa-C	[A] 2010	Z 17 DTH	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[A] 2010	Z 17 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[A] 2010	Z 17 DTH	MTA (Easytronic)	●	●	●	●
Corsa-C	[A] 2010	Z 17 DTH	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[A] 2010	Z 17 DTH	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[A] 2010	Z 17 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[A] 2010	Z 17 DTH	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[A] 2010	Z 17 DTH	AOH (Add On Heater)	●	●	●	●
Corsa-C	[A] 2010	Z 17 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[A] 2010	Z 17 DTH	BCM (Body Control Module)	●	●	●	●
Corsa-C	[A] 2010	Z 17 DTH	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[A] 2010	Z 17 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[A] 2010	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[A] 2010	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[A] 2010	Z 18 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[A] 2010	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[A] 2010	Z 18 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[A] 2010	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[A] 2010	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[A] 2010	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[A] 2010	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[A] 2010	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[A] 2010	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[A] 2010	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[9] 2009	Z 10 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[9] 2009	Z 10 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[9] 2009	Z 10 XEP	MTA (Easytronic)	●	●	●	●
Corsa-C	[9] 2009	Z 10 XEP	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[9] 2009	Z 10 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[9] 2009	Z 10 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[9] 2009	Z 10 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[9] 2009	Z 10 XEP	AOH (Add On Heater)	●	●	●	●
Corsa-C	[9] 2009	Z 10 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[9] 2009	Z 10 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-C	[9] 2009	Z 10 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[9] 2009	Z 10 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[9] 2009	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[9] 2009	Z 12 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[9] 2009	Z 12 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[9] 2009	Z 12 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[9] 2009	Z 12 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[9] 2009	Z 12 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[9] 2009	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[9] 2009	Z 12 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[9] 2009	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[9] 2009	Z 12 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[9] 2009	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[9] 2009	Z 12 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[9] 2009	Z 12 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[9] 2009	Z 12 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[9] 2009	Z 12 XEP	MTA (Easytronic)	●	●	●	●
Corsa-C	[9] 2009	Z 12 XEP	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[9] 2009	Z 12 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[9] 2009	Z 12 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[9] 2009	Z 12 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[9] 2009	Z 12 XEP	AOH (Add On Heater)	●	●	●	●

Corsa-C	[9] 2009	Z 12 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[9] 2009	Z 12 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-C	[9] 2009	Z 12 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[9] 2009	Z 12 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[9] 2009	Y 13 DT	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[9] 2009	Y 13 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[9] 2009	Y 13 DT	MTA (Easytronic)	●	●	●	●
Corsa-C	[9] 2009	Y 13 DT	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[9] 2009	Y 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[9] 2009	Y 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[9] 2009	Y 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[9] 2009	Y 13 DT	AOH (Add On Heater)	●	●	●	●
Corsa-C	[9] 2009	Y 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[9] 2009	Y 13 DT	BCM (Body Control Module)	●	●	●	●
Corsa-C	[9] 2009	Y 13 DT	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[9] 2009	Y 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[9] 2009	Z 13 DT	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[9] 2009	Z 13 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[9] 2009	Z 13 DT	MTA (Easytronic)	●	●	●	●
Corsa-C	[9] 2009	Z 13 DT	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[9] 2009	Z 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[9] 2009	Z 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[9] 2009	Z 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[9] 2009	Z 13 DT	AOH (Add On Heater)	●	●	●	●
Corsa-C	[9] 2009	Z 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[9] 2009	Z 13 DT	BCM (Body Control Module)	●	●	●	●
Corsa-C	[9] 2009	Z 13 DT	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[9] 2009	Z 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[9] 2009	Z 13 DTJ	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[9] 2009	Z 13 DTJ	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[9] 2009	Z 13 DTJ	MTA (Easytronic)	●	●	●	●
Corsa-C	[9] 2009	Z 13 DTJ	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[9] 2009	Z 13 DTJ	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[9] 2009	Z 13 DTJ	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[9] 2009	Z 13 DTJ	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[9] 2009	Z 13 DTJ	AOH (Add On Heater)	●	●	●	●
Corsa-C	[9] 2009	Z 13 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[9] 2009	Z 13 DTJ	BCM (Body Control Module)	●	●	●	●
Corsa-C	[9] 2009	Z 13 DTJ	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[9] 2009	Z 13 DTJ	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[9] 2009	Z 14 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[9] 2009	Z 14 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[9] 2009	Z 14 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[9] 2009	Z 14 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[9] 2009	Z 14 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[9] 2009	Z 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[9] 2009	Z 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[9] 2009	Z 14 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[9] 2009	Z 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[9] 2009	Z 14 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[9] 2009	Z 14 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[9] 2009	Z 14 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[9] 2009	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[9] 2009	Z 14 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[9] 2009	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Corsa-C	[9] 2009	Z 14 XEP	AF 13-II/17/20/22	●	●	●	●

Corsa-C	[9] 2009	Z 14 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[9] 2009	Z 14 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[9] 2009	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[9] 2009	Z 14 XEP	AOH (Add On Heater)	●	●	●	●
Corsa-C	[9] 2009	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[9] 2009	Z 14 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-C	[9] 2009	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[9] 2009	Z 14 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[9] 2009	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[9] 2009	Z 16 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[9] 2009	Z 16 SE	MTA (Easytronic)	●	●	●	●
Corsa-C	[9] 2009	Z 16 SE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[9] 2009	Z 16 SE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[9] 2009	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[9] 2009	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[9] 2009	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[9] 2009	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[9] 2009	Z 16 SE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[9] 2009	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[9] 2009	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[9] 2009	Z 16 YNG	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[9] 2009	Z 16 YNG	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[9] 2009	Z 16 YNG	MTA (Easytronic)	●	●	●	●
Corsa-C	[9] 2009	Z 16 YNG	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[9] 2009	Z 16 YNG	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[9] 2009	Z 16 YNG	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[9] 2009	Z 16 YNG	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[9] 2009	Z 16 YNG	AOH (Add On Heater)	●	●	●	●
Corsa-C	[9] 2009	Z 16 YNG	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[9] 2009	Z 16 YNG	BCM (Body Control Module)	●	●	●	●
Corsa-C	[9] 2009	Z 16 YNG	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[9] 2009	Z 16 YNG	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[9] 2009	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[9] 2009	Y 17 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[9] 2009	Y 17 DT	MTA (Easytronic)	●	●	●	●
Corsa-C	[9] 2009	Y 17 DT	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[9] 2009	Y 17 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[9] 2009	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[9] 2009	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[9] 2009	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Corsa-C	[9] 2009	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[9] 2009	Y 17 DT	BCM (Body Control Module)	●	●	●	●
Corsa-C	[9] 2009	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[9] 2009	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[9] 2009	Y 17 DTL	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[9] 2009	Y 17 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[9] 2009	Y 17 DTL	MTA (Easytronic)	●	●	●	●
Corsa-C	[9] 2009	Y 17 DTL	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[9] 2009	Y 17 DTL	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[9] 2009	Y 17 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[9] 2009	Y 17 DTL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[9] 2009	Y 17 DTL	AOH (Add On Heater)	●	●	●	●
Corsa-C	[9] 2009	Y 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[9] 2009	Y 17 DTL	BCM (Body Control Module)	●	●	●	●
Corsa-C	[9] 2009	Y 17 DTL	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[9] 2009	Y 17 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●

Corsa-C	[9] 2009	Z 17 DTH	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[9] 2009	Z 17 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[9] 2009	Z 17 DTH	MTA (Easytronic)	●	●	●	●
Corsa-C	[9] 2009	Z 17 DTH	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[9] 2009	Z 17 DTH	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[9] 2009	Z 17 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[9] 2009	Z 17 DTH	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[9] 2009	Z 17 DTH	AOH (Add On Heater)	●	●	●	●
Corsa-C	[9] 2009	Z 17 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[9] 2009	Z 17 DTH	BCM (Body Control Module)	●	●	●	●
Corsa-C	[9] 2009	Z 17 DTH	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[9] 2009	Z 17 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[9] 2009	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[9] 2009	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[9] 2009	Z 18 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[9] 2009	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[9] 2009	Z 18 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[9] 2009	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[9] 2009	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[9] 2009	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[9] 2009	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[9] 2009	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[9] 2009	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[9] 2009	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[8] 2008	Z 10 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[8] 2008	Z 10 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[8] 2008	Z 10 XEP	MTA (Easytronic)	●	●	●	●
Corsa-C	[8] 2008	Z 10 XEP	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[8] 2008	Z 10 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[8] 2008	Z 10 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[8] 2008	Z 10 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[8] 2008	Z 10 XEP	AOH (Add On Heater)	●	●	●	●
Corsa-C	[8] 2008	Z 10 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[8] 2008	Z 10 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-C	[8] 2008	Z 10 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[8] 2008	Z 10 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[8] 2008	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[8] 2008	Z 12 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[8] 2008	Z 12 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[8] 2008	Z 12 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[8] 2008	Z 12 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[8] 2008	Z 12 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[8] 2008	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[8] 2008	Z 12 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[8] 2008	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[8] 2008	Z 12 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[8] 2008	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[8] 2008	Z 12 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[8] 2008	Z 12 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[8] 2008	Z 12 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[8] 2008	Z 12 XEP	MTA (Easytronic)	●	●	●	●
Corsa-C	[8] 2008	Z 12 XEP	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[8] 2008	Z 12 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[8] 2008	Z 12 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[8] 2008	Z 12 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[8] 2008	Z 12 XEP	AOH (Add On Heater)	●	●	●	●

Corsa-C	[8] 2008	Z 12 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[8] 2008	Z 12 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-C	[8] 2008	Z 12 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[8] 2008	Z 12 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[8] 2008	Y 13 DT	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[8] 2008	Y 13 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[8] 2008	Y 13 DT	MTA (Easytronic)	●	●	●	●
Corsa-C	[8] 2008	Y 13 DT	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[8] 2008	Y 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[8] 2008	Y 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[8] 2008	Y 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[8] 2008	Y 13 DT	AOH (Add On Heater)	●	●	●	●
Corsa-C	[8] 2008	Y 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[8] 2008	Y 13 DT	BCM (Body Control Module)	●	●	●	●
Corsa-C	[8] 2008	Y 13 DT	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[8] 2008	Y 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[8] 2008	Z 13 DT	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[8] 2008	Z 13 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[8] 2008	Z 13 DT	MTA (Easytronic)	●	●	●	●
Corsa-C	[8] 2008	Z 13 DT	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[8] 2008	Z 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[8] 2008	Z 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[8] 2008	Z 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[8] 2008	Z 13 DT	AOH (Add On Heater)	●	●	●	●
Corsa-C	[8] 2008	Z 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[8] 2008	Z 13 DT	BCM (Body Control Module)	●	●	●	●
Corsa-C	[8] 2008	Z 13 DT	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[8] 2008	Z 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[8] 2008	Z 13 DTJ	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[8] 2008	Z 13 DTJ	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[8] 2008	Z 13 DTJ	MTA (Easytronic)	●	●	●	●
Corsa-C	[8] 2008	Z 13 DTJ	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[8] 2008	Z 13 DTJ	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[8] 2008	Z 13 DTJ	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[8] 2008	Z 13 DTJ	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[8] 2008	Z 13 DTJ	AOH (Add On Heater)	●	●	●	●
Corsa-C	[8] 2008	Z 13 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[8] 2008	Z 13 DTJ	BCM (Body Control Module)	●	●	●	●
Corsa-C	[8] 2008	Z 13 DTJ	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[8] 2008	Z 13 DTJ	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[8] 2008	Z 14 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[8] 2008	Z 14 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[8] 2008	Z 14 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[8] 2008	Z 14 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[8] 2008	Z 14 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[8] 2008	Z 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[8] 2008	Z 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[8] 2008	Z 14 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[8] 2008	Z 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[8] 2008	Z 14 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[8] 2008	Z 14 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[8] 2008	Z 14 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[8] 2008	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[8] 2008	Z 14 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[8] 2008	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Corsa-C	[8] 2008	Z 14 XEP	AF 13-II/17/20/22	●	●	●	●

Corsa-C	[8] 2008	Z 14 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[8] 2008	Z 14 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[8] 2008	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[8] 2008	Z 14 XEP	AOH (Add On Heater)	●	●	●	●
Corsa-C	[8] 2008	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[8] 2008	Z 14 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-C	[8] 2008	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[8] 2008	Z 14 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[8] 2008	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[8] 2008	Z 16 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[8] 2008	Z 16 SE	MTA (Easytronic)	●	●	●	●
Corsa-C	[8] 2008	Z 16 SE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[8] 2008	Z 16 SE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[8] 2008	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[8] 2008	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[8] 2008	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[8] 2008	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[8] 2008	Z 16 SE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[8] 2008	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[8] 2008	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[8] 2008	Z 16 YNG	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[8] 2008	Z 16 YNG	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[8] 2008	Z 16 YNG	MTA (Easytronic)	●	●	●	●
Corsa-C	[8] 2008	Z 16 YNG	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[8] 2008	Z 16 YNG	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[8] 2008	Z 16 YNG	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[8] 2008	Z 16 YNG	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[8] 2008	Z 16 YNG	AOH (Add On Heater)	●	●	●	●
Corsa-C	[8] 2008	Z 16 YNG	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[8] 2008	Z 16 YNG	BCM (Body Control Module)	●	●	●	●
Corsa-C	[8] 2008	Z 16 YNG	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[8] 2008	Z 16 YNG	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[8] 2008	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[8] 2008	Y 17 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[8] 2008	Y 17 DT	MTA (Easytronic)	●	●	●	●
Corsa-C	[8] 2008	Y 17 DT	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[8] 2008	Y 17 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[8] 2008	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[8] 2008	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[8] 2008	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Corsa-C	[8] 2008	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[8] 2008	Y 17 DT	BCM (Body Control Module)	●	●	●	●
Corsa-C	[8] 2008	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[8] 2008	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[8] 2008	Y 17 DTL	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[8] 2008	Y 17 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[8] 2008	Y 17 DTL	MTA (Easytronic)	●	●	●	●
Corsa-C	[8] 2008	Y 17 DTL	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[8] 2008	Y 17 DTL	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[8] 2008	Y 17 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[8] 2008	Y 17 DTL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[8] 2008	Y 17 DTL	AOH (Add On Heater)	●	●	●	●
Corsa-C	[8] 2008	Y 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[8] 2008	Y 17 DTL	BCM (Body Control Module)	●	●	●	●
Corsa-C	[8] 2008	Y 17 DTL	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[8] 2008	Y 17 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●

Corsa-C	[8] 2008	Z 17 DTH	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[8] 2008	Z 17 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[8] 2008	Z 17 DTH	MTA (Easytronic)	●	●	●	●
Corsa-C	[8] 2008	Z 17 DTH	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[8] 2008	Z 17 DTH	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[8] 2008	Z 17 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[8] 2008	Z 17 DTH	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[8] 2008	Z 17 DTH	AOH (Add On Heater)	●	●	●	●
Corsa-C	[8] 2008	Z 17 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[8] 2008	Z 17 DTH	BCM (Body Control Module)	●	●	●	●
Corsa-C	[8] 2008	Z 17 DTH	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[8] 2008	Z 17 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[8] 2008	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[8] 2008	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[8] 2008	Z 18 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[8] 2008	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[8] 2008	Z 18 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[8] 2008	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[8] 2008	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[8] 2008	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[8] 2008	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[8] 2008	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[8] 2008	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[8] 2008	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[7] 2007	Z 10 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[7] 2007	Z 10 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[7] 2007	Z 10 XEP	MTA (Easytronic)	●	●	●	●
Corsa-C	[7] 2007	Z 10 XEP	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[7] 2007	Z 10 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[7] 2007	Z 10 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[7] 2007	Z 10 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[7] 2007	Z 10 XEP	AOH (Add On Heater)	●	●	●	●
Corsa-C	[7] 2007	Z 10 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[7] 2007	Z 10 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-C	[7] 2007	Z 10 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[7] 2007	Z 10 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[7] 2007	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[7] 2007	Z 12 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[7] 2007	Z 12 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[7] 2007	Z 12 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[7] 2007	Z 12 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[7] 2007	Z 12 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[7] 2007	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[7] 2007	Z 12 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[7] 2007	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[7] 2007	Z 12 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[7] 2007	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[7] 2007	Z 12 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[7] 2007	Z 12 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[7] 2007	Z 12 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[7] 2007	Z 12 XEP	MTA (Easytronic)	●	●	●	●
Corsa-C	[7] 2007	Z 12 XEP	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[7] 2007	Z 12 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[7] 2007	Z 12 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[7] 2007	Z 12 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[7] 2007	Z 12 XEP	AOH (Add On Heater)	●	●	●	●

Corsa-C	[7] 2007	Z 12 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[7] 2007	Z 12 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-C	[7] 2007	Z 12 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[7] 2007	Z 12 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[7] 2007	Y 13 DT	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[7] 2007	Y 13 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[7] 2007	Y 13 DT	MTA (Easytronic)	●	●	●	●
Corsa-C	[7] 2007	Y 13 DT	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[7] 2007	Y 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[7] 2007	Y 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[7] 2007	Y 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[7] 2007	Y 13 DT	AOH (Add On Heater)	●	●	●	●
Corsa-C	[7] 2007	Y 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[7] 2007	Y 13 DT	BCM (Body Control Module)	●	●	●	●
Corsa-C	[7] 2007	Y 13 DT	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[7] 2007	Y 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[7] 2007	Z 13 DT	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[7] 2007	Z 13 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[7] 2007	Z 13 DT	MTA (Easytronic)	●	●	●	●
Corsa-C	[7] 2007	Z 13 DT	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[7] 2007	Z 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[7] 2007	Z 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[7] 2007	Z 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[7] 2007	Z 13 DT	AOH (Add On Heater)	●	●	●	●
Corsa-C	[7] 2007	Z 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[7] 2007	Z 13 DT	BCM (Body Control Module)	●	●	●	●
Corsa-C	[7] 2007	Z 13 DT	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[7] 2007	Z 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[7] 2007	Z 13 DTJ	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[7] 2007	Z 13 DTJ	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[7] 2007	Z 13 DTJ	MTA (Easytronic)	●	●	●	●
Corsa-C	[7] 2007	Z 13 DTJ	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[7] 2007	Z 13 DTJ	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[7] 2007	Z 13 DTJ	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[7] 2007	Z 13 DTJ	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[7] 2007	Z 13 DTJ	AOH (Add On Heater)	●	●	●	●
Corsa-C	[7] 2007	Z 13 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[7] 2007	Z 13 DTJ	BCM (Body Control Module)	●	●	●	●
Corsa-C	[7] 2007	Z 13 DTJ	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[7] 2007	Z 13 DTJ	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[7] 2007	Z 14 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[7] 2007	Z 14 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[7] 2007	Z 14 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[7] 2007	Z 14 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[7] 2007	Z 14 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[7] 2007	Z 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[7] 2007	Z 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[7] 2007	Z 14 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[7] 2007	Z 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[7] 2007	Z 14 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[7] 2007	Z 14 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[7] 2007	Z 14 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[7] 2007	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[7] 2007	Z 14 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[7] 2007	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Corsa-C	[7] 2007	Z 14 XEP	AF 13-II/17/20/22	●	●	●	●

Corsa-C	[7] 2007	Z 14 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[7] 2007	Z 14 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[7] 2007	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[7] 2007	Z 14 XEP	AOH (Add On Heater)	●	●	●	●
Corsa-C	[7] 2007	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[7] 2007	Z 14 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-C	[7] 2007	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[7] 2007	Z 14 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[7] 2007	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[7] 2007	Z 16 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[7] 2007	Z 16 SE	MTA (Easytronic)	●	●	●	●
Corsa-C	[7] 2007	Z 16 SE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[7] 2007	Z 16 SE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[7] 2007	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[7] 2007	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[7] 2007	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[7] 2007	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[7] 2007	Z 16 SE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[7] 2007	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[7] 2007	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[7] 2007	Z 16 YNG	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[7] 2007	Z 16 YNG	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[7] 2007	Z 16 YNG	MTA (Easytronic)	●	●	●	●
Corsa-C	[7] 2007	Z 16 YNG	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[7] 2007	Z 16 YNG	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[7] 2007	Z 16 YNG	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[7] 2007	Z 16 YNG	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[7] 2007	Z 16 YNG	AOH (Add On Heater)	●	●	●	●
Corsa-C	[7] 2007	Z 16 YNG	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[7] 2007	Z 16 YNG	BCM (Body Control Module)	●	●	●	●
Corsa-C	[7] 2007	Z 16 YNG	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[7] 2007	Z 16 YNG	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[7] 2007	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[7] 2007	Y 17 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[7] 2007	Y 17 DT	MTA (Easytronic)	●	●	●	●
Corsa-C	[7] 2007	Y 17 DT	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[7] 2007	Y 17 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[7] 2007	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[7] 2007	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[7] 2007	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Corsa-C	[7] 2007	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[7] 2007	Y 17 DT	BCM (Body Control Module)	●	●	●	●
Corsa-C	[7] 2007	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[7] 2007	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[7] 2007	Y 17 DTL	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[7] 2007	Y 17 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[7] 2007	Y 17 DTL	MTA (Easytronic)	●	●	●	●
Corsa-C	[7] 2007	Y 17 DTL	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[7] 2007	Y 17 DTL	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[7] 2007	Y 17 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[7] 2007	Y 17 DTL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[7] 2007	Y 17 DTL	AOH (Add On Heater)	●	●	●	●
Corsa-C	[7] 2007	Y 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[7] 2007	Y 17 DTL	BCM (Body Control Module)	●	●	●	●
Corsa-C	[7] 2007	Y 17 DTL	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[7] 2007	Y 17 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●

Corsa-C	[7] 2007	Z 17 DTH	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[7] 2007	Z 17 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[7] 2007	Z 17 DTH	MTA (Easytronic)	●	●	●	●
Corsa-C	[7] 2007	Z 17 DTH	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[7] 2007	Z 17 DTH	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[7] 2007	Z 17 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[7] 2007	Z 17 DTH	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[7] 2007	Z 17 DTH	AOH (Add On Heater)	●	●	●	●
Corsa-C	[7] 2007	Z 17 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[7] 2007	Z 17 DTH	BCM (Body Control Module)	●	●	●	●
Corsa-C	[7] 2007	Z 17 DTH	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[7] 2007	Z 17 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[7] 2007	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[7] 2007	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[7] 2007	Z 18 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[7] 2007	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[7] 2007	Z 18 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[7] 2007	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[7] 2007	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[7] 2007	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[7] 2007	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[7] 2007	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[7] 2007	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[7] 2007	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[6] 2006	Z 10 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[6] 2006	Z 10 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[6] 2006	Z 10 XEP	MTA (Easytronic)	●	●	●	●
Corsa-C	[6] 2006	Z 10 XEP	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[6] 2006	Z 10 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[6] 2006	Z 10 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[6] 2006	Z 10 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[6] 2006	Z 10 XEP	AOH (Add On Heater)	●	●	●	●
Corsa-C	[6] 2006	Z 10 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[6] 2006	Z 10 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-C	[6] 2006	Z 10 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[6] 2006	Z 10 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[6] 2006	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[6] 2006	Z 12 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[6] 2006	Z 12 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[6] 2006	Z 12 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[6] 2006	Z 12 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[6] 2006	Z 12 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[6] 2006	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[6] 2006	Z 12 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[6] 2006	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[6] 2006	Z 12 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[6] 2006	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[6] 2006	Z 12 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[6] 2006	Z 12 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[6] 2006	Z 12 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[6] 2006	Z 12 XEP	MTA (Easytronic)	●	●	●	●
Corsa-C	[6] 2006	Z 12 XEP	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[6] 2006	Z 12 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[6] 2006	Z 12 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[6] 2006	Z 12 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[6] 2006	Z 12 XEP	AOH (Add On Heater)	●	●	●	●

Corsa-C	[6] 2006	Z 12 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[6] 2006	Z 12 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-C	[6] 2006	Z 12 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[6] 2006	Z 12 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[6] 2006	Y 13 DT	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[6] 2006	Y 13 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[6] 2006	Y 13 DT	MTA (Easytronic)	●	●	●	●
Corsa-C	[6] 2006	Y 13 DT	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[6] 2006	Y 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[6] 2006	Y 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[6] 2006	Y 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[6] 2006	Y 13 DT	AOH (Add On Heater)	●	●	●	●
Corsa-C	[6] 2006	Y 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[6] 2006	Y 13 DT	BCM (Body Control Module)	●	●	●	●
Corsa-C	[6] 2006	Y 13 DT	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[6] 2006	Y 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[6] 2006	Z 13 DT	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[6] 2006	Z 13 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[6] 2006	Z 13 DT	MTA (Easytronic)	●	●	●	●
Corsa-C	[6] 2006	Z 13 DT	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[6] 2006	Z 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[6] 2006	Z 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[6] 2006	Z 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[6] 2006	Z 13 DT	AOH (Add On Heater)	●	●	●	●
Corsa-C	[6] 2006	Z 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[6] 2006	Z 13 DT	BCM (Body Control Module)	●	●	●	●
Corsa-C	[6] 2006	Z 13 DT	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[6] 2006	Z 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[6] 2006	Z 14 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[6] 2006	Z 14 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[6] 2006	Z 14 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[6] 2006	Z 14 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[6] 2006	Z 14 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[6] 2006	Z 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[6] 2006	Z 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[6] 2006	Z 14 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[6] 2006	Z 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[6] 2006	Z 14 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[6] 2006	Z 14 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[6] 2006	Z 14 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[6] 2006	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[6] 2006	Z 14 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[6] 2006	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Corsa-C	[6] 2006	Z 14 XEP	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[6] 2006	Z 14 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[6] 2006	Z 14 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[6] 2006	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[6] 2006	Z 14 XEP	AOH (Add On Heater)	●	●	●	●
Corsa-C	[6] 2006	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[6] 2006	Z 14 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-C	[6] 2006	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[6] 2006	Z 14 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[6] 2006	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[6] 2006	Z 16 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[6] 2006	Z 16 SE	MTA (Easytronic)	●	●	●	●
Corsa-C	[6] 2006	Z 16 SE	AF 13-II/17/20/22	●	●	●	●

Corsa-C	[6] 2006	Z 16 SE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[6] 2006	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[6] 2006	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[6] 2006	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[6] 2006	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[6] 2006	Z 16 SE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[6] 2006	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[6] 2006	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[6] 2006	Z 16 YNG	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[6] 2006	Z 16 YNG	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[6] 2006	Z 16 YNG	MTA (Easytronic)	●	●	●	●
Corsa-C	[6] 2006	Z 16 YNG	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[6] 2006	Z 16 YNG	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[6] 2006	Z 16 YNG	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[6] 2006	Z 16 YNG	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[6] 2006	Z 16 YNG	AOH (Add On Heater)	●	●	●	●
Corsa-C	[6] 2006	Z 16 YNG	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[6] 2006	Z 16 YNG	BCM (Body Control Module)	●	●	●	●
Corsa-C	[6] 2006	Z 16 YNG	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[6] 2006	Z 16 YNG	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[6] 2006	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[6] 2006	Y 17 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[6] 2006	Y 17 DT	MTA (Easytronic)	●	●	●	●
Corsa-C	[6] 2006	Y 17 DT	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[6] 2006	Y 17 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[6] 2006	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[6] 2006	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[6] 2006	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Corsa-C	[6] 2006	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[6] 2006	Y 17 DT	BCM (Body Control Module)	●	●	●	●
Corsa-C	[6] 2006	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[6] 2006	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[6] 2006	Y 17 DTL	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[6] 2006	Y 17 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[6] 2006	Y 17 DTL	MTA (Easytronic)	●	●	●	●
Corsa-C	[6] 2006	Y 17 DTL	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[6] 2006	Y 17 DTL	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[6] 2006	Y 17 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[6] 2006	Y 17 DTL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[6] 2006	Y 17 DTL	AOH (Add On Heater)	●	●	●	●
Corsa-C	[6] 2006	Y 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[6] 2006	Y 17 DTL	BCM (Body Control Module)	●	●	●	●
Corsa-C	[6] 2006	Y 17 DTL	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[6] 2006	Y 17 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[6] 2006	Z 17 DTH	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[6] 2006	Z 17 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[6] 2006	Z 17 DTH	MTA (Easytronic)	●	●	●	●
Corsa-C	[6] 2006	Z 17 DTH	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[6] 2006	Z 17 DTH	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[6] 2006	Z 17 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[6] 2006	Z 17 DTH	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[6] 2006	Z 17 DTH	AOH (Add On Heater)	●	●	●	●
Corsa-C	[6] 2006	Z 17 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[6] 2006	Z 17 DTH	BCM (Body Control Module)	●	●	●	●
Corsa-C	[6] 2006	Z 17 DTH	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[6] 2006	Z 17 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●

Corsa-C	[6] 2006	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[6] 2006	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[6] 2006	Z 18 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[6] 2006	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[6] 2006	Z 18 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[6] 2006	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[6] 2006	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[6] 2006	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[6] 2006	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[6] 2006	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[6] 2006	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[6] 2006	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[5] 2005	Z 10 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[5] 2005	Z 10 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[5] 2005	Z 10 XEP	MTA (Easytronic)	●	●	●	●
Corsa-C	[5] 2005	Z 10 XEP	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[5] 2005	Z 10 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[5] 2005	Z 10 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[5] 2005	Z 10 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[5] 2005	Z 10 XEP	AOH (Add On Heater)	●	●	●	●
Corsa-C	[5] 2005	Z 10 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[5] 2005	Z 10 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-C	[5] 2005	Z 10 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[5] 2005	Z 10 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[5] 2005	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[5] 2005	Z 12 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[5] 2005	Z 12 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[5] 2005	Z 12 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[5] 2005	Z 12 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[5] 2005	Z 12 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[5] 2005	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[5] 2005	Z 12 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[5] 2005	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[5] 2005	Z 12 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[5] 2005	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[5] 2005	Z 12 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[5] 2005	Z 12 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[5] 2005	Z 12 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[5] 2005	Z 12 XEP	MTA (Easytronic)	●	●	●	●
Corsa-C	[5] 2005	Z 12 XEP	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[5] 2005	Z 12 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[5] 2005	Z 12 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[5] 2005	Z 12 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[5] 2005	Z 12 XEP	AOH (Add On Heater)	●	●	●	●
Corsa-C	[5] 2005	Z 12 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[5] 2005	Z 12 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-C	[5] 2005	Z 12 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[5] 2005	Z 12 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[5] 2005	Y 13 DT	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[5] 2005	Y 13 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[5] 2005	Y 13 DT	MTA (Easytronic)	●	●	●	●
Corsa-C	[5] 2005	Y 13 DT	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[5] 2005	Y 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[5] 2005	Y 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[5] 2005	Y 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[5] 2005	Y 13 DT	AOH (Add On Heater)	●	●	●	●

Corsa-C	[5] 2005	Y 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[5] 2005	Y 13 DT	BCM (Body Control Module)	●	●	●	●
Corsa-C	[5] 2005	Y 13 DT	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[5] 2005	Y 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[5] 2005	Z 13 DT	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[5] 2005	Z 13 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[5] 2005	Z 13 DT	MTA (Easytronic)	●	●	●	●
Corsa-C	[5] 2005	Z 13 DT	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[5] 2005	Z 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[5] 2005	Z 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[5] 2005	Z 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[5] 2005	Z 13 DT	AOH (Add On Heater)	●	●	●	●
Corsa-C	[5] 2005	Z 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[5] 2005	Z 13 DT	BCM (Body Control Module)	●	●	●	●
Corsa-C	[5] 2005	Z 13 DT	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[5] 2005	Z 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[5] 2005	Z 14 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[5] 2005	Z 14 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[5] 2005	Z 14 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[5] 2005	Z 14 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[5] 2005	Z 14 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[5] 2005	Z 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[5] 2005	Z 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[5] 2005	Z 14 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[5] 2005	Z 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[5] 2005	Z 14 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[5] 2005	Z 14 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[5] 2005	Z 14 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[5] 2005	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[5] 2005	Z 14 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[5] 2005	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Corsa-C	[5] 2005	Z 14 XEP	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[5] 2005	Z 14 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[5] 2005	Z 14 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[5] 2005	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[5] 2005	Z 14 XEP	AOH (Add On Heater)	●	●	●	●
Corsa-C	[5] 2005	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[5] 2005	Z 14 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-C	[5] 2005	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[5] 2005	Z 14 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[5] 2005	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[5] 2005	Z 16 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[5] 2005	Z 16 SE	MTA (Easytronic)	●	●	●	●
Corsa-C	[5] 2005	Z 16 SE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[5] 2005	Z 16 SE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[5] 2005	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[5] 2005	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[5] 2005	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[5] 2005	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[5] 2005	Z 16 SE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[5] 2005	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[5] 2005	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[5] 2005	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[5] 2005	Y 17 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[5] 2005	Y 17 DT	MTA (Easytronic)	●	●	●	●
Corsa-C	[5] 2005	Y 17 DT	AF 13-II/17/20/22	●	●	●	●

Corsa-C	[5] 2005	Y 17 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[5] 2005	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[5] 2005	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[5] 2005	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Corsa-C	[5] 2005	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[5] 2005	Y 17 DT	BCM (Body Control Module)	●	●	●	●
Corsa-C	[5] 2005	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[5] 2005	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[5] 2005	Y 17 DTL	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[5] 2005	Y 17 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[5] 2005	Y 17 DTL	MTA (Easytronic)	●	●	●	●
Corsa-C	[5] 2005	Y 17 DTL	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[5] 2005	Y 17 DTL	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[5] 2005	Y 17 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[5] 2005	Y 17 DTL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[5] 2005	Y 17 DTL	AOH (Add On Heater)	●	●	●	●
Corsa-C	[5] 2005	Y 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[5] 2005	Y 17 DTL	BCM (Body Control Module)	●	●	●	●
Corsa-C	[5] 2005	Y 17 DTL	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[5] 2005	Y 17 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[5] 2005	Z 17 DTH	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[5] 2005	Z 17 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[5] 2005	Z 17 DTH	MTA (Easytronic)	●	●	●	●
Corsa-C	[5] 2005	Z 17 DTH	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[5] 2005	Z 17 DTH	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[5] 2005	Z 17 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[5] 2005	Z 17 DTH	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[5] 2005	Z 17 DTH	AOH (Add On Heater)	●	●	●	●
Corsa-C	[5] 2005	Z 17 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[5] 2005	Z 17 DTH	BCM (Body Control Module)	●	●	●	●
Corsa-C	[5] 2005	Z 17 DTH	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[5] 2005	Z 17 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[5] 2005	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[5] 2005	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[5] 2005	Z 18 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[5] 2005	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[5] 2005	Z 18 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[5] 2005	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[5] 2005	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[5] 2005	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[5] 2005	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[5] 2005	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[5] 2005	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[5] 2005	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[4] 2004	Z 10 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[4] 2004	Z 10 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[4] 2004	Z 10 XEP	MTA (Easytronic)	●	●	●	●
Corsa-C	[4] 2004	Z 10 XEP	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[4] 2004	Z 10 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[4] 2004	Z 10 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[4] 2004	Z 10 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[4] 2004	Z 10 XEP	AOH (Add On Heater)	●	●	●	●
Corsa-C	[4] 2004	Z 10 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[4] 2004	Z 10 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-C	[4] 2004	Z 10 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[4] 2004	Z 10 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●

Corsa-C	[4] 2004	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[4] 2004	Z 12 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[4] 2004	Z 12 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[4] 2004	Z 12 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[4] 2004	Z 12 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[4] 2004	Z 12 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[4] 2004	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[4] 2004	Z 12 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[4] 2004	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[4] 2004	Z 12 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[4] 2004	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[4] 2004	Z 12 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[4] 2004	Z 13 DT	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[4] 2004	Z 13 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[4] 2004	Z 13 DT	MTA (Easytronic)	●	●	●	●
Corsa-C	[4] 2004	Z 13 DT	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[4] 2004	Z 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[4] 2004	Z 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[4] 2004	Z 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[4] 2004	Z 13 DT	AOH (Add On Heater)	●	●	●	●
Corsa-C	[4] 2004	Z 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[4] 2004	Z 13 DT	BCM (Body Control Module)	●	●	●	●
Corsa-C	[4] 2004	Z 13 DT	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[4] 2004	Z 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[4] 2004	Z 14 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[4] 2004	Z 14 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[4] 2004	Z 14 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[4] 2004	Z 14 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[4] 2004	Z 14 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[4] 2004	Z 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[4] 2004	Z 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[4] 2004	Z 14 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[4] 2004	Z 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[4] 2004	Z 14 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[4] 2004	Z 14 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[4] 2004	Z 14 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[4] 2004	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[4] 2004	Z 14 XEP	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[4] 2004	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Corsa-C	[4] 2004	Z 14 XEP	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[4] 2004	Z 14 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[4] 2004	Z 14 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[4] 2004	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[4] 2004	Z 14 XEP	AOH (Add On Heater)	●	●	●	●
Corsa-C	[4] 2004	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[4] 2004	Z 14 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-C	[4] 2004	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[4] 2004	Z 14 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[4] 2004	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[4] 2004	Z 16 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[4] 2004	Z 16 SE	MTA (Easytronic)	●	●	●	●
Corsa-C	[4] 2004	Z 16 SE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[4] 2004	Z 16 SE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[4] 2004	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[4] 2004	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[4] 2004	Z 16 SE	AOH (Add On Heater)	●	●	●	●

Corsa-C	[4] 2004	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[4] 2004	Z 16 SE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[4] 2004	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[4] 2004	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[4] 2004	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[4] 2004	Y 17 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[4] 2004	Y 17 DT	MTA (Easytronic)	●	●	●	●
Corsa-C	[4] 2004	Y 17 DT	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[4] 2004	Y 17 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[4] 2004	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[4] 2004	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[4] 2004	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Corsa-C	[4] 2004	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[4] 2004	Y 17 DT	BCM (Body Control Module)	●	●	●	●
Corsa-C	[4] 2004	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[4] 2004	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[4] 2004	Y 17 DTL	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[4] 2004	Y 17 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[4] 2004	Y 17 DTL	MTA (Easytronic)	●	●	●	●
Corsa-C	[4] 2004	Y 17 DTL	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[4] 2004	Y 17 DTL	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[4] 2004	Y 17 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[4] 2004	Y 17 DTL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[4] 2004	Y 17 DTL	AOH (Add On Heater)	●	●	●	●
Corsa-C	[4] 2004	Y 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[4] 2004	Y 17 DTL	BCM (Body Control Module)	●	●	●	●
Corsa-C	[4] 2004	Y 17 DTL	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[4] 2004	Y 17 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[4] 2004	Z 17 DTH	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[4] 2004	Z 17 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[4] 2004	Z 17 DTH	MTA (Easytronic)	●	●	●	●
Corsa-C	[4] 2004	Z 17 DTH	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[4] 2004	Z 17 DTH	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[4] 2004	Z 17 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[4] 2004	Z 17 DTH	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[4] 2004	Z 17 DTH	AOH (Add On Heater)	●	●	●	●
Corsa-C	[4] 2004	Z 17 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[4] 2004	Z 17 DTH	BCM (Body Control Module)	●	●	●	●
Corsa-C	[4] 2004	Z 17 DTH	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[4] 2004	Z 17 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[4] 2004	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[4] 2004	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[4] 2004	Z 18 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[4] 2004	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[4] 2004	Z 18 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[4] 2004	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[4] 2004	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[4] 2004	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[4] 2004	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[4] 2004	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[4] 2004	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[4] 2004	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[3] 2003	Z 10 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[3] 2003	Z 10 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[3] 2003	Z 10 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[3] 2003	Z 10 XE	AF 13-II/17/20/22	●	●	●	●

Corsa-C	[3] 2003	Z 10 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[3] 2003	Z 10 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[3] 2003	Z 10 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[3] 2003	Z 10 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[3] 2003	Z 10 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[3] 2003	Z 10 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[3] 2003	Z 10 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[3] 2003	Z 10 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[3] 2003	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[3] 2003	Z 12 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[3] 2003	Z 12 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[3] 2003	Z 12 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[3] 2003	Z 12 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[3] 2003	Z 12 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[3] 2003	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[3] 2003	Z 12 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[3] 2003	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[3] 2003	Z 12 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[3] 2003	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[3] 2003	Z 12 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[3] 2003	Z 14 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[3] 2003	Z 14 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[3] 2003	Z 14 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[3] 2003	Z 14 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[3] 2003	Z 14 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[3] 2003	Z 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[3] 2003	Z 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[3] 2003	Z 14 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[3] 2003	Z 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[3] 2003	Z 14 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[3] 2003	Z 14 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[3] 2003	Z 14 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[3] 2003	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[3] 2003	Z 16 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[3] 2003	Z 16 SE	MTA (Easytronic)	●	●	●	●
Corsa-C	[3] 2003	Z 16 SE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[3] 2003	Z 16 SE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[3] 2003	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[3] 2003	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[3] 2003	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[3] 2003	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[3] 2003	Z 16 SE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[3] 2003	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[3] 2003	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[3] 2003	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[3] 2003	Y 17 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[3] 2003	Y 17 DT	MTA (Easytronic)	●	●	●	●
Corsa-C	[3] 2003	Y 17 DT	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[3] 2003	Y 17 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[3] 2003	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[3] 2003	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[3] 2003	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Corsa-C	[3] 2003	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[3] 2003	Y 17 DT	BCM (Body Control Module)	●	●	●	●
Corsa-C	[3] 2003	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[3] 2003	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●

Corsa-C	[3] 2003	Y 17 DTL	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[3] 2003	Y 17 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[3] 2003	Y 17 DTL	MTA (Easytronic)	●	●	●	●
Corsa-C	[3] 2003	Y 17 DTL	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[3] 2003	Y 17 DTL	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[3] 2003	Y 17 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[3] 2003	Y 17 DTL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[3] 2003	Y 17 DTL	AOH (Add On Heater)	●	●	●	●
Corsa-C	[3] 2003	Y 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[3] 2003	Y 17 DTL	BCM (Body Control Module)	●	●	●	●
Corsa-C	[3] 2003	Y 17 DTL	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[3] 2003	Y 17 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[3] 2003	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[3] 2003	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[3] 2003	Z 18 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[3] 2003	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[3] 2003	Z 18 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[3] 2003	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[3] 2003	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[3] 2003	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[3] 2003	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[3] 2003	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[3] 2003	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[3] 2003	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[2] 2002	Z 10 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[2] 2002	Z 10 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[2] 2002	Z 10 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[2] 2002	Z 10 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[2] 2002	Z 10 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[2] 2002	Z 10 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[2] 2002	Z 10 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[2] 2002	Z 10 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[2] 2002	Z 10 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[2] 2002	Z 10 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[2] 2002	Z 10 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[2] 2002	Z 10 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[2] 2002	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[2] 2002	Z 12 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[2] 2002	Z 12 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[2] 2002	Z 12 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[2] 2002	Z 12 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[2] 2002	Z 12 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[2] 2002	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[2] 2002	Z 12 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[2] 2002	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[2] 2002	Z 12 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[2] 2002	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[2] 2002	Z 12 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[2] 2002	Z 14 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[2] 2002	Z 14 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[2] 2002	Z 14 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[2] 2002	Z 14 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[2] 2002	Z 14 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[2] 2002	Z 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[2] 2002	Z 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[2] 2002	Z 14 XE	AOH (Add On Heater)	●	●	●	●

Corsa-C	[2] 2002	Z 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[2] 2002	Z 14 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[2] 2002	Z 14 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[2] 2002	Z 14 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[2] 2002	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[2] 2002	Z 16 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[2] 2002	Z 16 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[2] 2002	Z 16 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[2] 2002	Z 16 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[2] 2002	Z 16 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[2] 2002	Z 16 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[2] 2002	Z 16 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[2] 2002	Z 16 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[2] 2002	Z 16 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[2] 2002	Z 16 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[2] 2002	Z 16 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[2] 2002	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[2] 2002	Z 16 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[2] 2002	Z 16 SE	MTA (Easytronic)	●	●	●	●
Corsa-C	[2] 2002	Z 16 SE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[2] 2002	Z 16 SE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[2] 2002	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[2] 2002	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[2] 2002	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[2] 2002	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[2] 2002	Z 16 SE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[2] 2002	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[2] 2002	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[2] 2002	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[2] 2002	Y 17 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[2] 2002	Y 17 DT	MTA (Easytronic)	●	●	●	●
Corsa-C	[2] 2002	Y 17 DT	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[2] 2002	Y 17 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[2] 2002	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[2] 2002	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[2] 2002	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Corsa-C	[2] 2002	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[2] 2002	Y 17 DT	BCM (Body Control Module)	●	●	●	●
Corsa-C	[2] 2002	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[2] 2002	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[2] 2002	Y 17 DTL	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[2] 2002	Y 17 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[2] 2002	Y 17 DTL	MTA (Easytronic)	●	●	●	●
Corsa-C	[2] 2002	Y 17 DTL	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[2] 2002	Y 17 DTL	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[2] 2002	Y 17 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[2] 2002	Y 17 DTL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[2] 2002	Y 17 DTL	AOH (Add On Heater)	●	●	●	●
Corsa-C	[2] 2002	Y 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[2] 2002	Y 17 DTL	BCM (Body Control Module)	●	●	●	●
Corsa-C	[2] 2002	Y 17 DTL	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[2] 2002	Y 17 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[2] 2002	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[2] 2002	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[2] 2002	Z 18 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[2] 2002	Z 18 XE	AF 13-II/17/20/22	●	●	●	●

Corsa-C	[2] 2002	Z 18 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[2] 2002	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[2] 2002	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[2] 2002	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[2] 2002	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[2] 2002	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[2] 2002	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[2] 2002	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[1] 2001	Z 10 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[1] 2001	Z 10 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[1] 2001	Z 10 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[1] 2001	Z 10 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[1] 2001	Z 10 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[1] 2001	Z 10 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[1] 2001	Z 10 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[1] 2001	Z 10 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[1] 2001	Z 10 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[1] 2001	Z 10 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[1] 2001	Z 10 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[1] 2001	Z 10 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[1] 2001	Z 12 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[1] 2001	Z 12 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[1] 2001	Z 12 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[1] 2001	Z 12 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[1] 2001	Z 12 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[1] 2001	Z 12 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[1] 2001	Z 12 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[1] 2001	Z 12 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[1] 2001	Z 12 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[1] 2001	Z 12 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[1] 2001	Z 12 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[1] 2001	Z 12 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[1] 2001	Z 14 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[1] 2001	Z 14 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[1] 2001	Z 14 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[1] 2001	Z 14 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[1] 2001	Z 14 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[1] 2001	Z 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[1] 2001	Z 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[1] 2001	Z 14 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[1] 2001	Z 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[1] 2001	Z 14 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[1] 2001	Z 14 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[1] 2001	Z 14 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[1] 2001	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[1] 2001	Y 17 DT	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[1] 2001	Y 17 DT	MTA (Easytronic)	●	●	●	●
Corsa-C	[1] 2001	Y 17 DT	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[1] 2001	Y 17 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[1] 2001	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[1] 2001	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[1] 2001	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Corsa-C	[1] 2001	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[1] 2001	Y 17 DT	BCM (Body Control Module)	●	●	●	●
Corsa-C	[1] 2001	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[1] 2001	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●

Corsa-C	[1] 2001	Y 17 DTL	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[1] 2001	Y 17 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[1] 2001	Y 17 DTL	MTA (Easytronic)	●	●	●	●
Corsa-C	[1] 2001	Y 17 DTL	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[1] 2001	Y 17 DTL	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[1] 2001	Y 17 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[1] 2001	Y 17 DTL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[1] 2001	Y 17 DTL	AOH (Add On Heater)	●	●	●	●
Corsa-C	[1] 2001	Y 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[1] 2001	Y 17 DTL	BCM (Body Control Module)	●	●	●	●
Corsa-C	[1] 2001	Y 17 DTL	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[1] 2001	Y 17 DTL	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C	[1] 2001	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C	[1] 2001	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Corsa-C	[1] 2001	Z 18 XE	MTA (Easytronic)	●	●	●	●
Corsa-C	[1] 2001	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Corsa-C	[1] 2001	Z 18 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Corsa-C	[1] 2001	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C	[1] 2001	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C	[1] 2001	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Corsa-C	[1] 2001	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C	[1] 2001	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C	[1] 2001	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C	[1] 2001	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Corsa-C (GMSA)	[5] 2005	Z 14 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C (GMSA)	[5] 2005	Z 14 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C (GMSA)	[5] 2005	Z 14 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C (GMSA)	[5] 2005	Z 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C (GMSA)	[5] 2005	Z 14 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C (GMSA)	[5] 2005	Z 14 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C (GMSA)	[5] 2005	C 14 SE	ECM (Engine Control Module)	●	●	●	●
Corsa-C (GMSA)	[5] 2005	C 14 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C (GMSA)	[5] 2005	C 14 SE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C (GMSA)	[5] 2005	C 14 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C (GMSA)	[5] 2005	C 14 SE	BCM (Body Control Module)	●	●	●	●
Corsa-C (GMSA)	[5] 2005	C 14 SE	IMMO (Immobiliser)	●	●	●	●
Corsa-C (GMSA)	[5] 2005	C 16 SE	ECM (Engine Control Module)	●	●	●	●
Corsa-C (GMSA)	[5] 2005	C 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C (GMSA)	[5] 2005	C 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C (GMSA)	[5] 2005	C 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C (GMSA)	[5] 2005	C 16 SE	BCM (Body Control Module)	●	●	●	●
Corsa-C (GMSA)	[5] 2005	C 16 SE	IMMO (Immobiliser)	●	●	●	●
Corsa-C (GMSA)	[5] 2005	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Corsa-C (GMSA)	[5] 2005	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C (GMSA)	[5] 2005	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C (GMSA)	[5] 2005	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C (GMSA)	[5] 2005	Y 17 DT	BCM (Body Control Module)	●	●	●	●
Corsa-C (GMSA)	[5] 2005	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Corsa-C (GMSA)	[5] 2005	Y 17 DTL	ECM (Engine Control Module)	●	●	●	●
Corsa-C (GMSA)	[5] 2005	Y 17 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C (GMSA)	[5] 2005	Y 17 DTL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C (GMSA)	[5] 2005	Y 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C (GMSA)	[5] 2005	Y 17 DTL	BCM (Body Control Module)	●	●	●	●
Corsa-C (GMSA)	[5] 2005	Y 17 DTL	IMMO (Immobiliser)	●	●	●	●
Corsa-C (GMSA)	[5] 2005	C 18 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C (GMSA)	[5] 2005	C 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●

Corsa-C (GMSA)	[3] 2003	Y 17 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C (GMSA)	[3] 2003	Y 17 DTL	BCM (Body Control Module)	●	●	●	●
Corsa-C (GMSA)	[3] 2003	Y 17 DTL	IMMO (Immobiliser)	●	●	●	●
Corsa-C (GMSA)	[3] 2003	C 18 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C (GMSA)	[3] 2003	C 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C (GMSA)	[3] 2003	C 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C (GMSA)	[3] 2003	C 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C (GMSA)	[3] 2003	C 18 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C (GMSA)	[3] 2003	C 18 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-C (GMSA)	[2] 2002	C 14 SE	ECM (Engine Control Module)	●	●	●	●
Corsa-C (GMSA)	[2] 2002	C 14 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C (GMSA)	[2] 2002	C 14 SE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C (GMSA)	[2] 2002	C 14 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C (GMSA)	[2] 2002	C 14 SE	BCM (Body Control Module)	●	●	●	●
Corsa-C (GMSA)	[2] 2002	C 14 SE	IMMO (Immobiliser)	●	●	●	●
Corsa-C (GMSA)	[2] 2002	C 16 SE	ECM (Engine Control Module)	●	●	●	●
Corsa-C (GMSA)	[2] 2002	C 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C (GMSA)	[2] 2002	C 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C (GMSA)	[2] 2002	C 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C (GMSA)	[2] 2002	C 16 SE	BCM (Body Control Module)	●	●	●	●
Corsa-C (GMSA)	[2] 2002	C 16 SE	IMMO (Immobiliser)	●	●	●	●
Corsa-C (GMSA)	[2] 2002	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Corsa-C (GMSA)	[2] 2002	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C (GMSA)	[2] 2002	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C (GMSA)	[2] 2002	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C (GMSA)	[2] 2002	Y 17 DT	BCM (Body Control Module)	●	●	●	●
Corsa-C (GMSA)	[2] 2002	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Corsa-C (GMSA)	[2] 2002	C 18 XE	ECM (Engine Control Module)	●	●	●	●
Corsa-C (GMSA)	[2] 2002	C 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Corsa-C (GMSA)	[2] 2002	C 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-C (GMSA)	[2] 2002	C 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-C (GMSA)	[2] 2002	C 18 XE	BCM (Body Control Module)	●	●	●	●
Corsa-C (GMSA)	[2] 2002	C 18 XE	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[E] 2014	Z 10 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[E] 2014	Z 10 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[E] 2014	Z 10 XEP	AF 13-4	●	●	●	●
Corsa-D	[E] 2014	Z 10 XEP	MTA (Easytronic)	●	●	●	●
Corsa-D	[E] 2014	Z 10 XEP	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[E] 2014	Z 10 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[E] 2014	Z 10 XEP	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[E] 2014	Z 10 XEP	Exterior Lighting	●	●	●	●
Corsa-D	[E] 2014	Z 10 XEP	Interior Lighting	●	●	●	●
Corsa-D	[E] 2014	Z 10 XEP	Wipers/Washer	●	●	●	●
Corsa-D	[E] 2014	Z 10 XEP	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[E] 2014	Z 10 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[E] 2014	Z 10 XEP	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[E] 2014	Z 10 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[E] 2014	Z 10 XEP	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[E] 2014	Z 10 XEP	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[E] 2014	Z 10 XEP	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[E] 2014	Z 10 XEP	PAS (Park Pilot)	●	●	●	●
Corsa-D	[E] 2014	Z 10 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[E] 2014	Z 10 XEP	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[E] 2014	Z 10 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-D	[E] 2014	A 10 XEP	ECM (Engine Control Module)	●	●	●	●

Corsa-D	[E] 2014	A 10 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[E] 2014	A 10 XEP	AF 13-4	●	●	●	●
Corsa-D	[E] 2014	A 10 XEP	MTA (Easytronic)	●	●	●	●
Corsa-D	[E] 2014	A 10 XEP	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[E] 2014	A 10 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[E] 2014	A 10 XEP	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[E] 2014	A 10 XEP	Exterior Lighting	●	●	●	●
Corsa-D	[E] 2014	A 10 XEP	Interior Lighting	●	●	●	●
Corsa-D	[E] 2014	A 10 XEP	Wipers/Washer	●	●	●	●
Corsa-D	[E] 2014	A 10 XEP	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[E] 2014	A 10 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[E] 2014	A 10 XEP	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[E] 2014	A 10 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[E] 2014	A 10 XEP	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[E] 2014	A 10 XEP	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[E] 2014	A 10 XEP	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[E] 2014	A 10 XEP	PAS (Park Pilot)	●	●	●	●
Corsa-D	[E] 2014	A 10 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[E] 2014	A 10 XEP	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[E] 2014	A 10 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-D	[E] 2014	Z 12 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[E] 2014	Z 12 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[E] 2014	Z 12 XEP	AF 13-4	●	●	●	●
Corsa-D	[E] 2014	Z 12 XEP	MTA (Easytronic)	●	●	●	●
Corsa-D	[E] 2014	Z 12 XEP	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[E] 2014	Z 12 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[E] 2014	Z 12 XEP	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[E] 2014	Z 12 XEP	Exterior Lighting	●	●	●	●
Corsa-D	[E] 2014	Z 12 XEP	Interior Lighting	●	●	●	●
Corsa-D	[E] 2014	Z 12 XEP	Wipers/Washer	●	●	●	●
Corsa-D	[E] 2014	Z 12 XEP	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[E] 2014	Z 12 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[E] 2014	Z 12 XEP	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[E] 2014	Z 12 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[E] 2014	Z 12 XEP	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[E] 2014	Z 12 XEP	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[E] 2014	Z 12 XEP	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[E] 2014	Z 12 XEP	PAS (Park Pilot)	●	●	●	●
Corsa-D	[E] 2014	Z 12 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[E] 2014	Z 12 XEP	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[E] 2014	Z 12 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-D	[E] 2014	A 12 XER	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[E] 2014	A 12 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[E] 2014	A 12 XER	AF 13-4	●	●	●	●
Corsa-D	[E] 2014	A 12 XER	MTA (Easytronic)	●	●	●	●
Corsa-D	[E] 2014	A 12 XER	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[E] 2014	A 12 XER	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[E] 2014	A 12 XER	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[E] 2014	A 12 XER	Exterior Lighting	●	●	●	●
Corsa-D	[E] 2014	A 12 XER	Interior Lighting	●	●	●	●
Corsa-D	[E] 2014	A 12 XER	Wipers/Washer	●	●	●	●
Corsa-D	[E] 2014	A 12 XER	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[E] 2014	A 12 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[E] 2014	A 12 XER	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[E] 2014	A 12 XER	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[E] 2014	A 12 XER	AFL (Adaptive Forward Lighting)	●	●	●	●

Corsa-D	[E] 2014	A 12 XER	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[E] 2014	A 12 XER	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[E] 2014	A 12 XER	PAS (Park Pilot)	●	●	●	●
Corsa-D	[E] 2014	A 12 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[E] 2014	A 12 XER	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[E] 2014	A 12 XER	BCM (Body Control Module)	●	●	●	●
Corsa-D	[E] 2014	A 12 XEL	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[E] 2014	A 12 XEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[E] 2014	A 12 XEL	AF 13-4	●	●	●	●
Corsa-D	[E] 2014	A 12 XEL	MTA (Easytronic)	●	●	●	●
Corsa-D	[E] 2014	A 12 XEL	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[E] 2014	A 12 XEL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[E] 2014	A 12 XEL	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[E] 2014	A 12 XEL	Exterior Lighting	●	●	●	●
Corsa-D	[E] 2014	A 12 XEL	Interior Lighting	●	●	●	●
Corsa-D	[E] 2014	A 12 XEL	Wipers/Washer	●	●	●	●
Corsa-D	[E] 2014	A 12 XEL	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[E] 2014	A 12 XEL	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[E] 2014	A 12 XEL	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[E] 2014	A 12 XEL	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[E] 2014	A 12 XEL	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[E] 2014	A 12 XEL	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[E] 2014	A 12 XEL	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[E] 2014	A 12 XEL	PAS (Park Pilot)	●	●	●	●
Corsa-D	[E] 2014	A 12 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[E] 2014	A 12 XEL	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[E] 2014	A 12 XEL	BCM (Body Control Module)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTH	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTH	AF 13-4	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTH	MTA (Easytronic)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTH	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTH	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTH	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTH	Exterior Lighting	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTH	Interior Lighting	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTH	Wipers/Washer	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTH	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTH	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTH	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTH	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTH	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTH	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTH	PAS (Park Pilot)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTH	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTH	BCM (Body Control Module)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTE	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTE	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTE	AF 13-4	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTE	MTA (Easytronic)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTE	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTE	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTE	Exterior Lighting	●	●	●	●

Corsa-D	[E] 2014	Z 13 DTE	Interior Lighting	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTE	Wipers/Washer	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTE	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTE	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTE	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTE	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTE	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTE	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTE	PAS (Park Pilot)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTE	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTE	BCM (Body Control Module)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTJ	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTJ	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTJ	AF 13-4	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTJ	MTA (Easytronic)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTJ	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTJ	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTJ	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTJ	Exterior Lighting	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTJ	Interior Lighting	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTJ	Wipers/Washer	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTJ	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTJ	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTJ	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTJ	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTJ	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTJ	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTJ	PAS (Park Pilot)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTJ	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[E] 2014	Z 13 DTJ	BCM (Body Control Module)	●	●	●	●
Corsa-D	[E] 2014	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[E] 2014	Z 14 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[E] 2014	Z 14 XEP	AF 13-4	●	●	●	●
Corsa-D	[E] 2014	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Corsa-D	[E] 2014	Z 14 XEP	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[E] 2014	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[E] 2014	Z 14 XEP	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[E] 2014	Z 14 XEP	Exterior Lighting	●	●	●	●
Corsa-D	[E] 2014	Z 14 XEP	Interior Lighting	●	●	●	●
Corsa-D	[E] 2014	Z 14 XEP	Wipers/Washer	●	●	●	●
Corsa-D	[E] 2014	Z 14 XEP	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[E] 2014	Z 14 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[E] 2014	Z 14 XEP	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[E] 2014	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[E] 2014	Z 14 XEP	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[E] 2014	Z 14 XEP	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[E] 2014	Z 14 XEP	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[E] 2014	Z 14 XEP	PAS (Park Pilot)	●	●	●	●
Corsa-D	[E] 2014	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[E] 2014	Z 14 XEP	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[E] 2014	Z 14 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-D	[E] 2014	A 14 XEL	ECM (Engine Control Module)	●	●	●	●

Corsa-D	[E] 2014	A 14 XEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[E] 2014	A 14 XEL	AF 13-4	●	●	●	●
Corsa-D	[E] 2014	A 14 XEL	MTA (Easytronic)	●	●	●	●
Corsa-D	[E] 2014	A 14 XEL	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[E] 2014	A 14 XEL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[E] 2014	A 14 XEL	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[E] 2014	A 14 XEL	Exterior Lighting	●	●	●	●
Corsa-D	[E] 2014	A 14 XEL	Interior Lighting	●	●	●	●
Corsa-D	[E] 2014	A 14 XEL	Wipers/Washer	●	●	●	●
Corsa-D	[E] 2014	A 14 XEL	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[E] 2014	A 14 XEL	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[E] 2014	A 14 XEL	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[E] 2014	A 14 XEL	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[E] 2014	A 14 XEL	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[E] 2014	A 14 XEL	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[E] 2014	A 14 XEL	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[E] 2014	A 14 XEL	PAS (Park Pilot)	●	●	●	●
Corsa-D	[E] 2014	A 14 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[E] 2014	A 14 XEL	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[E] 2014	A 14 XEL	BCM (Body Control Module)	●	●	●	●
Corsa-D	[E] 2014	A 14 XER	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[E] 2014	A 14 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[E] 2014	A 14 XER	AF 13-4	●	●	●	●
Corsa-D	[E] 2014	A 14 XER	MTA (Easytronic)	●	●	●	●
Corsa-D	[E] 2014	A 14 XER	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[E] 2014	A 14 XER	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[E] 2014	A 14 XER	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[E] 2014	A 14 XER	Exterior Lighting	●	●	●	●
Corsa-D	[E] 2014	A 14 XER	Interior Lighting	●	●	●	●
Corsa-D	[E] 2014	A 14 XER	Wipers/Washer	●	●	●	●
Corsa-D	[E] 2014	A 14 XER	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[E] 2014	A 14 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[E] 2014	A 14 XER	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[E] 2014	A 14 XER	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[E] 2014	A 14 XER	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[E] 2014	A 14 XER	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[E] 2014	A 14 XER	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[E] 2014	A 14 XER	PAS (Park Pilot)	●	●	●	●
Corsa-D	[E] 2014	A 14 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[E] 2014	A 14 XER	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[E] 2014	A 14 XER	BCM (Body Control Module)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LEL	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LEL	AF 13-4	●	●	●	●
Corsa-D	[E] 2014	Z 16 LEL	MTA (Easytronic)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LEL	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LEL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LEL	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LEL	Exterior Lighting	●	●	●	●
Corsa-D	[E] 2014	Z 16 LEL	Interior Lighting	●	●	●	●
Corsa-D	[E] 2014	Z 16 LEL	Wipers/Washer	●	●	●	●
Corsa-D	[E] 2014	Z 16 LEL	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LEL	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LEL	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LEL	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LEL	AFL (Adaptive Forward Lighting)	●	●	●	●

Corsa-D	[E] 2014	Z 16 LEL	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LEL	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LEL	PAS (Park Pilot)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LEL	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LEL	BCM (Body Control Module)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LER	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LER	AF 13-4	●	●	●	●
Corsa-D	[E] 2014	Z 16 LER	MTA (Easytronic)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LER	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LER	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LER	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LER	Exterior Lighting	●	●	●	●
Corsa-D	[E] 2014	Z 16 LER	Interior Lighting	●	●	●	●
Corsa-D	[E] 2014	Z 16 LER	Wipers/Washer	●	●	●	●
Corsa-D	[E] 2014	Z 16 LER	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LER	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LER	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LER	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LER	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LER	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LER	PAS (Park Pilot)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LER	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[E] 2014	Z 16 LER	BCM (Body Control Module)	●	●	●	●
Corsa-D	[E] 2014	A 16 LEL	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[E] 2014	A 16 LEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[E] 2014	A 16 LEL	AF 13-4	●	●	●	●
Corsa-D	[E] 2014	A 16 LEL	MTA (Easytronic)	●	●	●	●
Corsa-D	[E] 2014	A 16 LEL	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[E] 2014	A 16 LEL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[E] 2014	A 16 LEL	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[E] 2014	A 16 LEL	Exterior Lighting	●	●	●	●
Corsa-D	[E] 2014	A 16 LEL	Interior Lighting	●	●	●	●
Corsa-D	[E] 2014	A 16 LEL	Wipers/Washer	●	●	●	●
Corsa-D	[E] 2014	A 16 LEL	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[E] 2014	A 16 LEL	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[E] 2014	A 16 LEL	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[E] 2014	A 16 LEL	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[E] 2014	A 16 LEL	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[E] 2014	A 16 LEL	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[E] 2014	A 16 LEL	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[E] 2014	A 16 LEL	PAS (Park Pilot)	●	●	●	●
Corsa-D	[E] 2014	A 16 LEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[E] 2014	A 16 LEL	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[E] 2014	A 16 LEL	BCM (Body Control Module)	●	●	●	●
Corsa-D	[E] 2014	A 16 LER	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[E] 2014	A 16 LER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[E] 2014	A 16 LER	AF 13-4	●	●	●	●
Corsa-D	[E] 2014	A 16 LER	MTA (Easytronic)	●	●	●	●
Corsa-D	[E] 2014	A 16 LER	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[E] 2014	A 16 LER	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[E] 2014	A 16 LER	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[E] 2014	A 16 LER	Exterior Lighting	●	●	●	●

Corsa-D	[E] 2014	A 16 LER	Interior Lighting	●	●	●	●
Corsa-D	[E] 2014	A 16 LER	Wipers/Washer	●	●	●	●
Corsa-D	[E] 2014	A 16 LER	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[E] 2014	A 16 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[E] 2014	A 16 LER	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[E] 2014	A 16 LER	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[E] 2014	A 16 LER	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[E] 2014	A 16 LER	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[E] 2014	A 16 LER	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[E] 2014	A 16 LER	PAS (Park Pilot)	●	●	●	●
Corsa-D	[E] 2014	A 16 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[E] 2014	A 16 LER	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[E] 2014	A 16 LER	BCM (Body Control Module)	●	●	●	●
Corsa-D	[E] 2014	Z 17 DTR	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[E] 2014	Z 17 DTR	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[E] 2014	Z 17 DTR	AF 13-4	●	●	●	●
Corsa-D	[E] 2014	Z 17 DTR	MTA (Easytronic)	●	●	●	●
Corsa-D	[E] 2014	Z 17 DTR	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[E] 2014	Z 17 DTR	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[E] 2014	Z 17 DTR	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[E] 2014	Z 17 DTR	Exterior Lighting	●	●	●	●
Corsa-D	[E] 2014	Z 17 DTR	Interior Lighting	●	●	●	●
Corsa-D	[E] 2014	Z 17 DTR	Wipers/Washer	●	●	●	●
Corsa-D	[E] 2014	Z 17 DTR	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[E] 2014	Z 17 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[E] 2014	Z 17 DTR	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[E] 2014	Z 17 DTR	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[E] 2014	Z 17 DTR	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[E] 2014	Z 17 DTR	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[E] 2014	Z 17 DTR	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[E] 2014	Z 17 DTR	PAS (Park Pilot)	●	●	●	●
Corsa-D	[E] 2014	Z 17 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[E] 2014	Z 17 DTR	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[E] 2014	Z 17 DTR	BCM (Body Control Module)	●	●	●	●
Corsa-D	[E] 2014	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[E] 2014	Engine(default)	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[E] 2014	Engine(default)	AF 13-4	●	●	●	●
Corsa-D	[E] 2014	Engine(default)	MTA (Easytronic)	●	●	●	●
Corsa-D	[E] 2014	Engine(default)	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[E] 2014	Engine(default)	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[E] 2014	Engine(default)	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[E] 2014	Engine(default)	Exterior Lighting	●	●	●	●
Corsa-D	[E] 2014	Engine(default)	Interior Lighting	●	●	●	●
Corsa-D	[E] 2014	Engine(default)	Wipers/Washer	●	●	●	●
Corsa-D	[E] 2014	Engine(default)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[E] 2014	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[E] 2014	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[E] 2014	Engine(default)	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[E] 2014	Engine(default)	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[E] 2014	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[E] 2014	Engine(default)	IC (Instrument Cluster)	●	●	●	●

Corsa-D	[E] 2014	Engine(default)	PAS (Park Pilot)	●	●	●	●
Corsa-D	[E] 2014	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[E] 2014	Engine(default)	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[E] 2014	Engine(default)	BCM (Body Control Module)	●	●	●	●
Corsa-D	[D] 2013	Z 10 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[D] 2013	Z 10 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[D] 2013	Z 10 XEP	AF 13-4	●	●	●	●
Corsa-D	[D] 2013	Z 10 XEP	MTA (Easytronic)	●	●	●	●
Corsa-D	[D] 2013	Z 10 XEP	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[D] 2013	Z 10 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[D] 2013	Z 10 XEP	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[D] 2013	Z 10 XEP	Exterior Lighting	●	●	●	●
Corsa-D	[D] 2013	Z 10 XEP	Interior Lighting	●	●	●	●
Corsa-D	[D] 2013	Z 10 XEP	Wipers/Washer	●	●	●	●
Corsa-D	[D] 2013	Z 10 XEP	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[D] 2013	Z 10 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[D] 2013	Z 10 XEP	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[D] 2013	Z 10 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[D] 2013	Z 10 XEP	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[D] 2013	Z 10 XEP	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[D] 2013	Z 10 XEP	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[D] 2013	Z 10 XEP	PAS (Park Pilot)	●	●	●	●
Corsa-D	[D] 2013	Z 10 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[D] 2013	Z 10 XEP	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[D] 2013	Z 10 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-D	[D] 2013	A 10 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[D] 2013	A 10 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[D] 2013	A 10 XEP	AF 13-4	●	●	●	●
Corsa-D	[D] 2013	A 10 XEP	MTA (Easytronic)	●	●	●	●
Corsa-D	[D] 2013	A 10 XEP	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[D] 2013	A 10 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[D] 2013	A 10 XEP	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[D] 2013	A 10 XEP	Exterior Lighting	●	●	●	●
Corsa-D	[D] 2013	A 10 XEP	Interior Lighting	●	●	●	●
Corsa-D	[D] 2013	A 10 XEP	Wipers/Washer	●	●	●	●
Corsa-D	[D] 2013	A 10 XEP	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[D] 2013	A 10 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[D] 2013	A 10 XEP	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[D] 2013	A 10 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[D] 2013	A 10 XEP	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[D] 2013	A 10 XEP	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[D] 2013	A 10 XEP	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[D] 2013	A 10 XEP	PAS (Park Pilot)	●	●	●	●
Corsa-D	[D] 2013	A 10 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[D] 2013	A 10 XEP	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[D] 2013	A 10 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-D	[D] 2013	Z 12 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[D] 2013	Z 12 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[D] 2013	Z 12 XEP	AF 13-4	●	●	●	●
Corsa-D	[D] 2013	Z 12 XEP	MTA (Easytronic)	●	●	●	●
Corsa-D	[D] 2013	Z 12 XEP	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[D] 2013	Z 12 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[D] 2013	Z 12 XEP	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[D] 2013	Z 12 XEP	Exterior Lighting	●	●	●	●
Corsa-D	[D] 2013	Z 12 XEP	Interior Lighting	●	●	●	●

Corsa-D	[D] 2013	Z 12 XEP	Wipers/Washer	●	●	●	●
Corsa-D	[D] 2013	Z 12 XEP	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[D] 2013	Z 12 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[D] 2013	Z 12 XEP	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[D] 2013	Z 12 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[D] 2013	Z 12 XEP	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[D] 2013	Z 12 XEP	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[D] 2013	Z 12 XEP	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[D] 2013	Z 12 XEP	PAS (Park Pilot)	●	●	●	●
Corsa-D	[D] 2013	Z 12 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[D] 2013	Z 12 XEP	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[D] 2013	Z 12 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-D	[D] 2013	A 12 XER	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[D] 2013	A 12 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[D] 2013	A 12 XER	AF 13-4	●	●	●	●
Corsa-D	[D] 2013	A 12 XER	MTA (Easytronic)	●	●	●	●
Corsa-D	[D] 2013	A 12 XER	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[D] 2013	A 12 XER	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[D] 2013	A 12 XER	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[D] 2013	A 12 XER	Exterior Lighting	●	●	●	●
Corsa-D	[D] 2013	A 12 XER	Interior Lighting	●	●	●	●
Corsa-D	[D] 2013	A 12 XER	Wipers/Washer	●	●	●	●
Corsa-D	[D] 2013	A 12 XER	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[D] 2013	A 12 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[D] 2013	A 12 XER	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[D] 2013	A 12 XER	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[D] 2013	A 12 XER	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[D] 2013	A 12 XER	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[D] 2013	A 12 XER	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[D] 2013	A 12 XER	PAS (Park Pilot)	●	●	●	●
Corsa-D	[D] 2013	A 12 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[D] 2013	A 12 XER	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[D] 2013	A 12 XER	BCM (Body Control Module)	●	●	●	●
Corsa-D	[D] 2013	A 12 XEL	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[D] 2013	A 12 XEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[D] 2013	A 12 XEL	AF 13-4	●	●	●	●
Corsa-D	[D] 2013	A 12 XEL	MTA (Easytronic)	●	●	●	●
Corsa-D	[D] 2013	A 12 XEL	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[D] 2013	A 12 XEL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[D] 2013	A 12 XEL	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[D] 2013	A 12 XEL	Exterior Lighting	●	●	●	●
Corsa-D	[D] 2013	A 12 XEL	Interior Lighting	●	●	●	●
Corsa-D	[D] 2013	A 12 XEL	Wipers/Washer	●	●	●	●
Corsa-D	[D] 2013	A 12 XEL	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[D] 2013	A 12 XEL	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[D] 2013	A 12 XEL	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[D] 2013	A 12 XEL	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[D] 2013	A 12 XEL	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[D] 2013	A 12 XEL	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[D] 2013	A 12 XEL	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[D] 2013	A 12 XEL	PAS (Park Pilot)	●	●	●	●
Corsa-D	[D] 2013	A 12 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[D] 2013	A 12 XEL	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[D] 2013	A 12 XEL	BCM (Body Control Module)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTH	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●

Corsa-D	[D] 2013	Z 13 DTH	AF 13-4	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTH	MTA (Easytronic)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTH	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTH	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTH	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTH	Exterior Lighting	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTH	Interior Lighting	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTH	Wipers/Washer	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTH	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTH	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTH	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTH	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTH	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTH	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTH	PAS (Park Pilot)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTH	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTH	BCM (Body Control Module)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTE	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTE	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTE	AF 13-4	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTE	MTA (Easytronic)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTE	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTE	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTE	Exterior Lighting	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTE	Interior Lighting	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTE	Wipers/Washer	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTE	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTE	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTE	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTE	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTE	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTE	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTE	PAS (Park Pilot)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTE	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTE	BCM (Body Control Module)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTJ	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTJ	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTJ	AF 13-4	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTJ	MTA (Easytronic)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTJ	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTJ	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTJ	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTJ	Exterior Lighting	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTJ	Interior Lighting	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTJ	Wipers/Washer	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTJ	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTJ	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTJ	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTJ	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTJ	EHS (Electrical Heater System)	●	●	●	●

Corsa-D	[D] 2013	Z 13 DTJ	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTJ	PAS (Park Pilot)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTJ	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[D] 2013	Z 13 DTJ	BCM (Body Control Module)	●	●	●	●
Corsa-D	[D] 2013	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[D] 2013	Z 14 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[D] 2013	Z 14 XEP	AF 13-4	●	●	●	●
Corsa-D	[D] 2013	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Corsa-D	[D] 2013	Z 14 XEP	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[D] 2013	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[D] 2013	Z 14 XEP	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[D] 2013	Z 14 XEP	Exterior Lighting	●	●	●	●
Corsa-D	[D] 2013	Z 14 XEP	Interior Lighting	●	●	●	●
Corsa-D	[D] 2013	Z 14 XEP	Wipers/Washer	●	●	●	●
Corsa-D	[D] 2013	Z 14 XEP	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[D] 2013	Z 14 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[D] 2013	Z 14 XEP	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[D] 2013	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[D] 2013	Z 14 XEP	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[D] 2013	Z 14 XEP	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[D] 2013	Z 14 XEP	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[D] 2013	Z 14 XEP	PAS (Park Pilot)	●	●	●	●
Corsa-D	[D] 2013	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[D] 2013	Z 14 XEP	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[D] 2013	Z 14 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-D	[D] 2013	A 14 XEL	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[D] 2013	A 14 XEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[D] 2013	A 14 XEL	AF 13-4	●	●	●	●
Corsa-D	[D] 2013	A 14 XEL	MTA (Easytronic)	●	●	●	●
Corsa-D	[D] 2013	A 14 XEL	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[D] 2013	A 14 XEL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[D] 2013	A 14 XEL	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[D] 2013	A 14 XEL	Exterior Lighting	●	●	●	●
Corsa-D	[D] 2013	A 14 XEL	Interior Lighting	●	●	●	●
Corsa-D	[D] 2013	A 14 XEL	Wipers/Washer	●	●	●	●
Corsa-D	[D] 2013	A 14 XEL	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[D] 2013	A 14 XEL	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[D] 2013	A 14 XEL	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[D] 2013	A 14 XEL	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[D] 2013	A 14 XEL	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[D] 2013	A 14 XEL	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[D] 2013	A 14 XEL	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[D] 2013	A 14 XEL	PAS (Park Pilot)	●	●	●	●
Corsa-D	[D] 2013	A 14 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[D] 2013	A 14 XEL	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[D] 2013	A 14 XEL	BCM (Body Control Module)	●	●	●	●
Corsa-D	[D] 2013	A 14 XER	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[D] 2013	A 14 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[D] 2013	A 14 XER	AF 13-4	●	●	●	●
Corsa-D	[D] 2013	A 14 XER	MTA (Easytronic)	●	●	●	●
Corsa-D	[D] 2013	A 14 XER	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[D] 2013	A 14 XER	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[D] 2013	A 14 XER	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[D] 2013	A 14 XER	Exterior Lighting	●	●	●	●
Corsa-D	[D] 2013	A 14 XER	Interior Lighting	●	●	●	●

Corsa-D	[D] 2013	A 14 XER	Wipers/Washer	●	●	●	●
Corsa-D	[D] 2013	A 14 XER	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[D] 2013	A 14 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[D] 2013	A 14 XER	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[D] 2013	A 14 XER	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[D] 2013	A 14 XER	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[D] 2013	A 14 XER	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[D] 2013	A 14 XER	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[D] 2013	A 14 XER	PAS (Park Pilot)	●	●	●	●
Corsa-D	[D] 2013	A 14 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[D] 2013	A 14 XER	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[D] 2013	A 14 XER	BCM (Body Control Module)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LEL	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LEL	AF 13-4	●	●	●	●
Corsa-D	[D] 2013	Z 16 LEL	MTA (Easytronic)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LEL	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LEL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LEL	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LEL	Exterior Lighting	●	●	●	●
Corsa-D	[D] 2013	Z 16 LEL	Interior Lighting	●	●	●	●
Corsa-D	[D] 2013	Z 16 LEL	Wipers/Washer	●	●	●	●
Corsa-D	[D] 2013	Z 16 LEL	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LEL	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LEL	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LEL	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LEL	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LEL	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LEL	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LEL	PAS (Park Pilot)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LEL	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LEL	BCM (Body Control Module)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LER	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LER	AF 13-4	●	●	●	●
Corsa-D	[D] 2013	Z 16 LER	MTA (Easytronic)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LER	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LER	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LER	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LER	Exterior Lighting	●	●	●	●
Corsa-D	[D] 2013	Z 16 LER	Interior Lighting	●	●	●	●
Corsa-D	[D] 2013	Z 16 LER	Wipers/Washer	●	●	●	●
Corsa-D	[D] 2013	Z 16 LER	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LER	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LER	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LER	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LER	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LER	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LER	PAS (Park Pilot)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LER	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[D] 2013	Z 16 LER	BCM (Body Control Module)	●	●	●	●
Corsa-D	[D] 2013	A 16 LEL	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[D] 2013	A 16 LEL	MTA (Easytronic Magneti Marelli)	●	●	●	●

Corsa-D	[D] 2013	A 16 LEL	AF 13-4	●	●	●	●
Corsa-D	[D] 2013	A 16 LEL	MTA (Easytronic)	●	●	●	●
Corsa-D	[D] 2013	A 16 LEL	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[D] 2013	A 16 LEL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[D] 2013	A 16 LEL	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[D] 2013	A 16 LEL	Exterior Lighting	●	●	●	●
Corsa-D	[D] 2013	A 16 LEL	Interior Lighting	●	●	●	●
Corsa-D	[D] 2013	A 16 LEL	Wipers/Washer	●	●	●	●
Corsa-D	[D] 2013	A 16 LEL	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[D] 2013	A 16 LEL	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[D] 2013	A 16 LEL	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[D] 2013	A 16 LEL	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[D] 2013	A 16 LEL	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[D] 2013	A 16 LEL	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[D] 2013	A 16 LEL	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[D] 2013	A 16 LEL	PAS (Park Pilot)	●	●	●	●
Corsa-D	[D] 2013	A 16 LEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[D] 2013	A 16 LEL	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[D] 2013	A 16 LEL	BCM (Body Control Module)	●	●	●	●
Corsa-D	[D] 2013	A 16 LER	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[D] 2013	A 16 LER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[D] 2013	A 16 LER	AF 13-4	●	●	●	●
Corsa-D	[D] 2013	A 16 LER	MTA (Easytronic)	●	●	●	●
Corsa-D	[D] 2013	A 16 LER	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[D] 2013	A 16 LER	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[D] 2013	A 16 LER	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[D] 2013	A 16 LER	Exterior Lighting	●	●	●	●
Corsa-D	[D] 2013	A 16 LER	Interior Lighting	●	●	●	●
Corsa-D	[D] 2013	A 16 LER	Wipers/Washer	●	●	●	●
Corsa-D	[D] 2013	A 16 LER	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[D] 2013	A 16 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[D] 2013	A 16 LER	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[D] 2013	A 16 LER	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[D] 2013	A 16 LER	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[D] 2013	A 16 LER	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[D] 2013	A 16 LER	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[D] 2013	A 16 LER	PAS (Park Pilot)	●	●	●	●
Corsa-D	[D] 2013	A 16 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[D] 2013	A 16 LER	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[D] 2013	A 16 LER	BCM (Body Control Module)	●	●	●	●
Corsa-D	[D] 2013	Z 17 DTR	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[D] 2013	Z 17 DTR	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[D] 2013	Z 17 DTR	AF 13-4	●	●	●	●
Corsa-D	[D] 2013	Z 17 DTR	MTA (Easytronic)	●	●	●	●
Corsa-D	[D] 2013	Z 17 DTR	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[D] 2013	Z 17 DTR	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[D] 2013	Z 17 DTR	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[D] 2013	Z 17 DTR	Exterior Lighting	●	●	●	●
Corsa-D	[D] 2013	Z 17 DTR	Interior Lighting	●	●	●	●
Corsa-D	[D] 2013	Z 17 DTR	Wipers/Washer	●	●	●	●
Corsa-D	[D] 2013	Z 17 DTR	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[D] 2013	Z 17 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[D] 2013	Z 17 DTR	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[D] 2013	Z 17 DTR	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[D] 2013	Z 17 DTR	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[D] 2013	Z 17 DTR	EHS (Electrical Heater System)	●	●	●	●

Corsa-D	[D] 2013	Z 17 DTR	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[D] 2013	Z 17 DTR	PAS (Park Pilot)	●	●	●	●
Corsa-D	[D] 2013	Z 17 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[D] 2013	Z 17 DTR	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[D] 2013	Z 17 DTR	BCM (Body Control Module)	●	●	●	●
Corsa-D	[D] 2013	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[D] 2013	Engine(default)	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[D] 2013	Engine(default)	AF 13-4	●	●	●	●
Corsa-D	[D] 2013	Engine(default)	MTA (Easytronic)	●	●	●	●
Corsa-D	[D] 2013	Engine(default)	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[D] 2013	Engine(default)	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[D] 2013	Engine(default)	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[D] 2013	Engine(default)	Exterior Lighting	●	●	●	●
Corsa-D	[D] 2013	Engine(default)	Interior Lighting	●	●	●	●
Corsa-D	[D] 2013	Engine(default)	Wipers/Washer	●	●	●	●
Corsa-D	[D] 2013	Engine(default)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[D] 2013	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[D] 2013	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[D] 2013	Engine(default)	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[D] 2013	Engine(default)	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[D] 2013	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[D] 2013	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[D] 2013	Engine(default)	PAS (Park Pilot)	●	●	●	●
Corsa-D	[D] 2013	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[D] 2013	Engine(default)	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[D] 2013	Engine(default)	BCM (Body Control Module)	●	●	●	●
Corsa-D	[C] 2012	Z 10 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[C] 2012	Z 10 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[C] 2012	Z 10 XEP	AF 13-4	●	●	●	●
Corsa-D	[C] 2012	Z 10 XEP	MTA (Easytronic)	●	●	●	●
Corsa-D	[C] 2012	Z 10 XEP	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[C] 2012	Z 10 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[C] 2012	Z 10 XEP	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[C] 2012	Z 10 XEP	Exterior Lighting	●	●	●	●
Corsa-D	[C] 2012	Z 10 XEP	Interior Lighting	●	●	●	●
Corsa-D	[C] 2012	Z 10 XEP	Wipers/Washer	●	●	●	●
Corsa-D	[C] 2012	Z 10 XEP	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[C] 2012	Z 10 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[C] 2012	Z 10 XEP	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[C] 2012	Z 10 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[C] 2012	Z 10 XEP	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[C] 2012	Z 10 XEP	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[C] 2012	Z 10 XEP	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[C] 2012	Z 10 XEP	PAS (Park Pilot)	●	●	●	●
Corsa-D	[C] 2012	Z 10 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[C] 2012	Z 10 XEP	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[C] 2012	Z 10 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-D	[C] 2012	A 10 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[C] 2012	A 10 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●

Corsa-D	[C] 2012	A 10 XEP	AF 13-4	●	●	●	●
Corsa-D	[C] 2012	A 10 XEP	MTA (Easytronic)	●	●	●	●
Corsa-D	[C] 2012	A 10 XEP	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[C] 2012	A 10 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[C] 2012	A 10 XEP	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[C] 2012	A 10 XEP	Exterior Lighting	●	●	●	●
Corsa-D	[C] 2012	A 10 XEP	Interior Lighting	●	●	●	●
Corsa-D	[C] 2012	A 10 XEP	Wipers/Washer	●	●	●	●
Corsa-D	[C] 2012	A 10 XEP	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[C] 2012	A 10 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[C] 2012	A 10 XEP	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[C] 2012	A 10 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[C] 2012	A 10 XEP	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[C] 2012	A 10 XEP	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[C] 2012	A 10 XEP	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[C] 2012	A 10 XEP	PAS (Park Pilot)	●	●	●	●
Corsa-D	[C] 2012	A 10 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[C] 2012	A 10 XEP	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[C] 2012	A 10 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-D	[C] 2012	Z 12 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[C] 2012	Z 12 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[C] 2012	Z 12 XEP	AF 13-4	●	●	●	●
Corsa-D	[C] 2012	Z 12 XEP	MTA (Easytronic)	●	●	●	●
Corsa-D	[C] 2012	Z 12 XEP	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[C] 2012	Z 12 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[C] 2012	Z 12 XEP	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[C] 2012	Z 12 XEP	Exterior Lighting	●	●	●	●
Corsa-D	[C] 2012	Z 12 XEP	Interior Lighting	●	●	●	●
Corsa-D	[C] 2012	Z 12 XEP	Wipers/Washer	●	●	●	●
Corsa-D	[C] 2012	Z 12 XEP	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[C] 2012	Z 12 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[C] 2012	Z 12 XEP	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[C] 2012	Z 12 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[C] 2012	Z 12 XEP	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[C] 2012	Z 12 XEP	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[C] 2012	Z 12 XEP	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[C] 2012	Z 12 XEP	PAS (Park Pilot)	●	●	●	●
Corsa-D	[C] 2012	Z 12 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[C] 2012	Z 12 XEP	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[C] 2012	Z 12 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-D	[C] 2012	A 12 XER	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[C] 2012	A 12 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[C] 2012	A 12 XER	AF 13-4	●	●	●	●
Corsa-D	[C] 2012	A 12 XER	MTA (Easytronic)	●	●	●	●
Corsa-D	[C] 2012	A 12 XER	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[C] 2012	A 12 XER	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[C] 2012	A 12 XER	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[C] 2012	A 12 XER	Exterior Lighting	●	●	●	●
Corsa-D	[C] 2012	A 12 XER	Interior Lighting	●	●	●	●
Corsa-D	[C] 2012	A 12 XER	Wipers/Washer	●	●	●	●
Corsa-D	[C] 2012	A 12 XER	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[C] 2012	A 12 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[C] 2012	A 12 XER	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[C] 2012	A 12 XER	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[C] 2012	A 12 XER	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[C] 2012	A 12 XER	EHS (Electrical Heater System)	●	●	●	●

Corsa-D	[C] 2012	A 12 XER	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[C] 2012	A 12 XER	PAS (Park Pilot)	●	●	●	●
Corsa-D	[C] 2012	A 12 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[C] 2012	A 12 XER	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[C] 2012	A 12 XER	BCM (Body Control Module)	●	●	●	●
Corsa-D	[C] 2012	A 12 XEL	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[C] 2012	A 12 XEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[C] 2012	A 12 XEL	AF 13-4	●	●	●	●
Corsa-D	[C] 2012	A 12 XEL	MTA (Easytronic)	●	●	●	●
Corsa-D	[C] 2012	A 12 XEL	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[C] 2012	A 12 XEL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[C] 2012	A 12 XEL	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[C] 2012	A 12 XEL	Exterior Lighting	●	●	●	●
Corsa-D	[C] 2012	A 12 XEL	Interior Lighting	●	●	●	●
Corsa-D	[C] 2012	A 12 XEL	Wipers/Washer	●	●	●	●
Corsa-D	[C] 2012	A 12 XEL	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[C] 2012	A 12 XEL	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[C] 2012	A 12 XEL	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[C] 2012	A 12 XEL	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[C] 2012	A 12 XEL	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[C] 2012	A 12 XEL	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[C] 2012	A 12 XEL	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[C] 2012	A 12 XEL	PAS (Park Pilot)	●	●	●	●
Corsa-D	[C] 2012	A 12 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[C] 2012	A 12 XEL	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[C] 2012	A 12 XEL	BCM (Body Control Module)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTH	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTH	AF 13-4	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTH	MTA (Easytronic)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTH	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTH	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTH	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTH	Exterior Lighting	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTH	Interior Lighting	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTH	Wipers/Washer	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTH	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTH	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTH	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTH	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTH	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTH	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTH	PAS (Park Pilot)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTH	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTH	BCM (Body Control Module)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTE	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTE	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTE	AF 13-4	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTE	MTA (Easytronic)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTE	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTE	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTE	Exterior Lighting	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTE	Interior Lighting	●	●	●	●

Corsa-D	[C] 2012	Z 13 DTE	Wipers/Washer	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTE	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTE	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTE	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTE	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTE	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTE	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTE	PAS (Park Pilot)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTE	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTE	BCM (Body Control Module)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTJ	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTJ	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTJ	AF 13-4	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTJ	MTA (Easytronic)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTJ	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTJ	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTJ	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTJ	Exterior Lighting	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTJ	Interior Lighting	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTJ	Wipers/Washer	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTJ	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTJ	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTJ	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTJ	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTJ	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTJ	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTJ	PAS (Park Pilot)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTJ	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[C] 2012	Z 13 DTJ	BCM (Body Control Module)	●	●	●	●
Corsa-D	[C] 2012	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[C] 2012	Z 14 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[C] 2012	Z 14 XEP	AF 13-4	●	●	●	●
Corsa-D	[C] 2012	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Corsa-D	[C] 2012	Z 14 XEP	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[C] 2012	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[C] 2012	Z 14 XEP	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[C] 2012	Z 14 XEP	Exterior Lighting	●	●	●	●
Corsa-D	[C] 2012	Z 14 XEP	Interior Lighting	●	●	●	●
Corsa-D	[C] 2012	Z 14 XEP	Wipers/Washer	●	●	●	●
Corsa-D	[C] 2012	Z 14 XEP	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[C] 2012	Z 14 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[C] 2012	Z 14 XEP	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[C] 2012	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[C] 2012	Z 14 XEP	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[C] 2012	Z 14 XEP	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[C] 2012	Z 14 XEP	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[C] 2012	Z 14 XEP	PAS (Park Pilot)	●	●	●	●
Corsa-D	[C] 2012	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[C] 2012	Z 14 XEP	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[C] 2012	Z 14 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-D	[C] 2012	A 14 XEL	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[C] 2012	A 14 XEL	MTA (Easytronic Magneti Marelli)	●	●	●	●

Corsa-D	[C] 2012	A 14 XEL	AF 13-4	●	●	●	●
Corsa-D	[C] 2012	A 14 XEL	MTA (Easytronic)	●	●	●	●
Corsa-D	[C] 2012	A 14 XEL	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[C] 2012	A 14 XEL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[C] 2012	A 14 XEL	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[C] 2012	A 14 XEL	Exterior Lighting	●	●	●	●
Corsa-D	[C] 2012	A 14 XEL	Interior Lighting	●	●	●	●
Corsa-D	[C] 2012	A 14 XEL	Wipers/Washer	●	●	●	●
Corsa-D	[C] 2012	A 14 XEL	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[C] 2012	A 14 XEL	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[C] 2012	A 14 XEL	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[C] 2012	A 14 XEL	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[C] 2012	A 14 XEL	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[C] 2012	A 14 XEL	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[C] 2012	A 14 XEL	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[C] 2012	A 14 XEL	PAS (Park Pilot)	●	●	●	●
Corsa-D	[C] 2012	A 14 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[C] 2012	A 14 XEL	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[C] 2012	A 14 XEL	BCM (Body Control Module)	●	●	●	●
Corsa-D	[C] 2012	A 14 XER	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[C] 2012	A 14 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[C] 2012	A 14 XER	AF 13-4	●	●	●	●
Corsa-D	[C] 2012	A 14 XER	MTA (Easytronic)	●	●	●	●
Corsa-D	[C] 2012	A 14 XER	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[C] 2012	A 14 XER	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[C] 2012	A 14 XER	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[C] 2012	A 14 XER	Exterior Lighting	●	●	●	●
Corsa-D	[C] 2012	A 14 XER	Interior Lighting	●	●	●	●
Corsa-D	[C] 2012	A 14 XER	Wipers/Washer	●	●	●	●
Corsa-D	[C] 2012	A 14 XER	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[C] 2012	A 14 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[C] 2012	A 14 XER	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[C] 2012	A 14 XER	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[C] 2012	A 14 XER	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[C] 2012	A 14 XER	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[C] 2012	A 14 XER	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[C] 2012	A 14 XER	PAS (Park Pilot)	●	●	●	●
Corsa-D	[C] 2012	A 14 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[C] 2012	A 14 XER	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[C] 2012	A 14 XER	BCM (Body Control Module)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LEL	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LEL	AF 13-4	●	●	●	●
Corsa-D	[C] 2012	Z 16 LEL	MTA (Easytronic)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LEL	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LEL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LEL	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LEL	Exterior Lighting	●	●	●	●
Corsa-D	[C] 2012	Z 16 LEL	Interior Lighting	●	●	●	●
Corsa-D	[C] 2012	Z 16 LEL	Wipers/Washer	●	●	●	●
Corsa-D	[C] 2012	Z 16 LEL	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LEL	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LEL	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LEL	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LEL	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LEL	EHS (Electrical Heater System)	●	●	●	●

Corsa-D	[C] 2012	Z 16 LEL	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LEL	PAS (Park Pilot)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LEL	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LEL	BCM (Body Control Module)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LER	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LER	AF 13-4	●	●	●	●
Corsa-D	[C] 2012	Z 16 LER	MTA (Easytronic)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LER	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LER	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LER	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LER	Exterior Lighting	●	●	●	●
Corsa-D	[C] 2012	Z 16 LER	Interior Lighting	●	●	●	●
Corsa-D	[C] 2012	Z 16 LER	Wipers/Washer	●	●	●	●
Corsa-D	[C] 2012	Z 16 LER	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LER	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LER	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LER	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LER	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LER	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LER	PAS (Park Pilot)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LER	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[C] 2012	Z 16 LER	BCM (Body Control Module)	●	●	●	●
Corsa-D	[C] 2012	A 16 LEL	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[C] 2012	A 16 LEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[C] 2012	A 16 LEL	AF 13-4	●	●	●	●
Corsa-D	[C] 2012	A 16 LEL	MTA (Easytronic)	●	●	●	●
Corsa-D	[C] 2012	A 16 LEL	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[C] 2012	A 16 LEL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[C] 2012	A 16 LEL	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[C] 2012	A 16 LEL	Exterior Lighting	●	●	●	●
Corsa-D	[C] 2012	A 16 LEL	Interior Lighting	●	●	●	●
Corsa-D	[C] 2012	A 16 LEL	Wipers/Washer	●	●	●	●
Corsa-D	[C] 2012	A 16 LEL	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[C] 2012	A 16 LEL	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[C] 2012	A 16 LEL	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[C] 2012	A 16 LEL	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[C] 2012	A 16 LEL	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[C] 2012	A 16 LEL	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[C] 2012	A 16 LEL	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[C] 2012	A 16 LEL	PAS (Park Pilot)	●	●	●	●
Corsa-D	[C] 2012	A 16 LEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[C] 2012	A 16 LEL	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[C] 2012	A 16 LEL	BCM (Body Control Module)	●	●	●	●
Corsa-D	[C] 2012	A 16 LER	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[C] 2012	A 16 LER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[C] 2012	A 16 LER	AF 13-4	●	●	●	●
Corsa-D	[C] 2012	A 16 LER	MTA (Easytronic)	●	●	●	●
Corsa-D	[C] 2012	A 16 LER	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[C] 2012	A 16 LER	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[C] 2012	A 16 LER	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[C] 2012	A 16 LER	Exterior Lighting	●	●	●	●
Corsa-D	[C] 2012	A 16 LER	Interior Lighting	●	●	●	●

Corsa-D	[C] 2012	A 16 LER	Wipers/Washer	●	●	●	●
Corsa-D	[C] 2012	A 16 LER	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[C] 2012	A 16 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[C] 2012	A 16 LER	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[C] 2012	A 16 LER	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[C] 2012	A 16 LER	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[C] 2012	A 16 LER	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[C] 2012	A 16 LER	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[C] 2012	A 16 LER	PAS (Park Pilot)	●	●	●	●
Corsa-D	[C] 2012	A 16 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[C] 2012	A 16 LER	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[C] 2012	A 16 LER	BCM (Body Control Module)	●	●	●	●
Corsa-D	[C] 2012	Z 17 DTR	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[C] 2012	Z 17 DTR	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[C] 2012	Z 17 DTR	AF 13-4	●	●	●	●
Corsa-D	[C] 2012	Z 17 DTR	MTA (Easytronic)	●	●	●	●
Corsa-D	[C] 2012	Z 17 DTR	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[C] 2012	Z 17 DTR	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[C] 2012	Z 17 DTR	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[C] 2012	Z 17 DTR	Exterior Lighting	●	●	●	●
Corsa-D	[C] 2012	Z 17 DTR	Interior Lighting	●	●	●	●
Corsa-D	[C] 2012	Z 17 DTR	Wipers/Washer	●	●	●	●
Corsa-D	[C] 2012	Z 17 DTR	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[C] 2012	Z 17 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[C] 2012	Z 17 DTR	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[C] 2012	Z 17 DTR	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[C] 2012	Z 17 DTR	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[C] 2012	Z 17 DTR	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[C] 2012	Z 17 DTR	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[C] 2012	Z 17 DTR	PAS (Park Pilot)	●	●	●	●
Corsa-D	[C] 2012	Z 17 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[C] 2012	Z 17 DTR	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[C] 2012	Z 17 DTR	BCM (Body Control Module)	●	●	●	●
Corsa-D	[C] 2012	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[C] 2012	Engine(default)	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[C] 2012	Engine(default)	AF 13-4	●	●	●	●
Corsa-D	[C] 2012	Engine(default)	MTA (Easytronic)	●	●	●	●
Corsa-D	[C] 2012	Engine(default)	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[C] 2012	Engine(default)	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[C] 2012	Engine(default)	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[C] 2012	Engine(default)	Exterior Lighting	●	●	●	●
Corsa-D	[C] 2012	Engine(default)	Interior Lighting	●	●	●	●
Corsa-D	[C] 2012	Engine(default)	Wipers/Washer	●	●	●	●
Corsa-D	[C] 2012	Engine(default)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[C] 2012	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[C] 2012	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[C] 2012	Engine(default)	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[C] 2012	Engine(default)	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[C] 2012	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[C] 2012	Engine(default)	IC (Instrument Cluster)	●	●	●	●

Corsa-D	[C] 2012	Engine(default)	PAS (Park Pilot)	●	●	●	●
Corsa-D	[C] 2012	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[C] 2012	Engine(default)	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[C] 2012	Engine(default)	BCM (Body Control Module)	●	●	●	●
Corsa-D	[B] 2011	Z 10 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[B] 2011	Z 10 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[B] 2011	Z 10 XEP	AF 13-4	●	●	●	●
Corsa-D	[B] 2011	Z 10 XEP	MTA (Easytronic)	●	●	●	●
Corsa-D	[B] 2011	Z 10 XEP	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[B] 2011	Z 10 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[B] 2011	Z 10 XEP	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[B] 2011	Z 10 XEP	Exterior Lighting	●	●	●	●
Corsa-D	[B] 2011	Z 10 XEP	Interior Lighting	●	●	●	●
Corsa-D	[B] 2011	Z 10 XEP	Wipers/Washer	●	●	●	●
Corsa-D	[B] 2011	Z 10 XEP	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[B] 2011	Z 10 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[B] 2011	Z 10 XEP	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[B] 2011	Z 10 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[B] 2011	Z 10 XEP	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[B] 2011	Z 10 XEP	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[B] 2011	Z 10 XEP	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[B] 2011	Z 10 XEP	PAS (Park Pilot)	●	●	●	●
Corsa-D	[B] 2011	Z 10 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[B] 2011	Z 10 XEP	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[B] 2011	Z 10 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-D	[B] 2011	A 10 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[B] 2011	A 10 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[B] 2011	A 10 XEP	AF 13-4	●	●	●	●
Corsa-D	[B] 2011	A 10 XEP	MTA (Easytronic)	●	●	●	●
Corsa-D	[B] 2011	A 10 XEP	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[B] 2011	A 10 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[B] 2011	A 10 XEP	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[B] 2011	A 10 XEP	Exterior Lighting	●	●	●	●
Corsa-D	[B] 2011	A 10 XEP	Interior Lighting	●	●	●	●
Corsa-D	[B] 2011	A 10 XEP	Wipers/Washer	●	●	●	●
Corsa-D	[B] 2011	A 10 XEP	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[B] 2011	A 10 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[B] 2011	A 10 XEP	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[B] 2011	A 10 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[B] 2011	A 10 XEP	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[B] 2011	A 10 XEP	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[B] 2011	A 10 XEP	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[B] 2011	A 10 XEP	PAS (Park Pilot)	●	●	●	●
Corsa-D	[B] 2011	A 10 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[B] 2011	A 10 XEP	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[B] 2011	A 10 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-D	[B] 2011	Z 12 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[B] 2011	Z 12 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[B] 2011	Z 12 XEP	AF 13-4	●	●	●	●
Corsa-D	[B] 2011	Z 12 XEP	MTA (Easytronic)	●	●	●	●
Corsa-D	[B] 2011	Z 12 XEP	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[B] 2011	Z 12 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[B] 2011	Z 12 XEP	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[B] 2011	Z 12 XEP	Exterior Lighting	●	●	●	●
Corsa-D	[B] 2011	Z 12 XEP	Interior Lighting	●	●	●	●

Corsa-D	[B] 2011	Z 12 XEP	Wipers/Washer	●	●	●	●
Corsa-D	[B] 2011	Z 12 XEP	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[B] 2011	Z 12 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[B] 2011	Z 12 XEP	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[B] 2011	Z 12 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[B] 2011	Z 12 XEP	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[B] 2011	Z 12 XEP	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[B] 2011	Z 12 XEP	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[B] 2011	Z 12 XEP	PAS (Park Pilot)	●	●	●	●
Corsa-D	[B] 2011	Z 12 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[B] 2011	Z 12 XEP	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[B] 2011	Z 12 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-D	[B] 2011	A 12 XER	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[B] 2011	A 12 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[B] 2011	A 12 XER	AF 13-4	●	●	●	●
Corsa-D	[B] 2011	A 12 XER	MTA (Easytronic)	●	●	●	●
Corsa-D	[B] 2011	A 12 XER	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[B] 2011	A 12 XER	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[B] 2011	A 12 XER	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[B] 2011	A 12 XER	Exterior Lighting	●	●	●	●
Corsa-D	[B] 2011	A 12 XER	Interior Lighting	●	●	●	●
Corsa-D	[B] 2011	A 12 XER	Wipers/Washer	●	●	●	●
Corsa-D	[B] 2011	A 12 XER	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[B] 2011	A 12 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[B] 2011	A 12 XER	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[B] 2011	A 12 XER	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[B] 2011	A 12 XER	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[B] 2011	A 12 XER	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[B] 2011	A 12 XER	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[B] 2011	A 12 XER	PAS (Park Pilot)	●	●	●	●
Corsa-D	[B] 2011	A 12 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[B] 2011	A 12 XER	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[B] 2011	A 12 XER	BCM (Body Control Module)	●	●	●	●
Corsa-D	[B] 2011	A 12 XEL	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[B] 2011	A 12 XEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[B] 2011	A 12 XEL	AF 13-4	●	●	●	●
Corsa-D	[B] 2011	A 12 XEL	MTA (Easytronic)	●	●	●	●
Corsa-D	[B] 2011	A 12 XEL	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[B] 2011	A 12 XEL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[B] 2011	A 12 XEL	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[B] 2011	A 12 XEL	Exterior Lighting	●	●	●	●
Corsa-D	[B] 2011	A 12 XEL	Interior Lighting	●	●	●	●
Corsa-D	[B] 2011	A 12 XEL	Wipers/Washer	●	●	●	●
Corsa-D	[B] 2011	A 12 XEL	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[B] 2011	A 12 XEL	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[B] 2011	A 12 XEL	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[B] 2011	A 12 XEL	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[B] 2011	A 12 XEL	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[B] 2011	A 12 XEL	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[B] 2011	A 12 XEL	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[B] 2011	A 12 XEL	PAS (Park Pilot)	●	●	●	●
Corsa-D	[B] 2011	A 12 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[B] 2011	A 12 XEL	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[B] 2011	A 12 XEL	BCM (Body Control Module)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTH	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●

Corsa-D	[B] 2011	Z 13 DTH	AF 13-4	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTH	MTA (Easytronic)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTH	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTH	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTH	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTH	Exterior Lighting	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTH	Interior Lighting	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTH	Wipers/Washer	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTH	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTH	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTH	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTH	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTH	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTH	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTH	PAS (Park Pilot)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTH	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTH	BCM (Body Control Module)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTE	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTE	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTE	AF 13-4	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTE	MTA (Easytronic)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTE	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTE	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTE	Exterior Lighting	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTE	Interior Lighting	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTE	Wipers/Washer	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTE	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTE	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTE	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTE	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTE	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTE	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTE	PAS (Park Pilot)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTE	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTE	BCM (Body Control Module)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTJ	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTJ	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTJ	AF 13-4	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTJ	MTA (Easytronic)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTJ	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTJ	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTJ	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTJ	Exterior Lighting	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTJ	Interior Lighting	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTJ	Wipers/Washer	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTJ	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTJ	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTJ	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTJ	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTJ	EHS (Electrical Heater System)	●	●	●	●

Corsa-D	[B] 2011	Z 13 DTJ	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTJ	PAS (Park Pilot)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTJ	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[B] 2011	Z 13 DTJ	BCM (Body Control Module)	●	●	●	●
Corsa-D	[B] 2011	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[B] 2011	Z 14 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[B] 2011	Z 14 XEP	AF 13-4	●	●	●	●
Corsa-D	[B] 2011	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Corsa-D	[B] 2011	Z 14 XEP	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[B] 2011	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[B] 2011	Z 14 XEP	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[B] 2011	Z 14 XEP	Exterior Lighting	●	●	●	●
Corsa-D	[B] 2011	Z 14 XEP	Interior Lighting	●	●	●	●
Corsa-D	[B] 2011	Z 14 XEP	Wipers/Washer	●	●	●	●
Corsa-D	[B] 2011	Z 14 XEP	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[B] 2011	Z 14 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[B] 2011	Z 14 XEP	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[B] 2011	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[B] 2011	Z 14 XEP	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[B] 2011	Z 14 XEP	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[B] 2011	Z 14 XEP	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[B] 2011	Z 14 XEP	PAS (Park Pilot)	●	●	●	●
Corsa-D	[B] 2011	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[B] 2011	Z 14 XEP	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[B] 2011	Z 14 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-D	[B] 2011	A 14 XEL	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[B] 2011	A 14 XEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[B] 2011	A 14 XEL	AF 13-4	●	●	●	●
Corsa-D	[B] 2011	A 14 XEL	MTA (Easytronic)	●	●	●	●
Corsa-D	[B] 2011	A 14 XEL	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[B] 2011	A 14 XEL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[B] 2011	A 14 XEL	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[B] 2011	A 14 XEL	Exterior Lighting	●	●	●	●
Corsa-D	[B] 2011	A 14 XEL	Interior Lighting	●	●	●	●
Corsa-D	[B] 2011	A 14 XEL	Wipers/Washer	●	●	●	●
Corsa-D	[B] 2011	A 14 XEL	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[B] 2011	A 14 XEL	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[B] 2011	A 14 XEL	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[B] 2011	A 14 XEL	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[B] 2011	A 14 XEL	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[B] 2011	A 14 XEL	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[B] 2011	A 14 XEL	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[B] 2011	A 14 XEL	PAS (Park Pilot)	●	●	●	●
Corsa-D	[B] 2011	A 14 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[B] 2011	A 14 XEL	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[B] 2011	A 14 XEL	BCM (Body Control Module)	●	●	●	●
Corsa-D	[B] 2011	A 14 XER	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[B] 2011	A 14 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[B] 2011	A 14 XER	AF 13-4	●	●	●	●
Corsa-D	[B] 2011	A 14 XER	MTA (Easytronic)	●	●	●	●
Corsa-D	[B] 2011	A 14 XER	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[B] 2011	A 14 XER	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[B] 2011	A 14 XER	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[B] 2011	A 14 XER	Exterior Lighting	●	●	●	●
Corsa-D	[B] 2011	A 14 XER	Interior Lighting	●	●	●	●

Corsa-D	[B] 2011	A 14 XER	Wipers/Washer	●	●	●	●
Corsa-D	[B] 2011	A 14 XER	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[B] 2011	A 14 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[B] 2011	A 14 XER	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[B] 2011	A 14 XER	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[B] 2011	A 14 XER	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[B] 2011	A 14 XER	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[B] 2011	A 14 XER	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[B] 2011	A 14 XER	PAS (Park Pilot)	●	●	●	●
Corsa-D	[B] 2011	A 14 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[B] 2011	A 14 XER	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[B] 2011	A 14 XER	BCM (Body Control Module)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LEL	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LEL	AF 13-4	●	●	●	●
Corsa-D	[B] 2011	Z 16 LEL	MTA (Easytronic)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LEL	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LEL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LEL	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LEL	Exterior Lighting	●	●	●	●
Corsa-D	[B] 2011	Z 16 LEL	Interior Lighting	●	●	●	●
Corsa-D	[B] 2011	Z 16 LEL	Wipers/Washer	●	●	●	●
Corsa-D	[B] 2011	Z 16 LEL	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LEL	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LEL	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LEL	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LEL	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LEL	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LEL	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LEL	PAS (Park Pilot)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LEL	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LEL	BCM (Body Control Module)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LER	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LER	AF 13-4	●	●	●	●
Corsa-D	[B] 2011	Z 16 LER	MTA (Easytronic)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LER	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LER	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LER	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LER	Exterior Lighting	●	●	●	●
Corsa-D	[B] 2011	Z 16 LER	Interior Lighting	●	●	●	●
Corsa-D	[B] 2011	Z 16 LER	Wipers/Washer	●	●	●	●
Corsa-D	[B] 2011	Z 16 LER	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LER	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LER	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LER	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LER	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LER	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LER	PAS (Park Pilot)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LER	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[B] 2011	Z 16 LER	BCM (Body Control Module)	●	●	●	●
Corsa-D	[B] 2011	A 16 LEL	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[B] 2011	A 16 LEL	MTA (Easytronic Magneti Marelli)	●	●	●	●

Corsa-D	[B] 2011	A 16 LEL	AF 13-4	●	●	●	●
Corsa-D	[B] 2011	A 16 LEL	MTA (Easytronic)	●	●	●	●
Corsa-D	[B] 2011	A 16 LEL	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[B] 2011	A 16 LEL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[B] 2011	A 16 LEL	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[B] 2011	A 16 LEL	Exterior Lighting	●	●	●	●
Corsa-D	[B] 2011	A 16 LEL	Interior Lighting	●	●	●	●
Corsa-D	[B] 2011	A 16 LEL	Wipers/Washer	●	●	●	●
Corsa-D	[B] 2011	A 16 LEL	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[B] 2011	A 16 LEL	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[B] 2011	A 16 LEL	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[B] 2011	A 16 LEL	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[B] 2011	A 16 LEL	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[B] 2011	A 16 LEL	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[B] 2011	A 16 LEL	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[B] 2011	A 16 LEL	PAS (Park Pilot)	●	●	●	●
Corsa-D	[B] 2011	A 16 LEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[B] 2011	A 16 LEL	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[B] 2011	A 16 LEL	BCM (Body Control Module)	●	●	●	●
Corsa-D	[B] 2011	A 16 LER	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[B] 2011	A 16 LER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[B] 2011	A 16 LER	AF 13-4	●	●	●	●
Corsa-D	[B] 2011	A 16 LER	MTA (Easytronic)	●	●	●	●
Corsa-D	[B] 2011	A 16 LER	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[B] 2011	A 16 LER	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[B] 2011	A 16 LER	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[B] 2011	A 16 LER	Exterior Lighting	●	●	●	●
Corsa-D	[B] 2011	A 16 LER	Interior Lighting	●	●	●	●
Corsa-D	[B] 2011	A 16 LER	Wipers/Washer	●	●	●	●
Corsa-D	[B] 2011	A 16 LER	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[B] 2011	A 16 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[B] 2011	A 16 LER	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[B] 2011	A 16 LER	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[B] 2011	A 16 LER	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[B] 2011	A 16 LER	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[B] 2011	A 16 LER	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[B] 2011	A 16 LER	PAS (Park Pilot)	●	●	●	●
Corsa-D	[B] 2011	A 16 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[B] 2011	A 16 LER	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[B] 2011	A 16 LER	BCM (Body Control Module)	●	●	●	●
Corsa-D	[B] 2011	Z 17 DTR	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[B] 2011	Z 17 DTR	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[B] 2011	Z 17 DTR	AF 13-4	●	●	●	●
Corsa-D	[B] 2011	Z 17 DTR	MTA (Easytronic)	●	●	●	●
Corsa-D	[B] 2011	Z 17 DTR	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[B] 2011	Z 17 DTR	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[B] 2011	Z 17 DTR	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[B] 2011	Z 17 DTR	Exterior Lighting	●	●	●	●
Corsa-D	[B] 2011	Z 17 DTR	Interior Lighting	●	●	●	●
Corsa-D	[B] 2011	Z 17 DTR	Wipers/Washer	●	●	●	●
Corsa-D	[B] 2011	Z 17 DTR	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[B] 2011	Z 17 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[B] 2011	Z 17 DTR	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[B] 2011	Z 17 DTR	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[B] 2011	Z 17 DTR	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[B] 2011	Z 17 DTR	EHS (Electrical Heater System)	●	●	●	●

Corsa-D	[B] 2011	Z 17 DTR	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[B] 2011	Z 17 DTR	PAS (Park Pilot)	●	●	●	●
Corsa-D	[B] 2011	Z 17 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[B] 2011	Z 17 DTR	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[B] 2011	Z 17 DTR	BCM (Body Control Module)	●	●	●	●
Corsa-D	[B] 2011	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[B] 2011	Engine(default)	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[B] 2011	Engine(default)	AF 13-4	●	●	●	●
Corsa-D	[B] 2011	Engine(default)	MTA (Easytronic)	●	●	●	●
Corsa-D	[B] 2011	Engine(default)	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[B] 2011	Engine(default)	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[B] 2011	Engine(default)	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[B] 2011	Engine(default)	Exterior Lighting	●	●	●	●
Corsa-D	[B] 2011	Engine(default)	Interior Lighting	●	●	●	●
Corsa-D	[B] 2011	Engine(default)	Wipers/Washer	●	●	●	●
Corsa-D	[B] 2011	Engine(default)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[B] 2011	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[B] 2011	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[B] 2011	Engine(default)	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[B] 2011	Engine(default)	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[B] 2011	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[B] 2011	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[B] 2011	Engine(default)	PAS (Park Pilot)	●	●	●	●
Corsa-D	[B] 2011	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[B] 2011	Engine(default)	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[B] 2011	Engine(default)	BCM (Body Control Module)	●	●	●	●
Corsa-D	[A] 2010	Z 10 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[A] 2010	Z 10 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[A] 2010	Z 10 XEP	AF 13-4	●	●	●	●
Corsa-D	[A] 2010	Z 10 XEP	MTA (Easytronic)	●	●	●	●
Corsa-D	[A] 2010	Z 10 XEP	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[A] 2010	Z 10 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[A] 2010	Z 10 XEP	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[A] 2010	Z 10 XEP	Exterior Lighting	●	●	●	●
Corsa-D	[A] 2010	Z 10 XEP	Interior Lighting	●	●	●	●
Corsa-D	[A] 2010	Z 10 XEP	Wipers/Washer	●	●	●	●
Corsa-D	[A] 2010	Z 10 XEP	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[A] 2010	Z 10 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[A] 2010	Z 10 XEP	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[A] 2010	Z 10 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[A] 2010	Z 10 XEP	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[A] 2010	Z 10 XEP	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[A] 2010	Z 10 XEP	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[A] 2010	Z 10 XEP	PAS (Park Pilot)	●	●	●	●
Corsa-D	[A] 2010	Z 10 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[A] 2010	Z 10 XEP	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[A] 2010	Z 10 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-D	[A] 2010	A 10 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[A] 2010	A 10 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●

Corsa-D	[A] 2010	A 10 XEP	AF 13-4	●	●	●	●
Corsa-D	[A] 2010	A 10 XEP	MTA (Easytronic)	●	●	●	●
Corsa-D	[A] 2010	A 10 XEP	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[A] 2010	A 10 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[A] 2010	A 10 XEP	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[A] 2010	A 10 XEP	Exterior Lighting	●	●	●	●
Corsa-D	[A] 2010	A 10 XEP	Interior Lighting	●	●	●	●
Corsa-D	[A] 2010	A 10 XEP	Wipers/Washer	●	●	●	●
Corsa-D	[A] 2010	A 10 XEP	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[A] 2010	A 10 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[A] 2010	A 10 XEP	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[A] 2010	A 10 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[A] 2010	A 10 XEP	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[A] 2010	A 10 XEP	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[A] 2010	A 10 XEP	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[A] 2010	A 10 XEP	PAS (Park Pilot)	●	●	●	●
Corsa-D	[A] 2010	A 10 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[A] 2010	A 10 XEP	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[A] 2010	A 10 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-D	[A] 2010	Z 12 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[A] 2010	Z 12 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[A] 2010	Z 12 XEP	AF 13-4	●	●	●	●
Corsa-D	[A] 2010	Z 12 XEP	MTA (Easytronic)	●	●	●	●
Corsa-D	[A] 2010	Z 12 XEP	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[A] 2010	Z 12 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[A] 2010	Z 12 XEP	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[A] 2010	Z 12 XEP	Exterior Lighting	●	●	●	●
Corsa-D	[A] 2010	Z 12 XEP	Interior Lighting	●	●	●	●
Corsa-D	[A] 2010	Z 12 XEP	Wipers/Washer	●	●	●	●
Corsa-D	[A] 2010	Z 12 XEP	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[A] 2010	Z 12 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[A] 2010	Z 12 XEP	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[A] 2010	Z 12 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[A] 2010	Z 12 XEP	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[A] 2010	Z 12 XEP	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[A] 2010	Z 12 XEP	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[A] 2010	Z 12 XEP	PAS (Park Pilot)	●	●	●	●
Corsa-D	[A] 2010	Z 12 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[A] 2010	Z 12 XEP	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[A] 2010	Z 12 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-D	[A] 2010	A 12 XER	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[A] 2010	A 12 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[A] 2010	A 12 XER	AF 13-4	●	●	●	●
Corsa-D	[A] 2010	A 12 XER	MTA (Easytronic)	●	●	●	●
Corsa-D	[A] 2010	A 12 XER	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[A] 2010	A 12 XER	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[A] 2010	A 12 XER	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[A] 2010	A 12 XER	Exterior Lighting	●	●	●	●
Corsa-D	[A] 2010	A 12 XER	Interior Lighting	●	●	●	●
Corsa-D	[A] 2010	A 12 XER	Wipers/Washer	●	●	●	●
Corsa-D	[A] 2010	A 12 XER	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[A] 2010	A 12 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[A] 2010	A 12 XER	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[A] 2010	A 12 XER	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[A] 2010	A 12 XER	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[A] 2010	A 12 XER	EHS (Electrical Heater System)	●	●	●	●

Corsa-D	[A] 2010	A 12 XER	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[A] 2010	A 12 XER	PAS (Park Pilot)	●	●	●	●
Corsa-D	[A] 2010	A 12 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[A] 2010	A 12 XER	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[A] 2010	A 12 XER	BCM (Body Control Module)	●	●	●	●
Corsa-D	[A] 2010	A 12 XEL	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[A] 2010	A 12 XEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[A] 2010	A 12 XEL	AF 13-4	●	●	●	●
Corsa-D	[A] 2010	A 12 XEL	MTA (Easytronic)	●	●	●	●
Corsa-D	[A] 2010	A 12 XEL	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[A] 2010	A 12 XEL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[A] 2010	A 12 XEL	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[A] 2010	A 12 XEL	Exterior Lighting	●	●	●	●
Corsa-D	[A] 2010	A 12 XEL	Interior Lighting	●	●	●	●
Corsa-D	[A] 2010	A 12 XEL	Wipers/Washer	●	●	●	●
Corsa-D	[A] 2010	A 12 XEL	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[A] 2010	A 12 XEL	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[A] 2010	A 12 XEL	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[A] 2010	A 12 XEL	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[A] 2010	A 12 XEL	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[A] 2010	A 12 XEL	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[A] 2010	A 12 XEL	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[A] 2010	A 12 XEL	PAS (Park Pilot)	●	●	●	●
Corsa-D	[A] 2010	A 12 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[A] 2010	A 12 XEL	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[A] 2010	A 12 XEL	BCM (Body Control Module)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTH	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTH	AF 13-4	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTH	MTA (Easytronic)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTH	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTH	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTH	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTH	Exterior Lighting	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTH	Interior Lighting	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTH	Wipers/Washer	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTH	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTH	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTH	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTH	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTH	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTH	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTH	PAS (Park Pilot)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTH	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTH	BCM (Body Control Module)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTE	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTE	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTE	AF 13-4	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTE	MTA (Easytronic)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTE	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTE	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTE	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTE	Exterior Lighting	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTE	Interior Lighting	●	●	●	●

Corsa-D	[A] 2010	Z 13 DTE	Wipers/Washer	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTE	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTE	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTE	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTE	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTE	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTE	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTE	PAS (Park Pilot)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTE	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTE	BCM (Body Control Module)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTJ	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTJ	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTJ	AF 13-4	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTJ	MTA (Easytronic)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTJ	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTJ	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTJ	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTJ	Exterior Lighting	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTJ	Interior Lighting	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTJ	Wipers/Washer	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTJ	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTJ	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTJ	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTJ	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTJ	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTJ	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTJ	PAS (Park Pilot)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTJ	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[A] 2010	Z 13 DTJ	BCM (Body Control Module)	●	●	●	●
Corsa-D	[A] 2010	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[A] 2010	Z 14 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[A] 2010	Z 14 XEP	AF 13-4	●	●	●	●
Corsa-D	[A] 2010	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Corsa-D	[A] 2010	Z 14 XEP	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[A] 2010	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[A] 2010	Z 14 XEP	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[A] 2010	Z 14 XEP	Exterior Lighting	●	●	●	●
Corsa-D	[A] 2010	Z 14 XEP	Interior Lighting	●	●	●	●
Corsa-D	[A] 2010	Z 14 XEP	Wipers/Washer	●	●	●	●
Corsa-D	[A] 2010	Z 14 XEP	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[A] 2010	Z 14 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[A] 2010	Z 14 XEP	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[A] 2010	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[A] 2010	Z 14 XEP	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[A] 2010	Z 14 XEP	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[A] 2010	Z 14 XEP	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[A] 2010	Z 14 XEP	PAS (Park Pilot)	●	●	●	●
Corsa-D	[A] 2010	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[A] 2010	Z 14 XEP	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[A] 2010	Z 14 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-D	[A] 2010	A 14 XEL	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[A] 2010	A 14 XEL	MTA (Easytronic Magneti Marelli)	●	●	●	●

Corsa-D	[A] 2010	A 14 XEL	AF 13-4	●	●	●	●
Corsa-D	[A] 2010	A 14 XEL	MTA (Easytronic)	●	●	●	●
Corsa-D	[A] 2010	A 14 XEL	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[A] 2010	A 14 XEL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[A] 2010	A 14 XEL	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[A] 2010	A 14 XEL	Exterior Lighting	●	●	●	●
Corsa-D	[A] 2010	A 14 XEL	Interior Lighting	●	●	●	●
Corsa-D	[A] 2010	A 14 XEL	Wipers/Washer	●	●	●	●
Corsa-D	[A] 2010	A 14 XEL	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[A] 2010	A 14 XEL	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[A] 2010	A 14 XEL	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[A] 2010	A 14 XEL	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[A] 2010	A 14 XEL	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[A] 2010	A 14 XEL	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[A] 2010	A 14 XEL	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[A] 2010	A 14 XEL	PAS (Park Pilot)	●	●	●	●
Corsa-D	[A] 2010	A 14 XEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[A] 2010	A 14 XEL	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[A] 2010	A 14 XEL	BCM (Body Control Module)	●	●	●	●
Corsa-D	[A] 2010	A 14 XER	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[A] 2010	A 14 XER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[A] 2010	A 14 XER	AF 13-4	●	●	●	●
Corsa-D	[A] 2010	A 14 XER	MTA (Easytronic)	●	●	●	●
Corsa-D	[A] 2010	A 14 XER	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[A] 2010	A 14 XER	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[A] 2010	A 14 XER	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[A] 2010	A 14 XER	Exterior Lighting	●	●	●	●
Corsa-D	[A] 2010	A 14 XER	Interior Lighting	●	●	●	●
Corsa-D	[A] 2010	A 14 XER	Wipers/Washer	●	●	●	●
Corsa-D	[A] 2010	A 14 XER	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[A] 2010	A 14 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[A] 2010	A 14 XER	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[A] 2010	A 14 XER	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[A] 2010	A 14 XER	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[A] 2010	A 14 XER	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[A] 2010	A 14 XER	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[A] 2010	A 14 XER	PAS (Park Pilot)	●	●	●	●
Corsa-D	[A] 2010	A 14 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[A] 2010	A 14 XER	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[A] 2010	A 14 XER	BCM (Body Control Module)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LEL	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LEL	AF 13-4	●	●	●	●
Corsa-D	[A] 2010	Z 16 LEL	MTA (Easytronic)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LEL	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LEL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LEL	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LEL	Exterior Lighting	●	●	●	●
Corsa-D	[A] 2010	Z 16 LEL	Interior Lighting	●	●	●	●
Corsa-D	[A] 2010	Z 16 LEL	Wipers/Washer	●	●	●	●
Corsa-D	[A] 2010	Z 16 LEL	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LEL	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LEL	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LEL	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LEL	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LEL	EHS (Electrical Heater System)	●	●	●	●

Corsa-D	[A] 2010	Z 16 LEL	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LEL	PAS (Park Pilot)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LEL	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LEL	BCM (Body Control Module)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LER	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LER	AF 13-4	●	●	●	●
Corsa-D	[A] 2010	Z 16 LER	MTA (Easytronic)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LER	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LER	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LER	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LER	Exterior Lighting	●	●	●	●
Corsa-D	[A] 2010	Z 16 LER	Interior Lighting	●	●	●	●
Corsa-D	[A] 2010	Z 16 LER	Wipers/Washer	●	●	●	●
Corsa-D	[A] 2010	Z 16 LER	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LER	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LER	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LER	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LER	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LER	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LER	PAS (Park Pilot)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LER	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[A] 2010	Z 16 LER	BCM (Body Control Module)	●	●	●	●
Corsa-D	[A] 2010	A 16 LEL	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[A] 2010	A 16 LEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[A] 2010	A 16 LEL	AF 13-4	●	●	●	●
Corsa-D	[A] 2010	A 16 LEL	MTA (Easytronic)	●	●	●	●
Corsa-D	[A] 2010	A 16 LEL	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[A] 2010	A 16 LEL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[A] 2010	A 16 LEL	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[A] 2010	A 16 LEL	Exterior Lighting	●	●	●	●
Corsa-D	[A] 2010	A 16 LEL	Interior Lighting	●	●	●	●
Corsa-D	[A] 2010	A 16 LEL	Wipers/Washer	●	●	●	●
Corsa-D	[A] 2010	A 16 LEL	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[A] 2010	A 16 LEL	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[A] 2010	A 16 LEL	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[A] 2010	A 16 LEL	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[A] 2010	A 16 LEL	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[A] 2010	A 16 LEL	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[A] 2010	A 16 LEL	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[A] 2010	A 16 LEL	PAS (Park Pilot)	●	●	●	●
Corsa-D	[A] 2010	A 16 LEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[A] 2010	A 16 LEL	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[A] 2010	A 16 LEL	BCM (Body Control Module)	●	●	●	●
Corsa-D	[A] 2010	A 16 LER	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[A] 2010	A 16 LER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[A] 2010	A 16 LER	AF 13-4	●	●	●	●
Corsa-D	[A] 2010	A 16 LER	MTA (Easytronic)	●	●	●	●
Corsa-D	[A] 2010	A 16 LER	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[A] 2010	A 16 LER	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[A] 2010	A 16 LER	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[A] 2010	A 16 LER	Exterior Lighting	●	●	●	●
Corsa-D	[A] 2010	A 16 LER	Interior Lighting	●	●	●	●

Corsa-D	[A] 2010	A 16 LER	Wipers/Washer	●	●	●	●
Corsa-D	[A] 2010	A 16 LER	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[A] 2010	A 16 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[A] 2010	A 16 LER	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[A] 2010	A 16 LER	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[A] 2010	A 16 LER	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[A] 2010	A 16 LER	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[A] 2010	A 16 LER	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[A] 2010	A 16 LER	PAS (Park Pilot)	●	●	●	●
Corsa-D	[A] 2010	A 16 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[A] 2010	A 16 LER	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[A] 2010	A 16 LER	BCM (Body Control Module)	●	●	●	●
Corsa-D	[A] 2010	Z 17 DTR	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[A] 2010	Z 17 DTR	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[A] 2010	Z 17 DTR	AF 13-4	●	●	●	●
Corsa-D	[A] 2010	Z 17 DTR	MTA (Easytronic)	●	●	●	●
Corsa-D	[A] 2010	Z 17 DTR	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[A] 2010	Z 17 DTR	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[A] 2010	Z 17 DTR	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[A] 2010	Z 17 DTR	Exterior Lighting	●	●	●	●
Corsa-D	[A] 2010	Z 17 DTR	Interior Lighting	●	●	●	●
Corsa-D	[A] 2010	Z 17 DTR	Wipers/Washer	●	●	●	●
Corsa-D	[A] 2010	Z 17 DTR	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[A] 2010	Z 17 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[A] 2010	Z 17 DTR	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[A] 2010	Z 17 DTR	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[A] 2010	Z 17 DTR	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[A] 2010	Z 17 DTR	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[A] 2010	Z 17 DTR	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[A] 2010	Z 17 DTR	PAS (Park Pilot)	●	●	●	●
Corsa-D	[A] 2010	Z 17 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[A] 2010	Z 17 DTR	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[A] 2010	Z 17 DTR	BCM (Body Control Module)	●	●	●	●
Corsa-D	[A] 2010	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[A] 2010	Engine(default)	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[A] 2010	Engine(default)	AF 13-4	●	●	●	●
Corsa-D	[A] 2010	Engine(default)	MTA (Easytronic)	●	●	●	●
Corsa-D	[A] 2010	Engine(default)	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[A] 2010	Engine(default)	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[A] 2010	Engine(default)	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[A] 2010	Engine(default)	Exterior Lighting	●	●	●	●
Corsa-D	[A] 2010	Engine(default)	Interior Lighting	●	●	●	●
Corsa-D	[A] 2010	Engine(default)	Wipers/Washer	●	●	●	●
Corsa-D	[A] 2010	Engine(default)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[A] 2010	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[A] 2010	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[A] 2010	Engine(default)	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[A] 2010	Engine(default)	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[A] 2010	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[A] 2010	Engine(default)	IC (Instrument Cluster)	●	●	●	●

Corsa-D	[A] 2010	Engine(default)	PAS (Park Pilot)	●	●	●	●
Corsa-D	[A] 2010	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[A] 2010	Engine(default)	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[A] 2010	Engine(default)	BCM (Body Control Module)	●	●	●	●
Corsa-D	[9] 2009	Z 10 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[9] 2009	Z 10 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[9] 2009	Z 10 XEP	AF 13-4	●	●	●	●
Corsa-D	[9] 2009	Z 10 XEP	MTA (Easytronic)	●	●	●	●
Corsa-D	[9] 2009	Z 10 XEP	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[9] 2009	Z 10 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[9] 2009	Z 10 XEP	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[9] 2009	Z 10 XEP	Exterior Lighting	●	●	●	●
Corsa-D	[9] 2009	Z 10 XEP	Interior Lighting	●	●	●	●
Corsa-D	[9] 2009	Z 10 XEP	Wipers/Washer	●	●	●	●
Corsa-D	[9] 2009	Z 10 XEP	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[9] 2009	Z 10 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[9] 2009	Z 10 XEP	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[9] 2009	Z 10 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[9] 2009	Z 10 XEP	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[9] 2009	Z 10 XEP	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[9] 2009	Z 10 XEP	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[9] 2009	Z 10 XEP	PAS (Park Pilot)	●	●	●	●
Corsa-D	[9] 2009	Z 10 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[9] 2009	Z 10 XEP	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[9] 2009	Z 10 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-D	[9] 2009	Z 12 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[9] 2009	Z 12 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[9] 2009	Z 12 XEP	AF 13-4	●	●	●	●
Corsa-D	[9] 2009	Z 12 XEP	MTA (Easytronic)	●	●	●	●
Corsa-D	[9] 2009	Z 12 XEP	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[9] 2009	Z 12 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[9] 2009	Z 12 XEP	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[9] 2009	Z 12 XEP	Exterior Lighting	●	●	●	●
Corsa-D	[9] 2009	Z 12 XEP	Interior Lighting	●	●	●	●
Corsa-D	[9] 2009	Z 12 XEP	Wipers/Washer	●	●	●	●
Corsa-D	[9] 2009	Z 12 XEP	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[9] 2009	Z 12 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[9] 2009	Z 12 XEP	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[9] 2009	Z 12 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[9] 2009	Z 12 XEP	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[9] 2009	Z 12 XEP	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[9] 2009	Z 12 XEP	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[9] 2009	Z 12 XEP	PAS (Park Pilot)	●	●	●	●
Corsa-D	[9] 2009	Z 12 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[9] 2009	Z 12 XEP	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[9] 2009	Z 12 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-D	[9] 2009	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[9] 2009	Z 14 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[9] 2009	Z 14 XEP	AF 13-4	●	●	●	●
Corsa-D	[9] 2009	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Corsa-D	[9] 2009	Z 14 XEP	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[9] 2009	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[9] 2009	Z 14 XEP	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[9] 2009	Z 14 XEP	Exterior Lighting	●	●	●	●
Corsa-D	[9] 2009	Z 14 XEP	Interior Lighting	●	●	●	●

Corsa-D	[9] 2009	Z 14 XEP	Wipers/Washer	●	●	●	●
Corsa-D	[9] 2009	Z 14 XEP	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[9] 2009	Z 14 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[9] 2009	Z 14 XEP	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[9] 2009	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[9] 2009	Z 14 XEP	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[9] 2009	Z 14 XEP	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[9] 2009	Z 14 XEP	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[9] 2009	Z 14 XEP	PAS (Park Pilot)	●	●	●	●
Corsa-D	[9] 2009	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[9] 2009	Z 14 XEP	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[9] 2009	Z 14 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-D	[9] 2009	Z 17 DTR	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[9] 2009	Z 17 DTR	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[9] 2009	Z 17 DTR	AF 13-4	●	●	●	●
Corsa-D	[9] 2009	Z 17 DTR	MTA (Easytronic)	●	●	●	●
Corsa-D	[9] 2009	Z 17 DTR	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[9] 2009	Z 17 DTR	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[9] 2009	Z 17 DTR	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[9] 2009	Z 17 DTR	Exterior Lighting	●	●	●	●
Corsa-D	[9] 2009	Z 17 DTR	Interior Lighting	●	●	●	●
Corsa-D	[9] 2009	Z 17 DTR	Wipers/Washer	●	●	●	●
Corsa-D	[9] 2009	Z 17 DTR	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[9] 2009	Z 17 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[9] 2009	Z 17 DTR	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[9] 2009	Z 17 DTR	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[9] 2009	Z 17 DTR	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[9] 2009	Z 17 DTR	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[9] 2009	Z 17 DTR	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[9] 2009	Z 17 DTR	PAS (Park Pilot)	●	●	●	●
Corsa-D	[9] 2009	Z 17 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[9] 2009	Z 17 DTR	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[9] 2009	Z 17 DTR	BCM (Body Control Module)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTH	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTH	AF 13-4	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTH	MTA (Easytronic)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTH	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTH	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTH	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTH	Exterior Lighting	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTH	Interior Lighting	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTH	Wipers/Washer	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTH	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTH	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTH	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTH	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTH	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTH	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTH	PAS (Park Pilot)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTH	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTH	BCM (Body Control Module)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTJ	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTJ	MTA (Easytronic Magneti Marelli)	●	●	●	●

Corsa-D	[9] 2009	Z 13 DTJ	AF 13-4	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTJ	MTA (Easytronic)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTJ	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTJ	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTJ	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTJ	Exterior Lighting	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTJ	Interior Lighting	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTJ	Wipers/Washer	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTJ	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTJ	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTJ	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTJ	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTJ	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTJ	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTJ	PAS (Park Pilot)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTJ	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[9] 2009	Z 13 DTJ	BCM (Body Control Module)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LEL	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LEL	AF 13-4	●	●	●	●
Corsa-D	[9] 2009	Z 16 LEL	MTA (Easytronic)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LEL	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LEL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LEL	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LEL	Exterior Lighting	●	●	●	●
Corsa-D	[9] 2009	Z 16 LEL	Interior Lighting	●	●	●	●
Corsa-D	[9] 2009	Z 16 LEL	Wipers/Washer	●	●	●	●
Corsa-D	[9] 2009	Z 16 LEL	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LEL	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LEL	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LEL	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LEL	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LEL	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LEL	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LEL	PAS (Park Pilot)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LEL	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LEL	BCM (Body Control Module)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LER	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LER	AF 13-4	●	●	●	●
Corsa-D	[9] 2009	Z 16 LER	MTA (Easytronic)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LER	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LER	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LER	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LER	Exterior Lighting	●	●	●	●
Corsa-D	[9] 2009	Z 16 LER	Interior Lighting	●	●	●	●
Corsa-D	[9] 2009	Z 16 LER	Wipers/Washer	●	●	●	●
Corsa-D	[9] 2009	Z 16 LER	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LER	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LER	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LER	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LER	EHS (Electrical Heater System)	●	●	●	●

Corsa-D	[9] 2009	Z 16 LER	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LER	PAS (Park Pilot)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LER	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[9] 2009	Z 16 LER	BCM (Body Control Module)	●	●	●	●
Corsa-D	[9] 2009	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[9] 2009	Engine(default)	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[9] 2009	Engine(default)	AF 13-4	●	●	●	●
Corsa-D	[9] 2009	Engine(default)	MTA (Easytronic)	●	●	●	●
Corsa-D	[9] 2009	Engine(default)	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[9] 2009	Engine(default)	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[9] 2009	Engine(default)	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[9] 2009	Engine(default)	Exterior Lighting	●	●	●	●
Corsa-D	[9] 2009	Engine(default)	Interior Lighting	●	●	●	●
Corsa-D	[9] 2009	Engine(default)	Wipers/Washer	●	●	●	●
Corsa-D	[9] 2009	Engine(default)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[9] 2009	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[9] 2009	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[9] 2009	Engine(default)	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[9] 2009	Engine(default)	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[9] 2009	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[9] 2009	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[9] 2009	Engine(default)	PAS (Park Pilot)	●	●	●	●
Corsa-D	[9] 2009	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[9] 2009	Engine(default)	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[9] 2009	Engine(default)	BCM (Body Control Module)	●	●	●	●
Corsa-D	[8] 2008	Z 10 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[8] 2008	Z 10 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[8] 2008	Z 10 XEP	AF 13-4	●	●	●	●
Corsa-D	[8] 2008	Z 10 XEP	MTA (Easytronic)	●	●	●	●
Corsa-D	[8] 2008	Z 10 XEP	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[8] 2008	Z 10 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[8] 2008	Z 10 XEP	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[8] 2008	Z 10 XEP	Exterior Lighting	●	●	●	●
Corsa-D	[8] 2008	Z 10 XEP	Interior Lighting	●	●	●	●
Corsa-D	[8] 2008	Z 10 XEP	Wipers/Washer	●	●	●	●
Corsa-D	[8] 2008	Z 10 XEP	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[8] 2008	Z 10 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[8] 2008	Z 10 XEP	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[8] 2008	Z 10 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[8] 2008	Z 10 XEP	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[8] 2008	Z 10 XEP	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[8] 2008	Z 10 XEP	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[8] 2008	Z 10 XEP	PAS (Park Pilot)	●	●	●	●
Corsa-D	[8] 2008	Z 10 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[8] 2008	Z 10 XEP	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[8] 2008	Z 10 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-D	[8] 2008	Z 12 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[8] 2008	Z 12 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●

Corsa-D	[8] 2008	Z 12 XEP	AF 13-4	●	●	●	●
Corsa-D	[8] 2008	Z 12 XEP	MTA (Easytronic)	●	●	●	●
Corsa-D	[8] 2008	Z 12 XEP	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[8] 2008	Z 12 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[8] 2008	Z 12 XEP	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[8] 2008	Z 12 XEP	Exterior Lighting	●	●	●	●
Corsa-D	[8] 2008	Z 12 XEP	Interior Lighting	●	●	●	●
Corsa-D	[8] 2008	Z 12 XEP	Wipers/Washer	●	●	●	●
Corsa-D	[8] 2008	Z 12 XEP	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[8] 2008	Z 12 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[8] 2008	Z 12 XEP	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[8] 2008	Z 12 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[8] 2008	Z 12 XEP	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[8] 2008	Z 12 XEP	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[8] 2008	Z 12 XEP	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[8] 2008	Z 12 XEP	PAS (Park Pilot)	●	●	●	●
Corsa-D	[8] 2008	Z 12 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[8] 2008	Z 12 XEP	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[8] 2008	Z 12 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-D	[8] 2008	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[8] 2008	Z 14 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[8] 2008	Z 14 XEP	AF 13-4	●	●	●	●
Corsa-D	[8] 2008	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Corsa-D	[8] 2008	Z 14 XEP	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[8] 2008	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[8] 2008	Z 14 XEP	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[8] 2008	Z 14 XEP	Exterior Lighting	●	●	●	●
Corsa-D	[8] 2008	Z 14 XEP	Interior Lighting	●	●	●	●
Corsa-D	[8] 2008	Z 14 XEP	Wipers/Washer	●	●	●	●
Corsa-D	[8] 2008	Z 14 XEP	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[8] 2008	Z 14 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[8] 2008	Z 14 XEP	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[8] 2008	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[8] 2008	Z 14 XEP	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[8] 2008	Z 14 XEP	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[8] 2008	Z 14 XEP	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[8] 2008	Z 14 XEP	PAS (Park Pilot)	●	●	●	●
Corsa-D	[8] 2008	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[8] 2008	Z 14 XEP	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[8] 2008	Z 14 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-D	[8] 2008	Z 17 DTR	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[8] 2008	Z 17 DTR	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[8] 2008	Z 17 DTR	AF 13-4	●	●	●	●
Corsa-D	[8] 2008	Z 17 DTR	MTA (Easytronic)	●	●	●	●
Corsa-D	[8] 2008	Z 17 DTR	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[8] 2008	Z 17 DTR	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[8] 2008	Z 17 DTR	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[8] 2008	Z 17 DTR	Exterior Lighting	●	●	●	●
Corsa-D	[8] 2008	Z 17 DTR	Interior Lighting	●	●	●	●
Corsa-D	[8] 2008	Z 17 DTR	Wipers/Washer	●	●	●	●
Corsa-D	[8] 2008	Z 17 DTR	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[8] 2008	Z 17 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[8] 2008	Z 17 DTR	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[8] 2008	Z 17 DTR	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[8] 2008	Z 17 DTR	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[8] 2008	Z 17 DTR	EHS (Electrical Heater System)	●	●	●	●

Corsa-D	[8] 2008	Z 17 DTR	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[8] 2008	Z 17 DTR	PAS (Park Pilot)	●	●	●	●
Corsa-D	[8] 2008	Z 17 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[8] 2008	Z 17 DTR	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[8] 2008	Z 17 DTR	BCM (Body Control Module)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTH	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTH	AF 13-4	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTH	MTA (Easytronic)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTH	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTH	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTH	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTH	Exterior Lighting	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTH	Interior Lighting	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTH	Wipers/Washer	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTH	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTH	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTH	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTH	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTH	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTH	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTH	PAS (Park Pilot)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTH	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTH	BCM (Body Control Module)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTJ	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTJ	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTJ	AF 13-4	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTJ	MTA (Easytronic)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTJ	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTJ	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTJ	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTJ	Exterior Lighting	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTJ	Interior Lighting	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTJ	Wipers/Washer	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTJ	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTJ	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTJ	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTJ	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTJ	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTJ	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTJ	PAS (Park Pilot)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTJ	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[8] 2008	Z 13 DTJ	BCM (Body Control Module)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LEL	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LEL	AF 13-4	●	●	●	●
Corsa-D	[8] 2008	Z 16 LEL	MTA (Easytronic)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LEL	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LEL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LEL	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LEL	Exterior Lighting	●	●	●	●
Corsa-D	[8] 2008	Z 16 LEL	Interior Lighting	●	●	●	●

Corsa-D	[8] 2008	Z 16 LEL	Wipers/Washer	●	●	●	●
Corsa-D	[8] 2008	Z 16 LEL	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LEL	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LEL	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LEL	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LEL	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LEL	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LEL	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LEL	PAS (Park Pilot)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LEL	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LEL	BCM (Body Control Module)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LER	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LER	AF 13-4	●	●	●	●
Corsa-D	[8] 2008	Z 16 LER	MTA (Easytronic)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LER	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LER	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LER	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LER	Exterior Lighting	●	●	●	●
Corsa-D	[8] 2008	Z 16 LER	Interior Lighting	●	●	●	●
Corsa-D	[8] 2008	Z 16 LER	Wipers/Washer	●	●	●	●
Corsa-D	[8] 2008	Z 16 LER	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LER	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LER	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LER	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LER	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LER	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LER	PAS (Park Pilot)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LER	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[8] 2008	Z 16 LER	BCM (Body Control Module)	●	●	●	●
Corsa-D	[8] 2008	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[8] 2008	Engine(default)	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[8] 2008	Engine(default)	AF 13-4	●	●	●	●
Corsa-D	[8] 2008	Engine(default)	MTA (Easytronic)	●	●	●	●
Corsa-D	[8] 2008	Engine(default)	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[8] 2008	Engine(default)	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[8] 2008	Engine(default)	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[8] 2008	Engine(default)	Exterior Lighting	●	●	●	●
Corsa-D	[8] 2008	Engine(default)	Interior Lighting	●	●	●	●
Corsa-D	[8] 2008	Engine(default)	Wipers/Washer	●	●	●	●
Corsa-D	[8] 2008	Engine(default)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[8] 2008	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[8] 2008	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[8] 2008	Engine(default)	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[8] 2008	Engine(default)	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[8] 2008	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[8] 2008	Engine(default)	IC (Instrument Cluster)	●	●	●	●

Corsa-D	[8] 2008	Engine(default)	PAS (Park Pilot)	●	●	●	●
Corsa-D	[8] 2008	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[8] 2008	Engine(default)	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[8] 2008	Engine(default)	BCM (Body Control Module)	●	●	●	●
Corsa-D	[7] 2007	Z 10 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[7] 2007	Z 10 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[7] 2007	Z 10 XEP	AF 13-4	●	●	●	●
Corsa-D	[7] 2007	Z 10 XEP	MTA (Easytronic)	●	●	●	●
Corsa-D	[7] 2007	Z 10 XEP	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[7] 2007	Z 10 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[7] 2007	Z 10 XEP	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[7] 2007	Z 10 XEP	Exterior Lighting	●	●	●	●
Corsa-D	[7] 2007	Z 10 XEP	Interior Lighting	●	●	●	●
Corsa-D	[7] 2007	Z 10 XEP	Wipers/Washer	●	●	●	●
Corsa-D	[7] 2007	Z 10 XEP	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[7] 2007	Z 10 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[7] 2007	Z 10 XEP	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[7] 2007	Z 10 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[7] 2007	Z 10 XEP	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[7] 2007	Z 10 XEP	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[7] 2007	Z 10 XEP	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[7] 2007	Z 10 XEP	PAS (Park Pilot)	●	●	●	●
Corsa-D	[7] 2007	Z 10 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[7] 2007	Z 10 XEP	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[7] 2007	Z 10 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-D	[7] 2007	Z 12 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[7] 2007	Z 12 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[7] 2007	Z 12 XEP	AF 13-4	●	●	●	●
Corsa-D	[7] 2007	Z 12 XEP	MTA (Easytronic)	●	●	●	●
Corsa-D	[7] 2007	Z 12 XEP	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[7] 2007	Z 12 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[7] 2007	Z 12 XEP	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[7] 2007	Z 12 XEP	Exterior Lighting	●	●	●	●
Corsa-D	[7] 2007	Z 12 XEP	Interior Lighting	●	●	●	●
Corsa-D	[7] 2007	Z 12 XEP	Wipers/Washer	●	●	●	●
Corsa-D	[7] 2007	Z 12 XEP	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[7] 2007	Z 12 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[7] 2007	Z 12 XEP	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[7] 2007	Z 12 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[7] 2007	Z 12 XEP	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[7] 2007	Z 12 XEP	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[7] 2007	Z 12 XEP	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[7] 2007	Z 12 XEP	PAS (Park Pilot)	●	●	●	●
Corsa-D	[7] 2007	Z 12 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[7] 2007	Z 12 XEP	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[7] 2007	Z 12 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-D	[7] 2007	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[7] 2007	Z 14 XEP	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[7] 2007	Z 14 XEP	AF 13-4	●	●	●	●
Corsa-D	[7] 2007	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Corsa-D	[7] 2007	Z 14 XEP	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[7] 2007	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[7] 2007	Z 14 XEP	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[7] 2007	Z 14 XEP	Exterior Lighting	●	●	●	●
Corsa-D	[7] 2007	Z 14 XEP	Interior Lighting	●	●	●	●

Corsa-D	[7] 2007	Z 14 XEP	Wipers/Washer	●	●	●	●
Corsa-D	[7] 2007	Z 14 XEP	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[7] 2007	Z 14 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[7] 2007	Z 14 XEP	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[7] 2007	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[7] 2007	Z 14 XEP	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[7] 2007	Z 14 XEP	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[7] 2007	Z 14 XEP	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[7] 2007	Z 14 XEP	PAS (Park Pilot)	●	●	●	●
Corsa-D	[7] 2007	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[7] 2007	Z 14 XEP	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[7] 2007	Z 14 XEP	BCM (Body Control Module)	●	●	●	●
Corsa-D	[7] 2007	Z 17 DTR	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[7] 2007	Z 17 DTR	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[7] 2007	Z 17 DTR	AF 13-4	●	●	●	●
Corsa-D	[7] 2007	Z 17 DTR	MTA (Easytronic)	●	●	●	●
Corsa-D	[7] 2007	Z 17 DTR	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[7] 2007	Z 17 DTR	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[7] 2007	Z 17 DTR	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[7] 2007	Z 17 DTR	Exterior Lighting	●	●	●	●
Corsa-D	[7] 2007	Z 17 DTR	Interior Lighting	●	●	●	●
Corsa-D	[7] 2007	Z 17 DTR	Wipers/Washer	●	●	●	●
Corsa-D	[7] 2007	Z 17 DTR	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[7] 2007	Z 17 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[7] 2007	Z 17 DTR	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[7] 2007	Z 17 DTR	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[7] 2007	Z 17 DTR	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[7] 2007	Z 17 DTR	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[7] 2007	Z 17 DTR	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[7] 2007	Z 17 DTR	PAS (Park Pilot)	●	●	●	●
Corsa-D	[7] 2007	Z 17 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[7] 2007	Z 17 DTR	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[7] 2007	Z 17 DTR	BCM (Body Control Module)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTH	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTH	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTH	AF 13-4	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTH	MTA (Easytronic)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTH	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTH	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTH	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTH	Exterior Lighting	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTH	Interior Lighting	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTH	Wipers/Washer	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTH	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTH	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTH	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTH	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTH	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTH	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTH	PAS (Park Pilot)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTH	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTH	BCM (Body Control Module)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTJ	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTJ	MTA (Easytronic Magneti Marelli)	●	●	●	●

Corsa-D	[7] 2007	Z 13 DTJ	AF 13-4	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTJ	MTA (Easytronic)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTJ	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTJ	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTJ	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTJ	Exterior Lighting	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTJ	Interior Lighting	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTJ	Wipers/Washer	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTJ	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTJ	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTJ	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTJ	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTJ	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTJ	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTJ	PAS (Park Pilot)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTJ	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[7] 2007	Z 13 DTJ	BCM (Body Control Module)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LEL	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LEL	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LEL	AF 13-4	●	●	●	●
Corsa-D	[7] 2007	Z 16 LEL	MTA (Easytronic)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LEL	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LEL	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LEL	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LEL	Exterior Lighting	●	●	●	●
Corsa-D	[7] 2007	Z 16 LEL	Interior Lighting	●	●	●	●
Corsa-D	[7] 2007	Z 16 LEL	Wipers/Washer	●	●	●	●
Corsa-D	[7] 2007	Z 16 LEL	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LEL	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LEL	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LEL	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LEL	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LEL	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LEL	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LEL	PAS (Park Pilot)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LEL	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LEL	BCM (Body Control Module)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LER	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LER	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LER	AF 13-4	●	●	●	●
Corsa-D	[7] 2007	Z 16 LER	MTA (Easytronic)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LER	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LER	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LER	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LER	Exterior Lighting	●	●	●	●
Corsa-D	[7] 2007	Z 16 LER	Interior Lighting	●	●	●	●
Corsa-D	[7] 2007	Z 16 LER	Wipers/Washer	●	●	●	●
Corsa-D	[7] 2007	Z 16 LER	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LER	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LER	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LER	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LER	EHS (Electrical Heater System)	●	●	●	●

Corsa-D	[7] 2007	Z 16 LER	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LER	PAS (Park Pilot)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LER	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[7] 2007	Z 16 LER	BCM (Body Control Module)	●	●	●	●
Corsa-D	[7] 2007	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Corsa-D	[7] 2007	Engine(default)	MTA (Easytronic Magneti Marelli)	●	●	●	●
Corsa-D	[7] 2007	Engine(default)	AF 13-4	●	●	●	●
Corsa-D	[7] 2007	Engine(default)	MTA (Easytronic)	●	●	●	●
Corsa-D	[7] 2007	Engine(default)	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Corsa-D	[7] 2007	Engine(default)	EPS (Electronic Power Steering)	●	●	●	●
Corsa-D	[7] 2007	Engine(default)	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-D	[7] 2007	Engine(default)	Exterior Lighting	●	●	●	●
Corsa-D	[7] 2007	Engine(default)	Interior Lighting	●	●	●	●
Corsa-D	[7] 2007	Engine(default)	Wipers/Washer	●	●	●	●
Corsa-D	[7] 2007	Engine(default)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-D	[7] 2007	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Corsa-D	[7] 2007	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Corsa-D	[7] 2007	Engine(default)	IMMO (Immobiliser)	●	●	●	●
Corsa-D	[7] 2007	Engine(default)	AFL (Adaptive Forward Lighting)	●	●	●	●
Corsa-D	[7] 2007	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Corsa-D	[7] 2007	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Corsa-D	[7] 2007	Engine(default)	PAS (Park Pilot)	●	●	●	●
Corsa-D	[7] 2007	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-D	[7] 2007	Engine(default)	TIM (Trailer Interface Module)	●	●	●	●
Corsa-D	[7] 2007	Engine(default)	BCM (Body Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.0L (LE1)	ECM (Engine Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.0L (LE1)	MTAS (Manual Transmission Automatically Shifted)	●	●	●	●
Corsa-E	[G] 2016	1.0L (LE1)	AT (Automatic Transmission T-76)	●	●	●	●
Corsa-E	[G] 2016	1.0L (LE1)	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.0L (LE1)	CCM (Chassis Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.0L (LE1)	EBCM (Electronic Brake Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.0L (LE1)	PSCM (Power Steering Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.0L (LE1)	BCM (Body Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.0L (LE1)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-E	[G] 2016	1.0L (LE1)	IC (Instrument Cluster)	●	●	●	●
Corsa-E	[G] 2016	1.0L (LE1)	TIM (Trailer Interface Module)	●	●	●	●
Corsa-E	[G] 2016	1.0L (LE1)	Radio	●	●	●	●
Corsa-E	[G] 2016	1.0L (LE1)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.0L (LE1)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-E	[G] 2016	1.0L (LE1)	PACM (Parking Assist Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.0L (LE1)	FCM (Frontview Camera Module)	●	●	●	●
Corsa-E	[G] 2016	1.2L (LDC)	ECM (Engine Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.2L (LDC)	MTAS (Manual Transmission Automatically Shifted)	●	●	●	●
Corsa-E	[G] 2016	1.2L (LDC)	AT (Automatic Transmission T-76)	●	●	●	●
Corsa-E	[G] 2016	1.2L (LDC)	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.2L (LDC)	CCM (Chassis Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.2L (LDC)	EBCM (Electronic Brake Control Module)	●	●	●	●

Corsa-E	[G] 2016	1.2L (LDC)	PSCM (Power Steering Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.2L (LDC)	BCM (Body Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.2L (LDC)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-E	[G] 2016	1.2L (LDC)	IC (Instrument Cluster)	●	●	●	●
Corsa-E	[G] 2016	1.2L (LDC)	TIM (Trailer Interface Module)	●	●	●	●
Corsa-E	[G] 2016	1.2L (LDC)	Radio	●	●	●	●
Corsa-E	[G] 2016	1.2L (LDC)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.2L (LDC)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-E	[G] 2016	1.2L (LDC)	PACM (Parking Assist Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.2L (LDC)	FCM (Frontview Camera Module)	●	●	●	●
Corsa-E	[G] 2016	1.3L (LKV)	ECM (Engine Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.3L (LKV)	MTAS (Manual Transmission Automatically Shifted)	●	●	●	●
Corsa-E	[G] 2016	1.3L (LKV)	AT (Automatic Transmission T-76)	●	●	●	●
Corsa-E	[G] 2016	1.3L (LKV)	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.3L (LKV)	CCM (Chassis Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.3L (LKV)	EBCM (Electronic Brake Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.3L (LKV)	PSCM (Power Steering Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.3L (LKV)	BCM (Body Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.3L (LKV)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-E	[G] 2016	1.3L (LKV)	IC (Instrument Cluster)	●	●	●	●
Corsa-E	[G] 2016	1.3L (LKV)	TIM (Trailer Interface Module)	●	●	●	●
Corsa-E	[G] 2016	1.3L (LKV)	Radio	●	●	●	●
Corsa-E	[G] 2016	1.3L (LKV)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.3L (LKV)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-E	[G] 2016	1.3L (LKV)	PACM (Parking Assist Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.3L (LKV)	FCM (Frontview Camera Module)	●	●	●	●
Corsa-E	[G] 2016	1.3L (LKV)	ECM (Engine Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.3L (LKV)	TCM (Transmission Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.3L (LKV)	EBCM (Electronic Brake Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.3L (LKV)	BCM (Body Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.3L (LKV)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-E	[G] 2016	1.3L (LKV)	IC (Instrument Cluster)	●	●	●	●
Corsa-E	[G] 2016	1.3L (LKV)	TPIM (Tire Pressure Indicator Module)	●	●	●	●
Corsa-E	[G] 2016	1.3L (LKV)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Corsa-E	[G] 2016	1.3L (LKV)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-E	[G] 2016	1.3L (LKV)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.3L (LKV)	PACM (Parking Assist Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.4L (LDD)	ECM (Engine Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.4L (LDD)	MTAS (Manual Transmission Automatically Shifted)	●	●	●	●
Corsa-E	[G] 2016	1.4L (LDD)	AT (Automatic Transmission T-76)	●	●	●	●
Corsa-E	[G] 2016	1.4L (LDD)	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.4L (LDD)	CCM (Chassis Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.4L (LDD)	EBCM (Electronic Brake Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.4L (LDD)	PSCM (Power Steering Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.4L (LDD)	BCM (Body Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.4L (LDD)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-E	[G] 2016	1.4L (LDD)	IC (Instrument Cluster)	●	●	●	●
Corsa-E	[G] 2016	1.4L (LDD)	TIM (Trailer Interface Module)	●	●	●	●
Corsa-E	[G] 2016	1.4L (LDD)	Radio	●	●	●	●
Corsa-E	[G] 2016	1.4L (LDD)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.4L (LDD)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-E	[G] 2016	1.4L (LDD)	PACM (Parking Assist Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.4L (LDD)	FCM (Frontview Camera Module)	●	●	●	●

Corsa-E	[G] 2016	1.4L (LUJ)	ECM (Engine Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.4L (LUJ)	MTAS (Manual Transmission Automatically Shifted)	●	●	●	●
Corsa-E	[G] 2016	1.4L (LUJ)	AT (Automatic Transmission T-76)	●	●	●	●
Corsa-E	[G] 2016	1.4L (LUJ)	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.4L (LUJ)	CCM (Chassis Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.4L (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.4L (LUJ)	PSCM (Power Steering Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.4L (LUJ)	BCM (Body Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.4L (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-E	[G] 2016	1.4L (LUJ)	IC (Instrument Cluster)	●	●	●	●
Corsa-E	[G] 2016	1.4L (LUJ)	TIM (Trailer Interface Module)	●	●	●	●
Corsa-E	[G] 2016	1.4L (LUJ)	Radio	●	●	●	●
Corsa-E	[G] 2016	1.4L (LUJ)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.4L (LUJ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-E	[G] 2016	1.4L (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.4L (LUJ)	FCM (Frontview Camera Module)	●	●	●	●
Corsa-E	[G] 2016	1.6L (LLU)	ECM (Engine Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.6L (LLU)	MTAS (Manual Transmission Automatically Shifted)	●	●	●	●
Corsa-E	[G] 2016	1.6L (LLU)	AT (Automatic Transmission T-76)	●	●	●	●
Corsa-E	[G] 2016	1.6L (LLU)	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.6L (LLU)	CCM (Chassis Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.6L (LLU)	EBCM (Electronic Brake Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.6L (LLU)	PSCM (Power Steering Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.6L (LLU)	BCM (Body Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.6L (LLU)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-E	[G] 2016	1.6L (LLU)	IC (Instrument Cluster)	●	●	●	●
Corsa-E	[G] 2016	1.6L (LLU)	TIM (Trailer Interface Module)	●	●	●	●
Corsa-E	[G] 2016	1.6L (LLU)	Radio	●	●	●	●
Corsa-E	[G] 2016	1.6L (LLU)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.6L (LLU)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-E	[G] 2016	1.6L (LLU)	PACM (Parking Assist Control Module)	●	●	●	●
Corsa-E	[G] 2016	1.6L (LLU)	FCM (Frontview Camera Module)	●	●	●	●
Corsa-E	[F] 2015	1.0L (LE1)	ECM (Engine Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.0L (LE1)	MTAS (Manual Transmission Automatically Shifted)	●	●	●	●
Corsa-E	[F] 2015	1.0L (LE1)	AT (Automatic Transmission T-76)	●	●	●	●
Corsa-E	[F] 2015	1.0L (LE1)	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.0L (LE1)	CCM (Chassis Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.0L (LE1)	EBCM (Electronic Brake Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.0L (LE1)	PSCM (Power Steering Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.0L (LE1)	BCM (Body Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.0L (LE1)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-E	[F] 2015	1.0L (LE1)	IC (Instrument Cluster)	●	●	●	●
Corsa-E	[F] 2015	1.0L (LE1)	TIM (Trailer Interface Module)	●	●	●	●
Corsa-E	[F] 2015	1.0L (LE1)	Radio	●	●	●	●
Corsa-E	[F] 2015	1.0L (LE1)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-E	[F] 2015	1.0L (LE1)	PACM (Parking Assist Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.0L (LE1)	FCM (Frontview Camera Module)	●	●	●	●
Corsa-E	[F] 2015	1.2L (LDC)	ECM (Engine Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.2L (LDC)	MTAS (Manual Transmission Automatically Shifted)	●	●	●	●
Corsa-E	[F] 2015	1.2L (LDC)	AT (Automatic Transmission T-76)	●	●	●	●
Corsa-E	[F] 2015	1.2L (LDC)	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.2L (LDC)	CCM (Chassis Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.2L (LDC)	EBCM (Electronic Brake Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.2L (LDC)	PSCM (Power Steering Control Module)	●	●	●	●

Corsa-E	[F] 2015	1.2L (LDC)	BCM (Body Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.2L (LDC)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-E	[F] 2015	1.2L (LDC)	IC (Instrument Cluster)	●	●	●	●
Corsa-E	[F] 2015	1.2L (LDC)	TIM (Trailer Interface Module)	●	●	●	●
Corsa-E	[F] 2015	1.2L (LDC)	Radio	●	●	●	●
Corsa-E	[F] 2015	1.2L (LDC)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-E	[F] 2015	1.2L (LDC)	PACM (Parking Assist Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.2L (LDC)	FCM (Frontview Camera Module)	●	●	●	●
Corsa-E	[F] 2015	1.3L (LKV)	ECM (Engine Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.3L (LKV)	MTAS (Manual Transmission Automatically Shifted)	●	●	●	●
Corsa-E	[F] 2015	1.3L (LKV)	AT (Automatic Transmission T-76)	●	●	●	●
Corsa-E	[F] 2015	1.3L (LKV)	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.3L (LKV)	CCM (Chassis Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.3L (LKV)	EBCM (Electronic Brake Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.3L (LKV)	PSCM (Power Steering Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.3L (LKV)	BCM (Body Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.3L (LKV)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-E	[F] 2015	1.3L (LKV)	IC (Instrument Cluster)	●	●	●	●
Corsa-E	[F] 2015	1.3L (LKV)	TIM (Trailer Interface Module)	●	●	●	●
Corsa-E	[F] 2015	1.3L (LKV)	Radio	●	●	●	●
Corsa-E	[F] 2015	1.3L (LKV)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-E	[F] 2015	1.3L (LKV)	PACM (Parking Assist Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.3L (LKV)	FCM (Frontview Camera Module)	●	●	●	●
Corsa-E	[F] 2015	1.3L (LKV)	ECM (Engine Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.3L (LKV)	MTAS (Manual Transmission Automatically Shifted)	●	●	●	●
Corsa-E	[F] 2015	1.3L (LKV)	AT (Automatic Transmission T-76)	●	●	●	●
Corsa-E	[F] 2015	1.3L (LKV)	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.3L (LKV)	CCM (Chassis Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.3L (LKV)	EBCM (Electronic Brake Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.3L (LKV)	PSCM (Power Steering Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.3L (LKV)	BCM (Body Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.3L (LKV)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-E	[F] 2015	1.3L (LKV)	IC (Instrument Cluster)	●	●	●	●
Corsa-E	[F] 2015	1.3L (LKV)	TIM (Trailer Interface Module)	●	●	●	●
Corsa-E	[F] 2015	1.3L (LKV)	Radio	●	●	●	●
Corsa-E	[F] 2015	1.3L (LKV)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-E	[F] 2015	1.3L (LKV)	PACM (Parking Assist Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.3L (LKV)	FCM (Frontview Camera Module)	●	●	●	●
Corsa-E	[F] 2015	1.4L (LDD)	ECM (Engine Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.4L (LDD)	MTAS (Manual Transmission Automatically Shifted)	●	●	●	●
Corsa-E	[F] 2015	1.4L (LDD)	AT (Automatic Transmission T-76)	●	●	●	●
Corsa-E	[F] 2015	1.4L (LDD)	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.4L (LDD)	CCM (Chassis Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.4L (LDD)	EBCM (Electronic Brake Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.4L (LDD)	PSCM (Power Steering Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.4L (LDD)	BCM (Body Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.4L (LDD)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-E	[F] 2015	1.4L (LDD)	IC (Instrument Cluster)	●	●	●	●
Corsa-E	[F] 2015	1.4L (LDD)	TIM (Trailer Interface Module)	●	●	●	●
Corsa-E	[F] 2015	1.4L (LDD)	Radio	●	●	●	●
Corsa-E	[F] 2015	1.4L (LDD)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-E	[F] 2015	1.4L (LDD)	PACM (Parking Assist Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.4L (LDD)	FCM (Frontview Camera Module)	●	●	●	●
Corsa-E	[F] 2015	1.4L (LUJ)	ECM (Engine Control Module)	●	●	●	●

Corsa-E	[F] 2015	1.4L (LUJ)	MTAS (Manual Transmission Automatically Shifted)	●	●	●	●
Corsa-E	[F] 2015	1.4L (LUJ)	AT (Automatic Transmission T-76)	●	●	●	●
Corsa-E	[F] 2015	1.4L (LUJ)	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.4L (LUJ)	CCM (Chassis Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.4L (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.4L (LUJ)	PSCM (Power Steering Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.4L (LUJ)	BCM (Body Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.4L (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-E	[F] 2015	1.4L (LUJ)	IC (Instrument Cluster)	●	●	●	●
Corsa-E	[F] 2015	1.4L (LUJ)	TIM (Trailer Interface Module)	●	●	●	●
Corsa-E	[F] 2015	1.4L (LUJ)	Radio	●	●	●	●
Corsa-E	[F] 2015	1.4L (LUJ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-E	[F] 2015	1.4L (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.4L (LUJ)	FCM (Frontview Camera Module)	●	●	●	●
Corsa-E	[F] 2015	1.6L (LLU)	ECM (Engine Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.6L (LLU)	MTAS (Manual Transmission Automatically Shifted)	●	●	●	●
Corsa-E	[F] 2015	1.6L (LLU)	AT (Automatic Transmission T-76)	●	●	●	●
Corsa-E	[F] 2015	1.6L (LLU)	FICM (Fuel Injector Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.6L (LLU)	CCM (Chassis Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.6L (LLU)	EBCM (Electronic Brake Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.6L (LLU)	PSCM (Power Steering Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.6L (LLU)	BCM (Body Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.6L (LLU)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Corsa-E	[F] 2015	1.6L (LLU)	IC (Instrument Cluster)	●	●	●	●
Corsa-E	[F] 2015	1.6L (LLU)	TIM (Trailer Interface Module)	●	●	●	●
Corsa-E	[F] 2015	1.6L (LLU)	Radio	●	●	●	●
Corsa-E	[F] 2015	1.6L (LLU)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Corsa-E	[F] 2015	1.6L (LLU)	PACM (Parking Assist Control Module)	●	●	●	●
Corsa-E	[F] 2015	1.6L (LLU)	FCM (Frontview Camera Module)	●	●	●	●
Frontera-B	[3] 2003	Y 22 DTH	ECM (Engine Control Module)	●	●	●	●
Frontera-B	[3] 2003	Y 22 DTH	AR 25/35	●	●	●	●
Frontera-B	[3] 2003	Y 22 DTH	IMMO (Immobiliser)	●	●	●	●
Frontera-B	[2] 2002	Y 22 DTH	ECM (Engine Control Module)	●	●	●	●
Frontera-B	[2] 2002	Y 22 DTH	AR 25/35	●	●	●	●
Frontera-B	[2] 2002	Y 22 DTH	IMMO (Immobiliser)	●	●	●	●
Frontera-B	[1] 2001	Y 22 DTH	ECM (Engine Control Module)	●	●	●	●
Frontera-B	[1] 2001	Y 22 DTH	AR 25/35	●	●	●	●
Frontera-B	[1] 2001	Y 22 DTH	IMMO (Immobiliser)	●	●	●	●
Frontera-B	[Y] 2000	X 22 DTH	ECM (Engine Control Module)	●	●	●	●
Frontera-B	[Y] 2000	X 22 DTH	AR 25/35	●	●	●	●
Frontera-B	[Y] 2000	X 22 DTH	IMMO (Immobiliser)	●	●	●	●
Frontera-B	[Y] 2000	Y 22 DTH	ECM (Engine Control Module)	●	●	●	●
Frontera-B	[Y] 2000	Y 22 DTH	AR 25/35	●	●	●	●
Frontera-B	[Y] 2000	Y 22 DTH	IMMO (Immobiliser)	●	●	●	●
Frontera-B	[X] 1999	X 22 DTH	ECM (Engine Control Module)	●	●	●	●
Frontera-B	[X] 1999	X 22 DTH	AR 25/35	●	●	●	●
Frontera-B	[X] 1999	X 22 DTH	IMMO (Immobiliser)	●	●	●	●
Insignia	[G] 2016	1.4L (LUJ)	ECM (Engine Control Module)	●	●	●	●
Insignia	[G] 2016	1.4L (LUJ)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Insignia	[G] 2016	1.4L (LUJ)	TCM (Transmission Control Module) - T43 (M7U M7W)	●	●	●	●
Insignia	[G] 2016	1.4L (LUJ)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNP MNR)	●	●	●	●
Insignia	[G] 2016	1.4L (LUJ)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[G] 2016	1.4L (LUJ)	CCM (Chassis Control Module)	●	●	●	●
Insignia	[G] 2016	1.4L (LUJ)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[G] 2016	1.4L (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●

Insignia	[G] 2016	1.4L (LUJ)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[G] 2016	1.4L (LUJ)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[G] 2016	1.4L (LUJ)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[G] 2016	1.4L (LUJ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[G] 2016	1.4L (LUJ)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[G] 2016	1.4L (LUJ)	BCM (Body Control Module)	●	●	●	●
Insignia	[G] 2016	1.4L (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[G] 2016	1.4L (LUJ)	IC (Instrument Cluster)	●	●	●	●
Insignia	[G] 2016	1.4L (LUJ)	Radio	●	●	●	●
Insignia	[G] 2016	1.4L (LUJ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[G] 2016	1.4L (LUJ)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[G] 2016	1.4L (LUJ)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[G] 2016	1.4L (LUJ)	Radio	●	●	●	●
Insignia	[G] 2016	1.4L (LUJ)	Amplifier	●	●	●	●
Insignia	[G] 2016	1.4L (LUJ)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Insignia	[G] 2016	1.4L (LUJ)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Insignia	[G] 2016	1.4L (LUJ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[G] 2016	1.4L (LUJ)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[G] 2016	1.4L (LUJ)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[G] 2016	1.4L (LUJ)	KECM (Keyless Entry Control Module)	●	●	●	●
Insignia	[G] 2016	1.4L (LUJ)	LSODI (Left Side Object Detection Indicator)	●	●	●	●
Insignia	[G] 2016	1.4L (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[G] 2016	1.4L (LUJ)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[G] 2016	1.4L (LUJ)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LVL)	ECM (Engine Control Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LVL)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Insignia	[G] 2016	1.6L (LVL)	TCM (Transmission Control Module) - T43 (M7U M7W)	●	●	●	●
Insignia	[G] 2016	1.6L (LVL)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNP MNR)	●	●	●	●
Insignia	[G] 2016	1.6L (LVL)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LVL)	CCM (Chassis Control Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LVL)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LVL)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LVL)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LVL)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LVL)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LVL)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LVL)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[G] 2016	1.6L (LVL)	BCM (Body Control Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LVL)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LVL)	IC (Instrument Cluster)	●	●	●	●
Insignia	[G] 2016	1.6L (LVL)	Radio	●	●	●	●
Insignia	[G] 2016	1.6L (LVL)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[G] 2016	1.6L (LVL)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LVL)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LVL)	Radio	●	●	●	●
Insignia	[G] 2016	1.6L (LVL)	Amplifier	●	●	●	●
Insignia	[G] 2016	1.6L (LVL)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LVL)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LVL)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[G] 2016	1.6L (LVL)	LCM (Liftgate Control Module)	●	●	●	●

Insignia	[G] 2016	1.6L (LVL)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[G] 2016	1.6L (LVL)	KECM (Keyless Entry Control Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LVL)	LSODI (Left Side Object Detection Indicator)	●	●	●	●
Insignia	[G] 2016	1.6L (LVL)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LVL)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LVL)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LWC)	ECM (Engine Control Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LWC)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Insignia	[G] 2016	1.6L (LWC)	TCM (Transmission Control Module) - T43 (M7U M7W)	●	●	●	●
Insignia	[G] 2016	1.6L (LWC)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHJ MHK MHB MHC MNP MNR)	●	●	●	●
Insignia	[G] 2016	1.6L (LWC)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LWC)	CCM (Chassis Control Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LWC)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LWC)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LWC)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LWC)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LWC)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LWC)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LWC)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[G] 2016	1.6L (LWC)	BCM (Body Control Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LWC)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LWC)	IC (Instrument Cluster)	●	●	●	●
Insignia	[G] 2016	1.6L (LWC)	Radio	●	●	●	●
Insignia	[G] 2016	1.6L (LWC)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[G] 2016	1.6L (LWC)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LWC)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LWC)	Radio	●	●	●	●
Insignia	[G] 2016	1.6L (LWC)	Amplifier	●	●	●	●
Insignia	[G] 2016	1.6L (LWC)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LWC)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LWC)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[G] 2016	1.6L (LWC)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LWC)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[G] 2016	1.6L (LWC)	KECM (Keyless Entry Control Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LWC)	LSODI (Left Side Object Detection Indicator)	●	●	●	●
Insignia	[G] 2016	1.6L (LWC)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LWC)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[G] 2016	1.6L (LWC)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Insignia	[G] 2016	1.8L (2HO)	ECM (Engine Control Module)	●	●	●	●
Insignia	[G] 2016	1.8L (2HO)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Insignia	[G] 2016	1.8L (2HO)	TCM (Transmission Control Module) - T43 (M7U M7W)	●	●	●	●
Insignia	[G] 2016	1.8L (2HO)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHJ MHK MHB MHC MNP MNR)	●	●	●	●
Insignia	[G] 2016	1.8L (2HO)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[G] 2016	1.8L (2HO)	CCM (Chassis Control Module)	●	●	●	●
Insignia	[G] 2016	1.8L (2HO)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[G] 2016	1.8L (2HO)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[G] 2016	1.8L (2HO)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[G] 2016	1.8L (2HO)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[G] 2016	1.8L (2HO)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[G] 2016	1.8L (2HO)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●

Insignia	[G] 2016	1.8L (2H0)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[G] 2016	1.8L (2H0)	BCM (Body Control Module)	●	●	●	●
Insignia	[G] 2016	1.8L (2H0)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[G] 2016	1.8L (2H0)	IC (Instrument Cluster)	●	●	●	●
Insignia	[G] 2016	1.8L (2H0)	Radio	●	●	●	●
Insignia	[G] 2016	1.8L (2H0)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[G] 2016	1.8L (2H0)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[G] 2016	1.8L (2H0)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[G] 2016	1.8L (2H0)	Radio	●	●	●	●
Insignia	[G] 2016	1.8L (2H0)	Amplifier	●	●	●	●
Insignia	[G] 2016	1.8L (2H0)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Insignia	[G] 2016	1.8L (2H0)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Insignia	[G] 2016	1.8L (2H0)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[G] 2016	1.8L (2H0)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[G] 2016	1.8L (2H0)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[G] 2016	1.8L (2H0)	KECM (Keyless Entry Control Module)	●	●	●	●
Insignia	[G] 2016	1.8L (2H0)	LSODI (Left Side Object Detection Indicator)	●	●	●	●
Insignia	[G] 2016	1.8L (2H0)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[G] 2016	1.8L (2H0)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[G] 2016	1.8L (2H0)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LFS)	ECM (Engine Control Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LFS)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Insignia	[G] 2016	2.0L (LFS)	TCM (Transmission Control Module) - T43 (M7U M7W)	●	●	●	●
Insignia	[G] 2016	2.0L (LFS)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNP MNR)	●	●	●	●
Insignia	[G] 2016	2.0L (LFS)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LFS)	CCM (Chassis Control Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LFS)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LFS)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LFS)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LFS)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LFS)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LFS)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LFS)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[G] 2016	2.0L (LFS)	BCM (Body Control Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LFS)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LFS)	IC (Instrument Cluster)	●	●	●	●
Insignia	[G] 2016	2.0L (LFS)	Radio	●	●	●	●
Insignia	[G] 2016	2.0L (LFS)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[G] 2016	2.0L (LFS)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LFS)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LFS)	Radio	●	●	●	●
Insignia	[G] 2016	2.0L (LFS)	Amplifier	●	●	●	●
Insignia	[G] 2016	2.0L (LFS)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LFS)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LFS)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[G] 2016	2.0L (LFS)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LFS)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[G] 2016	2.0L (LFS)	KECM (Keyless Entry Control Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LFS)	LSODI (Left Side Object Detection Indicator)	●	●	●	●
Insignia	[G] 2016	2.0L (LFS)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LFS)	FCM (Frontview Camera Module)	●	●	●	●

Insignia	[G] 2016	2.0L (LFS)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LTG)	ECM (Engine Control Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LTG)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Insignia	[G] 2016	2.0L (LTG)	TCM (Transmission Control Module) - T43 (M7U M7W)	●	●	●	●
Insignia	[G] 2016	2.0L (LTG)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNP MNR)	●	●	●	●
Insignia	[G] 2016	2.0L (LTG)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LTG)	CCM (Chassis Control Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LTG)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LTG)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LTG)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LTG)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LTG)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LTG)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LTG)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[G] 2016	2.0L (LTG)	BCM (Body Control Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LTG)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LTG)	IC (Instrument Cluster)	●	●	●	●
Insignia	[G] 2016	2.0L (LTG)	Radio	●	●	●	●
Insignia	[G] 2016	2.0L (LTG)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[G] 2016	2.0L (LTG)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LTG)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LTG)	Radio	●	●	●	●
Insignia	[G] 2016	2.0L (LTG)	Amplifier	●	●	●	●
Insignia	[G] 2016	2.0L (LTG)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LTG)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LTG)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[G] 2016	2.0L (LTG)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LTG)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[G] 2016	2.0L (LTG)	KECM (Keyless Entry Control Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LTG)	LSODI (Left Side Object Detection Indicator)	●	●	●	●
Insignia	[G] 2016	2.0L (LTG)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LTG)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[G] 2016	2.0L (LTG)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Insignia	[G] 2016	2.8L (LAU)	ECM (Engine Control Module)	●	●	●	●
Insignia	[G] 2016	2.8L (LAU)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Insignia	[G] 2016	2.8L (LAU)	TCM (Transmission Control Module) - T43 (M7U M7W)	●	●	●	●
Insignia	[G] 2016	2.8L (LAU)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNP MNR)	●	●	●	●
Insignia	[G] 2016	2.8L (LAU)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[G] 2016	2.8L (LAU)	CCM (Chassis Control Module)	●	●	●	●
Insignia	[G] 2016	2.8L (LAU)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[G] 2016	2.8L (LAU)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[G] 2016	2.8L (LAU)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[G] 2016	2.8L (LAU)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[G] 2016	2.8L (LAU)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[G] 2016	2.8L (LAU)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[G] 2016	2.8L (LAU)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[G] 2016	2.8L (LAU)	BCM (Body Control Module)	●	●	●	●
Insignia	[G] 2016	2.8L (LAU)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[G] 2016	2.8L (LAU)	IC (Instrument Cluster)	●	●	●	●
Insignia	[G] 2016	2.8L (LAU)	Radio	●	●	●	●

Insignia	[G] 2016	2.8L (LAU)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[G] 2016	2.8L (LAU)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[G] 2016	2.8L (LAU)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[G] 2016	2.8L (LAU)	Radio	●	●	●	●
Insignia	[G] 2016	2.8L (LAU)	Amplifier	●	●	●	●
Insignia	[G] 2016	2.8L (LAU)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Insignia	[G] 2016	2.8L (LAU)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Insignia	[G] 2016	2.8L (LAU)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[G] 2016	2.8L (LAU)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[G] 2016	2.8L (LAU)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[G] 2016	2.8L (LAU)	KECM (Keyless Entry Control Module)	●	●	●	●
Insignia	[G] 2016	2.8L (LAU)	LSODI (Left Side Object Detection Indicator)	●	●	●	●
Insignia	[G] 2016	2.8L (LAU)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[G] 2016	2.8L (LAU)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[G] 2016	2.8L (LAU)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Insignia	[F] 2015	1.4L (LUJ)	ECM (Engine Control Module)	●	●	●	●
Insignia	[F] 2015	1.4L (LUJ)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Insignia	[F] 2015	1.4L (LUJ)	TCM (Transmission Control Module) - T43 (M7U M7W)	●	●	●	●
Insignia	[F] 2015	1.4L (LUJ)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Insignia	[F] 2015	1.4L (LUJ)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[F] 2015	1.4L (LUJ)	CCM (Chassis Control Module)	●	●	●	●
Insignia	[F] 2015	1.4L (LUJ)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[F] 2015	1.4L (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[F] 2015	1.4L (LUJ)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[F] 2015	1.4L (LUJ)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[F] 2015	1.4L (LUJ)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[F] 2015	1.4L (LUJ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[F] 2015	1.4L (LUJ)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[F] 2015	1.4L (LUJ)	BCM (Body Control Module)	●	●	●	●
Insignia	[F] 2015	1.4L (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[F] 2015	1.4L (LUJ)	IC (Instrument Cluster)	●	●	●	●
Insignia	[F] 2015	1.4L (LUJ)	Radio	●	●	●	●
Insignia	[F] 2015	1.4L (LUJ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[F] 2015	1.4L (LUJ)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[F] 2015	1.4L (LUJ)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[F] 2015	1.4L (LUJ)	Radio	●	●	●	●
Insignia	[F] 2015	1.4L (LUJ)	Amplifier	●	●	●	●
Insignia	[F] 2015	1.4L (LUJ)	ICT (Infotainment Control Touchpad)	●	●	●	●
Insignia	[F] 2015	1.4L (LUJ)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Insignia	[F] 2015	1.4L (LUJ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[F] 2015	1.4L (LUJ)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[F] 2015	1.4L (LUJ)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[F] 2015	1.4L (LUJ)	KECM (Keyless Entry Control Module)	●	●	●	●
Insignia	[F] 2015	1.4L (LUJ)	LSODI (Left Side Object Detection Indicator)	●	●	●	●
Insignia	[F] 2015	1.4L (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[F] 2015	1.4L (LUJ)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[F] 2015	1.4L (LUJ)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Insignia	[F] 2015	1.6L (LWC)	ECM (Engine Control Module)	●	●	●	●
Insignia	[F] 2015	1.6L (LWC)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Insignia	[F] 2015	1.6L (LWC)	TCM (Transmission Control Module) - T43 (M7U M7W)	●	●	●	●

Insignia	[F] 2015	1.6L (LWC)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Insignia	[F] 2015	1.6L (LWC)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[F] 2015	1.6L (LWC)	CCM (Chassis Control Module)	●	●	●	●
Insignia	[F] 2015	1.6L (LWC)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[F] 2015	1.6L (LWC)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[F] 2015	1.6L (LWC)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[F] 2015	1.6L (LWC)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[F] 2015	1.6L (LWC)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[F] 2015	1.6L (LWC)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[F] 2015	1.6L (LWC)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[F] 2015	1.6L (LWC)	BCM (Body Control Module)	●	●	●	●
Insignia	[F] 2015	1.6L (LWC)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[F] 2015	1.6L (LWC)	IC (Instrument Cluster)	●	●	●	●
Insignia	[F] 2015	1.6L (LWC)	Radio	●	●	●	●
Insignia	[F] 2015	1.6L (LWC)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[F] 2015	1.6L (LWC)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[F] 2015	1.6L (LWC)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[F] 2015	1.6L (LWC)	Radio	●	●	●	●
Insignia	[F] 2015	1.6L (LWC)	Amplifier	●	●	●	●
Insignia	[F] 2015	1.6L (LWC)	ICT (Infotainment Control Touchpad)	●	●	●	●
Insignia	[F] 2015	1.6L (LWC)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Insignia	[F] 2015	1.6L (LWC)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[F] 2015	1.6L (LWC)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[F] 2015	1.6L (LWC)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[F] 2015	1.6L (LWC)	KECM (Keyless Entry Control Module)	●	●	●	●
Insignia	[F] 2015	1.6L (LWC)	LSODI (Left Side Object Detection Indicator)	●	●	●	●
Insignia	[F] 2015	1.6L (LWC)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[F] 2015	1.6L (LWC)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[F] 2015	1.6L (LWC)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Insignia	[F] 2015	1.8L (2H0)	ECM (Engine Control Module)	●	●	●	●
Insignia	[F] 2015	1.8L (2H0)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Insignia	[F] 2015	1.8L (2H0)	TCM (Transmission Control Module) - T43 (M7U M7W)	●	●	●	●
Insignia	[F] 2015	1.8L (2H0)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Insignia	[F] 2015	1.8L (2H0)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[F] 2015	1.8L (2H0)	CCM (Chassis Control Module)	●	●	●	●
Insignia	[F] 2015	1.8L (2H0)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[F] 2015	1.8L (2H0)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[F] 2015	1.8L (2H0)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[F] 2015	1.8L (2H0)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[F] 2015	1.8L (2H0)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[F] 2015	1.8L (2H0)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[F] 2015	1.8L (2H0)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[F] 2015	1.8L (2H0)	BCM (Body Control Module)	●	●	●	●
Insignia	[F] 2015	1.8L (2H0)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[F] 2015	1.8L (2H0)	IC (Instrument Cluster)	●	●	●	●
Insignia	[F] 2015	1.8L (2H0)	Radio	●	●	●	●
Insignia	[F] 2015	1.8L (2H0)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[F] 2015	1.8L (2H0)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[F] 2015	1.8L (2H0)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[F] 2015	1.8L (2H0)	Radio	●	●	●	●
Insignia	[F] 2015	1.8L (2H0)	Amplifier	●	●	●	●

Insignia	[F] 2015	1.8L (2H0)	ICT (Infotainment Control Touchpad)	●	●	●	●
Insignia	[F] 2015	1.8L (2H0)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Insignia	[F] 2015	1.8L (2H0)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[F] 2015	1.8L (2H0)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[F] 2015	1.8L (2H0)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[F] 2015	1.8L (2H0)	KECM (Keyless Entry Control Module)	●	●	●	●
Insignia	[F] 2015	1.8L (2H0)	LSODI (Left Side Object Detection Indicator)	●	●	●	●
Insignia	[F] 2015	1.8L (2H0)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[F] 2015	1.8L (2H0)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[F] 2015	1.8L (2H0)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBQ)	ECM (Engine Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBQ)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Insignia	[F] 2015	2.0L (LBQ)	TCM (Transmission Control Module) - T43 (M7U M7W)	●	●	●	●
Insignia	[F] 2015	2.0L (LBQ)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Insignia	[F] 2015	2.0L (LBQ)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBQ)	CCM (Chassis Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBQ)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBQ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBQ)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBQ)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBQ)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBQ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBQ)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[F] 2015	2.0L (LBQ)	BCM (Body Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBQ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBQ)	IC (Instrument Cluster)	●	●	●	●
Insignia	[F] 2015	2.0L (LBQ)	Radio	●	●	●	●
Insignia	[F] 2015	2.0L (LBQ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[F] 2015	2.0L (LBQ)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBQ)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBQ)	Radio	●	●	●	●
Insignia	[F] 2015	2.0L (LBQ)	Amplifier	●	●	●	●
Insignia	[F] 2015	2.0L (LBQ)	ICT (Infotainment Control Touchpad)	●	●	●	●
Insignia	[F] 2015	2.0L (LBQ)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBQ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[F] 2015	2.0L (LBQ)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBQ)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[F] 2015	2.0L (LBQ)	KECM (Keyless Entry Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBQ)	LSODI (Left Side Object Detection Indicator)	●	●	●	●
Insignia	[F] 2015	2.0L (LBQ)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBQ)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBQ)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBR)	ECM (Engine Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBR)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Insignia	[F] 2015	2.0L (LBR)	TCM (Transmission Control Module) - T43 (M7U M7W)	●	●	●	●
Insignia	[F] 2015	2.0L (LBR)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Insignia	[F] 2015	2.0L (LBR)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBR)	CCM (Chassis Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBR)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBR)	EBCM (Electronic Brake Control Module)	●	●	●	●

Insignia	[F] 2015	2.0L (LBR)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBR)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBR)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBR)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBR)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[F] 2015	2.0L (LBR)	BCM (Body Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBR)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBR)	IC (Instrument Cluster)	●	●	●	●
Insignia	[F] 2015	2.0L (LBR)	Radio	●	●	●	●
Insignia	[F] 2015	2.0L (LBR)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[F] 2015	2.0L (LBR)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBR)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBR)	Radio	●	●	●	●
Insignia	[F] 2015	2.0L (LBR)	Amplifier	●	●	●	●
Insignia	[F] 2015	2.0L (LBR)	ICT (Infotainment Control Touchpad)	●	●	●	●
Insignia	[F] 2015	2.0L (LBR)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBR)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[F] 2015	2.0L (LBR)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBR)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[F] 2015	2.0L (LBR)	KECM (Keyless Entry Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBR)	LSODI (Left Side Object Detection Indicator)	●	●	●	●
Insignia	[F] 2015	2.0L (LBR)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBR)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBR)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBS)	ECM (Engine Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBS)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Insignia	[F] 2015	2.0L (LBS)	TCM (Transmission Control Module) - T43 (M7U M7W)	●	●	●	●
Insignia	[F] 2015	2.0L (LBS)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Insignia	[F] 2015	2.0L (LBS)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBS)	CCM (Chassis Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBS)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBS)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBS)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBS)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBS)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBS)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBS)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[F] 2015	2.0L (LBS)	BCM (Body Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBS)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBS)	IC (Instrument Cluster)	●	●	●	●
Insignia	[F] 2015	2.0L (LBS)	Radio	●	●	●	●
Insignia	[F] 2015	2.0L (LBS)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[F] 2015	2.0L (LBS)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBS)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBS)	Radio	●	●	●	●
Insignia	[F] 2015	2.0L (LBS)	Amplifier	●	●	●	●
Insignia	[F] 2015	2.0L (LBS)	ICT (Infotainment Control Touchpad)	●	●	●	●
Insignia	[F] 2015	2.0L (LBS)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBS)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[F] 2015	2.0L (LBS)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBS)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●

Insignia	[F] 2015	2.0L (LBS)	KECM (Keyless Entry Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBS)	LSODI (Left Side Object Detection Indicator)	●	●	●	●
Insignia	[F] 2015	2.0L (LBS)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBS)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBS)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBY)	ECM (Engine Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBY)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Insignia	[F] 2015	2.0L (LBY)	TCM (Transmission Control Module) - T43 (M7U M7W)	●	●	●	●
Insignia	[F] 2015	2.0L (LBY)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHT MHK MHB MHC MNR)	●	●	●	●
Insignia	[F] 2015	2.0L (LBY)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBY)	CCM (Chassis Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBY)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBY)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBY)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBY)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBY)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBY)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBY)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[F] 2015	2.0L (LBY)	BCM (Body Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBY)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBY)	IC (Instrument Cluster)	●	●	●	●
Insignia	[F] 2015	2.0L (LBY)	Radio	●	●	●	●
Insignia	[F] 2015	2.0L (LBY)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[F] 2015	2.0L (LBY)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBY)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBY)	Radio	●	●	●	●
Insignia	[F] 2015	2.0L (LBY)	Amplifier	●	●	●	●
Insignia	[F] 2015	2.0L (LBY)	ICT (Infotainment Control Touchpad)	●	●	●	●
Insignia	[F] 2015	2.0L (LBY)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBY)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[F] 2015	2.0L (LBY)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBY)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[F] 2015	2.0L (LBY)	KECM (Keyless Entry Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBY)	LSODI (Left Side Object Detection Indicator)	●	●	●	●
Insignia	[F] 2015	2.0L (LBY)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBY)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LBY)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LFS)	ECM (Engine Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LFS)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Insignia	[F] 2015	2.0L (LFS)	TCM (Transmission Control Module) - T43 (M7U M7W)	●	●	●	●
Insignia	[F] 2015	2.0L (LFS)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHT MHK MHB MHC MNR)	●	●	●	●
Insignia	[F] 2015	2.0L (LFS)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LFS)	CCM (Chassis Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LFS)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LFS)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LFS)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LFS)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LFS)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LFS)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LFS)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[F] 2015	2.0L (LFS)	BCM (Body Control Module)	●	●	●	●

Insignia	[F] 2015	2.0L (LFS)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LFS)	IC (Instrument Cluster)	●	●	●	●
Insignia	[F] 2015	2.0L (LFS)	Radio	●	●	●	●
Insignia	[F] 2015	2.0L (LFS)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[F] 2015	2.0L (LFS)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LFS)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LFS)	Radio	●	●	●	●
Insignia	[F] 2015	2.0L (LFS)	Amplifier	●	●	●	●
Insignia	[F] 2015	2.0L (LFS)	ICT (Infotainment Control Touchpad)	●	●	●	●
Insignia	[F] 2015	2.0L (LFS)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LFS)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[F] 2015	2.0L (LFS)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LFS)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[F] 2015	2.0L (LFS)	KECM (Keyless Entry Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LFS)	LSODI (Left Side Object Detection Indicator)	●	●	●	●
Insignia	[F] 2015	2.0L (LFS)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LFS)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LFS)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LHV)	ECM (Engine Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LHV)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Insignia	[F] 2015	2.0L (LHV)	TCM (Transmission Control Module) - T43 (M7U M7W)	●	●	●	●
Insignia	[F] 2015	2.0L (LHV)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Insignia	[F] 2015	2.0L (LHV)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LHV)	CCM (Chassis Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LHV)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LHV)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LHV)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LHV)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LHV)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LHV)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LHV)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[F] 2015	2.0L (LHV)	BCM (Body Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LHV)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LHV)	IC (Instrument Cluster)	●	●	●	●
Insignia	[F] 2015	2.0L (LHV)	Radio	●	●	●	●
Insignia	[F] 2015	2.0L (LHV)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[F] 2015	2.0L (LHV)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LHV)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LHV)	Radio	●	●	●	●
Insignia	[F] 2015	2.0L (LHV)	Amplifier	●	●	●	●
Insignia	[F] 2015	2.0L (LHV)	ICT (Infotainment Control Touchpad)	●	●	●	●
Insignia	[F] 2015	2.0L (LHV)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LHV)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[F] 2015	2.0L (LHV)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LHV)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[F] 2015	2.0L (LHV)	KECM (Keyless Entry Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LHV)	LSODI (Left Side Object Detection Indicator)	●	●	●	●
Insignia	[F] 2015	2.0L (LHV)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LHV)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LHV)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LTG)	ECM (Engine Control Module)	●	●	●	●

Insignia	[F] 2015	2.0L (LTG)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Insignia	[F] 2015	2.0L (LTG)	TCM (Transmission Control Module) - T43 (M7U M7W)	●	●	●	●
Insignia	[F] 2015	2.0L (LTG)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Insignia	[F] 2015	2.0L (LTG)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LTG)	CCM (Chassis Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LTG)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LTG)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LTG)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LTG)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LTG)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LTG)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LTG)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[F] 2015	2.0L (LTG)	BCM (Body Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LTG)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LTG)	IC (Instrument Cluster)	●	●	●	●
Insignia	[F] 2015	2.0L (LTG)	Radio	●	●	●	●
Insignia	[F] 2015	2.0L (LTG)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[F] 2015	2.0L (LTG)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LTG)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LTG)	Radio	●	●	●	●
Insignia	[F] 2015	2.0L (LTG)	Amplifier	●	●	●	●
Insignia	[F] 2015	2.0L (LTG)	ICT (Infotainment Control Touchpad)	●	●	●	●
Insignia	[F] 2015	2.0L (LTG)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LTG)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[F] 2015	2.0L (LTG)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LTG)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[F] 2015	2.0L (LTG)	KECM (Keyless Entry Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LTG)	LSODI (Left Side Object Detection Indicator)	●	●	●	●
Insignia	[F] 2015	2.0L (LTG)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LTG)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[F] 2015	2.0L (LTG)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Insignia	[F] 2015	2.8L (LAU)	ECM (Engine Control Module)	●	●	●	●
Insignia	[F] 2015	2.8L (LAU)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Insignia	[F] 2015	2.8L (LAU)	TCM (Transmission Control Module) - T43 (M7U M7W)	●	●	●	●
Insignia	[F] 2015	2.8L (LAU)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Insignia	[F] 2015	2.8L (LAU)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[F] 2015	2.8L (LAU)	CCM (Chassis Control Module)	●	●	●	●
Insignia	[F] 2015	2.8L (LAU)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[F] 2015	2.8L (LAU)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[F] 2015	2.8L (LAU)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[F] 2015	2.8L (LAU)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[F] 2015	2.8L (LAU)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[F] 2015	2.8L (LAU)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[F] 2015	2.8L (LAU)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[F] 2015	2.8L (LAU)	BCM (Body Control Module)	●	●	●	●
Insignia	[F] 2015	2.8L (LAU)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[F] 2015	2.8L (LAU)	IC (Instrument Cluster)	●	●	●	●
Insignia	[F] 2015	2.8L (LAU)	Radio	●	●	●	●
Insignia	[F] 2015	2.8L (LAU)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[F] 2015	2.8L (LAU)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[F] 2015	2.8L (LAU)	TIM (Trailer Interface Module)	●	●	●	●

Insignia	[F] 2015	2.8L (LAU)	Radio	●	●	●	●
Insignia	[F] 2015	2.8L (LAU)	Amplifier	●	●	●	●
Insignia	[F] 2015	2.8L (LAU)	ICT (Infotainment Control Touchpad)	●	●	●	●
Insignia	[F] 2015	2.8L (LAU)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Insignia	[F] 2015	2.8L (LAU)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[F] 2015	2.8L (LAU)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[F] 2015	2.8L (LAU)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[F] 2015	2.8L (LAU)	KECM (Keyless Entry Control Module)	●	●	●	●
Insignia	[F] 2015	2.8L (LAU)	LSODI (Left Side Object Detection Indicator)	●	●	●	●
Insignia	[F] 2015	2.8L (LAU)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[F] 2015	2.8L (LAU)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[F] 2015	2.8L (LAU)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	ECM (Engine Control Module)	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	TCM (Transmission Control Module) - T43 (M7U M7W)	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	CCM (Chassis Control Module)	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	BCM (Body Control Module)	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	IC (Instrument Cluster)	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	Radio	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	Radio	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	Amplifier	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	ICT (Infotainment Control Touchpad)	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	KECM (Keyless Entry Control Module)	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	LSODI (Left Side Object Detection Indicator)	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[E] 2014	1.4L (LUJ)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LVP)	ECM (Engine Control Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LVP)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Insignia	[E] 2014	1.6L (LVP)	TCM (Transmission Control Module) - T43 (M7U M7W)	●	●	●	●
Insignia	[E] 2014	1.6L (LVP)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Insignia	[E] 2014	1.6L (LVP)	FICM (Fuel Injector Control Module)	●	●	●	●

Insignia	[E] 2014	1.6L (LVP)	CCM (Chassis Control Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LVP)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LVP)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LVP)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LVP)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LVP)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LVP)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LVP)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LVP)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[E] 2014	1.6L (LVP)	BCM (Body Control Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LVP)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LVP)	IC (Instrument Cluster)	●	●	●	●
Insignia	[E] 2014	1.6L (LVP)	Radio	●	●	●	●
Insignia	[E] 2014	1.6L (LVP)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[E] 2014	1.6L (LVP)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LVP)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LVP)	Radio	●	●	●	●
Insignia	[E] 2014	1.6L (LVP)	Amplifier	●	●	●	●
Insignia	[E] 2014	1.6L (LVP)	ICT (Infotainment Control Touchpad)	●	●	●	●
Insignia	[E] 2014	1.6L (LVP)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LVP)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[E] 2014	1.6L (LVP)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LVP)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[E] 2014	1.6L (LVP)	KECM (Keyless Entry Control Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LVP)	LSODI (Left Side Object Detection Indicator)	●	●	●	●
Insignia	[E] 2014	1.6L (LVP)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LVP)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LVP)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LWC)	ECM (Engine Control Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LWC)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Insignia	[E] 2014	1.6L (LWC)	TCM (Transmission Control Module) - T43 (M7U M7W)	●	●	●	●
Insignia	[E] 2014	1.6L (LWC)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Insignia	[E] 2014	1.6L (LWC)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LWC)	CCM (Chassis Control Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LWC)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LWC)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LWC)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LWC)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LWC)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LWC)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LWC)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LWC)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[E] 2014	1.6L (LWC)	BCM (Body Control Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LWC)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LWC)	IC (Instrument Cluster)	●	●	●	●
Insignia	[E] 2014	1.6L (LWC)	Radio	●	●	●	●
Insignia	[E] 2014	1.6L (LWC)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[E] 2014	1.6L (LWC)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LWC)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LWC)	Radio	●	●	●	●
Insignia	[E] 2014	1.6L (LWC)	Amplifier	●	●	●	●

Insignia	[E] 2014	1.6L (LWC)	ICT (Infotainment Control Touchpad)	●	●	●	●
Insignia	[E] 2014	1.6L (LWC)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LWC)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[E] 2014	1.6L (LWC)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LWC)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[E] 2014	1.6L (LWC)	KECM (Keyless Entry Control Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LWC)	LSODI (Left Side Object Detection Indicator)	●	●	●	●
Insignia	[E] 2014	1.6L (LWC)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LWC)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[E] 2014	1.6L (LWC)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	ECM (Engine Control Module)	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	TCM (Transmission Control Module) - T43 (M7U M7W)	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	CCM (Chassis Control Module)	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	BCM (Body Control Module)	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	IC (Instrument Cluster)	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	Radio	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	Radio	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	Amplifier	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	ICT (Infotainment Control Touchpad)	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	KECM (Keyless Entry Control Module)	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	LSODI (Left Side Object Detection Indicator)	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[E] 2014	1.8L (2HO)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBQ)	ECM (Engine Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBQ)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Insignia	[E] 2014	2.0L (LBQ)	TCM (Transmission Control Module) - T43 (M7U M7W)	●	●	●	●
Insignia	[E] 2014	2.0L (LBQ)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Insignia	[E] 2014	2.0L (LBQ)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBQ)	CCM (Chassis Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBQ)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●

Insignia	[E] 2014	2.0L (LBQ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBQ)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBQ)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBQ)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBQ)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBQ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBQ)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[E] 2014	2.0L (LBQ)	BCM (Body Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBQ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBQ)	IC (Instrument Cluster)	●	●	●	●
Insignia	[E] 2014	2.0L (LBQ)	Radio	●	●	●	●
Insignia	[E] 2014	2.0L (LBQ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[E] 2014	2.0L (LBQ)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBQ)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBQ)	Radio	●	●	●	●
Insignia	[E] 2014	2.0L (LBQ)	Amplifier	●	●	●	●
Insignia	[E] 2014	2.0L (LBQ)	ICT (Infotainment Control Touchpad)	●	●	●	●
Insignia	[E] 2014	2.0L (LBQ)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBQ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[E] 2014	2.0L (LBQ)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBQ)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[E] 2014	2.0L (LBQ)	KECM (Keyless Entry Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBQ)	LSODI (Left Side Object Detection Indicator)	●	●	●	●
Insignia	[E] 2014	2.0L (LBQ)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBQ)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBQ)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBR)	ECM (Engine Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBR)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Insignia	[E] 2014	2.0L (LBR)	TCM (Transmission Control Module) - T43 (M7U M7W)	●	●	●	●
Insignia	[E] 2014	2.0L (LBR)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Insignia	[E] 2014	2.0L (LBR)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBR)	CCM (Chassis Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBR)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBR)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBR)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBR)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBR)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBR)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBR)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBR)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[E] 2014	2.0L (LBR)	BCM (Body Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBR)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBR)	IC (Instrument Cluster)	●	●	●	●
Insignia	[E] 2014	2.0L (LBR)	Radio	●	●	●	●
Insignia	[E] 2014	2.0L (LBR)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[E] 2014	2.0L (LBR)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBR)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBR)	Radio	●	●	●	●
Insignia	[E] 2014	2.0L (LBR)	Amplifier	●	●	●	●
Insignia	[E] 2014	2.0L (LBR)	ICT (Infotainment Control Touchpad)	●	●	●	●
Insignia	[E] 2014	2.0L (LBR)	HMICM (Human Machine Interface Control Module)	●	●	●	●

Insignia	[E] 2014	2.0L (LBR)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[E] 2014	2.0L (LBR)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBR)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[E] 2014	2.0L (LBR)	KECM (Keyless Entry Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBR)	LSODI (Left Side Object Detection Indicator)	●	●	●	●
Insignia	[E] 2014	2.0L (LBR)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBR)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBR)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	ECM (Engine Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	TCM (Transmission Control Module) - T43 (M7U M7W)	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	CCM (Chassis Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	BCM (Body Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	IC (Instrument Cluster)	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	Radio	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	Radio	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	Amplifier	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	ICT (Infotainment Control Touchpad)	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	KECM (Keyless Entry Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	LSODI (Left Side Object Detection Indicator)	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBS)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBY)	ECM (Engine Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBY)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Insignia	[E] 2014	2.0L (LBY)	TCM (Transmission Control Module) - T43 (M7U M7W)	●	●	●	●
Insignia	[E] 2014	2.0L (LBY)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Insignia	[E] 2014	2.0L (LBY)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBY)	CCM (Chassis Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBY)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBY)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBY)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●

Insignia	[E] 2014	2.0L (LBY)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBY)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBY)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBY)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBY)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[E] 2014	2.0L (LBY)	BCM (Body Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBY)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBY)	IC (Instrument Cluster)	●	●	●	●
Insignia	[E] 2014	2.0L (LBY)	Radio	●	●	●	●
Insignia	[E] 2014	2.0L (LBY)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[E] 2014	2.0L (LBY)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBY)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBY)	Radio	●	●	●	●
Insignia	[E] 2014	2.0L (LBY)	Amplifier	●	●	●	●
Insignia	[E] 2014	2.0L (LBY)	ICT (Infotainment Control Touchpad)	●	●	●	●
Insignia	[E] 2014	2.0L (LBY)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBY)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[E] 2014	2.0L (LBY)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBY)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[E] 2014	2.0L (LBY)	KECM (Keyless Entry Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBY)	LSODI (Left Side Object Detection Indicator)	●	●	●	●
Insignia	[E] 2014	2.0L (LBY)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBY)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LBY)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LHV)	ECM (Engine Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LHV)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Insignia	[E] 2014	2.0L (LHV)	TCM (Transmission Control Module) - T43 (M7U M7W)	●	●	●	●
Insignia	[E] 2014	2.0L (LHV)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Insignia	[E] 2014	2.0L (LHV)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LHV)	CCM (Chassis Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LHV)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LHV)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LHV)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LHV)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LHV)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LHV)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LHV)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LHV)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[E] 2014	2.0L (LHV)	BCM (Body Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LHV)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LHV)	IC (Instrument Cluster)	●	●	●	●
Insignia	[E] 2014	2.0L (LHV)	Radio	●	●	●	●
Insignia	[E] 2014	2.0L (LHV)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[E] 2014	2.0L (LHV)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LHV)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LHV)	Radio	●	●	●	●
Insignia	[E] 2014	2.0L (LHV)	Amplifier	●	●	●	●
Insignia	[E] 2014	2.0L (LHV)	ICT (Infotainment Control Touchpad)	●	●	●	●
Insignia	[E] 2014	2.0L (LHV)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LHV)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[E] 2014	2.0L (LHV)	LCM (Liftgate Control Module)	●	●	●	●

Insignia	[E] 2014	2.0L (LHV)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[E] 2014	2.0L (LHV)	KECM (Keyless Entry Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LHV)	LSODI (Left Side Object Detection Indicator)	●	●	●	●
Insignia	[E] 2014	2.0L (LHV)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LHV)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LHV)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	ECM (Engine Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	TCM (Transmission Control Module) - T43 (M7U M7W)	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	CCM (Chassis Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	BCM (Body Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	IC (Instrument Cluster)	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	Radio	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	Radio	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	Amplifier	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	ICT (Infotainment Control Touchpad)	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	KECM (Keyless Entry Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	LSODI (Left Side Object Detection Indicator)	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[E] 2014	2.0L (LTG)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Insignia	[E] 2014	2.8L (LAU)	ECM (Engine Control Module)	●	●	●	●
Insignia	[E] 2014	2.8L (LAU)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Insignia	[E] 2014	2.8L (LAU)	TCM (Transmission Control Module) - T43 (M7U M7W)	●	●	●	●
Insignia	[E] 2014	2.8L (LAU)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Insignia	[E] 2014	2.8L (LAU)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[E] 2014	2.8L (LAU)	CCM (Chassis Control Module)	●	●	●	●
Insignia	[E] 2014	2.8L (LAU)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[E] 2014	2.8L (LAU)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[E] 2014	2.8L (LAU)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[E] 2014	2.8L (LAU)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[E] 2014	2.8L (LAU)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●

Insignia	[E] 2014	2.8L (LAU)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[E] 2014	2.8L (LAU)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[E] 2014	2.8L (LAU)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[E] 2014	2.8L (LAU)	BCM (Body Control Module)	●	●	●	●
Insignia	[E] 2014	2.8L (LAU)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[E] 2014	2.8L (LAU)	IC (Instrument Cluster)	●	●	●	●
Insignia	[E] 2014	2.8L (LAU)	Radio	●	●	●	●
Insignia	[E] 2014	2.8L (LAU)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[E] 2014	2.8L (LAU)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[E] 2014	2.8L (LAU)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[E] 2014	2.8L (LAU)	Radio	●	●	●	●
Insignia	[E] 2014	2.8L (LAU)	Amplifier	●	●	●	●
Insignia	[E] 2014	2.8L (LAU)	ICT (Infotainment Control Touchpad)	●	●	●	●
Insignia	[E] 2014	2.8L (LAU)	HMICM (Human Machine Interface Control Module)	●	●	●	●
Insignia	[E] 2014	2.8L (LAU)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[E] 2014	2.8L (LAU)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[E] 2014	2.8L (LAU)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[E] 2014	2.8L (LAU)	KECM (Keyless Entry Control Module)	●	●	●	●
Insignia	[E] 2014	2.8L (LAU)	LSODI (Left Side Object Detection Indicator)	●	●	●	●
Insignia	[E] 2014	2.8L (LAU)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[E] 2014	2.8L (LAU)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[E] 2014	2.8L (LAU)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Insignia	[D] 2013	1.4L (LUJ)	ECM (Engine Control Module)	●	●	●	●
Insignia	[D] 2013	1.4L (LUJ)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[D] 2013	1.4L (LUJ)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[D] 2013	1.4L (LUJ)	TCM (Transmission Control Module)	●	●	●	●
Insignia	[D] 2013	1.4L (LUJ)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[D] 2013	1.4L (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[D] 2013	1.4L (LUJ)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[D] 2013	1.4L (LUJ)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[D] 2013	1.4L (LUJ)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[D] 2013	1.4L (LUJ)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[D] 2013	1.4L (LUJ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[D] 2013	1.4L (LUJ)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[D] 2013	1.4L (LUJ)	BCM (Body Control Module)	●	●	●	●
Insignia	[D] 2013	1.4L (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[D] 2013	1.4L (LUJ)	IC (Instrument Cluster)	●	●	●	●
Insignia	[D] 2013	1.4L (LUJ)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[D] 2013	1.4L (LUJ)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[D] 2013	1.4L (LUJ)	Radio	●	●	●	●
Insignia	[D] 2013	1.4L (LUJ)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[D] 2013	1.4L (LUJ)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[D] 2013	1.4L (LUJ)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[D] 2013	1.4L (LUJ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[D] 2013	1.4L (LUJ)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[D] 2013	1.4L (LUJ)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[D] 2013	1.4L (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[D] 2013	1.4L (LUJ)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LDE)	ECM (Engine Control Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LDE)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LDE)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LDE)	TCM (Transmission Control Module)	●	●	●	●

Insignia	[D] 2013	1.6L (LDE)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LDE)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LDE)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LDE)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LDE)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LDE)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LDE)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LDE)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[D] 2013	1.6L (LDE)	BCM (Body Control Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LDE)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LDE)	IC (Instrument Cluster)	●	●	●	●
Insignia	[D] 2013	1.6L (LDE)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LDE)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LDE)	Radio	●	●	●	●
Insignia	[D] 2013	1.6L (LDE)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LDE)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LDE)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LDE)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[D] 2013	1.6L (LDE)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LDE)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[D] 2013	1.6L (LDE)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LDE)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LLU)	ECM (Engine Control Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LLU)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LLU)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LLU)	TCM (Transmission Control Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LLU)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LLU)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LLU)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LLU)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LLU)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LLU)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LLU)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LLU)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[D] 2013	1.6L (LLU)	BCM (Body Control Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LLU)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LLU)	IC (Instrument Cluster)	●	●	●	●
Insignia	[D] 2013	1.6L (LLU)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LLU)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LLU)	Radio	●	●	●	●
Insignia	[D] 2013	1.6L (LLU)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LLU)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LLU)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LLU)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[D] 2013	1.6L (LLU)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LLU)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[D] 2013	1.6L (LLU)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[D] 2013	1.6L (LLU)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[D] 2013	1.8L (2H0)	ECM (Engine Control Module)	●	●	●	●
Insignia	[D] 2013	1.8L (2H0)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[D] 2013	1.8L (2H0)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[D] 2013	1.8L (2H0)	TCM (Transmission Control Module)	●	●	●	●

Insignia	[D] 2013	1.8L (2H0)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[D] 2013	1.8L (2H0)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[D] 2013	1.8L (2H0)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[D] 2013	1.8L (2H0)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[D] 2013	1.8L (2H0)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[D] 2013	1.8L (2H0)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[D] 2013	1.8L (2H0)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[D] 2013	1.8L (2H0)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[D] 2013	1.8L (2H0)	BCM (Body Control Module)	●	●	●	●
Insignia	[D] 2013	1.8L (2H0)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[D] 2013	1.8L (2H0)	IC (Instrument Cluster)	●	●	●	●
Insignia	[D] 2013	1.8L (2H0)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[D] 2013	1.8L (2H0)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[D] 2013	1.8L (2H0)	Radio	●	●	●	●
Insignia	[D] 2013	1.8L (2H0)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[D] 2013	1.8L (2H0)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[D] 2013	1.8L (2H0)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[D] 2013	1.8L (2H0)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[D] 2013	1.8L (2H0)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[D] 2013	1.8L (2H0)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[D] 2013	1.8L (2H0)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[D] 2013	1.8L (2H0)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBQ)	ECM (Engine Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBQ)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBQ)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBQ)	TCM (Transmission Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBQ)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBQ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBQ)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBQ)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBQ)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBQ)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBQ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBQ)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[D] 2013	2.0L (LBQ)	BCM (Body Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBQ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBQ)	IC (Instrument Cluster)	●	●	●	●
Insignia	[D] 2013	2.0L (LBQ)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBQ)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBQ)	Radio	●	●	●	●
Insignia	[D] 2013	2.0L (LBQ)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBQ)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBQ)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBQ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[D] 2013	2.0L (LBQ)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBQ)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[D] 2013	2.0L (LBQ)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBQ)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBR)	ECM (Engine Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBR)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBR)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBR)	TCM (Transmission Control Module)	●	●	●	●

Insignia	[D] 2013	2.0L (LBR)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBR)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBR)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBR)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBR)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBR)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBR)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBR)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[D] 2013	2.0L (LBR)	BCM (Body Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBR)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBR)	IC (Instrument Cluster)	●	●	●	●
Insignia	[D] 2013	2.0L (LBR)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBR)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBR)	Radio	●	●	●	●
Insignia	[D] 2013	2.0L (LBR)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBR)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBR)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBR)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[D] 2013	2.0L (LBR)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBR)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[D] 2013	2.0L (LBR)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBR)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBS)	ECM (Engine Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBS)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBS)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBS)	TCM (Transmission Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBS)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBS)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBS)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBS)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBS)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBS)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBS)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBS)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[D] 2013	2.0L (LBS)	BCM (Body Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBS)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBS)	IC (Instrument Cluster)	●	●	●	●
Insignia	[D] 2013	2.0L (LBS)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBS)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBS)	Radio	●	●	●	●
Insignia	[D] 2013	2.0L (LBS)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBS)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBS)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBS)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[D] 2013	2.0L (LBS)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBS)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[D] 2013	2.0L (LBS)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBS)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBY)	ECM (Engine Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBY)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBY)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBY)	TCM (Transmission Control Module)	●	●	●	●

Insignia	[D] 2013	2.0L (LBY)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBY)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBY)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBY)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBY)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBY)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBY)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBY)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[D] 2013	2.0L (LBY)	BCM (Body Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBY)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBY)	IC (Instrument Cluster)	●	●	●	●
Insignia	[D] 2013	2.0L (LBY)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBY)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBY)	Radio	●	●	●	●
Insignia	[D] 2013	2.0L (LBY)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBY)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBY)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBY)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[D] 2013	2.0L (LBY)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBY)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[D] 2013	2.0L (LBY)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LBY)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHU)	ECM (Engine Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHU)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHU)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHU)	TCM (Transmission Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHU)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHU)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHU)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHU)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHU)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHU)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHU)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHU)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[D] 2013	2.0L (LHU)	BCM (Body Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHU)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHU)	IC (Instrument Cluster)	●	●	●	●
Insignia	[D] 2013	2.0L (LHU)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHU)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHU)	Radio	●	●	●	●
Insignia	[D] 2013	2.0L (LHU)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHU)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHU)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHU)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[D] 2013	2.0L (LHU)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHU)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[D] 2013	2.0L (LHU)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHU)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHV)	ECM (Engine Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHV)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHV)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHV)	TCM (Transmission Control Module)	●	●	●	●

Insignia	[D] 2013	2.0L (LHV)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHV)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHV)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHV)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHV)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHV)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHV)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHV)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[D] 2013	2.0L (LHV)	BCM (Body Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHV)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHV)	IC (Instrument Cluster)	●	●	●	●
Insignia	[D] 2013	2.0L (LHV)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHV)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHV)	Radio	●	●	●	●
Insignia	[D] 2013	2.0L (LHV)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHV)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHV)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHV)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[D] 2013	2.0L (LHV)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHV)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[D] 2013	2.0L (LHV)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[D] 2013	2.0L (LHV)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LAU)	ECM (Engine Control Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LAU)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LAU)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LAU)	TCM (Transmission Control Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LAU)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LAU)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LAU)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LAU)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LAU)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LAU)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LAU)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LAU)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[D] 2013	2.8L (LAU)	BCM (Body Control Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LAU)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LAU)	IC (Instrument Cluster)	●	●	●	●
Insignia	[D] 2013	2.8L (LAU)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LAU)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LAU)	Radio	●	●	●	●
Insignia	[D] 2013	2.8L (LAU)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LAU)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LAU)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LAU)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[D] 2013	2.8L (LAU)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LAU)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[D] 2013	2.8L (LAU)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LAU)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LBW)	ECM (Engine Control Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LBW)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LBW)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LBW)	TCM (Transmission Control Module)	●	●	●	●

Insignia	[D] 2013	2.8L (LBW)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LBW)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LBW)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LBW)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LBW)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LBW)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LBW)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LBW)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[D] 2013	2.8L (LBW)	BCM (Body Control Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LBW)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LBW)	IC (Instrument Cluster)	●	●	●	●
Insignia	[D] 2013	2.8L (LBW)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LBW)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LBW)	Radio	●	●	●	●
Insignia	[D] 2013	2.8L (LBW)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LBW)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LBW)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LBW)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Insignia	[D] 2013	2.8L (LBW)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LBW)	FSHVC (Front Seat Heating/Venting/Cooling)	●	●	●	●
Insignia	[D] 2013	2.8L (LBW)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[D] 2013	2.8L (LBW)	FCM (Frontview Camera Module)	●	●	●	●
Insignia	[C] 2012	1.4L (LUJ)	ECM (Engine Control Module)	●	●	●	●
Insignia	[C] 2012	1.4L (LUJ)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[C] 2012	1.4L (LUJ)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[C] 2012	1.4L (LUJ)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[C] 2012	1.4L (LUJ)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[C] 2012	1.4L (LUJ)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[C] 2012	1.4L (LUJ)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[C] 2012	1.4L (LUJ)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[C] 2012	1.4L (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[C] 2012	1.4L (LUJ)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[C] 2012	1.4L (LUJ)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[C] 2012	1.4L (LUJ)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[C] 2012	1.4L (LUJ)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[C] 2012	1.4L (LUJ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[C] 2012	1.4L (LUJ)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[C] 2012	1.4L (LUJ)	BCM (Body Control Module)	●	●	●	●
Insignia	[C] 2012	1.4L (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[C] 2012	1.4L (LUJ)	IC (Instrument Cluster)	●	●	●	●
Insignia	[C] 2012	1.4L (LUJ)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[C] 2012	1.4L (LUJ)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[C] 2012	1.4L (LUJ)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[C] 2012	1.4L (LUJ)	Radio	●	●	●	●
Insignia	[C] 2012	1.4L (LUJ)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[C] 2012	1.4L (LUJ)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[C] 2012	1.4L (LUJ)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[C] 2012	1.4L (LUJ)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[C] 2012	1.4L (LUJ)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[C] 2012	1.4L (LUJ)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[C] 2012	1.4L (LUJ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●

Insignia	[C] 2012	1.4L (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[C] 2012	1.4L (LUJ)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LDE)	ECM (Engine Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LDE)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LDE)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LDE)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[C] 2012	1.6L (LDE)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[C] 2012	1.6L (LDE)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[C] 2012	1.6L (LDE)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[C] 2012	1.6L (LDE)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LDE)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LDE)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LDE)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LDE)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LDE)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LDE)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LDE)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[C] 2012	1.6L (LDE)	BCM (Body Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LDE)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LDE)	IC (Instrument Cluster)	●	●	●	●
Insignia	[C] 2012	1.6L (LDE)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LDE)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LDE)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LDE)	Radio	●	●	●	●
Insignia	[C] 2012	1.6L (LDE)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LDE)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LDE)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LDE)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LDE)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LDE)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LDE)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LDE)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LDE)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LLU)	ECM (Engine Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LLU)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LLU)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LLU)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[C] 2012	1.6L (LLU)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[C] 2012	1.6L (LLU)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[C] 2012	1.6L (LLU)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[C] 2012	1.6L (LLU)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LLU)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LLU)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LLU)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LLU)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LLU)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LLU)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LLU)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[C] 2012	1.6L (LLU)	BCM (Body Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LLU)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●

Insignia	[C] 2012	1.6L (LLU)	IC (Instrument Cluster)	●	●	●	●
Insignia	[C] 2012	1.6L (LLU)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LLU)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LLU)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LLU)	Radio	●	●	●	●
Insignia	[C] 2012	1.6L (LLU)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LLU)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LLU)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LLU)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LLU)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LLU)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LLU)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LLU)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[C] 2012	1.6L (LLU)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[C] 2012	1.8L (2H0)	ECM (Engine Control Module)	●	●	●	●
Insignia	[C] 2012	1.8L (2H0)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[C] 2012	1.8L (2H0)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[C] 2012	1.8L (2H0)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[C] 2012	1.8L (2H0)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[C] 2012	1.8L (2H0)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[C] 2012	1.8L (2H0)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[C] 2012	1.8L (2H0)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[C] 2012	1.8L (2H0)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[C] 2012	1.8L (2H0)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[C] 2012	1.8L (2H0)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[C] 2012	1.8L (2H0)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[C] 2012	1.8L (2H0)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[C] 2012	1.8L (2H0)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[C] 2012	1.8L (2H0)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[C] 2012	1.8L (2H0)	BCM (Body Control Module)	●	●	●	●
Insignia	[C] 2012	1.8L (2H0)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[C] 2012	1.8L (2H0)	IC (Instrument Cluster)	●	●	●	●
Insignia	[C] 2012	1.8L (2H0)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[C] 2012	1.8L (2H0)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[C] 2012	1.8L (2H0)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[C] 2012	1.8L (2H0)	Radio	●	●	●	●
Insignia	[C] 2012	1.8L (2H0)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[C] 2012	1.8L (2H0)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[C] 2012	1.8L (2H0)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[C] 2012	1.8L (2H0)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[C] 2012	1.8L (2H0)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[C] 2012	1.8L (2H0)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[C] 2012	1.8L (2H0)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[C] 2012	1.8L (2H0)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[C] 2012	1.8L (2H0)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBQ)	ECM (Engine Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBQ)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBQ)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBQ)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[C] 2012	2.0L (LBQ)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[C] 2012	2.0L (LBQ)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●

Insignia	[C] 2012	2.0L (LBQ)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[C] 2012	2.0L (LBQ)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBQ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBQ)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBQ)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBQ)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBQ)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBQ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBQ)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[C] 2012	2.0L (LBQ)	BCM (Body Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBQ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBQ)	IC (Instrument Cluster)	●	●	●	●
Insignia	[C] 2012	2.0L (LBQ)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBQ)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBQ)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBQ)	Radio	●	●	●	●
Insignia	[C] 2012	2.0L (LBQ)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBQ)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBQ)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBQ)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBQ)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBQ)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBQ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBQ)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBQ)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBR)	ECM (Engine Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBR)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBR)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBR)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[C] 2012	2.0L (LBR)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[C] 2012	2.0L (LBR)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[C] 2012	2.0L (LBR)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[C] 2012	2.0L (LBR)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBR)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBR)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBR)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBR)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBR)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBR)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBR)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[C] 2012	2.0L (LBR)	BCM (Body Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBR)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBR)	IC (Instrument Cluster)	●	●	●	●
Insignia	[C] 2012	2.0L (LBR)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBR)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBR)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBR)	Radio	●	●	●	●
Insignia	[C] 2012	2.0L (LBR)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBR)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBR)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBR)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●

Insignia	[C] 2012	2.0L (LBR)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBR)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBR)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBR)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBR)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBS)	ECM (Engine Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBS)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBS)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBS)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[C] 2012	2.0L (LBS)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[C] 2012	2.0L (LBS)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[C] 2012	2.0L (LBS)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[C] 2012	2.0L (LBS)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBS)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBS)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBS)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBS)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBS)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBS)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBS)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[C] 2012	2.0L (LBS)	BCM (Body Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBS)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBS)	IC (Instrument Cluster)	●	●	●	●
Insignia	[C] 2012	2.0L (LBS)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBS)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBS)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBS)	Radio	●	●	●	●
Insignia	[C] 2012	2.0L (LBS)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBS)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBS)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBS)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBS)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBS)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBS)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBS)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBS)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBY)	ECM (Engine Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBY)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBY)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBY)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[C] 2012	2.0L (LBY)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[C] 2012	2.0L (LBY)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[C] 2012	2.0L (LBY)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[C] 2012	2.0L (LBY)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBY)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBY)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBY)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBY)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBY)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBY)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBY)	ESC (Electronic Suspension Control)	●	●	●	●

Insignia	[C] 2012	2.0L (LBY)	BCM (Body Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBY)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBY)	IC (Instrument Cluster)	●	●	●	●
Insignia	[C] 2012	2.0L (LBY)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBY)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBY)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBY)	Radio	●	●	●	●
Insignia	[C] 2012	2.0L (LBY)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBY)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBY)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBY)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBY)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBY)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBY)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBY)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LBY)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LHU)	ECM (Engine Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LHU)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LHU)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LHU)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[C] 2012	2.0L (LHU)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[C] 2012	2.0L (LHU)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[C] 2012	2.0L (LHU)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[C] 2012	2.0L (LHU)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LHU)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LHU)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LHU)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LHU)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LHU)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LHU)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LHU)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[C] 2012	2.0L (LHU)	BCM (Body Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LHU)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LHU)	IC (Instrument Cluster)	●	●	●	●
Insignia	[C] 2012	2.0L (LHU)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LHU)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LHU)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LHU)	Radio	●	●	●	●
Insignia	[C] 2012	2.0L (LHU)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LHU)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LHU)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LHU)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LHU)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LHU)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LHU)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LHU)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[C] 2012	2.0L (LHU)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LAU)	ECM (Engine Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LAU)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LAU)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LAU)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[C] 2012	2.8L (LAU)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●

Insignia	[C] 2012	2.8L (LAU)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[C] 2012	2.8L (LAU)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[C] 2012	2.8L (LAU)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LAU)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LAU)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LAU)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LAU)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LAU)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LAU)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LAU)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[C] 2012	2.8L (LAU)	BCM (Body Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LAU)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LAU)	IC (Instrument Cluster)	●	●	●	●
Insignia	[C] 2012	2.8L (LAU)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LAU)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LAU)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LAU)	Radio	●	●	●	●
Insignia	[C] 2012	2.8L (LAU)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LAU)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LAU)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LAU)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LAU)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LAU)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LAU)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LAU)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LAU)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LBW)	ECM (Engine Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LBW)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LBW)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LBW)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[C] 2012	2.8L (LBW)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[C] 2012	2.8L (LBW)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[C] 2012	2.8L (LBW)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[C] 2012	2.8L (LBW)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LBW)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LBW)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LBW)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LBW)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LBW)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LBW)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LBW)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[C] 2012	2.8L (LBW)	BCM (Body Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LBW)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LBW)	IC (Instrument Cluster)	●	●	●	●
Insignia	[C] 2012	2.8L (LBW)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LBW)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LBW)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LBW)	Radio	●	●	●	●
Insignia	[C] 2012	2.8L (LBW)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LBW)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LBW)	MTCM (Mobile Telephone Control Module)	●	●	●	●

Insignia	[C] 2012	2.8L (LBW)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LBW)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LBW)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LBW)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LBW)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[C] 2012	2.8L (LBW)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LDE)	ECM (Engine Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LDE)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LDE)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LDE)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[B] 2011	1.6L (LDE)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[B] 2011	1.6L (LDE)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[B] 2011	1.6L (LDE)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[B] 2011	1.6L (LDE)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LDE)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LDE)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LDE)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LDE)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LDE)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LDE)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LDE)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[B] 2011	1.6L (LDE)	BCM (Body Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LDE)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LDE)	IC (Instrument Cluster)	●	●	●	●
Insignia	[B] 2011	1.6L (LDE)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LDE)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LDE)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LDE)	Radio	●	●	●	●
Insignia	[B] 2011	1.6L (LDE)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LDE)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LDE)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LDE)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LDE)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LDE)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LDE)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LDE)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LDE)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LLU)	ECM (Engine Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LLU)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LLU)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LLU)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[B] 2011	1.6L (LLU)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[B] 2011	1.6L (LLU)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[B] 2011	1.6L (LLU)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[B] 2011	1.6L (LLU)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LLU)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LLU)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LLU)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LLU)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LLU)	PSCM (Power Steering Control Module)	●	●	●	●

Insignia	[B] 2011	1.6L (LLU)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LLU)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[B] 2011	1.6L (LLU)	BCM (Body Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LLU)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LLU)	IC (Instrument Cluster)	●	●	●	●
Insignia	[B] 2011	1.6L (LLU)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LLU)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LLU)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LLU)	Radio	●	●	●	●
Insignia	[B] 2011	1.6L (LLU)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LLU)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LLU)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LLU)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LLU)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LLU)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LLU)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LLU)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[B] 2011	1.6L (LLU)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[B] 2011	1.8L (2H0)	ECM (Engine Control Module)	●	●	●	●
Insignia	[B] 2011	1.8L (2H0)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[B] 2011	1.8L (2H0)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[B] 2011	1.8L (2H0)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[B] 2011	1.8L (2H0)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[B] 2011	1.8L (2H0)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[B] 2011	1.8L (2H0)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[B] 2011	1.8L (2H0)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[B] 2011	1.8L (2H0)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[B] 2011	1.8L (2H0)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[B] 2011	1.8L (2H0)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[B] 2011	1.8L (2H0)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[B] 2011	1.8L (2H0)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[B] 2011	1.8L (2H0)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[B] 2011	1.8L (2H0)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[B] 2011	1.8L (2H0)	BCM (Body Control Module)	●	●	●	●
Insignia	[B] 2011	1.8L (2H0)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[B] 2011	1.8L (2H0)	IC (Instrument Cluster)	●	●	●	●
Insignia	[B] 2011	1.8L (2H0)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[B] 2011	1.8L (2H0)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[B] 2011	1.8L (2H0)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[B] 2011	1.8L (2H0)	Radio	●	●	●	●
Insignia	[B] 2011	1.8L (2H0)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[B] 2011	1.8L (2H0)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[B] 2011	1.8L (2H0)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[B] 2011	1.8L (2H0)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[B] 2011	1.8L (2H0)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[B] 2011	1.8L (2H0)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[B] 2011	1.8L (2H0)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[B] 2011	1.8L (2H0)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[B] 2011	1.8L (2H0)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBQ)	ECM (Engine Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBQ)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBQ)	FPCM (Fuel Pump Control Module)	●	●	●	●

Insignia	[B] 2011	2.0L (LBQ)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[B] 2011	2.0L (LBQ)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[B] 2011	2.0L (LBQ)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[B] 2011	2.0L (LBQ)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[B] 2011	2.0L (LBQ)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBQ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBQ)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBQ)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBQ)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBQ)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBQ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBQ)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[B] 2011	2.0L (LBQ)	BCM (Body Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBQ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBQ)	IC (Instrument Cluster)	●	●	●	●
Insignia	[B] 2011	2.0L (LBQ)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBQ)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBQ)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBQ)	Radio	●	●	●	●
Insignia	[B] 2011	2.0L (LBQ)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBQ)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBQ)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBQ)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBQ)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBQ)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBQ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBQ)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBQ)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBR)	ECM (Engine Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBR)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBR)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBR)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[B] 2011	2.0L (LBR)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[B] 2011	2.0L (LBR)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[B] 2011	2.0L (LBR)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[B] 2011	2.0L (LBR)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBR)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBR)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBR)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBR)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBR)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBR)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBR)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[B] 2011	2.0L (LBR)	BCM (Body Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBR)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBR)	IC (Instrument Cluster)	●	●	●	●
Insignia	[B] 2011	2.0L (LBR)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBR)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBR)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBR)	Radio	●	●	●	●

Insignia	[B] 2011	2.0L (LBR)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBR)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBR)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBR)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBR)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBR)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBR)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBR)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBR)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBS)	ECM (Engine Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBS)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBS)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBS)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[B] 2011	2.0L (LBS)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[B] 2011	2.0L (LBS)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[B] 2011	2.0L (LBS)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[B] 2011	2.0L (LBS)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBS)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBS)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBS)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBS)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBS)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBS)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBS)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[B] 2011	2.0L (LBS)	BCM (Body Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBS)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBS)	IC (Instrument Cluster)	●	●	●	●
Insignia	[B] 2011	2.0L (LBS)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBS)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBS)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBS)	Radio	●	●	●	●
Insignia	[B] 2011	2.0L (LBS)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBS)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBS)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBS)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBS)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBS)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBS)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBS)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBS)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBY)	ECM (Engine Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBY)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBY)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBY)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[B] 2011	2.0L (LBY)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[B] 2011	2.0L (LBY)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[B] 2011	2.0L (LBY)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[B] 2011	2.0L (LBY)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBY)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBY)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBY)	PBCM (Parking Brake Control Module)	●	●	●	●

Insignia	[B] 2011	2.0L (LBY)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBY)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBY)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBY)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[B] 2011	2.0L (LBY)	BCM (Body Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBY)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBY)	IC (Instrument Cluster)	●	●	●	●
Insignia	[B] 2011	2.0L (LBY)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBY)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBY)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBY)	Radio	●	●	●	●
Insignia	[B] 2011	2.0L (LBY)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBY)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBY)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBY)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBY)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBY)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBY)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBY)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LBY)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LDK)	ECM (Engine Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LDK)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LDK)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LDK)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[B] 2011	2.0L (LDK)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[B] 2011	2.0L (LDK)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[B] 2011	2.0L (LDK)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[B] 2011	2.0L (LDK)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LDK)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LDK)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LDK)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LDK)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LDK)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LDK)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LDK)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[B] 2011	2.0L (LDK)	BCM (Body Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LDK)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LDK)	IC (Instrument Cluster)	●	●	●	●
Insignia	[B] 2011	2.0L (LDK)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LDK)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LDK)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LDK)	Radio	●	●	●	●
Insignia	[B] 2011	2.0L (LDK)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LDK)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LDK)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LDK)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LDK)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LDK)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LDK)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LDK)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LDK)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LHU)	ECM (Engine Control Module)	●	●	●	●

Insignia	[B] 2011	2.0L (LHU)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LHU)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LHU)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[B] 2011	2.0L (LHU)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[B] 2011	2.0L (LHU)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[B] 2011	2.0L (LHU)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[B] 2011	2.0L (LHU)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LHU)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LHU)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LHU)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LHU)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LHU)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LHU)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LHU)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[B] 2011	2.0L (LHU)	BCM (Body Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LHU)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LHU)	IC (Instrument Cluster)	●	●	●	●
Insignia	[B] 2011	2.0L (LHU)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LHU)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LHU)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LHU)	Radio	●	●	●	●
Insignia	[B] 2011	2.0L (LHU)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LHU)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LHU)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LHU)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LHU)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LHU)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LHU)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LHU)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[B] 2011	2.0L (LHU)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LAU)	ECM (Engine Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LAU)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LAU)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LAU)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[B] 2011	2.8L (LAU)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[B] 2011	2.8L (LAU)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[B] 2011	2.8L (LAU)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[B] 2011	2.8L (LAU)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LAU)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LAU)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LAU)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LAU)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LAU)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LAU)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LAU)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[B] 2011	2.8L (LAU)	BCM (Body Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LAU)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LAU)	IC (Instrument Cluster)	●	●	●	●
Insignia	[B] 2011	2.8L (LAU)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LAU)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LAU)	TIM (Trailer Interface Module)	●	●	●	●

Insignia	[B] 2011	2.8L (LAU)	Radio	●	●	●	●
Insignia	[B] 2011	2.8L (LAU)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LAU)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LAU)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LAU)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LAU)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LAU)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LAU)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LAU)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LAU)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LBW)	ECM (Engine Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LBW)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LBW)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LBW)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[B] 2011	2.8L (LBW)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[B] 2011	2.8L (LBW)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[B] 2011	2.8L (LBW)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[B] 2011	2.8L (LBW)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LBW)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LBW)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LBW)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LBW)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LBW)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LBW)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LBW)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[B] 2011	2.8L (LBW)	BCM (Body Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LBW)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LBW)	IC (Instrument Cluster)	●	●	●	●
Insignia	[B] 2011	2.8L (LBW)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LBW)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LBW)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LBW)	Radio	●	●	●	●
Insignia	[B] 2011	2.8L (LBW)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LBW)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LBW)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LBW)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LBW)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LBW)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LBW)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LBW)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[B] 2011	2.8L (LBW)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LDE)	ECM (Engine Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LDE)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LDE)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LDE)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[A] 2010	1.6L (LDE)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[A] 2010	1.6L (LDE)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[A] 2010	1.6L (LDE)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[A] 2010	1.6L (LDE)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LDE)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LDE)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●

Insignia	[A] 2010	1.6L (LDE)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LDE)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LDE)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LDE)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LDE)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[A] 2010	1.6L (LDE)	BCM (Body Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LDE)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LDE)	IC (Instrument Cluster)	●	●	●	●
Insignia	[A] 2010	1.6L (LDE)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LDE)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LDE)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LDE)	Radio	●	●	●	●
Insignia	[A] 2010	1.6L (LDE)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LDE)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LDE)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LDE)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LDE)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LDE)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LDE)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LDE)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LDE)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LLU)	ECM (Engine Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LLU)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LLU)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LLU)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[A] 2010	1.6L (LLU)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[A] 2010	1.6L (LLU)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[A] 2010	1.6L (LLU)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[A] 2010	1.6L (LLU)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LLU)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LLU)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LLU)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LLU)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LLU)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LLU)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LLU)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[A] 2010	1.6L (LLU)	BCM (Body Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LLU)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LLU)	IC (Instrument Cluster)	●	●	●	●
Insignia	[A] 2010	1.6L (LLU)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LLU)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LLU)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LLU)	Radio	●	●	●	●
Insignia	[A] 2010	1.6L (LLU)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LLU)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LLU)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LLU)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LLU)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LLU)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LLU)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LLU)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[A] 2010	1.6L (LLU)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●

Insignia	[A] 2010	1.8L (2H0)	ECM (Engine Control Module)	●	●	●	●
Insignia	[A] 2010	1.8L (2H0)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[A] 2010	1.8L (2H0)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[A] 2010	1.8L (2H0)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[A] 2010	1.8L (2H0)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[A] 2010	1.8L (2H0)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[A] 2010	1.8L (2H0)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[A] 2010	1.8L (2H0)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[A] 2010	1.8L (2H0)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[A] 2010	1.8L (2H0)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[A] 2010	1.8L (2H0)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[A] 2010	1.8L (2H0)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[A] 2010	1.8L (2H0)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[A] 2010	1.8L (2H0)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[A] 2010	1.8L (2H0)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[A] 2010	1.8L (2H0)	BCM (Body Control Module)	●	●	●	●
Insignia	[A] 2010	1.8L (2H0)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[A] 2010	1.8L (2H0)	IC (Instrument Cluster)	●	●	●	●
Insignia	[A] 2010	1.8L (2H0)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[A] 2010	1.8L (2H0)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[A] 2010	1.8L (2H0)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[A] 2010	1.8L (2H0)	Radio	●	●	●	●
Insignia	[A] 2010	1.8L (2H0)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[A] 2010	1.8L (2H0)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[A] 2010	1.8L (2H0)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[A] 2010	1.8L (2H0)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[A] 2010	1.8L (2H0)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[A] 2010	1.8L (2H0)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[A] 2010	1.8L (2H0)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[A] 2010	1.8L (2H0)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[A] 2010	1.8L (2H0)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBS)	ECM (Engine Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBS)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBS)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBS)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[A] 2010	2.0L (LBS)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[A] 2010	2.0L (LBS)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[A] 2010	2.0L (LBS)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[A] 2010	2.0L (LBS)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBS)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBS)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBS)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBS)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBS)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBS)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBS)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[A] 2010	2.0L (LBS)	BCM (Body Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBS)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBS)	IC (Instrument Cluster)	●	●	●	●
Insignia	[A] 2010	2.0L (LBS)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBS)	HCM (Headlamp Control Module)	●	●	●	●

Insignia	[A] 2010	2.0L (LBS)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBS)	Radio	●	●	●	●
Insignia	[A] 2010	2.0L (LBS)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBS)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBS)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBS)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBS)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBS)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBS)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBS)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBS)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBX)	ECM (Engine Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBX)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBX)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBX)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[A] 2010	2.0L (LBX)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[A] 2010	2.0L (LBX)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[A] 2010	2.0L (LBX)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[A] 2010	2.0L (LBX)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBX)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBX)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBX)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBX)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBX)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBX)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBX)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[A] 2010	2.0L (LBX)	BCM (Body Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBX)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBX)	IC (Instrument Cluster)	●	●	●	●
Insignia	[A] 2010	2.0L (LBX)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBX)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBX)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBX)	Radio	●	●	●	●
Insignia	[A] 2010	2.0L (LBX)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBX)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBX)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBX)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBX)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBX)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBX)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBX)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBX)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBY)	ECM (Engine Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBY)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBY)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBY)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[A] 2010	2.0L (LBY)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[A] 2010	2.0L (LBY)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[A] 2010	2.0L (LBY)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[A] 2010	2.0L (LBY)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBY)	EBCM (Electronic Brake Control Module)	●	●	●	●

Insignia	[A] 2010	2.0L (LBY)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBY)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBY)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBY)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBY)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBY)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[A] 2010	2.0L (LBY)	BCM (Body Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBY)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBY)	IC (Instrument Cluster)	●	●	●	●
Insignia	[A] 2010	2.0L (LBY)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBY)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBY)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBY)	Radio	●	●	●	●
Insignia	[A] 2010	2.0L (LBY)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBY)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBY)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBY)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBY)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBY)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBY)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBY)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LBY)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LCD)	ECM (Engine Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LCD)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LCD)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LCD)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[A] 2010	2.0L (LCD)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[A] 2010	2.0L (LCD)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[A] 2010	2.0L (LCD)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[A] 2010	2.0L (LCD)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LCD)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LCD)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LCD)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LCD)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LCD)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LCD)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LCD)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[A] 2010	2.0L (LCD)	BCM (Body Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LCD)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LCD)	IC (Instrument Cluster)	●	●	●	●
Insignia	[A] 2010	2.0L (LCD)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LCD)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LCD)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LCD)	Radio	●	●	●	●
Insignia	[A] 2010	2.0L (LCD)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LCD)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LCD)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LCD)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LCD)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LCD)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LCD)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LCD)	PACM (Parking Assist Control Module)	●	●	●	●

Insignia	[A] 2010	2.0L (LCD)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LDK)	ECM (Engine Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LDK)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LDK)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LDK)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[A] 2010	2.0L (LDK)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[A] 2010	2.0L (LDK)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[A] 2010	2.0L (LDK)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[A] 2010	2.0L (LDK)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LDK)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LDK)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LDK)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LDK)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LDK)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LDK)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LDK)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[A] 2010	2.0L (LDK)	BCM (Body Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LDK)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LDK)	IC (Instrument Cluster)	●	●	●	●
Insignia	[A] 2010	2.0L (LDK)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LDK)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LDK)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LDK)	Radio	●	●	●	●
Insignia	[A] 2010	2.0L (LDK)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LDK)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LDK)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LDK)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LDK)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LDK)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LDK)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LDK)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[A] 2010	2.0L (LDK)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LAU)	ECM (Engine Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LAU)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LAU)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LAU)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[A] 2010	2.8L (LAU)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[A] 2010	2.8L (LAU)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[A] 2010	2.8L (LAU)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[A] 2010	2.8L (LAU)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LAU)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LAU)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LAU)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LAU)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LAU)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LAU)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LAU)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[A] 2010	2.8L (LAU)	BCM (Body Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LAU)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LAU)	IC (Instrument Cluster)	●	●	●	●

Insignia	[A] 2010	2.8L (LAU)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LAU)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LAU)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LAU)	Radio	●	●	●	●
Insignia	[A] 2010	2.8L (LAU)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LAU)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LAU)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LAU)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LAU)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LAU)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LAU)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LAU)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LAU)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LBW)	ECM (Engine Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LBW)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LBW)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LBW)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[A] 2010	2.8L (LBW)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[A] 2010	2.8L (LBW)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[A] 2010	2.8L (LBW)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[A] 2010	2.8L (LBW)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LBW)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LBW)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LBW)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LBW)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LBW)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LBW)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LBW)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[A] 2010	2.8L (LBW)	BCM (Body Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LBW)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LBW)	IC (Instrument Cluster)	●	●	●	●
Insignia	[A] 2010	2.8L (LBW)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LBW)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LBW)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LBW)	Radio	●	●	●	●
Insignia	[A] 2010	2.8L (LBW)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LBW)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LBW)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LBW)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LBW)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LBW)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LBW)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LBW)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[A] 2010	2.8L (LBW)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LDE)	ECM (Engine Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LDE)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LDE)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LDE)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[9] 2009	1.6L (LDE)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[9] 2009	1.6L (LDE)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[9] 2009	1.6L (LDE)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●

Insignia	[9] 2009	1.6L (LDE)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LDE)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LDE)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LDE)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LDE)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LDE)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LDE)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LDE)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[9] 2009	1.6L (LDE)	BCM (Body Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LDE)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LDE)	IC (Instrument Cluster)	●	●	●	●
Insignia	[9] 2009	1.6L (LDE)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LDE)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LDE)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LDE)	Radio	●	●	●	●
Insignia	[9] 2009	1.6L (LDE)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LDE)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LDE)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LDE)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LDE)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LDE)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LDE)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LDE)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LDE)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LLU)	ECM (Engine Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LLU)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LLU)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LLU)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[9] 2009	1.6L (LLU)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[9] 2009	1.6L (LLU)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[9] 2009	1.6L (LLU)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[9] 2009	1.6L (LLU)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LLU)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LLU)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LLU)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LLU)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LLU)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LLU)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LLU)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[9] 2009	1.6L (LLU)	BCM (Body Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LLU)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LLU)	IC (Instrument Cluster)	●	●	●	●
Insignia	[9] 2009	1.6L (LLU)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LLU)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LLU)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LLU)	Radio	●	●	●	●
Insignia	[9] 2009	1.6L (LLU)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LLU)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LLU)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LLU)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LLU)	LCM (Liftgate Control Module)	●	●	●	●

Insignia	[9] 2009	1.6L (LLU)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LLU)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LLU)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[9] 2009	1.6L (LLU)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[9] 2009	1.8L (2HO)	ECM (Engine Control Module)	●	●	●	●
Insignia	[9] 2009	1.8L (2HO)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[9] 2009	1.8L (2HO)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[9] 2009	1.8L (2HO)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[9] 2009	1.8L (2HO)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[9] 2009	1.8L (2HO)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[9] 2009	1.8L (2HO)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[9] 2009	1.8L (2HO)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[9] 2009	1.8L (2HO)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[9] 2009	1.8L (2HO)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[9] 2009	1.8L (2HO)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[9] 2009	1.8L (2HO)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[9] 2009	1.8L (2HO)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[9] 2009	1.8L (2HO)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[9] 2009	1.8L (2HO)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[9] 2009	1.8L (2HO)	BCM (Body Control Module)	●	●	●	●
Insignia	[9] 2009	1.8L (2HO)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[9] 2009	1.8L (2HO)	IC (Instrument Cluster)	●	●	●	●
Insignia	[9] 2009	1.8L (2HO)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[9] 2009	1.8L (2HO)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[9] 2009	1.8L (2HO)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[9] 2009	1.8L (2HO)	Radio	●	●	●	●
Insignia	[9] 2009	1.8L (2HO)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[9] 2009	1.8L (2HO)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[9] 2009	1.8L (2HO)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[9] 2009	1.8L (2HO)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[9] 2009	1.8L (2HO)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[9] 2009	1.8L (2HO)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[9] 2009	1.8L (2HO)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[9] 2009	1.8L (2HO)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[9] 2009	1.8L (2HO)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBS)	ECM (Engine Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBS)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBS)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBS)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[9] 2009	2.0L (LBS)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[9] 2009	2.0L (LBS)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[9] 2009	2.0L (LBS)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[9] 2009	2.0L (LBS)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBS)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBS)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBS)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBS)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBS)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBS)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBS)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[9] 2009	2.0L (LBS)	BCM (Body Control Module)	●	●	●	●

Insignia	[9] 2009	2.0L (LBS)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBS)	IC (Instrument Cluster)	●	●	●	●
Insignia	[9] 2009	2.0L (LBS)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBS)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBS)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBS)	Radio	●	●	●	●
Insignia	[9] 2009	2.0L (LBS)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBS)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBS)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBS)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBS)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBS)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBS)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBS)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBS)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBX)	ECM (Engine Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBX)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBX)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBX)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[9] 2009	2.0L (LBX)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[9] 2009	2.0L (LBX)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[9] 2009	2.0L (LBX)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[9] 2009	2.0L (LBX)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBX)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBX)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBX)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBX)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBX)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBX)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBX)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[9] 2009	2.0L (LBX)	BCM (Body Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBX)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBX)	IC (Instrument Cluster)	●	●	●	●
Insignia	[9] 2009	2.0L (LBX)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBX)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBX)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBX)	Radio	●	●	●	●
Insignia	[9] 2009	2.0L (LBX)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBX)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBX)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBX)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBX)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBX)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBX)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBX)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBX)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBY)	ECM (Engine Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBY)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBY)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBY)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[9] 2009	2.0L (LBY)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●

Insignia	[9] 2009	2.0L (LBY)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[9] 2009	2.0L (LBY)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[9] 2009	2.0L (LBY)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBY)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBY)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBY)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBY)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBY)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBY)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBY)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[9] 2009	2.0L (LBY)	BCM (Body Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBY)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBY)	IC (Instrument Cluster)	●	●	●	●
Insignia	[9] 2009	2.0L (LBY)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBY)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBY)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBY)	Radio	●	●	●	●
Insignia	[9] 2009	2.0L (LBY)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBY)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBY)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBY)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBY)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBY)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBY)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBY)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LBY)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LCD)	ECM (Engine Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LCD)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LCD)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LCD)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[9] 2009	2.0L (LCD)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[9] 2009	2.0L (LCD)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[9] 2009	2.0L (LCD)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[9] 2009	2.0L (LCD)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LCD)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LCD)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LCD)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LCD)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LCD)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LCD)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LCD)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[9] 2009	2.0L (LCD)	BCM (Body Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LCD)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LCD)	IC (Instrument Cluster)	●	●	●	●
Insignia	[9] 2009	2.0L (LCD)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LCD)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LCD)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LCD)	Radio	●	●	●	●
Insignia	[9] 2009	2.0L (LCD)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LCD)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LCD)	MTCM (Mobile Telephone Control Module)	●	●	●	●

Insignia	[9] 2009	2.0L (LCD)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LCD)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LCD)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LCD)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LCD)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LCD)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LDK)	ECM (Engine Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LDK)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LDK)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LDK)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[9] 2009	2.0L (LDK)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[9] 2009	2.0L (LDK)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[9] 2009	2.0L (LDK)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[9] 2009	2.0L (LDK)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LDK)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LDK)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LDK)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LDK)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LDK)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LDK)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LDK)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[9] 2009	2.0L (LDK)	BCM (Body Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LDK)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LDK)	IC (Instrument Cluster)	●	●	●	●
Insignia	[9] 2009	2.0L (LDK)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LDK)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LDK)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LDK)	Radio	●	●	●	●
Insignia	[9] 2009	2.0L (LDK)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LDK)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LDK)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LDK)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LDK)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LDK)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LDK)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LDK)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[9] 2009	2.0L (LDK)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LAU)	ECM (Engine Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LAU)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LAU)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LAU)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[9] 2009	2.8L (LAU)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[9] 2009	2.8L (LAU)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[9] 2009	2.8L (LAU)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[9] 2009	2.8L (LAU)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LAU)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LAU)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LAU)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LAU)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LAU)	PSCM (Power Steering Control Module)	●	●	●	●

Insignia	[9] 2009	2.8L (LAU)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LAU)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[9] 2009	2.8L (LAU)	BCM (Body Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LAU)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LAU)	IC (Instrument Cluster)	●	●	●	●
Insignia	[9] 2009	2.8L (LAU)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LAU)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LAU)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LAU)	Radio	●	●	●	●
Insignia	[9] 2009	2.8L (LAU)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LAU)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LAU)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LAU)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LAU)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LAU)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LAU)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LAU)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LAU)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LBW)	ECM (Engine Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LBW)	FICM (Fuel Injector Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LBW)	FPCM (Fuel Pump Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LBW)	TCM (Transmission Control Module) - AF40 (M36 - 0A02)	●	●	●	●
Insignia	[9] 2009	2.8L (LBW)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Insignia	[9] 2009	2.8L (LBW)	TCM (Transmission Control Module) - AF40 (M36 - 0A01)	●	●	●	●
Insignia	[9] 2009	2.8L (LBW)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Insignia	[9] 2009	2.8L (LBW)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LBW)	EBCM (Electronic Brake Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LBW)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LBW)	PBCM (Parking Brake Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LBW)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LBW)	PSCM (Power Steering Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LBW)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LBW)	ESC (Electronic Suspension Control)	●	●	●	●
Insignia	[9] 2009	2.8L (LBW)	BCM (Body Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LBW)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LBW)	IC (Instrument Cluster)	●	●	●	●
Insignia	[9] 2009	2.8L (LBW)	CACM (Chime Alarm Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LBW)	HCM (Headlamp Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LBW)	TIM (Trailer Interface Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LBW)	Radio	●	●	●	●
Insignia	[9] 2009	2.8L (LBW)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LBW)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LBW)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LBW)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LBW)	LCM (Liftgate Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LBW)	SMCM (Seat Memory Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LBW)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LBW)	PACM (Parking Assist Control Module)	●	●	●	●
Insignia	[9] 2009	2.8L (LBW)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Karl/Viva	[G] 2016	1.0L (L5Q)	ECM (Engine Control Module)	●	●	●	●
Karl/Viva	[G] 2016	1.0L (L5Q)	FICM (Fuel Injector Control Module)	●	●	●	●
Karl/Viva	[G] 2016	1.0L (L5Q)	TCM (Transmission Control Module)	●	●	●	●

Karl/Viva	[G] 2016	1.0L (L5Q)	EBCM (Electronic Brake Control Module)	●	●	●	●
Karl/Viva	[G] 2016	1.0L (L5Q)	PSCM (Power Steering Control Module)	●	●	●	●
Karl/Viva	[G] 2016	1.0L (L5Q)	BCM (Body Control Module)	●	●	●	●
Karl/Viva	[G] 2016	1.0L (L5Q)	SDGM (Serial Data Gateway Module)	●	●	●	●
Karl/Viva	[G] 2016	1.0L (L5Q)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Karl/Viva	[G] 2016	1.0L (L5Q)	IC (Instrument Cluster)	●	●	●	●
Karl/Viva	[G] 2016	1.0L (L5Q)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Karl/Viva	[G] 2016	1.0L (L5Q)	Radio	●	●	●	●
Karl/Viva	[G] 2016	1.0L (L5Q)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Karl/Viva	[G] 2016	1.0L (L5Q)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Karl/Viva	[G] 2016	1.0L (L5Q)	PACM (Parking Assist Control Module)	●	●	●	●
Karl/Viva	[G] 2016	1.0L (L5Q)	FCM (Frontview Camera Module)	●	●	●	●
Karl/Viva	[G] 2016	1.0L (LWT)	ECM (Engine Control Module)	●	●	●	●
Karl/Viva	[G] 2016	1.0L (LWT)	FICM (Fuel Injector Control Module)	●	●	●	●
Karl/Viva	[G] 2016	1.0L (LWT)	TCM (Transmission Control Module)	●	●	●	●
Karl/Viva	[G] 2016	1.0L (LWT)	EBCM (Electronic Brake Control Module)	●	●	●	●
Karl/Viva	[G] 2016	1.0L (LWT)	PSCM (Power Steering Control Module)	●	●	●	●
Karl/Viva	[G] 2016	1.0L (LWT)	BCM (Body Control Module)	●	●	●	●
Karl/Viva	[G] 2016	1.0L (LWT)	SDGM (Serial Data Gateway Module)	●	●	●	●
Karl/Viva	[G] 2016	1.0L (LWT)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Karl/Viva	[G] 2016	1.0L (LWT)	IC (Instrument Cluster)	●	●	●	●
Karl/Viva	[G] 2016	1.0L (LWT)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Karl/Viva	[G] 2016	1.0L (LWT)	Radio	●	●	●	●
Karl/Viva	[G] 2016	1.0L (LWT)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Karl/Viva	[G] 2016	1.0L (LWT)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Karl/Viva	[G] 2016	1.0L (LWT)	PACM (Parking Assist Control Module)	●	●	●	●
Karl/Viva	[G] 2016	1.0L (LWT)	FCM (Frontview Camera Module)	●	●	●	●
Meriva	[A] 2010	Y 13 DT	ECM (Engine Control Module)	●	●	●	●
Meriva	[A] 2010	Y 13 DT	MTA (Easytronic)	●	●	●	●
Meriva	[A] 2010	Y 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[A] 2010	Y 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[A] 2010	Y 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[A] 2010	Y 13 DT	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[A] 2010	Y 13 DT	EHS (Electrical Heater System)	●	●	●	●
Meriva	[A] 2010	Y 13 DT	AOH (Add On Heater)	●	●	●	●
Meriva	[A] 2010	Y 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[A] 2010	Y 13 DT	BCM (Body Control Module)	●	●	●	●
Meriva	[A] 2010	Y 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[A] 2010	Y 13 DT	IMMO (Immobiliser)	●	●	●	●
Meriva	[A] 2010	Z 13 DT	ECM (Engine Control Module)	●	●	●	●
Meriva	[A] 2010	Z 13 DT	MTA (Easytronic)	●	●	●	●
Meriva	[A] 2010	Z 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[A] 2010	Z 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[A] 2010	Z 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[A] 2010	Z 13 DT	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[A] 2010	Z 13 DT	EHS (Electrical Heater System)	●	●	●	●
Meriva	[A] 2010	Z 13 DT	AOH (Add On Heater)	●	●	●	●
Meriva	[A] 2010	Z 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[A] 2010	Z 13 DT	BCM (Body Control Module)	●	●	●	●
Meriva	[A] 2010	Z 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[A] 2010	Z 13 DT	IMMO (Immobiliser)	●	●	●	●
Meriva	[A] 2010	Z 13 DTJ	ECM (Engine Control Module)	●	●	●	●
Meriva	[A] 2010	Z 13 DTJ	MTA (Easytronic)	●	●	●	●
Meriva	[A] 2010	Z 13 DTJ	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[A] 2010	Z 13 DTJ	EPS (Electronic Power Steering)	●	●	●	●

Meriva	[A] 2010	Z 13 DTJ	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[A] 2010	Z 13 DTJ	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[A] 2010	Z 13 DTJ	EHS (Electrical Heater System)	●	●	●	●
Meriva	[A] 2010	Z 13 DTJ	AOH (Add On Heater)	●	●	●	●
Meriva	[A] 2010	Z 13 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[A] 2010	Z 13 DTJ	BCM (Body Control Module)	●	●	●	●
Meriva	[A] 2010	Z 13 DTJ	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[A] 2010	Z 13 DTJ	IMMO (Immobiliser)	●	●	●	●
Meriva	[A] 2010	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Meriva	[A] 2010	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Meriva	[A] 2010	Z 14 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[A] 2010	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[A] 2010	Z 14 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[A] 2010	Z 14 XEP	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[A] 2010	Z 14 XEP	EHS (Electrical Heater System)	●	●	●	●
Meriva	[A] 2010	Z 14 XEP	AOH (Add On Heater)	●	●	●	●
Meriva	[A] 2010	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[A] 2010	Z 14 XEP	BCM (Body Control Module)	●	●	●	●
Meriva	[A] 2010	Z 14 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[A] 2010	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Meriva	[A] 2010	Z 16 LET	ECM (Engine Control Module)	●	●	●	●
Meriva	[A] 2010	Z 16 LET	MTA (Easytronic)	●	●	●	●
Meriva	[A] 2010	Z 16 LET	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[A] 2010	Z 16 LET	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[A] 2010	Z 16 LET	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[A] 2010	Z 16 LET	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[A] 2010	Z 16 LET	EHS (Electrical Heater System)	●	●	●	●
Meriva	[A] 2010	Z 16 LET	AOH (Add On Heater)	●	●	●	●
Meriva	[A] 2010	Z 16 LET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[A] 2010	Z 16 LET	BCM (Body Control Module)	●	●	●	●
Meriva	[A] 2010	Z 16 LET	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[A] 2010	Z 16 LET	IMMO (Immobiliser)	●	●	●	●
Meriva	[A] 2010	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Meriva	[A] 2010	Z 16 SE	MTA (Easytronic)	●	●	●	●
Meriva	[A] 2010	Z 16 SE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[A] 2010	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[A] 2010	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[A] 2010	Z 16 SE	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[A] 2010	Z 16 SE	EHS (Electrical Heater System)	●	●	●	●
Meriva	[A] 2010	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Meriva	[A] 2010	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[A] 2010	Z 16 SE	BCM (Body Control Module)	●	●	●	●
Meriva	[A] 2010	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[A] 2010	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Meriva	[A] 2010	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Meriva	[A] 2010	Z 16 XE	MTA (Easytronic)	●	●	●	●
Meriva	[A] 2010	Z 16 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[A] 2010	Z 16 XE	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[A] 2010	Z 16 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[A] 2010	Z 16 XE	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[A] 2010	Z 16 XE	EHS (Electrical Heater System)	●	●	●	●
Meriva	[A] 2010	Z 16 XE	AOH (Add On Heater)	●	●	●	●
Meriva	[A] 2010	Z 16 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[A] 2010	Z 16 XE	BCM (Body Control Module)	●	●	●	●
Meriva	[A] 2010	Z 16 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[A] 2010	Z 16 XE	IMMO (Immobiliser)	●	●	●	●

Meriva	[A] 2010	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Meriva	[A] 2010	Z 16 XEP	MTA (Easytronic)	●	●	●	●
Meriva	[A] 2010	Z 16 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[A] 2010	Z 16 XEP	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[A] 2010	Z 16 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[A] 2010	Z 16 XEP	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[A] 2010	Z 16 XEP	EHS (Electrical Heater System)	●	●	●	●
Meriva	[A] 2010	Z 16 XEP	AOH (Add On Heater)	●	●	●	●
Meriva	[A] 2010	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[A] 2010	Z 16 XEP	BCM (Body Control Module)	●	●	●	●
Meriva	[A] 2010	Z 16 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[A] 2010	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Meriva	[A] 2010	Z 16 YNG	ECM (Engine Control Module)	●	●	●	●
Meriva	[A] 2010	Z 16 YNG	MTA (Easytronic)	●	●	●	●
Meriva	[A] 2010	Z 16 YNG	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[A] 2010	Z 16 YNG	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[A] 2010	Z 16 YNG	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[A] 2010	Z 16 YNG	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[A] 2010	Z 16 YNG	EHS (Electrical Heater System)	●	●	●	●
Meriva	[A] 2010	Z 16 YNG	AOH (Add On Heater)	●	●	●	●
Meriva	[A] 2010	Z 16 YNG	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[A] 2010	Z 16 YNG	BCM (Body Control Module)	●	●	●	●
Meriva	[A] 2010	Z 16 YNG	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[A] 2010	Z 16 YNG	IMMO (Immobiliser)	●	●	●	●
Meriva	[A] 2010	C 16 SEL	ECM (Engine Control Module)	●	●	●	●
Meriva	[A] 2010	C 16 SEL	MTA (Easytronic)	●	●	●	●
Meriva	[A] 2010	C 16 SEL	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[A] 2010	C 16 SEL	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[A] 2010	C 16 SEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[A] 2010	C 16 SEL	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[A] 2010	C 16 SEL	EHS (Electrical Heater System)	●	●	●	●
Meriva	[A] 2010	C 16 SEL	AOH (Add On Heater)	●	●	●	●
Meriva	[A] 2010	C 16 SEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[A] 2010	C 16 SEL	BCM (Body Control Module)	●	●	●	●
Meriva	[A] 2010	C 16 SEL	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[A] 2010	C 16 SEL	IMMO (Immobiliser)	●	●	●	●
Meriva	[A] 2010	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Meriva	[A] 2010	Y 17 DT	MTA (Easytronic)	●	●	●	●
Meriva	[A] 2010	Y 17 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[A] 2010	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[A] 2010	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[A] 2010	Y 17 DT	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[A] 2010	Y 17 DT	EHS (Electrical Heater System)	●	●	●	●
Meriva	[A] 2010	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Meriva	[A] 2010	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[A] 2010	Y 17 DT	BCM (Body Control Module)	●	●	●	●
Meriva	[A] 2010	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[A] 2010	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Meriva	[A] 2010	Z 17 DT	ECM (Engine Control Module)	●	●	●	●
Meriva	[A] 2010	Z 17 DT	MTA (Easytronic)	●	●	●	●
Meriva	[A] 2010	Z 17 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[A] 2010	Z 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[A] 2010	Z 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[A] 2010	Z 17 DT	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[A] 2010	Z 17 DT	EHS (Electrical Heater System)	●	●	●	●
Meriva	[A] 2010	Z 17 DT	AOH (Add On Heater)	●	●	●	●

Meriva	[A] 2010	Z 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[A] 2010	Z 17 DT	BCM (Body Control Module)	●	●	●	●
Meriva	[A] 2010	Z 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[A] 2010	Z 17 DT	IMMO (Immobiliser)	●	●	●	●
Meriva	[A] 2010	Z 17 DTR	ECM (Engine Control Module)	●	●	●	●
Meriva	[A] 2010	Z 17 DTR	MTA (Easytronic)	●	●	●	●
Meriva	[A] 2010	Z 17 DTR	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[A] 2010	Z 17 DTR	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[A] 2010	Z 17 DTR	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[A] 2010	Z 17 DTR	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[A] 2010	Z 17 DTR	EHS (Electrical Heater System)	●	●	●	●
Meriva	[A] 2010	Z 17 DTR	AOH (Add On Heater)	●	●	●	●
Meriva	[A] 2010	Z 17 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[A] 2010	Z 17 DTR	BCM (Body Control Module)	●	●	●	●
Meriva	[A] 2010	Z 17 DTR	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[A] 2010	Z 17 DTR	IMMO (Immobiliser)	●	●	●	●
Meriva	[A] 2010	Z 17 DTH	ECM (Engine Control Module)	●	●	●	●
Meriva	[A] 2010	Z 17 DTH	MTA (Easytronic)	●	●	●	●
Meriva	[A] 2010	Z 17 DTH	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[A] 2010	Z 17 DTH	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[A] 2010	Z 17 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[A] 2010	Z 17 DTH	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[A] 2010	Z 17 DTH	EHS (Electrical Heater System)	●	●	●	●
Meriva	[A] 2010	Z 17 DTH	AOH (Add On Heater)	●	●	●	●
Meriva	[A] 2010	Z 17 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[A] 2010	Z 17 DTH	BCM (Body Control Module)	●	●	●	●
Meriva	[A] 2010	Z 17 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[A] 2010	Z 17 DTH	IMMO (Immobiliser)	●	●	●	●
Meriva	[A] 2010	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Meriva	[A] 2010	Z 18 XE	MTA (Easytronic)	●	●	●	●
Meriva	[A] 2010	Z 18 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[A] 2010	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[A] 2010	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[A] 2010	Z 18 XE	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[A] 2010	Z 18 XE	EHS (Electrical Heater System)	●	●	●	●
Meriva	[A] 2010	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Meriva	[A] 2010	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[A] 2010	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Meriva	[A] 2010	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[A] 2010	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Meriva	[9] 2009	Y 13 DT	ECM (Engine Control Module)	●	●	●	●
Meriva	[9] 2009	Y 13 DT	MTA (Easytronic)	●	●	●	●
Meriva	[9] 2009	Y 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[9] 2009	Y 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[9] 2009	Y 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[9] 2009	Y 13 DT	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[9] 2009	Y 13 DT	EHS (Electrical Heater System)	●	●	●	●
Meriva	[9] 2009	Y 13 DT	AOH (Add On Heater)	●	●	●	●
Meriva	[9] 2009	Y 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[9] 2009	Y 13 DT	BCM (Body Control Module)	●	●	●	●
Meriva	[9] 2009	Y 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[9] 2009	Y 13 DT	IMMO (Immobiliser)	●	●	●	●
Meriva	[9] 2009	Z 13 DT	ECM (Engine Control Module)	●	●	●	●
Meriva	[9] 2009	Z 13 DT	MTA (Easytronic)	●	●	●	●
Meriva	[9] 2009	Z 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[9] 2009	Z 13 DT	EPS (Electronic Power Steering)	●	●	●	●

Meriva	[9] 2009	Z 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[9] 2009	Z 13 DT	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[9] 2009	Z 13 DT	EHS (Electrical Heater System)	●	●	●	●
Meriva	[9] 2009	Z 13 DT	AOH (Add On Heater)	●	●	●	●
Meriva	[9] 2009	Z 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[9] 2009	Z 13 DT	BCM (Body Control Module)	●	●	●	●
Meriva	[9] 2009	Z 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[9] 2009	Z 13 DT	IMMO (Immobiliser)	●	●	●	●
Meriva	[9] 2009	Z 13 DTJ	ECM (Engine Control Module)	●	●	●	●
Meriva	[9] 2009	Z 13 DTJ	MTA (Easytronic)	●	●	●	●
Meriva	[9] 2009	Z 13 DTJ	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[9] 2009	Z 13 DTJ	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[9] 2009	Z 13 DTJ	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[9] 2009	Z 13 DTJ	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[9] 2009	Z 13 DTJ	EHS (Electrical Heater System)	●	●	●	●
Meriva	[9] 2009	Z 13 DTJ	AOH (Add On Heater)	●	●	●	●
Meriva	[9] 2009	Z 13 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[9] 2009	Z 13 DTJ	BCM (Body Control Module)	●	●	●	●
Meriva	[9] 2009	Z 13 DTJ	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[9] 2009	Z 13 DTJ	IMMO (Immobiliser)	●	●	●	●
Meriva	[9] 2009	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Meriva	[9] 2009	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Meriva	[9] 2009	Z 14 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[9] 2009	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[9] 2009	Z 14 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[9] 2009	Z 14 XEP	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[9] 2009	Z 14 XEP	EHS (Electrical Heater System)	●	●	●	●
Meriva	[9] 2009	Z 14 XEP	AOH (Add On Heater)	●	●	●	●
Meriva	[9] 2009	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[9] 2009	Z 14 XEP	BCM (Body Control Module)	●	●	●	●
Meriva	[9] 2009	Z 14 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[9] 2009	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Meriva	[9] 2009	Z 16 LET	ECM (Engine Control Module)	●	●	●	●
Meriva	[9] 2009	Z 16 LET	MTA (Easytronic)	●	●	●	●
Meriva	[9] 2009	Z 16 LET	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[9] 2009	Z 16 LET	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[9] 2009	Z 16 LET	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[9] 2009	Z 16 LET	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[9] 2009	Z 16 LET	EHS (Electrical Heater System)	●	●	●	●
Meriva	[9] 2009	Z 16 LET	AOH (Add On Heater)	●	●	●	●
Meriva	[9] 2009	Z 16 LET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[9] 2009	Z 16 LET	BCM (Body Control Module)	●	●	●	●
Meriva	[9] 2009	Z 16 LET	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[9] 2009	Z 16 LET	IMMO (Immobiliser)	●	●	●	●
Meriva	[9] 2009	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Meriva	[9] 2009	Z 16 SE	MTA (Easytronic)	●	●	●	●
Meriva	[9] 2009	Z 16 SE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[9] 2009	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[9] 2009	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[9] 2009	Z 16 SE	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[9] 2009	Z 16 SE	EHS (Electrical Heater System)	●	●	●	●
Meriva	[9] 2009	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Meriva	[9] 2009	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[9] 2009	Z 16 SE	BCM (Body Control Module)	●	●	●	●
Meriva	[9] 2009	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[9] 2009	Z 16 SE	IMMO (Immobiliser)	●	●	●	●

Meriva	[9] 2009	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Meriva	[9] 2009	Z 16 XE	MTA (Easytronic)	●	●	●	●
Meriva	[9] 2009	Z 16 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[9] 2009	Z 16 XE	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[9] 2009	Z 16 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[9] 2009	Z 16 XE	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[9] 2009	Z 16 XE	EHS (Electrical Heater System)	●	●	●	●
Meriva	[9] 2009	Z 16 XE	AOH (Add On Heater)	●	●	●	●
Meriva	[9] 2009	Z 16 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[9] 2009	Z 16 XE	BCM (Body Control Module)	●	●	●	●
Meriva	[9] 2009	Z 16 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[9] 2009	Z 16 XE	IMMO (Immobiliser)	●	●	●	●
Meriva	[9] 2009	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Meriva	[9] 2009	Z 16 XEP	MTA (Easytronic)	●	●	●	●
Meriva	[9] 2009	Z 16 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[9] 2009	Z 16 XEP	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[9] 2009	Z 16 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[9] 2009	Z 16 XEP	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[9] 2009	Z 16 XEP	EHS (Electrical Heater System)	●	●	●	●
Meriva	[9] 2009	Z 16 XEP	AOH (Add On Heater)	●	●	●	●
Meriva	[9] 2009	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[9] 2009	Z 16 XEP	BCM (Body Control Module)	●	●	●	●
Meriva	[9] 2009	Z 16 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[9] 2009	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Meriva	[9] 2009	Z 16 YNG	ECM (Engine Control Module)	●	●	●	●
Meriva	[9] 2009	Z 16 YNG	MTA (Easytronic)	●	●	●	●
Meriva	[9] 2009	Z 16 YNG	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[9] 2009	Z 16 YNG	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[9] 2009	Z 16 YNG	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[9] 2009	Z 16 YNG	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[9] 2009	Z 16 YNG	EHS (Electrical Heater System)	●	●	●	●
Meriva	[9] 2009	Z 16 YNG	AOH (Add On Heater)	●	●	●	●
Meriva	[9] 2009	Z 16 YNG	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[9] 2009	Z 16 YNG	BCM (Body Control Module)	●	●	●	●
Meriva	[9] 2009	Z 16 YNG	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[9] 2009	Z 16 YNG	IMMO (Immobiliser)	●	●	●	●
Meriva	[9] 2009	C 16 SEL	ECM (Engine Control Module)	●	●	●	●
Meriva	[9] 2009	C 16 SEL	MTA (Easytronic)	●	●	●	●
Meriva	[9] 2009	C 16 SEL	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[9] 2009	C 16 SEL	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[9] 2009	C 16 SEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[9] 2009	C 16 SEL	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[9] 2009	C 16 SEL	EHS (Electrical Heater System)	●	●	●	●
Meriva	[9] 2009	C 16 SEL	AOH (Add On Heater)	●	●	●	●
Meriva	[9] 2009	C 16 SEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[9] 2009	C 16 SEL	BCM (Body Control Module)	●	●	●	●
Meriva	[9] 2009	C 16 SEL	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[9] 2009	C 16 SEL	IMMO (Immobiliser)	●	●	●	●
Meriva	[9] 2009	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Meriva	[9] 2009	Y 17 DT	MTA (Easytronic)	●	●	●	●
Meriva	[9] 2009	Y 17 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[9] 2009	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[9] 2009	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[9] 2009	Y 17 DT	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[9] 2009	Y 17 DT	EHS (Electrical Heater System)	●	●	●	●
Meriva	[9] 2009	Y 17 DT	AOH (Add On Heater)	●	●	●	●

Meriva	[9] 2009	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[9] 2009	Y 17 DT	BCM (Body Control Module)	●	●	●	●
Meriva	[9] 2009	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[9] 2009	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Meriva	[9] 2009	Z 17 DT	ECM (Engine Control Module)	●	●	●	●
Meriva	[9] 2009	Z 17 DT	MTA (Easytronic)	●	●	●	●
Meriva	[9] 2009	Z 17 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[9] 2009	Z 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[9] 2009	Z 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[9] 2009	Z 17 DT	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[9] 2009	Z 17 DT	EHS (Electrical Heater System)	●	●	●	●
Meriva	[9] 2009	Z 17 DT	AOH (Add On Heater)	●	●	●	●
Meriva	[9] 2009	Z 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[9] 2009	Z 17 DT	BCM (Body Control Module)	●	●	●	●
Meriva	[9] 2009	Z 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[9] 2009	Z 17 DT	IMMO (Immobiliser)	●	●	●	●
Meriva	[9] 2009	Z 17 DTR	ECM (Engine Control Module)	●	●	●	●
Meriva	[9] 2009	Z 17 DTR	MTA (Easytronic)	●	●	●	●
Meriva	[9] 2009	Z 17 DTR	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[9] 2009	Z 17 DTR	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[9] 2009	Z 17 DTR	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[9] 2009	Z 17 DTR	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[9] 2009	Z 17 DTR	EHS (Electrical Heater System)	●	●	●	●
Meriva	[9] 2009	Z 17 DTR	AOH (Add On Heater)	●	●	●	●
Meriva	[9] 2009	Z 17 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[9] 2009	Z 17 DTR	BCM (Body Control Module)	●	●	●	●
Meriva	[9] 2009	Z 17 DTR	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[9] 2009	Z 17 DTR	IMMO (Immobiliser)	●	●	●	●
Meriva	[9] 2009	Z 17 DTH	ECM (Engine Control Module)	●	●	●	●
Meriva	[9] 2009	Z 17 DTH	MTA (Easytronic)	●	●	●	●
Meriva	[9] 2009	Z 17 DTH	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[9] 2009	Z 17 DTH	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[9] 2009	Z 17 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[9] 2009	Z 17 DTH	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[9] 2009	Z 17 DTH	EHS (Electrical Heater System)	●	●	●	●
Meriva	[9] 2009	Z 17 DTH	AOH (Add On Heater)	●	●	●	●
Meriva	[9] 2009	Z 17 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[9] 2009	Z 17 DTH	BCM (Body Control Module)	●	●	●	●
Meriva	[9] 2009	Z 17 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[9] 2009	Z 17 DTH	IMMO (Immobiliser)	●	●	●	●
Meriva	[9] 2009	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Meriva	[9] 2009	Z 18 XE	MTA (Easytronic)	●	●	●	●
Meriva	[9] 2009	Z 18 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[9] 2009	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[9] 2009	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[9] 2009	Z 18 XE	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[9] 2009	Z 18 XE	EHS (Electrical Heater System)	●	●	●	●
Meriva	[9] 2009	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Meriva	[9] 2009	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[9] 2009	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Meriva	[9] 2009	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[9] 2009	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Meriva	[8] 2008	Y 13 DT	ECM (Engine Control Module)	●	●	●	●
Meriva	[8] 2008	Y 13 DT	MTA (Easytronic)	●	●	●	●
Meriva	[8] 2008	Y 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[8] 2008	Y 13 DT	EPS (Electronic Power Steering)	●	●	●	●

Meriva	[8] 2008	Y 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[8] 2008	Y 13 DT	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[8] 2008	Y 13 DT	EHS (Electrical Heater System)	●	●	●	●
Meriva	[8] 2008	Y 13 DT	AOH (Add On Heater)	●	●	●	●
Meriva	[8] 2008	Y 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[8] 2008	Y 13 DT	BCM (Body Control Module)	●	●	●	●
Meriva	[8] 2008	Y 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[8] 2008	Y 13 DT	IMMO (Immobiliser)	●	●	●	●
Meriva	[8] 2008	Z 13 DT	ECM (Engine Control Module)	●	●	●	●
Meriva	[8] 2008	Z 13 DT	MTA (Easytronic)	●	●	●	●
Meriva	[8] 2008	Z 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[8] 2008	Z 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[8] 2008	Z 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[8] 2008	Z 13 DT	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[8] 2008	Z 13 DT	EHS (Electrical Heater System)	●	●	●	●
Meriva	[8] 2008	Z 13 DT	AOH (Add On Heater)	●	●	●	●
Meriva	[8] 2008	Z 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[8] 2008	Z 13 DT	BCM (Body Control Module)	●	●	●	●
Meriva	[8] 2008	Z 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[8] 2008	Z 13 DT	IMMO (Immobiliser)	●	●	●	●
Meriva	[8] 2008	Z 13 DTJ	ECM (Engine Control Module)	●	●	●	●
Meriva	[8] 2008	Z 13 DTJ	MTA (Easytronic)	●	●	●	●
Meriva	[8] 2008	Z 13 DTJ	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[8] 2008	Z 13 DTJ	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[8] 2008	Z 13 DTJ	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[8] 2008	Z 13 DTJ	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[8] 2008	Z 13 DTJ	EHS (Electrical Heater System)	●	●	●	●
Meriva	[8] 2008	Z 13 DTJ	AOH (Add On Heater)	●	●	●	●
Meriva	[8] 2008	Z 13 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[8] 2008	Z 13 DTJ	BCM (Body Control Module)	●	●	●	●
Meriva	[8] 2008	Z 13 DTJ	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[8] 2008	Z 13 DTJ	IMMO (Immobiliser)	●	●	●	●
Meriva	[8] 2008	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Meriva	[8] 2008	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Meriva	[8] 2008	Z 14 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[8] 2008	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[8] 2008	Z 14 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[8] 2008	Z 14 XEP	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[8] 2008	Z 14 XEP	EHS (Electrical Heater System)	●	●	●	●
Meriva	[8] 2008	Z 14 XEP	AOH (Add On Heater)	●	●	●	●
Meriva	[8] 2008	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[8] 2008	Z 14 XEP	BCM (Body Control Module)	●	●	●	●
Meriva	[8] 2008	Z 14 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[8] 2008	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Meriva	[8] 2008	Z 16 LET	ECM (Engine Control Module)	●	●	●	●
Meriva	[8] 2008	Z 16 LET	MTA (Easytronic)	●	●	●	●
Meriva	[8] 2008	Z 16 LET	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[8] 2008	Z 16 LET	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[8] 2008	Z 16 LET	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[8] 2008	Z 16 LET	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[8] 2008	Z 16 LET	EHS (Electrical Heater System)	●	●	●	●
Meriva	[8] 2008	Z 16 LET	AOH (Add On Heater)	●	●	●	●
Meriva	[8] 2008	Z 16 LET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[8] 2008	Z 16 LET	BCM (Body Control Module)	●	●	●	●
Meriva	[8] 2008	Z 16 LET	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[8] 2008	Z 16 LET	IMMO (Immobiliser)	●	●	●	●

Meriva	[8] 2008	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Meriva	[8] 2008	Z 16 SE	MTA (Easytronic)	●	●	●	●
Meriva	[8] 2008	Z 16 SE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[8] 2008	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[8] 2008	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[8] 2008	Z 16 SE	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[8] 2008	Z 16 SE	EHS (Electrical Heater System)	●	●	●	●
Meriva	[8] 2008	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Meriva	[8] 2008	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[8] 2008	Z 16 SE	BCM (Body Control Module)	●	●	●	●
Meriva	[8] 2008	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[8] 2008	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Meriva	[8] 2008	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Meriva	[8] 2008	Z 16 XE	MTA (Easytronic)	●	●	●	●
Meriva	[8] 2008	Z 16 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[8] 2008	Z 16 XE	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[8] 2008	Z 16 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[8] 2008	Z 16 XE	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[8] 2008	Z 16 XE	EHS (Electrical Heater System)	●	●	●	●
Meriva	[8] 2008	Z 16 XE	AOH (Add On Heater)	●	●	●	●
Meriva	[8] 2008	Z 16 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[8] 2008	Z 16 XE	BCM (Body Control Module)	●	●	●	●
Meriva	[8] 2008	Z 16 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[8] 2008	Z 16 XE	IMMO (Immobiliser)	●	●	●	●
Meriva	[8] 2008	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Meriva	[8] 2008	Z 16 XEP	MTA (Easytronic)	●	●	●	●
Meriva	[8] 2008	Z 16 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[8] 2008	Z 16 XEP	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[8] 2008	Z 16 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[8] 2008	Z 16 XEP	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[8] 2008	Z 16 XEP	EHS (Electrical Heater System)	●	●	●	●
Meriva	[8] 2008	Z 16 XEP	AOH (Add On Heater)	●	●	●	●
Meriva	[8] 2008	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[8] 2008	Z 16 XEP	BCM (Body Control Module)	●	●	●	●
Meriva	[8] 2008	Z 16 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[8] 2008	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Meriva	[8] 2008	Z 16 YNG	ECM (Engine Control Module)	●	●	●	●
Meriva	[8] 2008	Z 16 YNG	MTA (Easytronic)	●	●	●	●
Meriva	[8] 2008	Z 16 YNG	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[8] 2008	Z 16 YNG	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[8] 2008	Z 16 YNG	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[8] 2008	Z 16 YNG	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[8] 2008	Z 16 YNG	EHS (Electrical Heater System)	●	●	●	●
Meriva	[8] 2008	Z 16 YNG	AOH (Add On Heater)	●	●	●	●
Meriva	[8] 2008	Z 16 YNG	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[8] 2008	Z 16 YNG	BCM (Body Control Module)	●	●	●	●
Meriva	[8] 2008	Z 16 YNG	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[8] 2008	Z 16 YNG	IMMO (Immobiliser)	●	●	●	●
Meriva	[8] 2008	C 16 SEL	ECM (Engine Control Module)	●	●	●	●
Meriva	[8] 2008	C 16 SEL	MTA (Easytronic)	●	●	●	●
Meriva	[8] 2008	C 16 SEL	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[8] 2008	C 16 SEL	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[8] 2008	C 16 SEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[8] 2008	C 16 SEL	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[8] 2008	C 16 SEL	EHS (Electrical Heater System)	●	●	●	●
Meriva	[8] 2008	C 16 SEL	AOH (Add On Heater)	●	●	●	●

Meriva	[8] 2008	C 16 SEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[8] 2008	C 16 SEL	BCM (Body Control Module)	●	●	●	●
Meriva	[8] 2008	C 16 SEL	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[8] 2008	C 16 SEL	IMMO (Immobiliser)	●	●	●	●
Meriva	[8] 2008	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Meriva	[8] 2008	Y 17 DT	MTA (Easytronic)	●	●	●	●
Meriva	[8] 2008	Y 17 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[8] 2008	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[8] 2008	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[8] 2008	Y 17 DT	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[8] 2008	Y 17 DT	EHS (Electrical Heater System)	●	●	●	●
Meriva	[8] 2008	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Meriva	[8] 2008	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[8] 2008	Y 17 DT	BCM (Body Control Module)	●	●	●	●
Meriva	[8] 2008	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[8] 2008	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Meriva	[8] 2008	Z 17 DT	ECM (Engine Control Module)	●	●	●	●
Meriva	[8] 2008	Z 17 DT	MTA (Easytronic)	●	●	●	●
Meriva	[8] 2008	Z 17 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[8] 2008	Z 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[8] 2008	Z 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[8] 2008	Z 17 DT	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[8] 2008	Z 17 DT	EHS (Electrical Heater System)	●	●	●	●
Meriva	[8] 2008	Z 17 DT	AOH (Add On Heater)	●	●	●	●
Meriva	[8] 2008	Z 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[8] 2008	Z 17 DT	BCM (Body Control Module)	●	●	●	●
Meriva	[8] 2008	Z 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[8] 2008	Z 17 DT	IMMO (Immobiliser)	●	●	●	●
Meriva	[8] 2008	Z 17 DTR	ECM (Engine Control Module)	●	●	●	●
Meriva	[8] 2008	Z 17 DTR	MTA (Easytronic)	●	●	●	●
Meriva	[8] 2008	Z 17 DTR	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[8] 2008	Z 17 DTR	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[8] 2008	Z 17 DTR	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[8] 2008	Z 17 DTR	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[8] 2008	Z 17 DTR	EHS (Electrical Heater System)	●	●	●	●
Meriva	[8] 2008	Z 17 DTR	AOH (Add On Heater)	●	●	●	●
Meriva	[8] 2008	Z 17 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[8] 2008	Z 17 DTR	BCM (Body Control Module)	●	●	●	●
Meriva	[8] 2008	Z 17 DTR	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[8] 2008	Z 17 DTR	IMMO (Immobiliser)	●	●	●	●
Meriva	[8] 2008	Z 17 DTH	ECM (Engine Control Module)	●	●	●	●
Meriva	[8] 2008	Z 17 DTH	MTA (Easytronic)	●	●	●	●
Meriva	[8] 2008	Z 17 DTH	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[8] 2008	Z 17 DTH	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[8] 2008	Z 17 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[8] 2008	Z 17 DTH	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[8] 2008	Z 17 DTH	EHS (Electrical Heater System)	●	●	●	●
Meriva	[8] 2008	Z 17 DTH	AOH (Add On Heater)	●	●	●	●
Meriva	[8] 2008	Z 17 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[8] 2008	Z 17 DTH	BCM (Body Control Module)	●	●	●	●
Meriva	[8] 2008	Z 17 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[8] 2008	Z 17 DTH	IMMO (Immobiliser)	●	●	●	●
Meriva	[8] 2008	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Meriva	[8] 2008	Z 18 XE	MTA (Easytronic)	●	●	●	●
Meriva	[8] 2008	Z 18 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[8] 2008	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●

Meriva	[8] 2008	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[8] 2008	Z 18 XE	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[8] 2008	Z 18 XE	EHS (Electrical Heater System)	●	●	●	●
Meriva	[8] 2008	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Meriva	[8] 2008	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[8] 2008	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Meriva	[8] 2008	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[8] 2008	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Meriva	[7] 2007	Y 13 DT	ECM (Engine Control Module)	●	●	●	●
Meriva	[7] 2007	Y 13 DT	MTA (Easytronic)	●	●	●	●
Meriva	[7] 2007	Y 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[7] 2007	Y 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[7] 2007	Y 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[7] 2007	Y 13 DT	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[7] 2007	Y 13 DT	EHS (Electrical Heater System)	●	●	●	●
Meriva	[7] 2007	Y 13 DT	AOH (Add On Heater)	●	●	●	●
Meriva	[7] 2007	Y 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[7] 2007	Y 13 DT	BCM (Body Control Module)	●	●	●	●
Meriva	[7] 2007	Y 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[7] 2007	Y 13 DT	IMMO (Immobiliser)	●	●	●	●
Meriva	[7] 2007	Z 13 DT	ECM (Engine Control Module)	●	●	●	●
Meriva	[7] 2007	Z 13 DT	MTA (Easytronic)	●	●	●	●
Meriva	[7] 2007	Z 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[7] 2007	Z 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[7] 2007	Z 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[7] 2007	Z 13 DT	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[7] 2007	Z 13 DT	EHS (Electrical Heater System)	●	●	●	●
Meriva	[7] 2007	Z 13 DT	AOH (Add On Heater)	●	●	●	●
Meriva	[7] 2007	Z 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[7] 2007	Z 13 DT	BCM (Body Control Module)	●	●	●	●
Meriva	[7] 2007	Z 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[7] 2007	Z 13 DT	IMMO (Immobiliser)	●	●	●	●
Meriva	[7] 2007	Z 13 DTJ	ECM (Engine Control Module)	●	●	●	●
Meriva	[7] 2007	Z 13 DTJ	MTA (Easytronic)	●	●	●	●
Meriva	[7] 2007	Z 13 DTJ	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[7] 2007	Z 13 DTJ	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[7] 2007	Z 13 DTJ	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[7] 2007	Z 13 DTJ	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[7] 2007	Z 13 DTJ	EHS (Electrical Heater System)	●	●	●	●
Meriva	[7] 2007	Z 13 DTJ	AOH (Add On Heater)	●	●	●	●
Meriva	[7] 2007	Z 13 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[7] 2007	Z 13 DTJ	BCM (Body Control Module)	●	●	●	●
Meriva	[7] 2007	Z 13 DTJ	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[7] 2007	Z 13 DTJ	IMMO (Immobiliser)	●	●	●	●
Meriva	[7] 2007	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Meriva	[7] 2007	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Meriva	[7] 2007	Z 14 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[7] 2007	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[7] 2007	Z 14 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[7] 2007	Z 14 XEP	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[7] 2007	Z 14 XEP	EHS (Electrical Heater System)	●	●	●	●
Meriva	[7] 2007	Z 14 XEP	AOH (Add On Heater)	●	●	●	●
Meriva	[7] 2007	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[7] 2007	Z 14 XEP	BCM (Body Control Module)	●	●	●	●
Meriva	[7] 2007	Z 14 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[7] 2007	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●

Meriva	[7] 2007	Z 16 LET	ECM (Engine Control Module)	●	●	●	●
Meriva	[7] 2007	Z 16 LET	MTA (Easytronic)	●	●	●	●
Meriva	[7] 2007	Z 16 LET	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[7] 2007	Z 16 LET	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[7] 2007	Z 16 LET	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[7] 2007	Z 16 LET	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[7] 2007	Z 16 LET	EHS (Electrical Heater System)	●	●	●	●
Meriva	[7] 2007	Z 16 LET	AOH (Add On Heater)	●	●	●	●
Meriva	[7] 2007	Z 16 LET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[7] 2007	Z 16 LET	BCM (Body Control Module)	●	●	●	●
Meriva	[7] 2007	Z 16 LET	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[7] 2007	Z 16 LET	IMMO (Immobiliser)	●	●	●	●
Meriva	[7] 2007	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Meriva	[7] 2007	Z 16 SE	MTA (Easytronic)	●	●	●	●
Meriva	[7] 2007	Z 16 SE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[7] 2007	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[7] 2007	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[7] 2007	Z 16 SE	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[7] 2007	Z 16 SE	EHS (Electrical Heater System)	●	●	●	●
Meriva	[7] 2007	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Meriva	[7] 2007	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[7] 2007	Z 16 SE	BCM (Body Control Module)	●	●	●	●
Meriva	[7] 2007	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[7] 2007	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Meriva	[7] 2007	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Meriva	[7] 2007	Z 16 XE	MTA (Easytronic)	●	●	●	●
Meriva	[7] 2007	Z 16 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[7] 2007	Z 16 XE	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[7] 2007	Z 16 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[7] 2007	Z 16 XE	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[7] 2007	Z 16 XE	EHS (Electrical Heater System)	●	●	●	●
Meriva	[7] 2007	Z 16 XE	AOH (Add On Heater)	●	●	●	●
Meriva	[7] 2007	Z 16 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[7] 2007	Z 16 XE	BCM (Body Control Module)	●	●	●	●
Meriva	[7] 2007	Z 16 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[7] 2007	Z 16 XE	IMMO (Immobiliser)	●	●	●	●
Meriva	[7] 2007	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Meriva	[7] 2007	Z 16 XEP	MTA (Easytronic)	●	●	●	●
Meriva	[7] 2007	Z 16 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[7] 2007	Z 16 XEP	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[7] 2007	Z 16 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[7] 2007	Z 16 XEP	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[7] 2007	Z 16 XEP	EHS (Electrical Heater System)	●	●	●	●
Meriva	[7] 2007	Z 16 XEP	AOH (Add On Heater)	●	●	●	●
Meriva	[7] 2007	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[7] 2007	Z 16 XEP	BCM (Body Control Module)	●	●	●	●
Meriva	[7] 2007	Z 16 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[7] 2007	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Meriva	[7] 2007	Z 16 YNG	ECM (Engine Control Module)	●	●	●	●
Meriva	[7] 2007	Z 16 YNG	MTA (Easytronic)	●	●	●	●
Meriva	[7] 2007	Z 16 YNG	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[7] 2007	Z 16 YNG	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[7] 2007	Z 16 YNG	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[7] 2007	Z 16 YNG	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[7] 2007	Z 16 YNG	EHS (Electrical Heater System)	●	●	●	●
Meriva	[7] 2007	Z 16 YNG	AOH (Add On Heater)	●	●	●	●

Meriva	[7] 2007	Z 16 YNG	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[7] 2007	Z 16 YNG	BCM (Body Control Module)	●	●	●	●
Meriva	[7] 2007	Z 16 YNG	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[7] 2007	Z 16 YNG	IMMO (Immobiliser)	●	●	●	●
Meriva	[7] 2007	C 16 SEL	ECM (Engine Control Module)	●	●	●	●
Meriva	[7] 2007	C 16 SEL	MTA (Easytronic)	●	●	●	●
Meriva	[7] 2007	C 16 SEL	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[7] 2007	C 16 SEL	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[7] 2007	C 16 SEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[7] 2007	C 16 SEL	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[7] 2007	C 16 SEL	EHS (Electrical Heater System)	●	●	●	●
Meriva	[7] 2007	C 16 SEL	AOH (Add On Heater)	●	●	●	●
Meriva	[7] 2007	C 16 SEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[7] 2007	C 16 SEL	BCM (Body Control Module)	●	●	●	●
Meriva	[7] 2007	C 16 SEL	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[7] 2007	C 16 SEL	IMMO (Immobiliser)	●	●	●	●
Meriva	[7] 2007	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Meriva	[7] 2007	Y 17 DT	MTA (Easytronic)	●	●	●	●
Meriva	[7] 2007	Y 17 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[7] 2007	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[7] 2007	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[7] 2007	Y 17 DT	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[7] 2007	Y 17 DT	EHS (Electrical Heater System)	●	●	●	●
Meriva	[7] 2007	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Meriva	[7] 2007	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[7] 2007	Y 17 DT	BCM (Body Control Module)	●	●	●	●
Meriva	[7] 2007	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[7] 2007	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Meriva	[7] 2007	Z 17 DT	ECM (Engine Control Module)	●	●	●	●
Meriva	[7] 2007	Z 17 DT	MTA (Easytronic)	●	●	●	●
Meriva	[7] 2007	Z 17 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[7] 2007	Z 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[7] 2007	Z 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[7] 2007	Z 17 DT	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[7] 2007	Z 17 DT	EHS (Electrical Heater System)	●	●	●	●
Meriva	[7] 2007	Z 17 DT	AOH (Add On Heater)	●	●	●	●
Meriva	[7] 2007	Z 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[7] 2007	Z 17 DT	BCM (Body Control Module)	●	●	●	●
Meriva	[7] 2007	Z 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[7] 2007	Z 17 DT	IMMO (Immobiliser)	●	●	●	●
Meriva	[7] 2007	Z 17 DTR	ECM (Engine Control Module)	●	●	●	●
Meriva	[7] 2007	Z 17 DTR	MTA (Easytronic)	●	●	●	●
Meriva	[7] 2007	Z 17 DTR	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[7] 2007	Z 17 DTR	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[7] 2007	Z 17 DTR	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[7] 2007	Z 17 DTR	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[7] 2007	Z 17 DTR	EHS (Electrical Heater System)	●	●	●	●
Meriva	[7] 2007	Z 17 DTR	AOH (Add On Heater)	●	●	●	●
Meriva	[7] 2007	Z 17 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[7] 2007	Z 17 DTR	BCM (Body Control Module)	●	●	●	●
Meriva	[7] 2007	Z 17 DTR	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[7] 2007	Z 17 DTR	IMMO (Immobiliser)	●	●	●	●
Meriva	[7] 2007	Z 17 DTH	ECM (Engine Control Module)	●	●	●	●
Meriva	[7] 2007	Z 17 DTH	MTA (Easytronic)	●	●	●	●
Meriva	[7] 2007	Z 17 DTH	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[7] 2007	Z 17 DTH	EPS (Electronic Power Steering)	●	●	●	●

Meriva	[7] 2007	Z 17 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[7] 2007	Z 17 DTH	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[7] 2007	Z 17 DTH	EHS (Electrical Heater System)	●	●	●	●
Meriva	[7] 2007	Z 17 DTH	AOH (Add On Heater)	●	●	●	●
Meriva	[7] 2007	Z 17 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[7] 2007	Z 17 DTH	BCM (Body Control Module)	●	●	●	●
Meriva	[7] 2007	Z 17 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[7] 2007	Z 17 DTH	IMMO (Immobiliser)	●	●	●	●
Meriva	[7] 2007	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Meriva	[7] 2007	Z 18 XE	MTA (Easytronic)	●	●	●	●
Meriva	[7] 2007	Z 18 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[7] 2007	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[7] 2007	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[7] 2007	Z 18 XE	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[7] 2007	Z 18 XE	EHS (Electrical Heater System)	●	●	●	●
Meriva	[7] 2007	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Meriva	[7] 2007	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[7] 2007	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Meriva	[7] 2007	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[7] 2007	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Meriva	[6] 2006	Y 13 DT	ECM (Engine Control Module)	●	●	●	●
Meriva	[6] 2006	Y 13 DT	MTA (Easytronic)	●	●	●	●
Meriva	[6] 2006	Y 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[6] 2006	Y 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[6] 2006	Y 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[6] 2006	Y 13 DT	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[6] 2006	Y 13 DT	EHS (Electrical Heater System)	●	●	●	●
Meriva	[6] 2006	Y 13 DT	AOH (Add On Heater)	●	●	●	●
Meriva	[6] 2006	Y 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[6] 2006	Y 13 DT	BCM (Body Control Module)	●	●	●	●
Meriva	[6] 2006	Y 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[6] 2006	Y 13 DT	IMMO (Immobiliser)	●	●	●	●
Meriva	[6] 2006	Z 13 DTJ	ECM (Engine Control Module)	●	●	●	●
Meriva	[6] 2006	Z 13 DTJ	MTA (Easytronic)	●	●	●	●
Meriva	[6] 2006	Z 13 DTJ	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[6] 2006	Z 13 DTJ	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[6] 2006	Z 13 DTJ	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[6] 2006	Z 13 DTJ	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[6] 2006	Z 13 DTJ	EHS (Electrical Heater System)	●	●	●	●
Meriva	[6] 2006	Z 13 DTJ	AOH (Add On Heater)	●	●	●	●
Meriva	[6] 2006	Z 13 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[6] 2006	Z 13 DTJ	BCM (Body Control Module)	●	●	●	●
Meriva	[6] 2006	Z 13 DTJ	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[6] 2006	Z 13 DTJ	IMMO (Immobiliser)	●	●	●	●
Meriva	[6] 2006	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Meriva	[6] 2006	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Meriva	[6] 2006	Z 14 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[6] 2006	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[6] 2006	Z 14 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[6] 2006	Z 14 XEP	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[6] 2006	Z 14 XEP	EHS (Electrical Heater System)	●	●	●	●
Meriva	[6] 2006	Z 14 XEP	AOH (Add On Heater)	●	●	●	●
Meriva	[6] 2006	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[6] 2006	Z 14 XEP	BCM (Body Control Module)	●	●	●	●
Meriva	[6] 2006	Z 14 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[6] 2006	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●

Meriva	[6] 2006	C 16 SEL	ECM (Engine Control Module)	●	●	●	●
Meriva	[6] 2006	C 16 SEL	MTA (Easytronic)	●	●	●	●
Meriva	[6] 2006	C 16 SEL	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[6] 2006	C 16 SEL	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[6] 2006	C 16 SEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[6] 2006	C 16 SEL	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[6] 2006	C 16 SEL	EHS (Electrical Heater System)	●	●	●	●
Meriva	[6] 2006	C 16 SEL	AOH (Add On Heater)	●	●	●	●
Meriva	[6] 2006	C 16 SEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[6] 2006	C 16 SEL	BCM (Body Control Module)	●	●	●	●
Meriva	[6] 2006	C 16 SEL	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[6] 2006	C 16 SEL	IMMO (Immobiliser)	●	●	●	●
Meriva	[6] 2006	Z 16 LET	ECM (Engine Control Module)	●	●	●	●
Meriva	[6] 2006	Z 16 LET	MTA (Easytronic)	●	●	●	●
Meriva	[6] 2006	Z 16 LET	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[6] 2006	Z 16 LET	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[6] 2006	Z 16 LET	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[6] 2006	Z 16 LET	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[6] 2006	Z 16 LET	EHS (Electrical Heater System)	●	●	●	●
Meriva	[6] 2006	Z 16 LET	AOH (Add On Heater)	●	●	●	●
Meriva	[6] 2006	Z 16 LET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[6] 2006	Z 16 LET	BCM (Body Control Module)	●	●	●	●
Meriva	[6] 2006	Z 16 LET	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[6] 2006	Z 16 LET	IMMO (Immobiliser)	●	●	●	●
Meriva	[6] 2006	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Meriva	[6] 2006	Z 16 SE	MTA (Easytronic)	●	●	●	●
Meriva	[6] 2006	Z 16 SE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[6] 2006	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[6] 2006	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[6] 2006	Z 16 SE	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[6] 2006	Z 16 SE	EHS (Electrical Heater System)	●	●	●	●
Meriva	[6] 2006	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Meriva	[6] 2006	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[6] 2006	Z 16 SE	BCM (Body Control Module)	●	●	●	●
Meriva	[6] 2006	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[6] 2006	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Meriva	[6] 2006	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Meriva	[6] 2006	Z 16 XE	MTA (Easytronic)	●	●	●	●
Meriva	[6] 2006	Z 16 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[6] 2006	Z 16 XE	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[6] 2006	Z 16 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[6] 2006	Z 16 XE	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[6] 2006	Z 16 XE	EHS (Electrical Heater System)	●	●	●	●
Meriva	[6] 2006	Z 16 XE	AOH (Add On Heater)	●	●	●	●
Meriva	[6] 2006	Z 16 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[6] 2006	Z 16 XE	BCM (Body Control Module)	●	●	●	●
Meriva	[6] 2006	Z 16 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[6] 2006	Z 16 XE	IMMO (Immobiliser)	●	●	●	●
Meriva	[6] 2006	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Meriva	[6] 2006	Z 16 XEP	MTA (Easytronic)	●	●	●	●
Meriva	[6] 2006	Z 16 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[6] 2006	Z 16 XEP	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[6] 2006	Z 16 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[6] 2006	Z 16 XEP	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[6] 2006	Z 16 XEP	EHS (Electrical Heater System)	●	●	●	●
Meriva	[6] 2006	Z 16 XEP	AOH (Add On Heater)	●	●	●	●

Meriva	[6] 2006	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[6] 2006	Z 16 XEP	BCM (Body Control Module)	●	●	●	●
Meriva	[6] 2006	Z 16 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[6] 2006	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Meriva	[6] 2006	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Meriva	[6] 2006	Y 17 DT	MTA (Easytronic)	●	●	●	●
Meriva	[6] 2006	Y 17 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[6] 2006	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[6] 2006	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[6] 2006	Y 17 DT	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[6] 2006	Y 17 DT	EHS (Electrical Heater System)	●	●	●	●
Meriva	[6] 2006	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Meriva	[6] 2006	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[6] 2006	Y 17 DT	BCM (Body Control Module)	●	●	●	●
Meriva	[6] 2006	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[6] 2006	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Meriva	[6] 2006	Z 17 DTH	ECM (Engine Control Module)	●	●	●	●
Meriva	[6] 2006	Z 17 DTH	MTA (Easytronic)	●	●	●	●
Meriva	[6] 2006	Z 17 DTH	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[6] 2006	Z 17 DTH	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[6] 2006	Z 17 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[6] 2006	Z 17 DTH	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[6] 2006	Z 17 DTH	EHS (Electrical Heater System)	●	●	●	●
Meriva	[6] 2006	Z 17 DTH	AOH (Add On Heater)	●	●	●	●
Meriva	[6] 2006	Z 17 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[6] 2006	Z 17 DTH	BCM (Body Control Module)	●	●	●	●
Meriva	[6] 2006	Z 17 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[6] 2006	Z 17 DTH	IMMO (Immobiliser)	●	●	●	●
Meriva	[6] 2006	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Meriva	[6] 2006	Z 18 XE	MTA (Easytronic)	●	●	●	●
Meriva	[6] 2006	Z 18 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[6] 2006	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[6] 2006	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[6] 2006	Z 18 XE	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[6] 2006	Z 18 XE	EHS (Electrical Heater System)	●	●	●	●
Meriva	[6] 2006	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Meriva	[6] 2006	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[6] 2006	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Meriva	[6] 2006	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[6] 2006	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Meriva	[5] 2005	Y 13 DT	ECM (Engine Control Module)	●	●	●	●
Meriva	[5] 2005	Y 13 DT	MTA (Easytronic)	●	●	●	●
Meriva	[5] 2005	Y 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[5] 2005	Y 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[5] 2005	Y 13 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[5] 2005	Y 13 DT	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[5] 2005	Y 13 DT	EHS (Electrical Heater System)	●	●	●	●
Meriva	[5] 2005	Y 13 DT	AOH (Add On Heater)	●	●	●	●
Meriva	[5] 2005	Y 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[5] 2005	Y 13 DT	BCM (Body Control Module)	●	●	●	●
Meriva	[5] 2005	Y 13 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[5] 2005	Y 13 DT	IMMO (Immobiliser)	●	●	●	●
Meriva	[5] 2005	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Meriva	[5] 2005	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Meriva	[5] 2005	Z 14 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[5] 2005	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●

Meriva	[5] 2005	Z 14 XEP	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[5] 2005	Z 14 XEP	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[5] 2005	Z 14 XEP	EHS (Electrical Heater System)	●	●	●	●
Meriva	[5] 2005	Z 14 XEP	AOH (Add On Heater)	●	●	●	●
Meriva	[5] 2005	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[5] 2005	Z 14 XEP	BCM (Body Control Module)	●	●	●	●
Meriva	[5] 2005	Z 14 XEP	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[5] 2005	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Meriva	[5] 2005	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Meriva	[5] 2005	Z 16 SE	MTA (Easytronic)	●	●	●	●
Meriva	[5] 2005	Z 16 SE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[5] 2005	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[5] 2005	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[5] 2005	Z 16 SE	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[5] 2005	Z 16 SE	EHS (Electrical Heater System)	●	●	●	●
Meriva	[5] 2005	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Meriva	[5] 2005	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[5] 2005	Z 16 SE	BCM (Body Control Module)	●	●	●	●
Meriva	[5] 2005	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[5] 2005	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Meriva	[5] 2005	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Meriva	[5] 2005	Z 16 XE	MTA (Easytronic)	●	●	●	●
Meriva	[5] 2005	Z 16 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[5] 2005	Z 16 XE	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[5] 2005	Z 16 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[5] 2005	Z 16 XE	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[5] 2005	Z 16 XE	EHS (Electrical Heater System)	●	●	●	●
Meriva	[5] 2005	Z 16 XE	AOH (Add On Heater)	●	●	●	●
Meriva	[5] 2005	Z 16 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[5] 2005	Z 16 XE	BCM (Body Control Module)	●	●	●	●
Meriva	[5] 2005	Z 16 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[5] 2005	Z 16 XE	IMMO (Immobiliser)	●	●	●	●
Meriva	[5] 2005	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Meriva	[5] 2005	Y 17 DT	MTA (Easytronic)	●	●	●	●
Meriva	[5] 2005	Y 17 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[5] 2005	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[5] 2005	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[5] 2005	Y 17 DT	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[5] 2005	Y 17 DT	EHS (Electrical Heater System)	●	●	●	●
Meriva	[5] 2005	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Meriva	[5] 2005	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[5] 2005	Y 17 DT	BCM (Body Control Module)	●	●	●	●
Meriva	[5] 2005	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[5] 2005	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Meriva	[5] 2005	Z 17 DTH	ECM (Engine Control Module)	●	●	●	●
Meriva	[5] 2005	Z 17 DTH	MTA (Easytronic)	●	●	●	●
Meriva	[5] 2005	Z 17 DTH	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[5] 2005	Z 17 DTH	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[5] 2005	Z 17 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[5] 2005	Z 17 DTH	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[5] 2005	Z 17 DTH	EHS (Electrical Heater System)	●	●	●	●
Meriva	[5] 2005	Z 17 DTH	AOH (Add On Heater)	●	●	●	●
Meriva	[5] 2005	Z 17 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[5] 2005	Z 17 DTH	BCM (Body Control Module)	●	●	●	●
Meriva	[5] 2005	Z 17 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[5] 2005	Z 17 DTH	IMMO (Immobiliser)	●	●	●	●

Meriva	[5] 2005	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Meriva	[5] 2005	Z 18 XE	MTA (Easytronic)	●	●	●	●
Meriva	[5] 2005	Z 18 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[5] 2005	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[5] 2005	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[5] 2005	Z 18 XE	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[5] 2005	Z 18 XE	EHS (Electrical Heater System)	●	●	●	●
Meriva	[5] 2005	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Meriva	[5] 2005	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[5] 2005	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Meriva	[5] 2005	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[5] 2005	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Meriva	[4] 2004	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Meriva	[4] 2004	Z 16 SE	MTA (Easytronic)	●	●	●	●
Meriva	[4] 2004	Z 16 SE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[4] 2004	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[4] 2004	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[4] 2004	Z 16 SE	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[4] 2004	Z 16 SE	EHS (Electrical Heater System)	●	●	●	●
Meriva	[4] 2004	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Meriva	[4] 2004	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[4] 2004	Z 16 SE	BCM (Body Control Module)	●	●	●	●
Meriva	[4] 2004	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[4] 2004	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Meriva	[4] 2004	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Meriva	[4] 2004	Z 16 XE	MTA (Easytronic)	●	●	●	●
Meriva	[4] 2004	Z 16 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[4] 2004	Z 16 XE	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[4] 2004	Z 16 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[4] 2004	Z 16 XE	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[4] 2004	Z 16 XE	EHS (Electrical Heater System)	●	●	●	●
Meriva	[4] 2004	Z 16 XE	AOH (Add On Heater)	●	●	●	●
Meriva	[4] 2004	Z 16 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[4] 2004	Z 16 XE	BCM (Body Control Module)	●	●	●	●
Meriva	[4] 2004	Z 16 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[4] 2004	Z 16 XE	IMMO (Immobiliser)	●	●	●	●
Meriva	[4] 2004	Y 17 DT	ECM (Engine Control Module)	●	●	●	●
Meriva	[4] 2004	Y 17 DT	MTA (Easytronic)	●	●	●	●
Meriva	[4] 2004	Y 17 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[4] 2004	Y 17 DT	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[4] 2004	Y 17 DT	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[4] 2004	Y 17 DT	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[4] 2004	Y 17 DT	EHS (Electrical Heater System)	●	●	●	●
Meriva	[4] 2004	Y 17 DT	AOH (Add On Heater)	●	●	●	●
Meriva	[4] 2004	Y 17 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[4] 2004	Y 17 DT	BCM (Body Control Module)	●	●	●	●
Meriva	[4] 2004	Y 17 DT	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[4] 2004	Y 17 DT	IMMO (Immobiliser)	●	●	●	●
Meriva	[4] 2004	Z 17 DTH	ECM (Engine Control Module)	●	●	●	●
Meriva	[4] 2004	Z 17 DTH	MTA (Easytronic)	●	●	●	●
Meriva	[4] 2004	Z 17 DTH	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[4] 2004	Z 17 DTH	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[4] 2004	Z 17 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[4] 2004	Z 17 DTH	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[4] 2004	Z 17 DTH	EHS (Electrical Heater System)	●	●	●	●
Meriva	[4] 2004	Z 17 DTH	AOH (Add On Heater)	●	●	●	●

Meriva	[4] 2004	Z 17 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[4] 2004	Z 17 DTH	BCM (Body Control Module)	●	●	●	●
Meriva	[4] 2004	Z 17 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[4] 2004	Z 17 DTH	IMMO (Immobiliser)	●	●	●	●
Meriva	[4] 2004	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Meriva	[4] 2004	Z 18 XE	MTA (Easytronic)	●	●	●	●
Meriva	[4] 2004	Z 18 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[4] 2004	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[4] 2004	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[4] 2004	Z 18 XE	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[4] 2004	Z 18 XE	EHS (Electrical Heater System)	●	●	●	●
Meriva	[4] 2004	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Meriva	[4] 2004	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[4] 2004	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Meriva	[4] 2004	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[4] 2004	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Meriva	[3] 2003	Z 16 SE	ECM (Engine Control Module)	●	●	●	●
Meriva	[3] 2003	Z 16 SE	MTA (Easytronic)	●	●	●	●
Meriva	[3] 2003	Z 16 SE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[3] 2003	Z 16 SE	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[3] 2003	Z 16 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[3] 2003	Z 16 SE	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[3] 2003	Z 16 SE	EHS (Electrical Heater System)	●	●	●	●
Meriva	[3] 2003	Z 16 SE	AOH (Add On Heater)	●	●	●	●
Meriva	[3] 2003	Z 16 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[3] 2003	Z 16 SE	BCM (Body Control Module)	●	●	●	●
Meriva	[3] 2003	Z 16 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[3] 2003	Z 16 SE	IMMO (Immobiliser)	●	●	●	●
Meriva	[3] 2003	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Meriva	[3] 2003	Z 16 XE	MTA (Easytronic)	●	●	●	●
Meriva	[3] 2003	Z 16 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[3] 2003	Z 16 XE	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[3] 2003	Z 16 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[3] 2003	Z 16 XE	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[3] 2003	Z 16 XE	EHS (Electrical Heater System)	●	●	●	●
Meriva	[3] 2003	Z 16 XE	AOH (Add On Heater)	●	●	●	●
Meriva	[3] 2003	Z 16 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[3] 2003	Z 16 XE	BCM (Body Control Module)	●	●	●	●
Meriva	[3] 2003	Z 16 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[3] 2003	Z 16 XE	IMMO (Immobiliser)	●	●	●	●
Meriva	[3] 2003	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Meriva	[3] 2003	Z 18 XE	MTA (Easytronic)	●	●	●	●
Meriva	[3] 2003	Z 18 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Meriva	[3] 2003	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Meriva	[3] 2003	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Meriva	[3] 2003	Z 18 XE	ESP (Electronic Stability Program)	●	●	●	●
Meriva	[3] 2003	Z 18 XE	EHS (Electrical Heater System)	●	●	●	●
Meriva	[3] 2003	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Meriva	[3] 2003	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva	[3] 2003	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Meriva	[3] 2003	Z 18 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Meriva	[3] 2003	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Meriva-B	[6] 2016	1.4L (LDD) with Sart/Stop System (KL9)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[6] 2016	1.4L (LDD) with Sart/Stop System (KL9)	FICM (Fuel Injector Control Module)	●	●	●	●

Meriva-B	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	Radio	●	●	●	●
Meriva-B	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LDD)with Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LDD)witho ut Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LDD)witho ut Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LDD)witho ut Sart/Stop System(KL9)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LDD)witho ut Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LDD)witho ut Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LDD)witho ut Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LDD)witho ut Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LDD)witho ut Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LDD)witho ut Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LDD)witho ut Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LDD)witho ut Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●

Meriva-B	[G] 2016	1. 4L(LDD) without Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[G] 2016	1. 4L(LDD) without Sart/Stop System(KL9)	Radio	●	●	●	●
Meriva-B	[G] 2016	1. 4L(LDD) without Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Meriva-B	[G] 2016	1. 4L(LDD) without Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Meriva-B	[G] 2016	1. 4L(LDD) without Sart/Stop System(KL9)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Meriva-B	[G] 2016	1. 4L(LDD) without Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Meriva-B	[G] 2016	1. 4L(LDD) without Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[G] 2016	1. 4L(LDD) without Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[G] 2016	1. 4L(LUH) with Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[G] 2016	1. 4L(LUH) with Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[G] 2016	1. 4L(LUH) with Sart/Stop System(KL9)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[G] 2016	1. 4L(LUH) with Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[G] 2016	1. 4L(LUH) with Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[G] 2016	1. 4L(LUH) with Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Meriva-B	[G] 2016	1. 4L(LUH) with Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[G] 2016	1. 4L(LUH) with Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[G] 2016	1. 4L(LUH) with Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[G] 2016	1. 4L(LUH) with Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[G] 2016	1. 4L(LUH) with Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[G] 2016	1. 4L(LUH) with Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[G] 2016	1. 4L(LUH) with Sart/Stop System(KL9)	Radio	●	●	●	●
Meriva-B	[G] 2016	1. 4L(LUH) with Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Meriva-B	[G] 2016	1. 4L(LUH) with Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Meriva-B	[G] 2016	1. 4L(LUH) with Sart/Stop System(KL9)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Meriva-B	[G] 2016	1. 4L(LUH) with Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Meriva-B	[G] 2016	1. 4L(LUH) with Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[G] 2016	1. 4L(LUH) with Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[G] 2016	1. 4L(LUH) without Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●

Meriva-B	[G] 2016	1.4L(LUH)without Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUH)without Sart/Stop System(KL9)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUH)without Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUH)without Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUH)without Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUH)without Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUH)without Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUH)without Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUH)without Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUH)without Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUH)without Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUH)without Sart/Stop System(KL9)	Radio	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUH)without Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUH)without Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUH)without Sart/Stop System(KL9)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUH)without Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUH)without Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUH)without Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with Sart/Stop System(KL9)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●

Meriva-B	[G] 2016	1.4L(LUJ)with Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with Sart/Stop System(KL9)	Radio	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with Sart/Stop System(KL9)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with out Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with out Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with out Sart/Stop System(KL9)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with out Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with out Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with out Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with out Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with out Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with out Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with out Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with out Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with out Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with out Sart/Stop System(KL9)	Radio	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with out Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with out Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with out Sart/Stop System(KL9)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with out Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with out Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.4L(LUJ)with out Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVL)	ECM (Engine Control Module)	●	●	●	●

Meriva-B	[G] 2016	1.6L (LVL)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVL)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVL)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVL)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVL)	PSCM (Power Steering Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVL)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVL)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVL)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVL)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVL)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVL)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVL)	Radio	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVL)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVL)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVL)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVL)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVL)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVL)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVM)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVM)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVM)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVM)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVM)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVM)	PSCM (Power Steering Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVM)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVM)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVM)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVM)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVM)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVM)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVM)	Radio	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVM)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVM)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVM)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVM)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVM)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LVM)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LWQ)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LWQ)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LWQ)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LWQ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LWQ)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LWQ)	PSCM (Power Steering Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LWQ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LWQ)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LWQ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LWQ)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LWQ)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LWQ)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LWQ)	Radio	●	●	●	●
Meriva-B	[G] 2016	1.6L (LWQ)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LWQ)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LWQ)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●

Meriva-B	[G] 2016	1.6L (LWQ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LWQ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[G] 2016	1.6L (LWQ)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LDV)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LDV)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LDV)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LDV)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LDV)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LDV)	PSCM (Power Steering Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LDV)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LDV)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LDV)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LDV)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LDV)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LDV)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LDV)	Radio	●	●	●	●
Meriva-B	[F] 2015	1.3L (LDV)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LDV)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LDV)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LDV)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LDV)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LDV)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LSF)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LSF)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LSF)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LSF)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LSF)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LSF)	PSCM (Power Steering Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LSF)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LSF)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LSF)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LSF)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LSF)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LSF)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LSF)	Radio	●	●	●	●
Meriva-B	[F] 2015	1.3L (LSF)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LSF)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LSF)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LSF)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LSF)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.3L (LSF)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L (LDD) with Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L (LDD) with Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L (LDD) with Sart/Stop System(KL9)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L (LDD) with Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L (LDD) with Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L (LDD) with Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L (LDD) with Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●

Meriva-B	[F] 2015	1. 4L(LDD)with Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[F] 2015	1. 4L(LDD)with Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[F] 2015	1. 4L(LDD)with Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[F] 2015	1. 4L(LDD)with Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[F] 2015	1. 4L(LDD)with Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[F] 2015	1. 4L(LDD)with Sart/Stop System(KL9)	Radio	●	●	●	●
Meriva-B	[F] 2015	1. 4L(LDD)with Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Meriva-B	[F] 2015	1. 4L(LDD)with Sart/Stop System(KL9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Meriva-B	[F] 2015	1. 4L(LDD)with Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Meriva-B	[F] 2015	1. 4L(LDD)with Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Meriva-B	[F] 2015	1. 4L(LDD)with Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[F] 2015	1. 4L(LDD)with Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[F] 2015	1. 4L(LDD)with out Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[F] 2015	1. 4L(LDD)with out Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[F] 2015	1. 4L(LDD)with out Sart/Stop System(KL9)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[F] 2015	1. 4L(LDD)with out Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[F] 2015	1. 4L(LDD)with out Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[F] 2015	1. 4L(LDD)with out Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Meriva-B	[F] 2015	1. 4L(LDD)with out Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[F] 2015	1. 4L(LDD)with out Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[F] 2015	1. 4L(LDD)with out Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[F] 2015	1. 4L(LDD)with out Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[F] 2015	1. 4L(LDD)with out Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[F] 2015	1. 4L(LDD)with out Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[F] 2015	1. 4L(LDD)with out Sart/Stop System(KL9)	Radio	●	●	●	●
Meriva-B	[F] 2015	1. 4L(LDD)with out Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Meriva-B	[F] 2015	1. 4L(LDD)with out Sart/Stop System(KL9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Meriva-B	[F] 2015	1. 4L(LDD)with out Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●

Meriva-B	[F] 2015	1.4L(LDD)without Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LDD)without Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LDD)without Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)with Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)with Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)with Sart/Stop System(KL9)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)with Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)with Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)with Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)with Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)with Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)with Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)with Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)with Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)with Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)with Sart/Stop System(KL9)	Radio	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)with Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)with Sart/Stop System(KL9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)with Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)with Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)with Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)with Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)without Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)without Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)without Sart/Stop System(KL9)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)without Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)without Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)without Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●

Meriva-B	[F] 2015	1.4L(LUH)without Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)without Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)without Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)without Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)without Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)without Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)without Sart/Stop System(KL9)	Radio	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)without Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)without Sart/Stop System(KL9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)without Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)without Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)without Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUH)without Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with Sart/Stop System(KL9)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with Sart/Stop System(KL9)	Radio	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with Sart/Stop System(KL9)	MPIM (Multimedia Player Interface Module)	●	●	●	●

Meriva-B	[F] 2015	1.4L(LUJ)with Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with out Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with out Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with out Sart/Stop System(KL9)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with out Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with out Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with out Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with out Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with out Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with out Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with out Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with out Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with out Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with out Sart/Stop System(KL9)	Radio	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with out Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with out Sart/Stop System(KL9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with out Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with out Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with out Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.4L(LUJ)with out Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVL)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVL)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVL)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVL)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVL)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVL)	PSCM (Power Steering Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVL)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVL)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVL)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVL)	IC (Instrument Cluster)	●	●	●	●

Meriva-B	[F] 2015	1.6L (LVL)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVL)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVL)	Radio	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVL)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVL)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVL)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVL)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVL)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVL)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVM)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVM)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVM)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVM)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVM)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVM)	PSCM (Power Steering Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVM)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVM)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVM)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVM)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVM)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVM)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVM)	Radio	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVM)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVM)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVM)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVM)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVM)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LVM)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LWQ)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LWQ)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LWQ)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LWQ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LWQ)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LWQ)	PSCM (Power Steering Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LWQ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LWQ)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LWQ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LWQ)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LWQ)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LWQ)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LWQ)	Radio	●	●	●	●
Meriva-B	[F] 2015	1.6L (LWQ)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LWQ)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LWQ)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LWQ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LWQ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.6L (LWQ)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.7L (LPL)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.7L (LPL)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.7L (LPL)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.7L (LPL)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.7L (LPL)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.7L (LPL)	PSCM (Power Steering Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.7L (LPL)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●

Meriva-B	[F] 2015	1.7L (LPL)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.7L (LPL)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[F] 2015	1.7L (LPL)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[F] 2015	1.7L (LPL)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.7L (LPL)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[F] 2015	1.7L (LPL)	Radio	●	●	●	●
Meriva-B	[F] 2015	1.7L (LPL)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.7L (LPL)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Meriva-B	[F] 2015	1.7L (LPL)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.7L (LPL)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Meriva-B	[F] 2015	1.7L (LPL)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[F] 2015	1.7L (LPL)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LDV)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LDV)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LDV)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LDV)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LDV)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LDV)	PSCM (Power Steering Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LDV)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LDV)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LDV)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LDV)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LDV)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LDV)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LDV)	Radio	●	●	●	●
Meriva-B	[E] 2014	1.3L (LDV)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LDV)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LDV)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LDV)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LDV)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LDV)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LSF)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LSF)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LSF)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LSF)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LSF)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LSF)	PSCM (Power Steering Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LSF)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LSF)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LSF)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LSF)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LSF)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LSF)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LSF)	Radio	●	●	●	●
Meriva-B	[E] 2014	1.3L (LSF)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LSF)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LSF)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LSF)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LSF)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.3L (LSF)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L (LDD) with Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L (LDD) with Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●

Meriva-B	[E] 2014	1. 4L(LDD)with Sart/Stop System(KL9)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[E] 2014	1. 4L(LDD)with Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[E] 2014	1. 4L(LDD)with Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[E] 2014	1. 4L(LDD)with Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Meriva-B	[E] 2014	1. 4L(LDD)with Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[E] 2014	1. 4L(LDD)with Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[E] 2014	1. 4L(LDD)with Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[E] 2014	1. 4L(LDD)with Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[E] 2014	1. 4L(LDD)with Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[E] 2014	1. 4L(LDD)with Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[E] 2014	1. 4L(LDD)with Sart/Stop System(KL9)	Radio	●	●	●	●
Meriva-B	[E] 2014	1. 4L(LDD)with Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Meriva-B	[E] 2014	1. 4L(LDD)with Sart/Stop System(KL9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Meriva-B	[E] 2014	1. 4L(LDD)with Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Meriva-B	[E] 2014	1. 4L(LDD)with Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Meriva-B	[E] 2014	1. 4L(LDD)with Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[E] 2014	1. 4L(LDD)with Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[E] 2014	1. 4L(LDD)witho ut Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[E] 2014	1. 4L(LDD)witho ut Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[E] 2014	1. 4L(LDD)witho ut Sart/Stop System(KL9)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[E] 2014	1. 4L(LDD)witho ut Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[E] 2014	1. 4L(LDD)witho ut Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[E] 2014	1. 4L(LDD)witho ut Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Meriva-B	[E] 2014	1. 4L(LDD)witho ut Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[E] 2014	1. 4L(LDD)witho ut Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[E] 2014	1. 4L(LDD)witho ut Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[E] 2014	1. 4L(LDD)witho ut Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[E] 2014	1. 4L(LDD)witho ut Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●

Meriva-B	[E] 2014	1.4L(LDD)without Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LDD)without Sart/Stop System(KL9)	Radio	●	●	●	●
Meriva-B	[E] 2014	1.4L(LDD)without Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LDD)without Sart/Stop System(KL9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LDD)without Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LDD)without Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LDD)without Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LDD)without Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)with Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)with Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)with Sart/Stop System(KL9)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)with Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)with Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)with Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)with Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)with Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)with Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)with Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)with Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)with Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)with Sart/Stop System(KL9)	Radio	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)with Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)with Sart/Stop System(KL9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)with Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)with Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)with Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)with Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)without Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●

Meriva-B	[E] 2014	1.4L(LUH)without Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)without Sart/Stop System(KL9)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)without Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)without Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)without Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)without Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)without Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)without Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)without Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)without Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)without Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)without Sart/Stop System(KL9)	Radio	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)without Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)without Sart/Stop System(KL9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)without Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)without Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)without Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUH)without Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with Sart/Stop System(KL9)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●

Meriva-B	[E] 2014	1.4L(LUJ)with Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with Sart/Stop System(KL9)	Radio	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with Sart/Stop System(KL9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with out Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with out Sart/Stop System(KL9)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with out Sart/Stop System(KL9)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with out Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with out Sart/Stop System(KL9)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with out Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with out Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with out Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with out Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with out Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with out Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with out Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with out Sart/Stop System(KL9)	Radio	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with out Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with out Sart/Stop System(KL9)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with out Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with out Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with out Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.4L(LUJ)with out Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVL)	ECM (Engine Control Module)	●	●	●	●

Meriva-B	[E] 2014	1.6L (LVL)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVL)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVL)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVL)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVL)	PSCM (Power Steering Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVL)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVL)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVL)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVL)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVL)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVL)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVL)	Radio	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVL)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVL)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVL)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVL)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVL)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVL)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVM)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVM)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVM)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVM)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVM)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVM)	PSCM (Power Steering Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVM)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVM)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVM)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVM)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVM)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVM)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVM)	Radio	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVM)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVM)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVM)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVM)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVM)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.6L (LVM)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.7L (LPL)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.7L (LPL)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.7L (LPL)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.7L (LPL)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.7L (LPL)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.7L (LPL)	PSCM (Power Steering Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.7L (LPL)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[E] 2014	1.7L (LPL)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.7L (LPL)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[E] 2014	1.7L (LPL)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[E] 2014	1.7L (LPL)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.7L (LPL)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[E] 2014	1.7L (LPL)	Radio	●	●	●	●
Meriva-B	[E] 2014	1.7L (LPL)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.7L (LPL)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Meriva-B	[E] 2014	1.7L (LPL)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.7L (LPL)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●

Meriva-B	[E] 2014	1.7L (LPL)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[E] 2014	1.7L (LPL)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 13 DTC 1.3(LDV)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 13 DTC 1.3(LDV)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 13 DTC 1.3(LDV)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 13 DTC 1.3(LDV)	EPS (Electronic Power Steering)	●	●	●	●
Meriva-B	[D] 2013	A 13 DTC 1.3(LDV)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 13 DTC 1.3(LDV)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[D] 2013	A 13 DTC 1.3(LDV)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 13 DTC 1.3(LDV)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 13 DTC 1.3(LDV)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 13 DTC 1.3(LDV)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 13 DTC 1.3(LDV)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[D] 2013	A 13 DTC 1.3(LDV)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 13 DTC 1.3(LDV)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 13 DTC 1.3(LDV)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[D] 2013	A 13 DTC 1.3(LDV)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[D] 2013	A 13 DTE 1.3(LSF)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 13 DTE 1.3(LSF)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 13 DTE 1.3(LSF)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 13 DTE 1.3(LSF)	EPS (Electronic Power Steering)	●	●	●	●
Meriva-B	[D] 2013	A 13 DTE 1.3(LSF)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 13 DTE 1.3(LSF)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[D] 2013	A 13 DTE 1.3(LSF)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 13 DTE 1.3(LSF)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 13 DTE 1.3(LSF)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 13 DTE 1.3(LSF)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 13 DTE 1.3(LSF)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[D] 2013	A 13 DTE 1.3(LSF)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 13 DTE 1.3(LSF)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 13 DTE 1.3(LSF)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[D] 2013	A 13 DTE 1.3(LSF)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 NEL (LUH)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 NEL (LUH)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 NEL (LUH)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 NEL (LUH)	EPS (Electronic Power Steering)	●	●	●	●
Meriva-B	[D] 2013	A 14 NEL (LUH)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 NEL (LUH)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 NEL (LUH)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 NEL (LUH)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 NEL (LUH)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 NEL (LUH)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 NEL (LUH)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●

Meriva-B	[D] 2013	A 14 NEL (LUH)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 NEL (LUH)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 NEL (LUH)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[D] 2013	A 14 NEL (LUH)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 NET (LUJ)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 NET (LUJ)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 NET (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 NET (LUJ)	EPS (Electronic Power Steering)	●	●	●	●
Meriva-B	[D] 2013	A 14 NET (LUJ)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 NET (LUJ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 NET (LUJ)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 NET (LUJ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 NET (LUJ)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 NET (LUJ)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 NET (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 NET (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 NET (LUJ)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 NET (LUJ)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[D] 2013	A 14 NET (LUJ)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 XER (LDD)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 XER (LDD)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 XER (LDD)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 XER (LDD)	EPS (Electronic Power Steering)	●	●	●	●
Meriva-B	[D] 2013	A 14 XER (LDD)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 XER (LDD)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 XER (LDD)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 XER (LDD)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 XER (LDD)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 XER (LDD)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 XER (LDD)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 XER (LDD)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 XER (LDD)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 14 XER (LDD)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[D] 2013	A 14 XER (LDD)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[D] 2013	A 17 DTC 1.7 (LUE)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 17 DTC 1.7 (LUE)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 17 DTC 1.7 (LUE)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 17 DTC 1.7 (LUE)	EPS (Electronic Power Steering)	●	●	●	●
Meriva-B	[D] 2013	A 17 DTC 1.7 (LUE)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 17 DTC 1.7 (LUE)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[D] 2013	A 17 DTC 1.7 (LUE)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 17 DTC 1.7 (LUE)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 17 DTC 1.7 (LUE)	BCM (Body Control Module)	●	●	●	●

Meriva-B	[D] 2013	A 17 DTC 1.7(LUE)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 17 DTC 1.7(LUE)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[D] 2013	A 17 DTC 1.7(LUE)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 17 DTC 1.7(LUE)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 17 DTC 1.7(LUE)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[D] 2013	A 17 DTC 1.7(LUE)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[D] 2013	A 17 DTS 1.7(LUD)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 17 DTS 1.7(LUD)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 17 DTS 1.7(LUD)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 17 DTS 1.7(LUD)	EPS (Electronic Power Steering)	●	●	●	●
Meriva-B	[D] 2013	A 17 DTS 1.7(LUD)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 17 DTS 1.7(LUD)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[D] 2013	A 17 DTS 1.7(LUD)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 17 DTS 1.7(LUD)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 17 DTS 1.7(LUD)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 17 DTS 1.7(LUD)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 17 DTS 1.7(LUD)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[D] 2013	A 17 DTS 1.7(LUD)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 17 DTS 1.7(LUD)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Meriva-B	[D] 2013	A 17 DTS 1.7(LUD)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[D] 2013	A 17 DTS 1.7(LUD)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[D] 2013	Engine Control Module	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[D] 2013	Engine Control Module	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[D] 2013	Engine Control Module	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[D] 2013	Engine Control Module	EPS (Electronic Power Steering)	●	●	●	●
Meriva-B	[D] 2013	Engine Control Module	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[D] 2013	Engine Control Module	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[D] 2013	Engine Control Module	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[D] 2013	Engine Control Module	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[D] 2013	Engine Control Module	BCM (Body Control Module)	●	●	●	●
Meriva-B	[D] 2013	Engine Control Module	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[D] 2013	Engine Control Module	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[D] 2013	Engine Control Module	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[D] 2013	Engine Control Module	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Meriva-B	[D] 2013	Engine Control Module	IC (Instrument Cluster)	●	●	●	●

Meriva-B	[D] 2013	Engine Control Module	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[C] 2012	A 13 DTC 1.3(LDV)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 13 DTC 1.3(LDV)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 13 DTC 1.3(LDV)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 13 DTC 1.3(LDV)	EPS (Electronic Power Steering)	●	●	●	●
Meriva-B	[C] 2012	A 13 DTC 1.3(LDV)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 13 DTC 1.3(LDV)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[C] 2012	A 13 DTC 1.3(LDV)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 13 DTC 1.3(LDV)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 13 DTC 1.3(LDV)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 13 DTC 1.3(LDV)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 13 DTC 1.3(LDV)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[C] 2012	A 13 DTC 1.3(LDV)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 13 DTC 1.3(LDV)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 13 DTC 1.3(LDV)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[C] 2012	A 13 DTC 1.3(LDV)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[C] 2012	A 13 DTE 1.3(LSF)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 13 DTE 1.3(LSF)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 13 DTE 1.3(LSF)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 13 DTE 1.3(LSF)	EPS (Electronic Power Steering)	●	●	●	●
Meriva-B	[C] 2012	A 13 DTE 1.3(LSF)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 13 DTE 1.3(LSF)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[C] 2012	A 13 DTE 1.3(LSF)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 13 DTE 1.3(LSF)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 13 DTE 1.3(LSF)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 13 DTE 1.3(LSF)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 13 DTE 1.3(LSF)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[C] 2012	A 13 DTE 1.3(LSF)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 13 DTE 1.3(LSF)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 13 DTE 1.3(LSF)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[C] 2012	A 13 DTE 1.3(LSF)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 NEL (LUH)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 NEL (LUH)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 NEL (LUH)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 NEL (LUH)	EPS (Electronic Power Steering)	●	●	●	●
Meriva-B	[C] 2012	A 14 NEL (LUH)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 NEL (LUH)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 NEL (LUH)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 NEL (LUH)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 NEL (LUH)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 NEL (LUH)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 NEL (LUH)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●

Meriva-B	[C] 2012	A 14 NEL (LUH)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 NEL (LUH)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 NEL (LUH)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[C] 2012	A 14 NEL (LUH)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 NET (LUJ)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 NET (LUJ)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 NET (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 NET (LUJ)	EPS (Electronic Power Steering)	●	●	●	●
Meriva-B	[C] 2012	A 14 NET (LUJ)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 NET (LUJ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 NET (LUJ)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 NET (LUJ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 NET (LUJ)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 NET (LUJ)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 NET (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 NET (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 NET (LUJ)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 NET (LUJ)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[C] 2012	A 14 NET (LUJ)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 XER (LDD)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 XER (LDD)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 XER (LDD)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 XER (LDD)	EPS (Electronic Power Steering)	●	●	●	●
Meriva-B	[C] 2012	A 14 XER (LDD)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 XER (LDD)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 XER (LDD)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 XER (LDD)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 XER (LDD)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 XER (LDD)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 XER (LDD)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 XER (LDD)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 XER (LDD)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 14 XER (LDD)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[C] 2012	A 14 XER (LDD)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[C] 2012	A 17 DTC 1.7 (LUE)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 17 DTC 1.7 (LUE)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 17 DTC 1.7 (LUE)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 17 DTC 1.7 (LUE)	EPS (Electronic Power Steering)	●	●	●	●
Meriva-B	[C] 2012	A 17 DTC 1.7 (LUE)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 17 DTC 1.7 (LUE)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[C] 2012	A 17 DTC 1.7 (LUE)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 17 DTC 1.7 (LUE)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 17 DTC 1.7 (LUE)	BCM (Body Control Module)	●	●	●	●

Meriva-B	[C] 2012	A 17 DTC 1.7(LUE)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 17 DTC 1.7(LUE)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[C] 2012	A 17 DTC 1.7(LUE)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 17 DTC 1.7(LUE)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 17 DTC 1.7(LUE)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[C] 2012	A 17 DTC 1.7(LUE)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[C] 2012	A 17 DTS 1.7(LUD)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 17 DTS 1.7(LUD)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 17 DTS 1.7(LUD)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 17 DTS 1.7(LUD)	EPS (Electronic Power Steering)	●	●	●	●
Meriva-B	[C] 2012	A 17 DTS 1.7(LUD)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 17 DTS 1.7(LUD)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[C] 2012	A 17 DTS 1.7(LUD)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 17 DTS 1.7(LUD)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 17 DTS 1.7(LUD)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 17 DTS 1.7(LUD)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 17 DTS 1.7(LUD)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[C] 2012	A 17 DTS 1.7(LUD)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 17 DTS 1.7(LUD)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Meriva-B	[C] 2012	A 17 DTS 1.7(LUD)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[C] 2012	A 17 DTS 1.7(LUD)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[C] 2012	Engine Control Module	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[C] 2012	Engine Control Module	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[C] 2012	Engine Control Module	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[C] 2012	Engine Control Module	EPS (Electronic Power Steering)	●	●	●	●
Meriva-B	[C] 2012	Engine Control Module	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[C] 2012	Engine Control Module	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[C] 2012	Engine Control Module	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[C] 2012	Engine Control Module	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[C] 2012	Engine Control Module	BCM (Body Control Module)	●	●	●	●
Meriva-B	[C] 2012	Engine Control Module	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[C] 2012	Engine Control Module	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[C] 2012	Engine Control Module	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[C] 2012	Engine Control Module	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Meriva-B	[C] 2012	Engine Control Module	IC (Instrument Cluster)	●	●	●	●

Meriva-B	[C] 2012	Engine Control Module	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[B] 2011	A 13 DTC 1.3(LDV)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 13 DTC 1.3(LDV)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 13 DTC 1.3(LDV)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 13 DTC 1.3(LDV)	EPS (Electronic Power Steering)	●	●	●	●
Meriva-B	[B] 2011	A 13 DTC 1.3(LDV)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 13 DTC 1.3(LDV)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[B] 2011	A 13 DTC 1.3(LDV)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 13 DTC 1.3(LDV)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 13 DTC 1.3(LDV)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 13 DTC 1.3(LDV)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 13 DTC 1.3(LDV)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[B] 2011	A 13 DTC 1.3(LDV)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 13 DTC 1.3(LDV)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 13 DTC 1.3(LDV)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[B] 2011	A 13 DTC 1.3(LDV)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[B] 2011	A 13 DTE 1.3(LSF)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 13 DTE 1.3(LSF)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 13 DTE 1.3(LSF)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 13 DTE 1.3(LSF)	EPS (Electronic Power Steering)	●	●	●	●
Meriva-B	[B] 2011	A 13 DTE 1.3(LSF)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 13 DTE 1.3(LSF)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[B] 2011	A 13 DTE 1.3(LSF)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 13 DTE 1.3(LSF)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 13 DTE 1.3(LSF)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 13 DTE 1.3(LSF)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 13 DTE 1.3(LSF)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[B] 2011	A 13 DTE 1.3(LSF)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 13 DTE 1.3(LSF)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 13 DTE 1.3(LSF)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[B] 2011	A 13 DTE 1.3(LSF)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 NEL (LUH)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 NEL (LUH)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 NEL (LUH)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 NEL (LUH)	EPS (Electronic Power Steering)	●	●	●	●
Meriva-B	[B] 2011	A 14 NEL (LUH)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 NEL (LUH)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 NEL (LUH)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 NEL (LUH)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 NEL (LUH)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 NEL (LUH)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 NEL (LUH)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●

Meriva-B	[B] 2011	A 14 NEL (LUH)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 NEL (LUH)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 NEL (LUH)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[B] 2011	A 14 NEL (LUH)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 NET (LUJ)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 NET (LUJ)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 NET (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 NET (LUJ)	EPS (Electronic Power Steering)	●	●	●	●
Meriva-B	[B] 2011	A 14 NET (LUJ)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 NET (LUJ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 NET (LUJ)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 NET (LUJ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 NET (LUJ)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 NET (LUJ)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 NET (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 NET (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 NET (LUJ)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 NET (LUJ)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[B] 2011	A 14 NET (LUJ)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 XER (LDD)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 XER (LDD)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 XER (LDD)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 XER (LDD)	EPS (Electronic Power Steering)	●	●	●	●
Meriva-B	[B] 2011	A 14 XER (LDD)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 XER (LDD)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 XER (LDD)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 XER (LDD)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 XER (LDD)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 XER (LDD)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 XER (LDD)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 XER (LDD)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 XER (LDD)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 14 XER (LDD)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[B] 2011	A 14 XER (LDD)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[B] 2011	A 17 DTC 1.7 (LUE)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 17 DTC 1.7 (LUE)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 17 DTC 1.7 (LUE)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 17 DTC 1.7 (LUE)	EPS (Electronic Power Steering)	●	●	●	●
Meriva-B	[B] 2011	A 17 DTC 1.7 (LUE)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 17 DTC 1.7 (LUE)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[B] 2011	A 17 DTC 1.7 (LUE)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 17 DTC 1.7 (LUE)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 17 DTC 1.7 (LUE)	BCM (Body Control Module)	●	●	●	●

Meriva-B	[B] 2011	A 17 DTC 1.7(LUE)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 17 DTC 1.7(LUE)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[B] 2011	A 17 DTC 1.7(LUE)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 17 DTC 1.7(LUE)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 17 DTC 1.7(LUE)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[B] 2011	A 17 DTC 1.7(LUE)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[B] 2011	A 17 DTS 1.7(LUD)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 17 DTS 1.7(LUD)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 17 DTS 1.7(LUD)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 17 DTS 1.7(LUD)	EPS (Electronic Power Steering)	●	●	●	●
Meriva-B	[B] 2011	A 17 DTS 1.7(LUD)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 17 DTS 1.7(LUD)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[B] 2011	A 17 DTS 1.7(LUD)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 17 DTS 1.7(LUD)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 17 DTS 1.7(LUD)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 17 DTS 1.7(LUD)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 17 DTS 1.7(LUD)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[B] 2011	A 17 DTS 1.7(LUD)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 17 DTS 1.7(LUD)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Meriva-B	[B] 2011	A 17 DTS 1.7(LUD)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[B] 2011	A 17 DTS 1.7(LUD)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[B] 2011	Engine Control Module	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[B] 2011	Engine Control Module	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[B] 2011	Engine Control Module	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[B] 2011	Engine Control Module	EPS (Electronic Power Steering)	●	●	●	●
Meriva-B	[B] 2011	Engine Control Module	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[B] 2011	Engine Control Module	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[B] 2011	Engine Control Module	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[B] 2011	Engine Control Module	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[B] 2011	Engine Control Module	BCM (Body Control Module)	●	●	●	●
Meriva-B	[B] 2011	Engine Control Module	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[B] 2011	Engine Control Module	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[B] 2011	Engine Control Module	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[B] 2011	Engine Control Module	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Meriva-B	[B] 2011	Engine Control Module	IC (Instrument Cluster)	●	●	●	●

Meriva-B	[B] 2011	Engine Control Module	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[A] 2010	A 13 DTC 1.3(LDV)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 13 DTC 1.3(LDV)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 13 DTC 1.3(LDV)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 13 DTC 1.3(LDV)	EPS (Electronic Power Steering)	●	●	●	●
Meriva-B	[A] 2010	A 13 DTC 1.3(LDV)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 13 DTC 1.3(LDV)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[A] 2010	A 13 DTC 1.3(LDV)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 13 DTC 1.3(LDV)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 13 DTC 1.3(LDV)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 13 DTC 1.3(LDV)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 13 DTC 1.3(LDV)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[A] 2010	A 13 DTC 1.3(LDV)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 13 DTC 1.3(LDV)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 13 DTC 1.3(LDV)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[A] 2010	A 13 DTC 1.3(LDV)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[A] 2010	A 13 DTE 1.3(LSF)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 13 DTE 1.3(LSF)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 13 DTE 1.3(LSF)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 13 DTE 1.3(LSF)	EPS (Electronic Power Steering)	●	●	●	●
Meriva-B	[A] 2010	A 13 DTE 1.3(LSF)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 13 DTE 1.3(LSF)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[A] 2010	A 13 DTE 1.3(LSF)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 13 DTE 1.3(LSF)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 13 DTE 1.3(LSF)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 13 DTE 1.3(LSF)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 13 DTE 1.3(LSF)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[A] 2010	A 13 DTE 1.3(LSF)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 13 DTE 1.3(LSF)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 13 DTE 1.3(LSF)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[A] 2010	A 13 DTE 1.3(LSF)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 NEL (LUH)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 NEL (LUH)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 NEL (LUH)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 NEL (LUH)	EPS (Electronic Power Steering)	●	●	●	●
Meriva-B	[A] 2010	A 14 NEL (LUH)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 NEL (LUH)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 NEL (LUH)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 NEL (LUH)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 NEL (LUH)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 NEL (LUH)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 NEL (LUH)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●

Meriva-B	[A] 2010	A 14 NEL (LUH)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 NEL (LUH)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 NEL (LUH)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[A] 2010	A 14 NEL (LUH)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 NET (LUJ)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 NET (LUJ)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 NET (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 NET (LUJ)	EPS (Electronic Power Steering)	●	●	●	●
Meriva-B	[A] 2010	A 14 NET (LUJ)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 NET (LUJ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 NET (LUJ)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 NET (LUJ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 NET (LUJ)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 NET (LUJ)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 NET (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 NET (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 NET (LUJ)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 NET (LUJ)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[A] 2010	A 14 NET (LUJ)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 XER (LDD)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 XER (LDD)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 XER (LDD)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 XER (LDD)	EPS (Electronic Power Steering)	●	●	●	●
Meriva-B	[A] 2010	A 14 XER (LDD)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 XER (LDD)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 XER (LDD)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 XER (LDD)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 XER (LDD)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 XER (LDD)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 XER (LDD)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 XER (LDD)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 XER (LDD)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 14 XER (LDD)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[A] 2010	A 14 XER (LDD)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[A] 2010	A 17 DTC 1.7 (LUE)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 17 DTC 1.7 (LUE)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 17 DTC 1.7 (LUE)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 17 DTC 1.7 (LUE)	EPS (Electronic Power Steering)	●	●	●	●
Meriva-B	[A] 2010	A 17 DTC 1.7 (LUE)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 17 DTC 1.7 (LUE)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[A] 2010	A 17 DTC 1.7 (LUE)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 17 DTC 1.7 (LUE)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 17 DTC 1.7 (LUE)	BCM (Body Control Module)	●	●	●	●

Meriva-B	[A] 2010	A 17 DTC 1.7(LUE)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 17 DTC 1.7(LUE)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[A] 2010	A 17 DTC 1.7(LUE)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 17 DTC 1.7(LUE)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 17 DTC 1.7(LUE)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[A] 2010	A 17 DTC 1.7(LUE)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[A] 2010	A 17 DTS 1.7(LUD)	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 17 DTS 1.7(LUD)	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 17 DTS 1.7(LUD)	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 17 DTS 1.7(LUD)	EPS (Electronic Power Steering)	●	●	●	●
Meriva-B	[A] 2010	A 17 DTS 1.7(LUD)	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 17 DTS 1.7(LUD)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[A] 2010	A 17 DTS 1.7(LUD)	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 17 DTS 1.7(LUD)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 17 DTS 1.7(LUD)	BCM (Body Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 17 DTS 1.7(LUD)	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 17 DTS 1.7(LUD)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[A] 2010	A 17 DTS 1.7(LUD)	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 17 DTS 1.7(LUD)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Meriva-B	[A] 2010	A 17 DTS 1.7(LUD)	IC (Instrument Cluster)	●	●	●	●
Meriva-B	[A] 2010	A 17 DTS 1.7(LUD)	TIM (Trailer Interface Module)	●	●	●	●
Meriva-B	[A] 2010	Engine Control Module	ECM (Engine Control Module)	●	●	●	●
Meriva-B	[A] 2010	Engine Control Module	TCM (Transmission Control Module)	●	●	●	●
Meriva-B	[A] 2010	Engine Control Module	EBCM (Electronic Brake Control Module)	●	●	●	●
Meriva-B	[A] 2010	Engine Control Module	EPS (Electronic Power Steering)	●	●	●	●
Meriva-B	[A] 2010	Engine Control Module	PBCM (Parking Brake Control Module)	●	●	●	●
Meriva-B	[A] 2010	Engine Control Module	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Meriva-B	[A] 2010	Engine Control Module	FICM (Fuel Injector Control Module)	●	●	●	●
Meriva-B	[A] 2010	Engine Control Module	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Meriva-B	[A] 2010	Engine Control Module	BCM (Body Control Module)	●	●	●	●
Meriva-B	[A] 2010	Engine Control Module	HCM (Headlamp Control Module)	●	●	●	●
Meriva-B	[A] 2010	Engine Control Module	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Meriva-B	[A] 2010	Engine Control Module	PACM (Parking Assist Control Module)	●	●	●	●
Meriva-B	[A] 2010	Engine Control Module	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Meriva-B	[A] 2010	Engine Control Module	IC (Instrument Cluster)	●	●	●	●

Meriva-B	[A] 2010	Engine Control Module	TIM (Trailer Interface Module)	●	●	●	●
Mokka	[G] 2016	1.4L (LUJ)	ECM (Engine Control Module)	●	●	●	●
Mokka	[G] 2016	1.4L (LUJ)	FICM (Fuel Injector Control Module)	●	●	●	●
Mokka	[G] 2016	1.4L (LUJ)	TCM (Transmission Control Module)	●	●	●	●
Mokka	[G] 2016	1.4L (LUJ)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Mokka	[G] 2016	1.4L (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Mokka	[G] 2016	1.4L (LUJ)	PSCM (Power Steering Control Module)	●	●	●	●
Mokka	[G] 2016	1.4L (LUJ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Mokka	[G] 2016	1.4L (LUJ)	BCM (Body Control Module)	●	●	●	●
Mokka	[G] 2016	1.4L (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Mokka	[G] 2016	1.4L (LUJ)	IC (Instrument Cluster)	●	●	●	●
Mokka	[G] 2016	1.4L (LUJ)	HCM (Headlamp Control Module)	●	●	●	●
Mokka	[G] 2016	1.4L (LUJ)	TIM (Trailer Interface Module)	●	●	●	●
Mokka	[G] 2016	1.4L (LUJ)	Radio	●	●	●	●
Mokka	[G] 2016	1.4L (LUJ)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Mokka	[G] 2016	1.4L (LUJ)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Mokka	[G] 2016	1.4L (LUJ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Mokka	[G] 2016	1.4L (LUJ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Mokka	[G] 2016	1.4L (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Mokka	[G] 2016	1.4L (LUJ)	FCM (Frontview Camera Module)	●	●	●	●
Mokka	[G] 2016	1.6L (LDE)	ECM (Engine Control Module)	●	●	●	●
Mokka	[G] 2016	1.6L (LDE)	FICM (Fuel Injector Control Module)	●	●	●	●
Mokka	[G] 2016	1.6L (LDE)	TCM (Transmission Control Module)	●	●	●	●
Mokka	[G] 2016	1.6L (LDE)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Mokka	[G] 2016	1.6L (LDE)	EBCM (Electronic Brake Control Module)	●	●	●	●
Mokka	[G] 2016	1.6L (LDE)	PSCM (Power Steering Control Module)	●	●	●	●
Mokka	[G] 2016	1.6L (LDE)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Mokka	[G] 2016	1.6L (LDE)	BCM (Body Control Module)	●	●	●	●
Mokka	[G] 2016	1.6L (LDE)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Mokka	[G] 2016	1.6L (LDE)	IC (Instrument Cluster)	●	●	●	●
Mokka	[G] 2016	1.6L (LDE)	HCM (Headlamp Control Module)	●	●	●	●
Mokka	[G] 2016	1.6L (LDE)	TIM (Trailer Interface Module)	●	●	●	●
Mokka	[G] 2016	1.6L (LDE)	Radio	●	●	●	●
Mokka	[G] 2016	1.6L (LDE)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Mokka	[G] 2016	1.6L (LDE)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Mokka	[G] 2016	1.6L (LDE)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Mokka	[G] 2016	1.6L (LDE)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Mokka	[G] 2016	1.6L (LDE)	PACM (Parking Assist Control Module)	●	●	●	●
Mokka	[G] 2016	1.6L (LDE)	FCM (Frontview Camera Module)	●	●	●	●
Mokka	[G] 2016	1.6L (LVL)	ECM (Engine Control Module)	●	●	●	●
Mokka	[G] 2016	1.6L (LVL)	FICM (Fuel Injector Control Module)	●	●	●	●
Mokka	[G] 2016	1.6L (LVL)	TCM (Transmission Control Module)	●	●	●	●
Mokka	[G] 2016	1.6L (LVL)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Mokka	[G] 2016	1.6L (LVL)	EBCM (Electronic Brake Control Module)	●	●	●	●
Mokka	[G] 2016	1.6L (LVL)	PSCM (Power Steering Control Module)	●	●	●	●
Mokka	[G] 2016	1.6L (LVL)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Mokka	[G] 2016	1.6L (LVL)	BCM (Body Control Module)	●	●	●	●
Mokka	[G] 2016	1.6L (LVL)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Mokka	[G] 2016	1.6L (LVL)	IC (Instrument Cluster)	●	●	●	●
Mokka	[G] 2016	1.6L (LVL)	HCM (Headlamp Control Module)	●	●	●	●
Mokka	[G] 2016	1.6L (LVL)	TIM (Trailer Interface Module)	●	●	●	●
Mokka	[G] 2016	1.6L (LVL)	Radio	●	●	●	●

Mokka	[G] 2016	1.6L (LVL)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Mokka	[G] 2016	1.6L (LVL)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Mokka	[G] 2016	1.6L (LVL)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Mokka	[G] 2016	1.6L (LVL)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Mokka	[G] 2016	1.6L (LVL)	PACM (Parking Assist Control Module)	●	●	●	●
Mokka	[G] 2016	1.6L (LVL)	FCM (Frontview Camera Module)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (AWD F46)	ECM (Engine Control Module)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (AWD F46)	FICM (Fuel Injector Control Module)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (AWD F46)	TCM (Transmission Control Module)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (AWD F46)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (AWD F46)	EBCM (Electronic Brake Control Module)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (AWD F46)	PSCM (Power Steering Control Module)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (AWD F46)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (AWD F46)	BCM (Body Control Module)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (AWD F46)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (AWD F46)	IC (Instrument Cluster)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (AWD F46)	HCM (Headlamp Control Module)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (AWD F46)	TIM (Trailer Interface Module)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (AWD F46)	Radio	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (AWD F46)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (AWD F46)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (AWD F46)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (AWD F46)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (AWD F46)	PACM (Parking Assist Control Module)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (AWD F46)	FCM (Frontview Camera Module)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (2WD Front)	ECM (Engine Control Module)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (2WD Front)	FICM (Fuel Injector Control Module)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (2WD Front)	TCM (Transmission Control Module)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (2WD Front)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (2WD Front)	EBCM (Electronic Brake Control Module)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (2WD Front)	PSCM (Power Steering Control Module)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (2WD Front)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (2WD Front)	BCM (Body Control Module)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (2WD Front)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (2WD Front)	IC (Instrument Cluster)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (2WD Front)	HCM (Headlamp Control Module)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (2WD Front)	TIM (Trailer Interface Module)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (2WD Front)	Radio	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (2WD Front)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (2WD Front)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (2WD Front)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (2WD Front)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Mokka	[G] 2016	1.8L (2HO) (2WD Front)	PACM (Parking Assist Control Module)	●	●	●	●

Mokka	[G] 2016	1.8L (2H0) (2WD Front)	FCM (Frontview Camera Module)	●	●	●	●
Mokka	[F] 2015	1.4L (LUJ)	ECM (Engine Control Module)	●	●	●	●
Mokka	[F] 2015	1.4L (LUJ)	FICM (Fuel Injector Control Module)	●	●	●	●
Mokka	[F] 2015	1.4L (LUJ)	TCM (Transmission Control Module)	●	●	●	●
Mokka	[F] 2015	1.4L (LUJ)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Mokka	[F] 2015	1.4L (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Mokka	[F] 2015	1.4L (LUJ)	PSCM (Power Steering Control Module)	●	●	●	●
Mokka	[F] 2015	1.4L (LUJ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Mokka	[F] 2015	1.4L (LUJ)	BCM (Body Control Module)	●	●	●	●
Mokka	[F] 2015	1.4L (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Mokka	[F] 2015	1.4L (LUJ)	IC (Instrument Cluster)	●	●	●	●
Mokka	[F] 2015	1.4L (LUJ)	HCM (Headlamp Control Module)	●	●	●	●
Mokka	[F] 2015	1.4L (LUJ)	TIM (Trailer Interface Module)	●	●	●	●
Mokka	[F] 2015	1.4L (LUJ)	Radio	●	●	●	●
Mokka	[F] 2015	1.4L (LUJ)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Mokka	[F] 2015	1.4L (LUJ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Mokka	[F] 2015	1.4L (LUJ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Mokka	[F] 2015	1.4L (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Mokka	[F] 2015	1.4L (LUJ)	FCM (Frontview Camera Module)	●	●	●	●
Mokka	[F] 2015	1.6L (LDE)	ECM (Engine Control Module)	●	●	●	●
Mokka	[F] 2015	1.6L (LDE)	FICM (Fuel Injector Control Module)	●	●	●	●
Mokka	[F] 2015	1.6L (LDE)	TCM (Transmission Control Module)	●	●	●	●
Mokka	[F] 2015	1.6L (LDE)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Mokka	[F] 2015	1.6L (LDE)	EBCM (Electronic Brake Control Module)	●	●	●	●
Mokka	[F] 2015	1.6L (LDE)	PSCM (Power Steering Control Module)	●	●	●	●
Mokka	[F] 2015	1.6L (LDE)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Mokka	[F] 2015	1.6L (LDE)	BCM (Body Control Module)	●	●	●	●
Mokka	[F] 2015	1.6L (LDE)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Mokka	[F] 2015	1.6L (LDE)	IC (Instrument Cluster)	●	●	●	●
Mokka	[F] 2015	1.6L (LDE)	HCM (Headlamp Control Module)	●	●	●	●
Mokka	[F] 2015	1.6L (LDE)	TIM (Trailer Interface Module)	●	●	●	●
Mokka	[F] 2015	1.6L (LDE)	Radio	●	●	●	●
Mokka	[F] 2015	1.6L (LDE)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Mokka	[F] 2015	1.6L (LDE)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Mokka	[F] 2015	1.6L (LDE)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Mokka	[F] 2015	1.6L (LDE)	PACM (Parking Assist Control Module)	●	●	●	●
Mokka	[F] 2015	1.6L (LDE)	FCM (Frontview Camera Module)	●	●	●	●
Mokka	[F] 2015	1.6L (LVL)	ECM (Engine Control Module)	●	●	●	●
Mokka	[F] 2015	1.6L (LVL)	FICM (Fuel Injector Control Module)	●	●	●	●
Mokka	[F] 2015	1.6L (LVL)	TCM (Transmission Control Module)	●	●	●	●
Mokka	[F] 2015	1.6L (LVL)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Mokka	[F] 2015	1.6L (LVL)	EBCM (Electronic Brake Control Module)	●	●	●	●
Mokka	[F] 2015	1.6L (LVL)	PSCM (Power Steering Control Module)	●	●	●	●
Mokka	[F] 2015	1.6L (LVL)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Mokka	[F] 2015	1.6L (LVL)	BCM (Body Control Module)	●	●	●	●
Mokka	[F] 2015	1.6L (LVL)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Mokka	[F] 2015	1.6L (LVL)	IC (Instrument Cluster)	●	●	●	●
Mokka	[F] 2015	1.6L (LVL)	HCM (Headlamp Control Module)	●	●	●	●
Mokka	[F] 2015	1.6L (LVL)	TIM (Trailer Interface Module)	●	●	●	●
Mokka	[F] 2015	1.6L (LVL)	Radio	●	●	●	●
Mokka	[F] 2015	1.6L (LVL)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Mokka	[F] 2015	1.6L (LVL)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●

Mokka	[F] 2015	1.6L (LVL)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Mokka	[F] 2015	1.6L (LVL)	PACM (Parking Assist Control Module)	●	●	●	●
Mokka	[F] 2015	1.6L (LVL)	FCM (Frontview Camera Module)	●	●	●	●
Mokka	[F] 2015	1.7L (LUD)	ECM (Engine Control Module)	●	●	●	●
Mokka	[F] 2015	1.7L (LUD)	FICM (Fuel Injector Control Module)	●	●	●	●
Mokka	[F] 2015	1.7L (LUD)	TCM (Transmission Control Module)	●	●	●	●
Mokka	[F] 2015	1.7L (LUD)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Mokka	[F] 2015	1.7L (LUD)	EBCM (Electronic Brake Control Module)	●	●	●	●
Mokka	[F] 2015	1.7L (LUD)	PSCM (Power Steering Control Module)	●	●	●	●
Mokka	[F] 2015	1.7L (LUD)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Mokka	[F] 2015	1.7L (LUD)	BCM (Body Control Module)	●	●	●	●
Mokka	[F] 2015	1.7L (LUD)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Mokka	[F] 2015	1.7L (LUD)	IC (Instrument Cluster)	●	●	●	●
Mokka	[F] 2015	1.7L (LUD)	HCM (Headlamp Control Module)	●	●	●	●
Mokka	[F] 2015	1.7L (LUD)	TIM (Trailer Interface Module)	●	●	●	●
Mokka	[F] 2015	1.7L (LUD)	Radio	●	●	●	●
Mokka	[F] 2015	1.7L (LUD)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Mokka	[F] 2015	1.7L (LUD)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Mokka	[F] 2015	1.7L (LUD)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Mokka	[F] 2015	1.7L (LUD)	PACM (Parking Assist Control Module)	●	●	●	●
Mokka	[F] 2015	1.7L (LUD)	FCM (Frontview Camera Module)	●	●	●	●
Mokka	[F] 2015	1.8L (2HO) (AWD F46)	ECM (Engine Control Module)	●	●	●	●
Mokka	[F] 2015	1.8L (2HO) (AWD F46)	FICM (Fuel Injector Control Module)	●	●	●	●
Mokka	[F] 2015	1.8L (2HO) (AWD F46)	TCM (Transmission Control Module)	●	●	●	●
Mokka	[F] 2015	1.8L (2HO) (AWD F46)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Mokka	[F] 2015	1.8L (2HO) (AWD F46)	EBCM (Electronic Brake Control Module)	●	●	●	●
Mokka	[F] 2015	1.8L (2HO) (AWD F46)	PSCM (Power Steering Control Module)	●	●	●	●
Mokka	[F] 2015	1.8L (2HO) (AWD F46)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Mokka	[F] 2015	1.8L (2HO) (AWD F46)	BCM (Body Control Module)	●	●	●	●
Mokka	[F] 2015	1.8L (2HO) (AWD F46)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Mokka	[F] 2015	1.8L (2HO) (AWD F46)	IC (Instrument Cluster)	●	●	●	●
Mokka	[F] 2015	1.8L (2HO) (AWD F46)	HCM (Headlamp Control Module)	●	●	●	●
Mokka	[F] 2015	1.8L (2HO) (AWD F46)	TIM (Trailer Interface Module)	●	●	●	●
Mokka	[F] 2015	1.8L (2HO) (AWD F46)	Radio	●	●	●	●
Mokka	[F] 2015	1.8L (2HO) (AWD F46)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Mokka	[F] 2015	1.8L (2HO) (AWD F46)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Mokka	[F] 2015	1.8L (2HO) (AWD F46)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Mokka	[F] 2015	1.8L (2HO) (AWD F46)	PACM (Parking Assist Control Module)	●	●	●	●
Mokka	[F] 2015	1.8L (2HO) (AWD F46)	FCM (Frontview Camera Module)	●	●	●	●
Mokka	[F] 2015	1.8L (2HO) (2WD Front)	ECM (Engine Control Module)	●	●	●	●
Mokka	[F] 2015	1.8L (2HO) (2WD Front)	FICM (Fuel Injector Control Module)	●	●	●	●
Mokka	[F] 2015	1.8L (2HO) (2WD Front)	TCM (Transmission Control Module)	●	●	●	●
Mokka	[F] 2015	1.8L (2HO) (2WD Front)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Mokka	[F] 2015	1.8L (2HO) (2WD Front)	EBCM (Electronic Brake Control Module)	●	●	●	●
Mokka	[F] 2015	1.8L (2HO) (2WD Front)	PSCM (Power Steering Control Module)	●	●	●	●
Mokka	[F] 2015	1.8L (2HO) (2WD Front)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Mokka	[F] 2015	1.8L (2HO) (2WD Front)	BCM (Body Control Module)	●	●	●	●

Mokka	[F] 2015	1. 8L (2HO) (2WD Front)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Mokka	[F] 2015	1. 8L (2HO) (2WD Front)	IC (Instrument Cluster)	●	●	●	●
Mokka	[F] 2015	1. 8L (2HO) (2WD Front)	HCM (Headlamp Control Module)	●	●	●	●
Mokka	[F] 2015	1. 8L (2HO) (2WD Front)	TIM (Trailer Interface Module)	●	●	●	●
Mokka	[F] 2015	1. 8L (2HO) (2WD Front)	Radio	●	●	●	●
Mokka	[F] 2015	1. 8L (2HO) (2WD Front)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Mokka	[F] 2015	1. 8L (2HO) (2WD Front)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Mokka	[F] 2015	1. 8L (2HO) (2WD Front)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Mokka	[F] 2015	1. 8L (2HO) (2WD Front)	PACM (Parking Assist Control Module)	●	●	●	●
Mokka	[F] 2015	1. 8L (2HO) (2WD Front)	FCM (Frontview Camera Module)	●	●	●	●
Mokka	[E] 2014	1. 4L (LUJ)	ECM (Engine Control Module)	●	●	●	●
Mokka	[E] 2014	1. 4L (LUJ)	FICM (Fuel Injector Control Module)	●	●	●	●
Mokka	[E] 2014	1. 4L (LUJ)	TCM (Transmission Control Module)	●	●	●	●
Mokka	[E] 2014	1. 4L (LUJ)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Mokka	[E] 2014	1. 4L (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Mokka	[E] 2014	1. 4L (LUJ)	PSCM (Power Steering Control Module)	●	●	●	●
Mokka	[E] 2014	1. 4L (LUJ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Mokka	[E] 2014	1. 4L (LUJ)	BCM (Body Control Module)	●	●	●	●
Mokka	[E] 2014	1. 4L (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Mokka	[E] 2014	1. 4L (LUJ)	IC (Instrument Cluster)	●	●	●	●
Mokka	[E] 2014	1. 4L (LUJ)	HCM (Headlamp Control Module)	●	●	●	●
Mokka	[E] 2014	1. 4L (LUJ)	TIM (Trailer Interface Module)	●	●	●	●
Mokka	[E] 2014	1. 4L (LUJ)	Radio	●	●	●	●
Mokka	[E] 2014	1. 4L (LUJ)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Mokka	[E] 2014	1. 4L (LUJ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Mokka	[E] 2014	1. 4L (LUJ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Mokka	[E] 2014	1. 4L (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Mokka	[E] 2014	1. 4L (LUJ)	FCM (Frontview Camera Module)	●	●	●	●
Mokka	[E] 2014	1. 6L (LDE)	ECM (Engine Control Module)	●	●	●	●
Mokka	[E] 2014	1. 6L (LDE)	FICM (Fuel Injector Control Module)	●	●	●	●
Mokka	[E] 2014	1. 6L (LDE)	TCM (Transmission Control Module)	●	●	●	●
Mokka	[E] 2014	1. 6L (LDE)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Mokka	[E] 2014	1. 6L (LDE)	EBCM (Electronic Brake Control Module)	●	●	●	●
Mokka	[E] 2014	1. 6L (LDE)	PSCM (Power Steering Control Module)	●	●	●	●
Mokka	[E] 2014	1. 6L (LDE)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Mokka	[E] 2014	1. 6L (LDE)	BCM (Body Control Module)	●	●	●	●
Mokka	[E] 2014	1. 6L (LDE)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Mokka	[E] 2014	1. 6L (LDE)	IC (Instrument Cluster)	●	●	●	●
Mokka	[E] 2014	1. 6L (LDE)	HCM (Headlamp Control Module)	●	●	●	●
Mokka	[E] 2014	1. 6L (LDE)	TIM (Trailer Interface Module)	●	●	●	●
Mokka	[E] 2014	1. 6L (LDE)	Radio	●	●	●	●
Mokka	[E] 2014	1. 6L (LDE)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Mokka	[E] 2014	1. 6L (LDE)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Mokka	[E] 2014	1. 6L (LDE)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Mokka	[E] 2014	1. 6L (LDE)	PACM (Parking Assist Control Module)	●	●	●	●
Mokka	[E] 2014	1. 6L (LDE)	FCM (Frontview Camera Module)	●	●	●	●
Mokka	[E] 2014	1. 7L (LUD)	ECM (Engine Control Module)	●	●	●	●
Mokka	[E] 2014	1. 7L (LUD)	FICM (Fuel Injector Control Module)	●	●	●	●
Mokka	[E] 2014	1. 7L (LUD)	TCM (Transmission Control Module)	●	●	●	●
Mokka	[E] 2014	1. 7L (LUD)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Mokka	[E] 2014	1. 7L (LUD)	EBCM (Electronic Brake Control Module)	●	●	●	●

Mokka	[E] 2014	1.7L (LUD)	PSCM (Power Steering Control Module)	●	●	●	●
Mokka	[E] 2014	1.7L (LUD)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Mokka	[E] 2014	1.7L (LUD)	BCM (Body Control Module)	●	●	●	●
Mokka	[E] 2014	1.7L (LUD)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Mokka	[E] 2014	1.7L (LUD)	IC (Instrument Cluster)	●	●	●	●
Mokka	[E] 2014	1.7L (LUD)	HCM (Headlamp Control Module)	●	●	●	●
Mokka	[E] 2014	1.7L (LUD)	TIM (Trailer Interface Module)	●	●	●	●
Mokka	[E] 2014	1.7L (LUD)	Radio	●	●	●	●
Mokka	[E] 2014	1.7L (LUD)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Mokka	[E] 2014	1.7L (LUD)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Mokka	[E] 2014	1.7L (LUD)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Mokka	[E] 2014	1.7L (LUD)	PACM (Parking Assist Control Module)	●	●	●	●
Mokka	[E] 2014	1.7L (LUD)	FCM (Frontview Camera Module)	●	●	●	●
Mokka	[E] 2014	1.8L (2HO) (AWD F46)	ECM (Engine Control Module)	●	●	●	●
Mokka	[E] 2014	1.8L (2HO) (AWD F46)	FICM (Fuel Injector Control Module)	●	●	●	●
Mokka	[E] 2014	1.8L (2HO) (AWD F46)	TCM (Transmission Control Module)	●	●	●	●
Mokka	[E] 2014	1.8L (2HO) (AWD F46)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Mokka	[E] 2014	1.8L (2HO) (AWD F46)	EBCM (Electronic Brake Control Module)	●	●	●	●
Mokka	[E] 2014	1.8L (2HO) (AWD F46)	PSCM (Power Steering Control Module)	●	●	●	●
Mokka	[E] 2014	1.8L (2HO) (AWD F46)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Mokka	[E] 2014	1.8L (2HO) (AWD F46)	BCM (Body Control Module)	●	●	●	●
Mokka	[E] 2014	1.8L (2HO) (AWD F46)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Mokka	[E] 2014	1.8L (2HO) (AWD F46)	IC (Instrument Cluster)	●	●	●	●
Mokka	[E] 2014	1.8L (2HO) (AWD F46)	HCM (Headlamp Control Module)	●	●	●	●
Mokka	[E] 2014	1.8L (2HO) (AWD F46)	TIM (Trailer Interface Module)	●	●	●	●
Mokka	[E] 2014	1.8L (2HO) (AWD F46)	Radio	●	●	●	●
Mokka	[E] 2014	1.8L (2HO) (AWD F46)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Mokka	[E] 2014	1.8L (2HO) (AWD F46)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Mokka	[E] 2014	1.8L (2HO) (AWD F46)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Mokka	[E] 2014	1.8L (2HO) (AWD F46)	PACM (Parking Assist Control Module)	●	●	●	●
Mokka	[E] 2014	1.8L (2HO) (AWD F46)	FCM (Frontview Camera Module)	●	●	●	●
Mokka	[E] 2014	1.8L (2HO) (2WD Front)	ECM (Engine Control Module)	●	●	●	●
Mokka	[E] 2014	1.8L (2HO) (2WD Front)	FICM (Fuel Injector Control Module)	●	●	●	●
Mokka	[E] 2014	1.8L (2HO) (2WD Front)	TCM (Transmission Control Module)	●	●	●	●
Mokka	[E] 2014	1.8L (2HO) (2WD Front)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Mokka	[E] 2014	1.8L (2HO) (2WD Front)	EBCM (Electronic Brake Control Module)	●	●	●	●
Mokka	[E] 2014	1.8L (2HO) (2WD Front)	PSCM (Power Steering Control Module)	●	●	●	●
Mokka	[E] 2014	1.8L (2HO) (2WD Front)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Mokka	[E] 2014	1.8L (2HO) (2WD Front)	BCM (Body Control Module)	●	●	●	●
Mokka	[E] 2014	1.8L (2HO) (2WD Front)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Mokka	[E] 2014	1.8L (2HO) (2WD Front)	IC (Instrument Cluster)	●	●	●	●
Mokka	[E] 2014	1.8L (2HO) (2WD Front)	HCM (Headlamp Control Module)	●	●	●	●
Mokka	[E] 2014	1.8L (2HO) (2WD Front)	TIM (Trailer Interface Module)	●	●	●	●
Mokka	[E] 2014	1.8L (2HO) (2WD Front)	Radio	●	●	●	●
Mokka	[E] 2014	1.8L (2HO) (2WD Front)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●

Mokka	[E] 2014	1. 8L (2HO) (2WD Front)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Mokka	[E] 2014	1. 8L (2HO) (2WD Front)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Mokka	[E] 2014	1. 8L (2HO) (2WD Front)	PACM (Parking Assist Control Module)	●	●	●	●
Mokka	[E] 2014	1. 8L (2HO) (2WD Front)	FCM (Frontview Camera Module)	●	●	●	●
Mokka	[D] 2013	1. 4L (LUJ)	ECM (Engine Control Module)	●	●	●	●
Mokka	[D] 2013	1. 4L (LUJ)	TCM (Transmission Control Module)	●	●	●	●
Mokka	[D] 2013	1. 4L (LUJ)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Mokka	[D] 2013	1. 4L (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Mokka	[D] 2013	1. 4L (LUJ)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Mokka	[D] 2013	1. 4L (LUJ)	PSCM (Power Steering Control Module)	●	●	●	●
Mokka	[D] 2013	1. 4L (LUJ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Mokka	[D] 2013	1. 4L (LUJ)	BCM (Body Control Module)	●	●	●	●
Mokka	[D] 2013	1. 4L (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Mokka	[D] 2013	1. 4L (LUJ)	IC (Instrument Cluster)	●	●	●	●
Mokka	[D] 2013	1. 4L (LUJ)	HCM (Headlamp Control Module)	●	●	●	●
Mokka	[D] 2013	1. 4L (LUJ)	TIM (Trailer Interface Module)	●	●	●	●
Mokka	[D] 2013	1. 4L (LUJ)	Radio	●	●	●	●
Mokka	[D] 2013	1. 4L (LUJ)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Mokka	[D] 2013	1. 4L (LUJ)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Mokka	[D] 2013	1. 4L (LUJ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Mokka	[D] 2013	1. 4L (LUJ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Mokka	[D] 2013	1. 4L (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Mokka	[D] 2013	1. 4L (LUJ)	FCM (Frontview Camera Module)	●	●	●	●
Mokka	[D] 2013	1. 6L (LDE) with Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Mokka	[D] 2013	1. 6L (LDE) with Sart/Stop System(KL9)	TCM (Transmission Control Module)	●	●	●	●
Mokka	[D] 2013	1. 6L (LDE) with Sart/Stop System(KL9)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Mokka	[D] 2013	1. 6L (LDE) with Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Mokka	[D] 2013	1. 6L (LDE) with Sart/Stop System(KL9)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Mokka	[D] 2013	1. 6L (LDE) with Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Mokka	[D] 2013	1. 6L (LDE) with Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Mokka	[D] 2013	1. 6L (LDE) with Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Mokka	[D] 2013	1. 6L (LDE) with Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Mokka	[D] 2013	1. 6L (LDE) with Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Mokka	[D] 2013	1. 6L (LDE) with Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Mokka	[D] 2013	1. 6L (LDE) with Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Mokka	[D] 2013	1. 6L (LDE) with Sart/Stop System(KL9)	Radio	●	●	●	●
Mokka	[D] 2013	1. 6L (LDE) with Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Mokka	[D] 2013	1. 6L (LDE) with Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●

Mokka	[D] 2013	1.6L (LDE) with Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Mokka	[D] 2013	1.6L (LDE) with Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Mokka	[D] 2013	1.6L (LDE) with Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Mokka	[D] 2013	1.6L (LDE) with Sart/Stop System(KL9)	FCM (Frontview Camera Module)	●	●	●	●
Mokka	[D] 2013	1.6L (LDE) without Sart/Stop System(KL9)	ECM (Engine Control Module)	●	●	●	●
Mokka	[D] 2013	1.6L (LDE) without Sart/Stop System(KL9)	TCM (Transmission Control Module)	●	●	●	●
Mokka	[D] 2013	1.6L (LDE) without Sart/Stop System(KL9)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Mokka	[D] 2013	1.6L (LDE) without Sart/Stop System(KL9)	EBCM (Electronic Brake Control Module)	●	●	●	●
Mokka	[D] 2013	1.6L (LDE) without Sart/Stop System(KL9)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Mokka	[D] 2013	1.6L (LDE) without Sart/Stop System(KL9)	PSCM (Power Steering Control Module)	●	●	●	●
Mokka	[D] 2013	1.6L (LDE) without Sart/Stop System(KL9)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Mokka	[D] 2013	1.6L (LDE) without Sart/Stop System(KL9)	BCM (Body Control Module)	●	●	●	●
Mokka	[D] 2013	1.6L (LDE) without Sart/Stop System(KL9)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Mokka	[D] 2013	1.6L (LDE) without Sart/Stop System(KL9)	IC (Instrument Cluster)	●	●	●	●
Mokka	[D] 2013	1.6L (LDE) without Sart/Stop System(KL9)	HCM (Headlamp Control Module)	●	●	●	●
Mokka	[D] 2013	1.6L (LDE) without Sart/Stop System(KL9)	TIM (Trailer Interface Module)	●	●	●	●
Mokka	[D] 2013	1.6L (LDE) without Sart/Stop System(KL9)	Radio	●	●	●	●
Mokka	[D] 2013	1.6L (LDE) without Sart/Stop System(KL9)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Mokka	[D] 2013	1.6L (LDE) without Sart/Stop System(KL9)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Mokka	[D] 2013	1.6L (LDE) without Sart/Stop System(KL9)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Mokka	[D] 2013	1.6L (LDE) without Sart/Stop System(KL9)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Mokka	[D] 2013	1.6L (LDE) without Sart/Stop System(KL9)	PACM (Parking Assist Control Module)	●	●	●	●
Mokka	[D] 2013	1.6L (LDE) without Sart/Stop System(KL9)	FCM (Frontview Camera Module)	●	●	●	●
Mokka	[D] 2013	1.7L (LUD)	ECM (Engine Control Module)	●	●	●	●
Mokka	[D] 2013	1.7L (LUD)	TCM (Transmission Control Module)	●	●	●	●
Mokka	[D] 2013	1.7L (LUD)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Mokka	[D] 2013	1.7L (LUD)	EBCM (Electronic Brake Control Module)	●	●	●	●
Mokka	[D] 2013	1.7L (LUD)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Mokka	[D] 2013	1.7L (LUD)	PSCM (Power Steering Control Module)	●	●	●	●
Mokka	[D] 2013	1.7L (LUD)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Mokka	[D] 2013	1.7L (LUD)	BCM (Body Control Module)	●	●	●	●
Mokka	[D] 2013	1.7L (LUD)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Mokka	[D] 2013	1.7L (LUD)	IC (Instrument Cluster)	●	●	●	●

Mokka	[D] 2013	1.7L (LUD)	HCM (Headlamp Control Module)	●	●	●	●
Mokka	[D] 2013	1.7L (LUD)	TIM (Trailer Interface Module)	●	●	●	●
Mokka	[D] 2013	1.7L (LUD)	Radio	●	●	●	●
Mokka	[D] 2013	1.7L (LUD)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Mokka	[D] 2013	1.7L (LUD)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Mokka	[D] 2013	1.7L (LUD)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Mokka	[D] 2013	1.7L (LUD)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Mokka	[D] 2013	1.7L (LUD)	PACM (Parking Assist Control Module)	●	●	●	●
Mokka	[D] 2013	1.7L (LUD)	FCM (Frontview Camera Module)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (AWD F46)	ECM (Engine Control Module)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (AWD F46)	TCM (Transmission Control Module)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (AWD F46)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (AWD F46)	EBCM (Electronic Brake Control Module)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (AWD F46)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (AWD F46)	PSCM (Power Steering Control Module)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (AWD F46)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (AWD F46)	BCM (Body Control Module)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (AWD F46)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (AWD F46)	IC (Instrument Cluster)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (AWD F46)	HCM (Headlamp Control Module)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (AWD F46)	TIM (Trailer Interface Module)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (AWD F46)	Radio	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (AWD F46)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (AWD F46)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (AWD F46)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (AWD F46)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (AWD F46)	PACM (Parking Assist Control Module)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (AWD F46)	FCM (Frontview Camera Module)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (2WD Front)	ECM (Engine Control Module)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (2WD Front)	TCM (Transmission Control Module)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (2WD Front)	RDCCM (Rear Differential Clutch Control Module)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (2WD Front)	EBCM (Electronic Brake Control Module)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (2WD Front)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (2WD Front)	PSCM (Power Steering Control Module)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (2WD Front)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (2WD Front)	BCM (Body Control Module)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (2WD Front)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (2WD Front)	IC (Instrument Cluster)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (2WD Front)	HCM (Headlamp Control Module)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (2WD Front)	TIM (Trailer Interface Module)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (2WD Front)	Radio	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (2WD Front)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (2WD Front)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Mokka	[D] 2013	1.8L (2HO) (2WD Front)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●

Mokka	[D] 2013	1. 8L (2HO) (2WD Front)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Mokka	[D] 2013	1. 8L (2HO) (2WD Front)	PACM (Parking Assist Control Module)	●	●	●	●
Mokka	[D] 2013	1. 8L (2HO) (2WD Front)	FCM (Frontview Camera Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOB)	ECM (Engine Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOB)	TCM (Transmission Control Module) - Front Wheel Driver	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOB)	TCM (Transmission Control Module) - Rear Wheel Driver	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOB)	EBCM (Electronic Brake Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOB)	PSCM (Power Steering Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOB)	BCM (Body Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOB)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOB)	SDGM (Serial Data Gateway Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOB)	MACM (Multifunction Accessory Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOB)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOB)	IC (Instrument Cluster)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOB)	TPIM (Tire Pressure Indicator Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOB)	Radio	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOB)	HVAC (Heating Ventilation Air-conditioning and Cooling) - Auto Control	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOB)	HVAC (Heating Ventilation Air-conditioning and Cooling) - Manual Control	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOB)	IDM (Info Display Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOB)	PACM (Parking Assist Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOB)	FCM (Frontview Camera Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOB)	RCM (Reductant Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOC)	ECM (Engine Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOC)	TCM (Transmission Control Module) - Front Wheel Driver	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOC)	TCM (Transmission Control Module) - Rear Wheel Driver	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOC)	EBCM (Electronic Brake Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOC)	PSCM (Power Steering Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOC)	BCM (Body Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOC)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOC)	SDGM (Serial Data Gateway Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOC)	MACM (Multifunction Accessory Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOC)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOC)	IC (Instrument Cluster)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOC)	TPIM (Tire Pressure Indicator Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOC)	Radio	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOC)	HVAC (Heating Ventilation Air-conditioning and Cooling) - Auto Control	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOC)	HVAC (Heating Ventilation Air-conditioning and Cooling) - Manual Control	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOC)	IDM (Info Display Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOC)	PACM (Parking Assist Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOC)	FCM (Frontview Camera Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOC)	RCM (Reductant Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 5B NCM)	ECM (Engine Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 5B NCM)	TCM (Transmission Control Module) - Front Wheel Driver	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 5B NCM)	TCM (Transmission Control Module) - Rear Wheel Driver	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 5B NCM)	EBCM (Electronic Brake Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 5B NCM)	PSCM (Power Steering Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 5B NCM)	BCM (Body Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 5B NCM)	ABCM (Auxiliary Body Control Module)	●	●	●	●

Movano-B	[G] 2016	2. 3L (LOD) (Euro 5B NCM)	SDGM (Serial Data Gateway Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 5B NCM)	MACM (Multifunction Accessory Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 5B NCM)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 5B NCM)	IC (Instrument Cluster)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 5B NCM)	TPIM (Tire Pressure Indicator Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 5B NCM)	Radio	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 5B NCM)	HVAC (Heating Ventilation Air-conditioning and Cooling) - Auto Control	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 5B NCM)	HVAC (Heating Ventilation Air-conditioning and Cooling) - Manual Control	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 5B NCM)	IDM (Info Display Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 5B NCM)	PACM (Parking Assist Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 5B NCM)	FCM (Frontview Camera Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 5B NCM)	RCM (Reductant Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 6 NCP)	ECM (Engine Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 6 NCP)	TCM (Transmission Control Module) - Front Wheel Driver	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 6 NCP)	TCM (Transmission Control Module) - Rear Wheel Driver	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 6 NCP)	EBCM (Electronic Brake Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 6 NCP)	PSCM (Power Steering Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 6 NCP)	BCM (Body Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 6 NCP)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 6 NCP)	SDGM (Serial Data Gateway Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 6 NCP)	MACM (Multifunction Accessory Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 6 NCP)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 6 NCP)	IC (Instrument Cluster)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 6 NCP)	TPIM (Tire Pressure Indicator Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 6 NCP)	Radio	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 6 NCP)	HVAC (Heating Ventilation Air-conditioning and Cooling) - Auto Control	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 6 NCP)	HVAC (Heating Ventilation Air-conditioning and Cooling) - Manual Control	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 6 NCP)	IDM (Info Display Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 6 NCP)	PACM (Parking Assist Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 6 NCP)	FCM (Frontview Camera Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LOD) (Euro 6 NCP)	RCM (Reductant Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (L2U)	ECM (Engine Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (L2U)	TCM (Transmission Control Module) - Front Wheel Driver	●	●	●	●
Movano-B	[G] 2016	2. 3L (L2U)	TCM (Transmission Control Module) - Rear Wheel Driver	●	●	●	●
Movano-B	[G] 2016	2. 3L (L2U)	EBCM (Electronic Brake Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (L2U)	PSCM (Power Steering Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (L2U)	BCM (Body Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (L2U)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (L2U)	SDGM (Serial Data Gateway Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (L2U)	MACM (Multifunction Accessory Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (L2U)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (L2U)	IC (Instrument Cluster)	●	●	●	●
Movano-B	[G] 2016	2. 3L (L2U)	TPIM (Tire Pressure Indicator Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (L2U)	Radio	●	●	●	●

Movano-B	[G] 2016	2. 3L (L2U)	HVAC (Heating Ventilation Air-conditioning and Cooling) – Auto Control	●	●	●	●
Movano-B	[G] 2016	2. 3L (L2U)	HVAC (Heating Ventilation Air-conditioning and Cooling) – Manual Control	●	●	●	●
Movano-B	[G] 2016	2. 3L (L2U)	IDM (Info Display Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (L2U)	PACM (Parking Assist Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (L2U)	FCM (Frontview Camera Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (L2U)	RCM (Reductant Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LP6)	ECM (Engine Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LP6)	TCM (Transmission Control Module) – Front Wheel Driver	●	●	●	●
Movano-B	[G] 2016	2. 3L (LP6)	TCM (Transmission Control Module) – Rear Wheel Driver	●	●	●	●
Movano-B	[G] 2016	2. 3L (LP6)	EBCM (Electronic Brake Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LP6)	PSCM (Power Steering Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LP6)	BCM (Body Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LP6)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LP6)	SDGM (Serial Data Gateway Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LP6)	MACM (Multifunction Accessory Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LP6)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LP6)	IC (Instrument Cluster)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LP6)	TPIM (Tire Pressure Indicator Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LP6)	Radio	●	●	●	●
Movano-B	[G] 2016	2. 3L (LP6)	HVAC (Heating Ventilation Air-conditioning and Cooling) – Auto Control	●	●	●	●
Movano-B	[G] 2016	2. 3L (LP6)	HVAC (Heating Ventilation Air-conditioning and Cooling) – Manual Control	●	●	●	●
Movano-B	[G] 2016	2. 3L (LP6)	IDM (Info Display Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LP6)	PACM (Parking Assist Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LP6)	FCM (Frontview Camera Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LP6)	RCM (Reductant Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LW7)	ECM (Engine Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LW7)	TCM (Transmission Control Module) – Front Wheel Driver	●	●	●	●
Movano-B	[G] 2016	2. 3L (LW7)	TCM (Transmission Control Module) – Rear Wheel Driver	●	●	●	●
Movano-B	[G] 2016	2. 3L (LW7)	EBCM (Electronic Brake Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LW7)	PSCM (Power Steering Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LW7)	BCM (Body Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LW7)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LW7)	SDGM (Serial Data Gateway Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LW7)	MACM (Multifunction Accessory Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LW7)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LW7)	IC (Instrument Cluster)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LW7)	TPIM (Tire Pressure Indicator Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LW7)	Radio	●	●	●	●
Movano-B	[G] 2016	2. 3L (LW7)	HVAC (Heating Ventilation Air-conditioning and Cooling) – Auto Control	●	●	●	●
Movano-B	[G] 2016	2. 3L (LW7)	HVAC (Heating Ventilation Air-conditioning and Cooling) – Manual Control	●	●	●	●
Movano-B	[G] 2016	2. 3L (LW7)	IDM (Info Display Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LW7)	PACM (Parking Assist Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LW7)	FCM (Frontview Camera Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LW7)	RCM (Reductant Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWJ)	ECM (Engine Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWJ)	TCM (Transmission Control Module) – Front Wheel Driver	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWJ)	TCM (Transmission Control Module) – Rear Wheel Driver	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWJ)	PSCM (Power Steering Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWJ)	BCM (Body Control Module)	●	●	●	●

Movano-B	[G] 2016	2. 3L (LWJ)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWJ)	SDGM (Serial Data Gateway Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWJ)	MACM (Multifunction Accessory Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWJ)	IC (Instrument Cluster)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWJ)	TPIM (Tire Pressure Indicator Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWJ)	Radio	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWJ)	HVAC (Heating Ventilation Air-conditioning and Cooling) - Auto Control	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWJ)	HVAC (Heating Ventilation Air-conditioning and Cooling) - Manual Control	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWJ)	IDM (Info Display Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWJ)	PACM (Parking Assist Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWJ)	FCM (Frontview Camera Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWJ)	RCM (Reductant Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWK)	ECM (Engine Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWK)	TCM (Transmission Control Module) - Front Wheel Driver	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWK)	TCM (Transmission Control Module) - Rear Wheel Driver	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWK)	EBCM (Electronic Brake Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWK)	PSCM (Power Steering Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWK)	BCM (Body Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWK)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWK)	SDGM (Serial Data Gateway Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWK)	MACM (Multifunction Accessory Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWK)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWK)	IC (Instrument Cluster)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWK)	TPIM (Tire Pressure Indicator Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWK)	Radio	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWK)	HVAC (Heating Ventilation Air-conditioning and Cooling) - Auto Control	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWK)	HVAC (Heating Ventilation Air-conditioning and Cooling) - Manual Control	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWK)	IDM (Info Display Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWK)	PACM (Parking Assist Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWK)	FCM (Frontview Camera Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWK)	RCM (Reductant Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWL)	ECM (Engine Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWL)	TCM (Transmission Control Module) - Front Wheel Driver	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWL)	TCM (Transmission Control Module) - Rear Wheel Driver	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWL)	EBCM (Electronic Brake Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWL)	PSCM (Power Steering Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWL)	BCM (Body Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWL)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWL)	SDGM (Serial Data Gateway Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWL)	MACM (Multifunction Accessory Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWL)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWL)	IC (Instrument Cluster)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWL)	TPIM (Tire Pressure Indicator Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWL)	Radio	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWL)	HVAC (Heating Ventilation Air-conditioning and Cooling) - Auto Control	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWL)	HVAC (Heating Ventilation Air-conditioning and Cooling) - Manual Control	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWL)	IDM (Info Display Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWL)	PACM (Parking Assist Control Module)	●	●	●	●
Movano-B	[G] 2016	2. 3L (LWL)	FCM (Frontview Camera Module)	●	●	●	●

Movano-B	[G] 2016	2. 3L (LWL)	RCM (Reductant Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOB)	ECM (Engine Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOB)	TCM (Transmission Control Module) - Front Wheel Driver	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOB)	TCM (Transmission Control Module) - Rear Wheel Driver	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOB)	EBCM (Electronic Brake Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOB)	PSCM (Power Steering Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOB)	BCM (Body Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOB)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOB)	SDGM (Serial Data Gateway Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOB)	MACM (Multifunction Accessory Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOB)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOB)	IC (Instrument Cluster)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOB)	TPIM (Tire Pressure Indicator Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOB)	Radio	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOB)	NCM (Navigation Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOB)	HVAC (Heating Ventilation Air-conditioning and Cooling) - Auto Control	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOB)	HVAC (Heating Ventilation Air-conditioning and Cooling) - Manual Control	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOB)	PACM (Parking Assist Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOC)	ECM (Engine Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOC)	TCM (Transmission Control Module) - Front Wheel Driver	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOC)	TCM (Transmission Control Module) - Rear Wheel Driver	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOC)	EBCM (Electronic Brake Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOC)	PSCM (Power Steering Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOC)	BCM (Body Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOC)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOC)	SDGM (Serial Data Gateway Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOC)	MACM (Multifunction Accessory Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOC)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOC)	IC (Instrument Cluster)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOC)	TPIM (Tire Pressure Indicator Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOC)	Radio	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOC)	NCM (Navigation Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOC)	HVAC (Heating Ventilation Air-conditioning and Cooling) - Auto Control	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOC)	HVAC (Heating Ventilation Air-conditioning and Cooling) - Manual Control	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOC)	PACM (Parking Assist Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOD)	ECM (Engine Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOD)	TCM (Transmission Control Module) - Front Wheel Driver	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOD)	TCM (Transmission Control Module) - Rear Wheel Driver	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOD)	EBCM (Electronic Brake Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOD)	PSCM (Power Steering Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOD)	BCM (Body Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOD)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOD)	SDGM (Serial Data Gateway Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOD)	MACM (Multifunction Accessory Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOD)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOD)	IC (Instrument Cluster)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOD)	TPIM (Tire Pressure Indicator Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOD)	Radio	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOD)	NCM (Navigation Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOD)	HVAC (Heating Ventilation Air-conditioning and Cooling) - Auto Control	●	●	●	●

Movano-B	[F] 2015	2. 3L (LOD)	HVAC (Heating Ventilation Air-conditioning and Cooling) - Manual Control	●	●	●	●
Movano-B	[F] 2015	2. 3L (LOD)	PACM (Parking Assist Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (L2U)	ECM (Engine Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (L2U)	TCM (Transmission Control Module) - Front Wheel Driver	●	●	●	●
Movano-B	[F] 2015	2. 3L (L2U)	TCM (Transmission Control Module) - Rear Wheel Driver	●	●	●	●
Movano-B	[F] 2015	2. 3L (L2U)	EBCM (Electronic Brake Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (L2U)	PSCM (Power Steering Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (L2U)	BCM (Body Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (L2U)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (L2U)	SDGM (Serial Data Gateway Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (L2U)	MACM (Multifunction Accessory Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (L2U)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (L2U)	IC (Instrument Cluster)	●	●	●	●
Movano-B	[F] 2015	2. 3L (L2U)	TPIM (Tire Pressure Indicator Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (L2U)	Radio	●	●	●	●
Movano-B	[F] 2015	2. 3L (L2U)	NCM (Navigation Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (L2U)	HVAC (Heating Ventilation Air-conditioning and Cooling) - Auto Control	●	●	●	●
Movano-B	[F] 2015	2. 3L (L2U)	HVAC (Heating Ventilation Air-conditioning and Cooling) - Manual Control	●	●	●	●
Movano-B	[F] 2015	2. 3L (L2U)	PACM (Parking Assist Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LWJ)	ECM (Engine Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LWJ)	TCM (Transmission Control Module) - Front Wheel Driver	●	●	●	●
Movano-B	[F] 2015	2. 3L (LWJ)	TCM (Transmission Control Module) - Rear Wheel Driver	●	●	●	●
Movano-B	[F] 2015	2. 3L (LWJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LWJ)	PSCM (Power Steering Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LWJ)	BCM (Body Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LWJ)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LWJ)	SDGM (Serial Data Gateway Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LWJ)	MACM (Multifunction Accessory Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LWJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LWJ)	IC (Instrument Cluster)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LWJ)	TPIM (Tire Pressure Indicator Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LWJ)	Radio	●	●	●	●
Movano-B	[F] 2015	2. 3L (LWJ)	NCM (Navigation Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LWJ)	HVAC (Heating Ventilation Air-conditioning and Cooling) - Auto Control	●	●	●	●
Movano-B	[F] 2015	2. 3L (LWJ)	HVAC (Heating Ventilation Air-conditioning and Cooling) - Manual Control	●	●	●	●
Movano-B	[F] 2015	2. 3L (LWJ)	PACM (Parking Assist Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LWL)	ECM (Engine Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LWL)	TCM (Transmission Control Module) - Front Wheel Driver	●	●	●	●
Movano-B	[F] 2015	2. 3L (LWL)	TCM (Transmission Control Module) - Rear Wheel Driver	●	●	●	●
Movano-B	[F] 2015	2. 3L (LWL)	EBCM (Electronic Brake Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LWL)	PSCM (Power Steering Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LWL)	BCM (Body Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LWL)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LWL)	SDGM (Serial Data Gateway Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LWL)	MACM (Multifunction Accessory Control Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LWL)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LWL)	IC (Instrument Cluster)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LWL)	TPIM (Tire Pressure Indicator Module)	●	●	●	●
Movano-B	[F] 2015	2. 3L (LWL)	Radio	●	●	●	●
Movano-B	[F] 2015	2. 3L (LWL)	NCM (Navigation Control Module)	●	●	●	●

Movano-B	[F] 2015	2.3L (LWL)	HVAC (Heating Ventilation Air-conditioning and Cooling) – Auto Control	●	●	●	●
Movano-B	[F] 2015	2.3L (LWL)	HVAC (Heating Ventilation Air-conditioning and Cooling) – Manual Control	●	●	●	●
Movano-B	[F] 2015	2.3L (LWL)	PACM (Parking Assist Control Module)	●	●	●	●
Omega-B	[3] 2003	Y 22 DTH	ECM (Engine Control Module)	●	●	●	●
Omega-B	[3] 2003	Y 22 DTH	AR 25/35	●	●	●	●
Omega-B	[3] 2003	Y 22 DTH	5L40-E	●	●	●	●
Omega-B	[3] 2003	Y 22 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Omega-B	[3] 2003	Y 22 DTH	ESP (Electronic Stability Program)	●	●	●	●
Omega-B	[3] 2003	Y 22 DTH	AOH (Add On Heater)	●	●	●	●
Omega-B	[3] 2003	Y 22 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Omega-B	[3] 2003	Y 22 DTH	IMMO (Immobiliser)	●	●	●	●
Omega-B	[3] 2003	Z 22 XE	ECM (Engine Control Module)	●	●	●	●
Omega-B	[3] 2003	Z 22 XE	AR 25/35	●	●	●	●
Omega-B	[3] 2003	Z 22 XE	5L40-E	●	●	●	●
Omega-B	[3] 2003	Z 22 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Omega-B	[3] 2003	Z 22 XE	ESP (Electronic Stability Program)	●	●	●	●
Omega-B	[3] 2003	Z 22 XE	AOH (Add On Heater)	●	●	●	●
Omega-B	[3] 2003	Z 22 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Omega-B	[3] 2003	Z 22 XE	IMMO (Immobiliser)	●	●	●	●
Omega-B	[3] 2003	Y 26 SE	ECM (Engine Control Module)	●	●	●	●
Omega-B	[3] 2003	Y 26 SE	AR 25/35	●	●	●	●
Omega-B	[3] 2003	Y 26 SE	5L40-E	●	●	●	●
Omega-B	[3] 2003	Y 26 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Omega-B	[3] 2003	Y 26 SE	ESP (Electronic Stability Program)	●	●	●	●
Omega-B	[3] 2003	Y 26 SE	AOH (Add On Heater)	●	●	●	●
Omega-B	[3] 2003	Y 26 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Omega-B	[3] 2003	Y 26 SE	IMMO (Immobiliser)	●	●	●	●
Omega-B	[3] 2003	Y 32 SE	ECM (Engine Control Module)	●	●	●	●
Omega-B	[3] 2003	Y 32 SE	AR 25/35	●	●	●	●
Omega-B	[3] 2003	Y 32 SE	5L40-E	●	●	●	●
Omega-B	[3] 2003	Y 32 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Omega-B	[3] 2003	Y 32 SE	ESP (Electronic Stability Program)	●	●	●	●
Omega-B	[3] 2003	Y 32 SE	AOH (Add On Heater)	●	●	●	●
Omega-B	[3] 2003	Y 32 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Omega-B	[3] 2003	Y 32 SE	IMMO (Immobiliser)	●	●	●	●
Omega-B	[3] 2003	Y 25 DT	ECM (Engine Control Module)	●	●	●	●
Omega-B	[2] 2002	Y 22 DTH	ECM (Engine Control Module)	●	●	●	●
Omega-B	[2] 2002	Y 22 DTH	AR 25/35	●	●	●	●
Omega-B	[2] 2002	Y 22 DTH	5L40-E	●	●	●	●
Omega-B	[2] 2002	Y 22 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Omega-B	[2] 2002	Y 22 DTH	ESP (Electronic Stability Program)	●	●	●	●
Omega-B	[2] 2002	Y 22 DTH	AOH (Add On Heater)	●	●	●	●
Omega-B	[2] 2002	Y 22 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Omega-B	[2] 2002	Y 22 DTH	IMMO (Immobiliser)	●	●	●	●
Omega-B	[2] 2002	Z 22 XE	ECM (Engine Control Module)	●	●	●	●
Omega-B	[2] 2002	Z 22 XE	AR 25/35	●	●	●	●
Omega-B	[2] 2002	Z 22 XE	5L40-E	●	●	●	●
Omega-B	[2] 2002	Z 22 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Omega-B	[2] 2002	Z 22 XE	ESP (Electronic Stability Program)	●	●	●	●
Omega-B	[2] 2002	Z 22 XE	AOH (Add On Heater)	●	●	●	●
Omega-B	[2] 2002	Z 22 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Omega-B	[2] 2002	Z 22 XE	IMMO (Immobiliser)	●	●	●	●
Omega-B	[2] 2002	Y 26 SE	ECM (Engine Control Module)	●	●	●	●
Omega-B	[2] 2002	Y 26 SE	AR 25/35	●	●	●	●
Omega-B	[2] 2002	Y 26 SE	5L40-E	●	●	●	●
Omega-B	[2] 2002	Y 26 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Omega-B	[2] 2002	Y 26 SE	ESP (Electronic Stability Program)	●	●	●	●

Omega-B	[2] 2002	Y 26 SE	AOH (Add On Heater)	●	●	●	●
Omega-B	[2] 2002	Y 26 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Omega-B	[2] 2002	Y 26 SE	IMMO (Immobiliser)	●	●	●	●
Omega-B	[2] 2002	Y 32 SE	ECM (Engine Control Module)	●	●	●	●
Omega-B	[2] 2002	Y 32 SE	AR 25/35	●	●	●	●
Omega-B	[2] 2002	Y 32 SE	5L40-E	●	●	●	●
Omega-B	[2] 2002	Y 32 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Omega-B	[2] 2002	Y 32 SE	ESP (Electronic Stability Program)	●	●	●	●
Omega-B	[2] 2002	Y 32 SE	AOH (Add On Heater)	●	●	●	●
Omega-B	[2] 2002	Y 32 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Omega-B	[2] 2002	Y 32 SE	IMMO (Immobiliser)	●	●	●	●
Omega-B	[2] 2002	Y 25 DT	ECM (Engine Control Module)	●	●	●	●
Omega-B	[1] 2001	X 20 XEV	ECM (Engine Control Module)	●	●	●	●
Omega-B	[1] 2001	X 20 XEV	AR 25/35	●	●	●	●
Omega-B	[1] 2001	X 20 XEV	5L40-E	●	●	●	●
Omega-B	[1] 2001	X 20 XEV	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Omega-B	[1] 2001	X 20 XEV	ESP (Electronic Stability Program)	●	●	●	●
Omega-B	[1] 2001	X 20 XEV	AOH (Add On Heater)	●	●	●	●
Omega-B	[1] 2001	X 20 XEV	HLD (HeadLamp Levelling Device)	●	●	●	●
Omega-B	[1] 2001	X 20 XEV	IMMO (Immobiliser)	●	●	●	●
Omega-B	[1] 2001	Y 22 DTH	ECM (Engine Control Module)	●	●	●	●
Omega-B	[1] 2001	Y 22 DTH	AR 25/35	●	●	●	●
Omega-B	[1] 2001	Y 22 DTH	5L40-E	●	●	●	●
Omega-B	[1] 2001	Y 22 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Omega-B	[1] 2001	Y 22 DTH	ESP (Electronic Stability Program)	●	●	●	●
Omega-B	[1] 2001	Y 22 DTH	AOH (Add On Heater)	●	●	●	●
Omega-B	[1] 2001	Y 22 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Omega-B	[1] 2001	Y 22 DTH	IMMO (Immobiliser)	●	●	●	●
Omega-B	[1] 2001	Z 22 XE	ECM (Engine Control Module)	●	●	●	●
Omega-B	[1] 2001	Z 22 XE	AR 25/35	●	●	●	●
Omega-B	[1] 2001	Z 22 XE	5L40-E	●	●	●	●
Omega-B	[1] 2001	Z 22 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Omega-B	[1] 2001	Z 22 XE	ESP (Electronic Stability Program)	●	●	●	●
Omega-B	[1] 2001	Z 22 XE	AOH (Add On Heater)	●	●	●	●
Omega-B	[1] 2001	Z 22 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Omega-B	[1] 2001	Z 22 XE	IMMO (Immobiliser)	●	●	●	●
Omega-B	[1] 2001	Y 26 SE	ECM (Engine Control Module)	●	●	●	●
Omega-B	[1] 2001	Y 26 SE	AR 25/35	●	●	●	●
Omega-B	[1] 2001	Y 26 SE	5L40-E	●	●	●	●
Omega-B	[1] 2001	Y 26 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Omega-B	[1] 2001	Y 26 SE	ESP (Electronic Stability Program)	●	●	●	●
Omega-B	[1] 2001	Y 26 SE	AOH (Add On Heater)	●	●	●	●
Omega-B	[1] 2001	Y 26 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Omega-B	[1] 2001	Y 26 SE	IMMO (Immobiliser)	●	●	●	●
Omega-B	[1] 2001	Y 32 SE	ECM (Engine Control Module)	●	●	●	●
Omega-B	[1] 2001	Y 32 SE	AR 25/35	●	●	●	●
Omega-B	[1] 2001	Y 32 SE	5L40-E	●	●	●	●
Omega-B	[1] 2001	Y 32 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Omega-B	[1] 2001	Y 32 SE	ESP (Electronic Stability Program)	●	●	●	●
Omega-B	[1] 2001	Y 32 SE	AOH (Add On Heater)	●	●	●	●
Omega-B	[1] 2001	Y 32 SE	HLD (HeadLamp Levelling Device)	●	●	●	●
Omega-B	[1] 2001	Y 32 SE	IMMO (Immobiliser)	●	●	●	●
Omega-B	[Y] 2000	X 20 DTH	ECM (Engine Control Module)	●	●	●	●
Omega-B	[Y] 2000	X 20 DTH	AR 25/35	●	●	●	●
Omega-B	[Y] 2000	X 20 DTH	5L40-E	●	●	●	●
Omega-B	[Y] 2000	X 20 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Omega-B	[Y] 2000	X 20 DTH	ESP (Electronic Stability Program)	●	●	●	●
Omega-B	[Y] 2000	X 20 DTH	AOH (Add On Heater)	●	●	●	●

Omega-B	[Y] 2000	X 20 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Omega-B	[Y] 2000	X 20 DTH	IMMO (Immobiliser)	●	●	●	●
Omega-B	[Y] 2000	X 20 XEV	ECM (Engine Control Module)	●	●	●	●
Omega-B	[Y] 2000	X 20 XEV	AR 25/35	●	●	●	●
Omega-B	[Y] 2000	X 20 XEV	5L40-E	●	●	●	●
Omega-B	[Y] 2000	X 20 XEV	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Omega-B	[Y] 2000	X 20 XEV	ESP (Electronic Stability Program)	●	●	●	●
Omega-B	[Y] 2000	X 20 XEV	AOH (Add On Heater)	●	●	●	●
Omega-B	[Y] 2000	X 20 XEV	HLD (HeadLamp Levelling Device)	●	●	●	●
Omega-B	[Y] 2000	X 20 XEV	IMMO (Immobiliser)	●	●	●	●
Omega-B	[Y] 2000	Y 22 XE	ECM (Engine Control Module)	●	●	●	●
Omega-B	[Y] 2000	Y 22 XE	AR 25/35	●	●	●	●
Omega-B	[Y] 2000	Y 22 XE	5L40-E	●	●	●	●
Omega-B	[Y] 2000	Y 22 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Omega-B	[Y] 2000	Y 22 XE	ESP (Electronic Stability Program)	●	●	●	●
Omega-B	[Y] 2000	Y 22 XE	AOH (Add On Heater)	●	●	●	●
Omega-B	[Y] 2000	Y 22 XE	HLD (HeadLamp Levelling Device)	●	●	●	●
Omega-B	[Y] 2000	Y 22 XE	IMMO (Immobiliser)	●	●	●	●
Omega-B	[X] 1999	X 20 XEV	ECM (Engine Control Module)	●	●	●	●
Omega-B	[X] 1999	X 20 XEV	AR 25/35	●	●	●	●
Omega-B	[X] 1999	X 20 XEV	5L40-E	●	●	●	●
Omega-B	[X] 1999	X 20 XEV	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Omega-B	[X] 1999	X 20 XEV	ESP (Electronic Stability Program)	●	●	●	●
Omega-B	[X] 1999	X 20 XEV	AOH (Add On Heater)	●	●	●	●
Omega-B	[X] 1999	X 20 XEV	HLD (HeadLamp Levelling Device)	●	●	●	●
Omega-B	[X] 1999	X 20 XEV	IMMO (Immobiliser)	●	●	●	●
Omega-B	[X] 1999	X 20 DTH	ECM (Engine Control Module)	●	●	●	●
Omega-B	[X] 1999	X 20 DTH	AR 25/35	●	●	●	●
Omega-B	[X] 1999	X 20 DTH	5L40-E	●	●	●	●
Omega-B	[X] 1999	X 20 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Omega-B	[X] 1999	X 20 DTH	ESP (Electronic Stability Program)	●	●	●	●
Omega-B	[X] 1999	X 20 DTH	AOH (Add On Heater)	●	●	●	●
Omega-B	[X] 1999	X 20 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Omega-B	[X] 1999	X 20 DTH	IMMO (Immobiliser)	●	●	●	●
Omega-B	[W] 1998	X 20 XEV	ECM (Engine Control Module)	●	●	●	●
Omega-B	[W] 1998	X 20 XEV	AR 25/35	●	●	●	●
Omega-B	[W] 1998	X 20 XEV	5L40-E	●	●	●	●
Omega-B	[W] 1998	X 20 XEV	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Omega-B	[W] 1998	X 20 XEV	ESP (Electronic Stability Program)	●	●	●	●
Omega-B	[W] 1998	X 20 XEV	AOH (Add On Heater)	●	●	●	●
Omega-B	[W] 1998	X 20 XEV	HLD (HeadLamp Levelling Device)	●	●	●	●
Omega-B	[W] 1998	X 20 XEV	IMMO (Immobiliser)	●	●	●	●
Omega-B	[W] 1998	X 20 DTH	ECM (Engine Control Module)	●	●	●	●
Omega-B	[W] 1998	X 20 DTH	AR 25/35	●	●	●	●
Omega-B	[W] 1998	X 20 DTH	5L40-E	●	●	●	●
Omega-B	[W] 1998	X 20 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Omega-B	[W] 1998	X 20 DTH	ESP (Electronic Stability Program)	●	●	●	●
Omega-B	[W] 1998	X 20 DTH	AOH (Add On Heater)	●	●	●	●
Omega-B	[W] 1998	X 20 DTH	HLD (HeadLamp Levelling Device)	●	●	●	●
Omega-B	[W] 1998	X 20 DTH	IMMO (Immobiliser)	●	●	●	●
Omega-B	[V] 1997	X 20 XEV	ECM (Engine Control Module)	●	●	●	●
Omega-B	[V] 1997	X 20 XEV	AR 25/35	●	●	●	●
Omega-B	[V] 1997	X 20 XEV	5L40-E	●	●	●	●
Omega-B	[V] 1997	X 20 XEV	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Omega-B	[V] 1997	X 20 XEV	ESP (Electronic Stability Program)	●	●	●	●
Omega-B	[V] 1997	X 20 XEV	AOH (Add On Heater)	●	●	●	●
Omega-B	[V] 1997	X 20 XEV	HLD (HeadLamp Levelling Device)	●	●	●	●
Omega-B	[V] 1997	X 20 XEV	IMMO (Immobiliser)	●	●	●	●

Sintra	[X] 1999	X 22 DTH	ECM (Engine Control Module)	●	●	●	●
Sintra	[X] 1999	X 22 DTH	BCM (Body Control Module)	●	●	●	●
Sintra	[X] 1999	X 22 DTH	IMMO (Immobiliser)	●	●	●	●
Sintra	[W] 1998	X 22 DTH	ECM (Engine Control Module)	●	●	●	●
Sintra	[W] 1998	X 22 DTH	BCM (Body Control Module)	●	●	●	●
Sintra	[W] 1998	X 22 DTH	IMMO (Immobiliser)	●	●	●	●
Speedster/VX220	[7] 2007	Z 20 LET	ECM (Engine Control Module)	●	●	●	●
Speedster/VX220	[7] 2007	Z 20 LET	ABS (Anti-locked Braking System 430)	●	●	●	●
Speedster/VX220	[7] 2007	Z 20 LET	IMMO (Immobiliser)	●	●	●	●
Speedster/VX220	[7] 2007	Z 22 SE	ECM (Engine Control Module)	●	●	●	●
Speedster/VX220	[7] 2007	Z 22 SE	ABS (Anti-locked Braking System 430)	●	●	●	●
Speedster/VX220	[7] 2007	Z 22 SE	IMMO (Immobiliser)	●	●	●	●
Speedster/VX220	[7] 2007	Z 22 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Speedster/VX220	[6] 2006	Z 20 LET	ECM (Engine Control Module)	●	●	●	●
Speedster/VX220	[6] 2006	Z 20 LET	ABS (Anti-locked Braking System 430)	●	●	●	●
Speedster/VX220	[6] 2006	Z 20 LET	IMMO (Immobiliser)	●	●	●	●
Speedster/VX220	[6] 2006	Z 22 SE	ECM (Engine Control Module)	●	●	●	●
Speedster/VX220	[6] 2006	Z 22 SE	ABS (Anti-locked Braking System 430)	●	●	●	●
Speedster/VX220	[6] 2006	Z 22 SE	IMMO (Immobiliser)	●	●	●	●
Speedster/VX220	[6] 2006	Z 22 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Speedster/VX220	[5] 2005	Z 22 SE	ECM (Engine Control Module)	●	●	●	●
Speedster/VX220	[5] 2005	Z 22 SE	ABS (Anti-locked Braking System 430)	●	●	●	●
Speedster/VX220	[5] 2005	Z 22 SE	IMMO (Immobiliser)	●	●	●	●
Speedster/VX220	[5] 2005	Z 22 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Speedster/VX220	[5] 2005	Z 20 LET	ECM (Engine Control Module)	●	●	●	●
Speedster/VX220	[5] 2005	Z 20 LET	ABS (Anti-locked Braking System 430)	●	●	●	●
Speedster/VX220	[5] 2005	Z 20 LET	IMMO (Immobiliser)	●	●	●	●
Speedster/VX220	[4] 2004	Z 22 SE	ECM (Engine Control Module)	●	●	●	●
Speedster/VX220	[4] 2004	Z 22 SE	ABS (Anti-locked Braking System 430)	●	●	●	●
Speedster/VX220	[4] 2004	Z 22 SE	IMMO (Immobiliser)	●	●	●	●
Speedster/VX220	[4] 2004	Z 22 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Speedster/VX220	[4] 2004	Z 20 LET	ECM (Engine Control Module)	●	●	●	●
Speedster/VX220	[4] 2004	Z 20 LET	ABS (Anti-locked Braking System 430)	●	●	●	●
Speedster/VX220	[4] 2004	Z 20 LET	IMMO (Immobiliser)	●	●	●	●
Speedster/VX220	[3] 2003	Z 20 LET	ECM (Engine Control Module)	●	●	●	●
Speedster/VX220	[3] 2003	Z 20 LET	ABS (Anti-locked Braking System 430)	●	●	●	●
Speedster/VX220	[3] 2003	Z 20 LET	IMMO (Immobiliser)	●	●	●	●
Speedster/VX220	[3] 2003	Z 22 SE	ECM (Engine Control Module)	●	●	●	●
Speedster/VX220	[3] 2003	Z 22 SE	ABS (Anti-locked Braking System 430)	●	●	●	●
Speedster/VX220	[3] 2003	Z 22 SE	IMMO (Immobiliser)	●	●	●	●
Speedster/VX220	[3] 2003	Z 22 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Speedster/VX220	[2] 2002	Z 20 LET	ECM (Engine Control Module)	●	●	●	●
Speedster/VX220	[2] 2002	Z 20 LET	ABS (Anti-locked Braking System 430)	●	●	●	●
Speedster/VX220	[2] 2002	Z 20 LET	IMMO (Immobiliser)	●	●	●	●
Speedster/VX220	[2] 2002	Z 22 SE	ECM (Engine Control Module)	●	●	●	●
Speedster/VX220	[2] 2002	Z 22 SE	ABS (Anti-locked Braking System 430)	●	●	●	●
Speedster/VX220	[2] 2002	Z 22 SE	IMMO (Immobiliser)	●	●	●	●
Speedster/VX220	[2] 2002	Z 22 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Speedster/VX220	[1] 2001	Z 22 SE	ECM (Engine Control Module)	●	●	●	●
Speedster/VX220	[1] 2001	Z 22 SE	ABS (Anti-locked Braking System 430)	●	●	●	●
Speedster/VX220	[1] 2001	Z 22 SE	IMMO (Immobiliser)	●	●	●	●
Speedster/VX220	[1] 2001	Z 22 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Tigra-B	[9] 2009	Z 13 DT	ECM (Engine Control Module)	●	●	●	●
Tigra-B	[9] 2009	Z 13 DT	MTA (Easytronic)	●	●	●	●
Tigra-B	[9] 2009	Z 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Tigra-B	[9] 2009	Z 13 DT	EPS (Electronic Power Steering)	●	●	●	●

Tigra-B	[9] 2009	Z 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Tigra-B	[9] 2009	Z 13 DT	IMMO (Immobiliser)	●	●	●	●
Tigra-B	[9] 2009	Z 13 DT	BCM (Body Control Module)	●	●	●	●
Tigra-B	[9] 2009	Z 13 DT	Electrohydraulic HardTop	●	●	●	●
Tigra-B	[9] 2009	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Tigra-B	[9] 2009	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Tigra-B	[9] 2009	Z 14 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Tigra-B	[9] 2009	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Tigra-B	[9] 2009	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Tigra-B	[9] 2009	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Tigra-B	[9] 2009	Z 14 XEP	BCM (Body Control Module)	●	●	●	●
Tigra-B	[9] 2009	Z 14 XEP	Electrohydraulic HardTop	●	●	●	●
Tigra-B	[9] 2009	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Tigra-B	[9] 2009	Z 18 XE	MTA (Easytronic)	●	●	●	●
Tigra-B	[9] 2009	Z 18 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Tigra-B	[9] 2009	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Tigra-B	[9] 2009	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Tigra-B	[9] 2009	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Tigra-B	[9] 2009	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Tigra-B	[9] 2009	Z 18 XE	Electrohydraulic HardTop	●	●	●	●
Tigra-B	[8] 2008	Z 13 DT	ECM (Engine Control Module)	●	●	●	●
Tigra-B	[8] 2008	Z 13 DT	MTA (Easytronic)	●	●	●	●
Tigra-B	[8] 2008	Z 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Tigra-B	[8] 2008	Z 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Tigra-B	[8] 2008	Z 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Tigra-B	[8] 2008	Z 13 DT	IMMO (Immobiliser)	●	●	●	●
Tigra-B	[8] 2008	Z 13 DT	BCM (Body Control Module)	●	●	●	●
Tigra-B	[8] 2008	Z 13 DT	Electrohydraulic HardTop	●	●	●	●
Tigra-B	[8] 2008	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Tigra-B	[8] 2008	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Tigra-B	[8] 2008	Z 14 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Tigra-B	[8] 2008	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Tigra-B	[8] 2008	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Tigra-B	[8] 2008	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Tigra-B	[8] 2008	Z 14 XEP	BCM (Body Control Module)	●	●	●	●
Tigra-B	[8] 2008	Z 14 XEP	Electrohydraulic HardTop	●	●	●	●
Tigra-B	[8] 2008	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Tigra-B	[8] 2008	Z 18 XE	MTA (Easytronic)	●	●	●	●
Tigra-B	[8] 2008	Z 18 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Tigra-B	[8] 2008	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Tigra-B	[8] 2008	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Tigra-B	[8] 2008	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Tigra-B	[8] 2008	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Tigra-B	[8] 2008	Z 18 XE	Electrohydraulic HardTop	●	●	●	●
Tigra-B	[7] 2007	Z 13 DT	ECM (Engine Control Module)	●	●	●	●
Tigra-B	[7] 2007	Z 13 DT	MTA (Easytronic)	●	●	●	●
Tigra-B	[7] 2007	Z 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Tigra-B	[7] 2007	Z 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Tigra-B	[7] 2007	Z 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Tigra-B	[7] 2007	Z 13 DT	IMMO (Immobiliser)	●	●	●	●
Tigra-B	[7] 2007	Z 13 DT	BCM (Body Control Module)	●	●	●	●
Tigra-B	[7] 2007	Z 13 DT	Electrohydraulic HardTop	●	●	●	●
Tigra-B	[7] 2007	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Tigra-B	[7] 2007	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Tigra-B	[7] 2007	Z 14 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Tigra-B	[7] 2007	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●

Tigra-B	[7] 2007	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Tigra-B	[7] 2007	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Tigra-B	[7] 2007	Z 14 XEP	BCM (Body Control Module)	●	●	●	●
Tigra-B	[7] 2007	Z 14 XEP	Electrohydraulic HardTop	●	●	●	●
Tigra-B	[7] 2007	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Tigra-B	[7] 2007	Z 18 XE	MTA (Easytronic)	●	●	●	●
Tigra-B	[7] 2007	Z 18 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Tigra-B	[7] 2007	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Tigra-B	[7] 2007	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Tigra-B	[7] 2007	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Tigra-B	[7] 2007	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Tigra-B	[7] 2007	Z 18 XE	Electrohydraulic HardTop	●	●	●	●
Tigra-B	[6] 2006	Z 13 DT	ECM (Engine Control Module)	●	●	●	●
Tigra-B	[6] 2006	Z 13 DT	MTA (Easytronic)	●	●	●	●
Tigra-B	[6] 2006	Z 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Tigra-B	[6] 2006	Z 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Tigra-B	[6] 2006	Z 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Tigra-B	[6] 2006	Z 13 DT	IMMO (Immobiliser)	●	●	●	●
Tigra-B	[6] 2006	Z 13 DT	BCM (Body Control Module)	●	●	●	●
Tigra-B	[6] 2006	Z 13 DT	Electrohydraulic HardTop	●	●	●	●
Tigra-B	[6] 2006	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Tigra-B	[6] 2006	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Tigra-B	[6] 2006	Z 14 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Tigra-B	[6] 2006	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Tigra-B	[6] 2006	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Tigra-B	[6] 2006	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Tigra-B	[6] 2006	Z 14 XEP	BCM (Body Control Module)	●	●	●	●
Tigra-B	[6] 2006	Z 14 XEP	Electrohydraulic HardTop	●	●	●	●
Tigra-B	[6] 2006	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Tigra-B	[6] 2006	Z 18 XE	MTA (Easytronic)	●	●	●	●
Tigra-B	[6] 2006	Z 18 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Tigra-B	[6] 2006	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Tigra-B	[6] 2006	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Tigra-B	[6] 2006	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Tigra-B	[6] 2006	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Tigra-B	[6] 2006	Z 18 XE	Electrohydraulic HardTop	●	●	●	●
Tigra-B	[5] 2005	Z 13 DT	ECM (Engine Control Module)	●	●	●	●
Tigra-B	[5] 2005	Z 13 DT	MTA (Easytronic)	●	●	●	●
Tigra-B	[5] 2005	Z 13 DT	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Tigra-B	[5] 2005	Z 13 DT	EPS (Electronic Power Steering)	●	●	●	●
Tigra-B	[5] 2005	Z 13 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Tigra-B	[5] 2005	Z 13 DT	IMMO (Immobiliser)	●	●	●	●
Tigra-B	[5] 2005	Z 13 DT	BCM (Body Control Module)	●	●	●	●
Tigra-B	[5] 2005	Z 13 DT	Electrohydraulic HardTop	●	●	●	●
Tigra-B	[5] 2005	Z 14 XEP	ECM (Engine Control Module)	●	●	●	●
Tigra-B	[5] 2005	Z 14 XEP	MTA (Easytronic)	●	●	●	●
Tigra-B	[5] 2005	Z 14 XEP	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Tigra-B	[5] 2005	Z 14 XEP	EPS (Electronic Power Steering)	●	●	●	●
Tigra-B	[5] 2005	Z 14 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Tigra-B	[5] 2005	Z 14 XEP	IMMO (Immobiliser)	●	●	●	●
Tigra-B	[5] 2005	Z 14 XEP	BCM (Body Control Module)	●	●	●	●
Tigra-B	[5] 2005	Z 14 XEP	Electrohydraulic HardTop	●	●	●	●
Tigra-B	[5] 2005	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Tigra-B	[5] 2005	Z 18 XE	MTA (Easytronic)	●	●	●	●
Tigra-B	[5] 2005	Z 18 XE	ABS/ESP (Anti-locked Braking System 8)	●	●	●	●
Tigra-B	[5] 2005	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●

Tigra-B	[5] 2005	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Tigra-B	[5] 2005	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Tigra-B	[5] 2005	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Tigra-B	[5] 2005	Z 18 XE	Electrohydraulic HardTop	●	●	●	●
Vauxhall Monaro	[6] 2006	V8 GEN IV	ECM (Engine Control Module)	●	●	●	●
Vauxhall Monaro	[5] 2005	V8 GEN IV	ECM (Engine Control Module)	●	●	●	●
Vauxhall VXR8	[C] 2012	V8 GEN IV	ECM (Engine Control Module)	●	●	●	●
Vauxhall VXR8	[C] 2012	V8 GEN IV	AT (Automatic Transmission)	●	●	●	●
Vauxhall VXR8	[C] 2012	V8 GEN IV	FPCM (Fuel Pump Control Module)	●	●	●	●
Vauxhall VXR8	[C] 2012	V8 GEN IV	EBCM (Electronic Brake Control Module)	●	●	●	●
Vauxhall VXR8	[C] 2012	V8 GEN IV	ESC (Electronic Suspension Control)	●	●	●	●
Vauxhall VXR8	[C] 2012	V8 GEN IV	AHL (Automatic Headlamp Levelling)	●	●	●	●
Vauxhall VXR8	[C] 2012	V8 GEN IV	BCM (Body Control Module)	●	●	●	●
Vauxhall VXR8	[C] 2012	V8 GEN IV	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vauxhall VXR8	[C] 2012	V8 GEN IV	IMMO (Immobiliser)	●	●	●	●
Vauxhall VXR8	[C] 2012	V8 GEN IV	MSM (Memory Seat and Mirrors)	●	●	●	●
Vauxhall VXR8	[C] 2012	V8 GEN IV	PACM (Parking Assist Control Module)	●	●	●	●
Vauxhall VXR8	[C] 2012	V8 GEN IV	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vauxhall VXR8	[C] 2012	V8 GEN IV	IC (Instrument Cluster)	●	●	●	●
Vauxhall VXR8	[C] 2012	V8 GEN IV	RFA (Multipurpose Receiver Module)	●	●	●	●
Vauxhall VXR8	[C] 2012	V8 GEN IV	IMMO (Immobiliser)	●	●	●	●
Vauxhall VXR8	[B] 2011	V8 GEN IV	ECM (Engine Control Module)	●	●	●	●
Vauxhall VXR8	[B] 2011	V8 GEN IV	AT (Automatic Transmission)	●	●	●	●
Vauxhall VXR8	[B] 2011	V8 GEN IV	FPCM (Fuel Pump Control Module)	●	●	●	●
Vauxhall VXR8	[B] 2011	V8 GEN IV	EBCM (Electronic Brake Control Module)	●	●	●	●
Vauxhall VXR8	[B] 2011	V8 GEN IV	ESC (Electronic Suspension Control)	●	●	●	●
Vauxhall VXR8	[B] 2011	V8 GEN IV	AHL (Automatic Headlamp Levelling)	●	●	●	●
Vauxhall VXR8	[B] 2011	V8 GEN IV	BCM (Body Control Module)	●	●	●	●
Vauxhall VXR8	[B] 2011	V8 GEN IV	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vauxhall VXR8	[B] 2011	V8 GEN IV	IMMO (Immobiliser)	●	●	●	●
Vauxhall VXR8	[B] 2011	V8 GEN IV	MSM (Memory Seat and Mirrors)	●	●	●	●
Vauxhall VXR8	[B] 2011	V8 GEN IV	PACM (Parking Assist Control Module)	●	●	●	●
Vauxhall VXR8	[B] 2011	V8 GEN IV	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vauxhall VXR8	[B] 2011	V8 GEN IV	IC (Instrument Cluster)	●	●	●	●
Vauxhall VXR8	[B] 2011	V8 GEN IV	RFA (Multipurpose Receiver Module)	●	●	●	●
Vauxhall VXR8	[B] 2011	V8 GEN IV	IMMO (Immobiliser)	●	●	●	●
Vauxhall VXR8	[9] 2009	V8 GEN IV	ECM (Engine Control Module)	●	●	●	●
Vauxhall VXR8	[9] 2009	V8 GEN IV	AT (Automatic Transmission)	●	●	●	●
Vauxhall VXR8	[9] 2009	V8 GEN IV	FPCM (Fuel Pump Control Module)	●	●	●	●
Vauxhall VXR8	[9] 2009	V8 GEN IV	EBCM (Electronic Brake Control Module)	●	●	●	●
Vauxhall VXR8	[9] 2009	V8 GEN IV	ESC (Electronic Suspension Control)	●	●	●	●
Vauxhall VXR8	[9] 2009	V8 GEN IV	AHL (Automatic Headlamp Levelling)	●	●	●	●
Vauxhall VXR8	[9] 2009	V8 GEN IV	BCM (Body Control Module)	●	●	●	●
Vauxhall VXR8	[9] 2009	V8 GEN IV	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vauxhall VXR8	[9] 2009	V8 GEN IV	IMMO (Immobiliser)	●	●	●	●
Vauxhall VXR8	[9] 2009	V8 GEN IV	MSM (Memory Seat and Mirrors)	●	●	●	●
Vauxhall VXR8	[9] 2009	V8 GEN IV	PACM (Parking Assist Control Module)	●	●	●	●
Vauxhall VXR8	[9] 2009	V8 GEN IV	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vauxhall VXR8	[9] 2009	V8 GEN IV	IC (Instrument Cluster)	●	●	●	●
Vauxhall VXR8	[9] 2009	V8 GEN IV	RFA (Multipurpose Receiver Module)	●	●	●	●
Vauxhall VXR8	[9] 2009	V8 GEN IV	IMMO (Immobiliser)	●	●	●	●
Vauxhall VXR8	[8] 2008	V8 GEN IV	ECM (Engine Control Module)	●	●	●	●
Vauxhall VXR8	[8] 2008	V8 GEN IV	AT (Automatic Transmission)	●	●	●	●
Vauxhall VXR8	[8] 2008	V8 GEN IV	FPCM (Fuel Pump Control Module)	●	●	●	●
Vauxhall VXR8	[8] 2008	V8 GEN IV	EBCM (Electronic Brake Control Module)	●	●	●	●
Vauxhall VXR8	[8] 2008	V8 GEN IV	ESC (Electronic Suspension Control)	●	●	●	●

Vauxhall VXR8	[8] 2008	V8 GEN IV	AHL (Automatic Headlamp Levelling)	●	●	●	●
Vauxhall VXR8	[8] 2008	V8 GEN IV	BCM (Body Control Module)	●	●	●	●
Vauxhall VXR8	[8] 2008	V8 GEN IV	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vauxhall VXR8	[8] 2008	V8 GEN IV	IMMO (Immobiliser)	●	●	●	●
Vauxhall VXR8	[8] 2008	V8 GEN IV	MSM (Memory Seat and Mirrors)	●	●	●	●
Vauxhall VXR8	[8] 2008	V8 GEN IV	PACM (Parking Assist Control Module)	●	●	●	●
Vauxhall VXR8	[8] 2008	V8 GEN IV	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vauxhall VXR8	[8] 2008	V8 GEN IV	IC (Instrument Cluster)	●	●	●	●
Vauxhall VXR8	[8] 2008	V8 GEN IV	RFA (Multipurpose Receiver Module)	●	●	●	●
Vauxhall VXR8	[8] 2008	V8 GEN IV	IMMO (Immobiliser)	●	●	●	●
Vauxhall VXR8	[7] 2007	V8 GEN IV	ECM (Engine Control Module)	●	●	●	●
Vauxhall VXR8	[7] 2007	V8 GEN IV	AT (Automatic Transmission)	●	●	●	●
Vauxhall VXR8	[7] 2007	V8 GEN IV	FPCM (Fuel Pump Control Module)	●	●	●	●
Vauxhall VXR8	[7] 2007	V8 GEN IV	EBCM (Electronic Brake Control Module)	●	●	●	●
Vauxhall VXR8	[7] 2007	V8 GEN IV	ESC (Electronic Suspension Control)	●	●	●	●
Vauxhall VXR8	[7] 2007	V8 GEN IV	AHL (Automatic Headlamp Levelling)	●	●	●	●
Vauxhall VXR8	[7] 2007	V8 GEN IV	BCM (Body Control Module)	●	●	●	●
Vauxhall VXR8	[7] 2007	V8 GEN IV	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vauxhall VXR8	[7] 2007	V8 GEN IV	IMMO (Immobiliser)	●	●	●	●
Vauxhall VXR8	[7] 2007	V8 GEN IV	MSM (Memory Seat and Mirrors)	●	●	●	●
Vauxhall VXR8	[7] 2007	V8 GEN IV	PACM (Parking Assist Control Module)	●	●	●	●
Vauxhall VXR8	[7] 2007	V8 GEN IV	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vauxhall VXR8	[7] 2007	V8 GEN IV	IC (Instrument Cluster)	●	●	●	●
Vauxhall VXR8	[7] 2007	V8 GEN IV	RFA (Multipurpose Receiver Module)	●	●	●	●
Vauxhall VXR8	[7] 2007	V8 GEN IV	IMMO (Immobiliser)	●	●	●	●
Vauxhall VXR8	[Y] 2000	X 14 XE	ECM (Engine Control Module)	●	●	●	●
Vauxhall VXR8	[Y] 2000	X 14 XE	AT (Automatic Transmission)	●	●	●	●
Vauxhall VXR8	[Y] 2000	X 14 XE	FPCM (Fuel Pump Control Module)	●	●	●	●
Vauxhall VXR8	[Y] 2000	X 14 XE	EBCM (Electronic Brake Control Module)	●	●	●	●
Vauxhall VXR8	[Y] 2000	X 14 XE	ESC (Electronic Suspension Control)	●	●	●	●
Vauxhall VXR8	[Y] 2000	X 14 XE	AHL (Automatic Headlamp Levelling)	●	●	●	●
Vauxhall VXR8	[Y] 2000	X 14 XE	BCM (Body Control Module)	●	●	●	●
Vauxhall VXR8	[Y] 2000	X 14 XE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vauxhall VXR8	[Y] 2000	X 14 XE	IMMO (Immobiliser)	●	●	●	●
Vauxhall VXR8	[Y] 2000	X 14 XE	MSM (Memory Seat and Mirrors)	●	●	●	●
Vauxhall VXR8	[Y] 2000	X 14 XE	PACM (Parking Assist Control Module)	●	●	●	●
Vauxhall VXR8	[Y] 2000	X 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vauxhall VXR8	[Y] 2000	X 14 XE	IC (Instrument Cluster)	●	●	●	●
Vauxhall VXR8	[Y] 2000	X 14 XE	RFA (Multipurpose Receiver Module)	●	●	●	●
Vauxhall VXR8	[Y] 2000	X 14 XE	IMMO (Immobiliser)	●	●	●	●
Vauxhall VXR8	[Y] 2000	X 16 XE	ECM (Engine Control Module)	●	●	●	●
Vauxhall VXR8	[Y] 2000	X 16 XE	AT (Automatic Transmission)	●	●	●	●
Vauxhall VXR8	[Y] 2000	X 16 XE	FPCM (Fuel Pump Control Module)	●	●	●	●
Vauxhall VXR8	[Y] 2000	X 16 XE	EBCM (Electronic Brake Control Module)	●	●	●	●
Vauxhall VXR8	[Y] 2000	X 16 XE	ESC (Electronic Suspension Control)	●	●	●	●
Vauxhall VXR8	[Y] 2000	X 16 XE	AHL (Automatic Headlamp Levelling)	●	●	●	●
Vauxhall VXR8	[Y] 2000	X 16 XE	BCM (Body Control Module)	●	●	●	●
Vauxhall VXR8	[Y] 2000	X 16 XE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vauxhall VXR8	[Y] 2000	X 16 XE	IMMO (Immobiliser)	●	●	●	●
Vauxhall VXR8	[Y] 2000	X 16 XE	MSM (Memory Seat and Mirrors)	●	●	●	●
Vauxhall VXR8	[Y] 2000	X 16 XE	PACM (Parking Assist Control Module)	●	●	●	●
Vauxhall VXR8	[Y] 2000	X 16 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vauxhall VXR8	[Y] 2000	X 16 XE	IC (Instrument Cluster)	●	●	●	●
Vauxhall VXR8	[Y] 2000	X 16 XE	RFA (Multipurpose Receiver Module)	●	●	●	●
Vauxhall VXR8	[Y] 2000	X 16 XE	IMMO (Immobiliser)	●	●	●	●

Vauxhall VXR8	[Y] 2000	C 16 SEL	ECM (Engine Control Module)	●	●	●	●
Vauxhall VXR8	[Y] 2000	C 16 SEL	AT (Automatic Transmission)	●	●	●	●
Vauxhall VXR8	[Y] 2000	C 16 SEL	FPCM (Fuel Pump Control Module)	●	●	●	●
Vauxhall VXR8	[Y] 2000	C 16 SEL	EBCM (Electronic Brake Control Module)	●	●	●	●
Vauxhall VXR8	[Y] 2000	C 16 SEL	ESC (Electronic Suspension Control)	●	●	●	●
Vauxhall VXR8	[Y] 2000	C 16 SEL	AHL (Automatic Headlamp Levelling)	●	●	●	●
Vauxhall VXR8	[Y] 2000	C 16 SEL	BCM (Body Control Module)	●	●	●	●
Vauxhall VXR8	[Y] 2000	C 16 SEL	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vauxhall VXR8	[Y] 2000	C 16 SEL	IMMO (Immobiliser)	●	●	●	●
Vauxhall VXR8	[Y] 2000	C 16 SEL	MSM (Memory Seat and Mirrors)	●	●	●	●
Vauxhall VXR8	[Y] 2000	C 16 SEL	PACM (Parking Assist Control Module)	●	●	●	●
Vauxhall VXR8	[Y] 2000	C 16 SEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vauxhall VXR8	[Y] 2000	C 16 SEL	IC (Instrument Cluster)	●	●	●	●
Vauxhall VXR8	[Y] 2000	C 16 SEL	RFA (Multipurpose Receiver Module)	●	●	●	●
Vauxhall VXR8	[Y] 2000	C 16 SEL	IMMO (Immobiliser)	●	●	●	●
Vauxhall VXR8	[X] 1999	X 14 XE	ECM (Engine Control Module)	●	●	●	●
Vauxhall VXR8	[X] 1999	X 14 XE	AT (Automatic Transmission)	●	●	●	●
Vauxhall VXR8	[X] 1999	X 14 XE	FPCM (Fuel Pump Control Module)	●	●	●	●
Vauxhall VXR8	[X] 1999	X 14 XE	EBCM (Electronic Brake Control Module)	●	●	●	●
Vauxhall VXR8	[X] 1999	X 14 XE	ESC (Electronic Suspension Control)	●	●	●	●
Vauxhall VXR8	[X] 1999	X 14 XE	AHL (Automatic Headlamp Levelling)	●	●	●	●
Vauxhall VXR8	[X] 1999	X 14 XE	BCM (Body Control Module)	●	●	●	●
Vauxhall VXR8	[X] 1999	X 14 XE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vauxhall VXR8	[X] 1999	X 14 XE	IMMO (Immobiliser)	●	●	●	●
Vauxhall VXR8	[X] 1999	X 14 XE	MSM (Memory Seat and Mirrors)	●	●	●	●
Vauxhall VXR8	[X] 1999	X 14 XE	PACM (Parking Assist Control Module)	●	●	●	●
Vauxhall VXR8	[X] 1999	X 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vauxhall VXR8	[X] 1999	X 14 XE	IC (Instrument Cluster)	●	●	●	●
Vauxhall VXR8	[X] 1999	X 14 XE	RFA (Multipurpose Receiver Module)	●	●	●	●
Vauxhall VXR8	[X] 1999	X 14 XE	IMMO (Immobiliser)	●	●	●	●
Vauxhall VXR8	[X] 1999	X 16 XE	ECM (Engine Control Module)	●	●	●	●
Vauxhall VXR8	[X] 1999	X 16 XE	AT (Automatic Transmission)	●	●	●	●
Vauxhall VXR8	[X] 1999	X 16 XE	FPCM (Fuel Pump Control Module)	●	●	●	●
Vauxhall VXR8	[X] 1999	X 16 XE	EBCM (Electronic Brake Control Module)	●	●	●	●
Vauxhall VXR8	[X] 1999	X 16 XE	ESC (Electronic Suspension Control)	●	●	●	●
Vauxhall VXR8	[X] 1999	X 16 XE	AHL (Automatic Headlamp Levelling)	●	●	●	●
Vauxhall VXR8	[X] 1999	X 16 XE	BCM (Body Control Module)	●	●	●	●
Vauxhall VXR8	[X] 1999	X 16 XE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vauxhall VXR8	[X] 1999	X 16 XE	IMMO (Immobiliser)	●	●	●	●
Vauxhall VXR8	[X] 1999	X 16 XE	MSM (Memory Seat and Mirrors)	●	●	●	●
Vauxhall VXR8	[X] 1999	X 16 XE	PACM (Parking Assist Control Module)	●	●	●	●
Vauxhall VXR8	[X] 1999	X 16 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vauxhall VXR8	[X] 1999	X 16 XE	IC (Instrument Cluster)	●	●	●	●
Vauxhall VXR8	[X] 1999	X 16 XE	RFA (Multipurpose Receiver Module)	●	●	●	●
Vauxhall VXR8	[X] 1999	X 16 XE	IMMO (Immobiliser)	●	●	●	●
Vauxhall VXR8	[X] 1999	C 16 SEL	ECM (Engine Control Module)	●	●	●	●
Vauxhall VXR8	[X] 1999	C 16 SEL	AT (Automatic Transmission)	●	●	●	●
Vauxhall VXR8	[X] 1999	C 16 SEL	FPCM (Fuel Pump Control Module)	●	●	●	●
Vauxhall VXR8	[X] 1999	C 16 SEL	EBCM (Electronic Brake Control Module)	●	●	●	●
Vauxhall VXR8	[X] 1999	C 16 SEL	ESC (Electronic Suspension Control)	●	●	●	●
Vauxhall VXR8	[X] 1999	C 16 SEL	AHL (Automatic Headlamp Levelling)	●	●	●	●
Vauxhall VXR8	[X] 1999	C 16 SEL	BCM (Body Control Module)	●	●	●	●
Vauxhall VXR8	[X] 1999	C 16 SEL	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vauxhall VXR8	[X] 1999	C 16 SEL	IMMO (Immobiliser)	●	●	●	●
Vauxhall VXR8	[X] 1999	C 16 SEL	MSM (Memory Seat and Mirrors)	●	●	●	●
Vauxhall VXR8	[X] 1999	C 16 SEL	PACM (Parking Assist Control Module)	●	●	●	●

Vauxhall VXR8	[X] 1999	C 16 SEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vauxhall VXR8	[X] 1999	C 16 SEL	IC (Instrument Cluster)	●	●	●	●
Vauxhall VXR8	[X] 1999	C 16 SEL	RFA (Multipurpose Receiver Module)	●	●	●	●
Vauxhall VXR8	[X] 1999	C 16 SEL	IMMO (Immobiliser)	●	●	●	●
Vauxhall VXR8	[W] 1998	X 14 XE	ECM (Engine Control Module)	●	●	●	●
Vauxhall VXR8	[W] 1998	X 14 XE	AT (Automatic Transmission)	●	●	●	●
Vauxhall VXR8	[W] 1998	X 14 XE	FPCM (Fuel Pump Control Module)	●	●	●	●
Vauxhall VXR8	[W] 1998	X 14 XE	EBCM (Electronic Brake Control Module)	●	●	●	●
Vauxhall VXR8	[W] 1998	X 14 XE	ESC (Electronic Suspension Control)	●	●	●	●
Vauxhall VXR8	[W] 1998	X 14 XE	AHL (Automatic Headlamp Levelling)	●	●	●	●
Vauxhall VXR8	[W] 1998	X 14 XE	BCM (Body Control Module)	●	●	●	●
Vauxhall VXR8	[W] 1998	X 14 XE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vauxhall VXR8	[W] 1998	X 14 XE	IMMO (Immobiliser)	●	●	●	●
Vauxhall VXR8	[W] 1998	X 14 XE	MSM (Memory Seat and Mirrors)	●	●	●	●
Vauxhall VXR8	[W] 1998	X 14 XE	PACM (Parking Assist Control Module)	●	●	●	●
Vauxhall VXR8	[W] 1998	X 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vauxhall VXR8	[W] 1998	X 14 XE	IC (Instrument Cluster)	●	●	●	●
Vauxhall VXR8	[W] 1998	X 14 XE	RFA (Multipurpose Receiver Module)	●	●	●	●
Vauxhall VXR8	[W] 1998	X 14 XE	IMMO (Immobiliser)	●	●	●	●
Vauxhall VXR8	[W] 1998	X 16 XE	ECM (Engine Control Module)	●	●	●	●
Vauxhall VXR8	[W] 1998	X 16 XE	AT (Automatic Transmission)	●	●	●	●
Vauxhall VXR8	[W] 1998	X 16 XE	FPCM (Fuel Pump Control Module)	●	●	●	●
Vauxhall VXR8	[W] 1998	X 16 XE	EBCM (Electronic Brake Control Module)	●	●	●	●
Vauxhall VXR8	[W] 1998	X 16 XE	ESC (Electronic Suspension Control)	●	●	●	●
Vauxhall VXR8	[W] 1998	X 16 XE	AHL (Automatic Headlamp Levelling)	●	●	●	●
Vauxhall VXR8	[W] 1998	X 16 XE	BCM (Body Control Module)	●	●	●	●
Vauxhall VXR8	[W] 1998	X 16 XE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vauxhall VXR8	[W] 1998	X 16 XE	IMMO (Immobiliser)	●	●	●	●
Vauxhall VXR8	[W] 1998	X 16 XE	MSM (Memory Seat and Mirrors)	●	●	●	●
Vauxhall VXR8	[W] 1998	X 16 XE	PACM (Parking Assist Control Module)	●	●	●	●
Vauxhall VXR8	[W] 1998	X 16 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vauxhall VXR8	[W] 1998	X 16 XE	IC (Instrument Cluster)	●	●	●	●
Vauxhall VXR8	[W] 1998	X 16 XE	RFA (Multipurpose Receiver Module)	●	●	●	●
Vauxhall VXR8	[W] 1998	X 16 XE	IMMO (Immobiliser)	●	●	●	●
Vauxhall VXR8	[V] 1997	X 14 XE	ECM (Engine Control Module)	●	●	●	●
Vauxhall VXR8	[V] 1997	X 14 XE	AT (Automatic Transmission)	●	●	●	●
Vauxhall VXR8	[V] 1997	X 14 XE	FPCM (Fuel Pump Control Module)	●	●	●	●
Vauxhall VXR8	[V] 1997	X 14 XE	EBCM (Electronic Brake Control Module)	●	●	●	●
Vauxhall VXR8	[V] 1997	X 14 XE	ESC (Electronic Suspension Control)	●	●	●	●
Vauxhall VXR8	[V] 1997	X 14 XE	AHL (Automatic Headlamp Levelling)	●	●	●	●
Vauxhall VXR8	[V] 1997	X 14 XE	BCM (Body Control Module)	●	●	●	●
Vauxhall VXR8	[V] 1997	X 14 XE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vauxhall VXR8	[V] 1997	X 14 XE	IMMO (Immobiliser)	●	●	●	●
Vauxhall VXR8	[V] 1997	X 14 XE	MSM (Memory Seat and Mirrors)	●	●	●	●
Vauxhall VXR8	[V] 1997	X 14 XE	PACM (Parking Assist Control Module)	●	●	●	●
Vauxhall VXR8	[V] 1997	X 14 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vauxhall VXR8	[V] 1997	X 14 XE	IC (Instrument Cluster)	●	●	●	●
Vauxhall VXR8	[V] 1997	X 14 XE	RFA (Multipurpose Receiver Module)	●	●	●	●
Vauxhall VXR8	[V] 1997	X 14 XE	IMMO (Immobiliser)	●	●	●	●
Vauxhall VXR8	[V] 1997	X 16 XE	ECM (Engine Control Module)	●	●	●	●
Vauxhall VXR8	[V] 1997	X 16 XE	AT (Automatic Transmission)	●	●	●	●
Vauxhall VXR8	[V] 1997	X 16 XE	FPCM (Fuel Pump Control Module)	●	●	●	●
Vauxhall VXR8	[V] 1997	X 16 XE	EBCM (Electronic Brake Control Module)	●	●	●	●
Vauxhall VXR8	[V] 1997	X 16 XE	ESC (Electronic Suspension Control)	●	●	●	●
Vauxhall VXR8	[V] 1997	X 16 XE	AHL (Automatic Headlamp Levelling)	●	●	●	●
Vauxhall VXR8	[V] 1997	X 16 XE	BCM (Body Control Module)	●	●	●	●

Vauxhall VXR8	[V] 1997	X 16 XE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vauxhall VXR8	[V] 1997	X 16 XE	IMMO (Immobiliser)	●	●	●	●
Vauxhall VXR8	[V] 1997	X 16 XE	MSM (Memory Seat and Mirrors)	●	●	●	●
Vauxhall VXR8	[V] 1997	X 16 XE	PACM (Parking Assist Control Module)	●	●	●	●
Vauxhall VXR8	[V] 1997	X 16 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vauxhall VXR8	[V] 1997	X 16 XE	IC (Instrument Cluster)	●	●	●	●
Vauxhall VXR8	[V] 1997	X 16 XE	RFA (Multipurpose Receiver Module)	●	●	●	●
Vauxhall VXR8	[V] 1997	X 16 XE	IMMO (Immobiliser)	●	●	●	●
Vectra-B	[1] 2001	X 16 XEL	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[1] 2001	X 16 XEL	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[1] 2001	X 16 XEL	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[1] 2001	X 16 XEL	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[1] 2001	X 16 XEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[1] 2001	X 16 XEL	AOH (Add On Heater)	●	●	●	●
Vectra-B	[1] 2001	X 16 XEL	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[1] 2001	X 16 XEL	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[1] 2001	Y 16 XE	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[1] 2001	Y 16 XE	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[1] 2001	Y 16 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[1] 2001	Y 16 XE	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[1] 2001	Y 16 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[1] 2001	Y 16 XE	AOH (Add On Heater)	●	●	●	●
Vectra-B	[1] 2001	Y 16 XE	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[1] 2001	Y 16 XE	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[1] 2001	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[1] 2001	Z 16 XE	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[1] 2001	Z 16 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[1] 2001	Z 16 XE	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[1] 2001	Z 16 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[1] 2001	Z 16 XE	AOH (Add On Heater)	●	●	●	●
Vectra-B	[1] 2001	Z 16 XE	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[1] 2001	Z 16 XE	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[1] 2001	X 18 XE	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[1] 2001	X 18 XE	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[1] 2001	X 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[1] 2001	X 18 XE	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[1] 2001	X 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[1] 2001	X 18 XE	AOH (Add On Heater)	●	●	●	●
Vectra-B	[1] 2001	X 18 XE	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[1] 2001	X 18 XE	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[1] 2001	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[1] 2001	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[1] 2001	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[1] 2001	Z 18 XE	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[1] 2001	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[1] 2001	Z 18 XE	AOH (Add On Heater)	●	●	●	●
Vectra-B	[1] 2001	Z 18 XE	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[1] 2001	Z 18 XE	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[1] 2001	Z 18 XE1	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[1] 2001	Z 18 XE1	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[1] 2001	Z 18 XE1	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[1] 2001	Z 18 XE1	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[1] 2001	Z 18 XE1	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[1] 2001	Z 18 XE1	AOH (Add On Heater)	●	●	●	●
Vectra-B	[1] 2001	Z 18 XE1	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[1] 2001	Z 18 XE1	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[1] 2001	Z 18 XEL	ECM (Engine Control Module)	●	●	●	●

Vectra-B	[1] 2001	Z 18 XEL	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[1] 2001	Z 18 XEL	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[1] 2001	Z 18 XEL	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[1] 2001	Z 18 XEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[1] 2001	Z 18 XEL	AOH (Add On Heater)	●	●	●	●
Vectra-B	[1] 2001	Z 18 XEL	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[1] 2001	Z 18 XEL	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[1] 2001	C 20 SEL	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[1] 2001	C 20 SEL	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[1] 2001	C 20 SEL	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[1] 2001	C 20 SEL	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[1] 2001	C 20 SEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[1] 2001	C 20 SEL	AOH (Add On Heater)	●	●	●	●
Vectra-B	[1] 2001	C 20 SEL	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[1] 2001	C 20 SEL	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[1] 2001	X 20 XEV	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[1] 2001	X 20 XEV	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[1] 2001	X 20 XEV	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[1] 2001	X 20 XEV	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[1] 2001	X 20 XEV	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[1] 2001	X 20 XEV	AOH (Add On Heater)	●	●	●	●
Vectra-B	[1] 2001	X 20 XEV	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[1] 2001	X 20 XEV	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[1] 2001	Y 20 DTH	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[1] 2001	Y 20 DTH	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[1] 2001	Y 20 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[1] 2001	Y 20 DTH	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[1] 2001	Y 20 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[1] 2001	Y 20 DTH	AOH (Add On Heater)	●	●	●	●
Vectra-B	[1] 2001	Y 20 DTH	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[1] 2001	Y 20 DTH	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[1] 2001	C 22 SEL	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[1] 2001	C 22 SEL	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[1] 2001	C 22 SEL	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[1] 2001	C 22 SEL	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[1] 2001	C 22 SEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[1] 2001	C 22 SEL	AOH (Add On Heater)	●	●	●	●
Vectra-B	[1] 2001	C 22 SEL	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[1] 2001	C 22 SEL	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[1] 2001	Y 22 DTR	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[1] 2001	Y 22 DTR	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[1] 2001	Y 22 DTR	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[1] 2001	Y 22 DTR	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[1] 2001	Y 22 DTR	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[1] 2001	Y 22 DTR	AOH (Add On Heater)	●	●	●	●
Vectra-B	[1] 2001	Y 22 DTR	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[1] 2001	Y 22 DTR	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[1] 2001	Z 22 SE	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[1] 2001	Z 22 SE	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[1] 2001	Z 22 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[1] 2001	Z 22 SE	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[1] 2001	Z 22 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[1] 2001	Z 22 SE	AOH (Add On Heater)	●	●	●	●
Vectra-B	[1] 2001	Z 22 SE	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[1] 2001	Z 22 SE	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[1] 2001	Y 26 SE	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[1] 2001	Y 26 SE	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[1] 2001	Y 26 SE	AF 13-II/17/20/22 CAN	●	●	●	●

Vectra-B	[1] 2001	Y 26 SE	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[1] 2001	Y 26 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[1] 2001	Y 26 SE	AOH (Add On Heater)	●	●	●	●
Vectra-B	[1] 2001	Y 26 SE	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[1] 2001	Y 26 SE	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[Y] 2000	X 16 XEL	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[Y] 2000	X 16 XEL	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[Y] 2000	X 16 XEL	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[Y] 2000	X 16 XEL	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[Y] 2000	X 16 XEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[Y] 2000	X 16 XEL	AOH (Add On Heater)	●	●	●	●
Vectra-B	[Y] 2000	X 16 XEL	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[Y] 2000	X 16 XEL	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[Y] 2000	X 16 SZR	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[Y] 2000	X 16 SZR	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[Y] 2000	X 16 SZR	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[Y] 2000	X 16 SZR	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[Y] 2000	X 16 SZR	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[Y] 2000	X 16 SZR	AOH (Add On Heater)	●	●	●	●
Vectra-B	[Y] 2000	X 16 SZR	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[Y] 2000	X 16 SZR	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[Y] 2000	Y 16 XE	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[Y] 2000	Y 16 XE	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[Y] 2000	Y 16 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[Y] 2000	Y 16 XE	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[Y] 2000	Y 16 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[Y] 2000	Y 16 XE	AOH (Add On Heater)	●	●	●	●
Vectra-B	[Y] 2000	Y 16 XE	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[Y] 2000	Y 16 XE	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[Y] 2000	X 18 XE	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[Y] 2000	X 18 XE	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[Y] 2000	X 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[Y] 2000	X 18 XE	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[Y] 2000	X 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[Y] 2000	X 18 XE	AOH (Add On Heater)	●	●	●	●
Vectra-B	[Y] 2000	X 18 XE	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[Y] 2000	X 18 XE	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[Y] 2000	X 18 XE1	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[Y] 2000	X 18 XE1	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[Y] 2000	X 18 XE1	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[Y] 2000	X 18 XE1	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[Y] 2000	X 18 XE1	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[Y] 2000	X 18 XE1	AOH (Add On Heater)	●	●	●	●
Vectra-B	[Y] 2000	X 18 XE1	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[Y] 2000	X 18 XE1	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[Y] 2000	C 20 SEL	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[Y] 2000	C 20 SEL	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[Y] 2000	C 20 SEL	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[Y] 2000	C 20 SEL	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[Y] 2000	C 20 SEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[Y] 2000	C 20 SEL	AOH (Add On Heater)	●	●	●	●
Vectra-B	[Y] 2000	C 20 SEL	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[Y] 2000	C 20 SEL	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[Y] 2000	X 20 DTL	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[Y] 2000	X 20 DTL	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[Y] 2000	X 20 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[Y] 2000	X 20 DTL	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[Y] 2000	X 20 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●

Vectra-B	[Y] 2000	X 20 DTL	AOH (Add On Heater)	●	●	●	●
Vectra-B	[Y] 2000	X 20 DTL	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[Y] 2000	X 20 DTL	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[Y] 2000	X 20 DTH	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[Y] 2000	X 20 DTH	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[Y] 2000	X 20 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[Y] 2000	X 20 DTH	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[Y] 2000	X 20 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[Y] 2000	X 20 DTH	AOH (Add On Heater)	●	●	●	●
Vectra-B	[Y] 2000	X 20 DTH	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[Y] 2000	X 20 DTH	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[Y] 2000	X 20 XEV	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[Y] 2000	X 20 XEV	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[Y] 2000	X 20 XEV	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[Y] 2000	X 20 XEV	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[Y] 2000	X 20 XEV	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[Y] 2000	X 20 XEV	AOH (Add On Heater)	●	●	●	●
Vectra-B	[Y] 2000	X 20 XEV	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[Y] 2000	X 20 XEV	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[Y] 2000	C 22 SEL	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[Y] 2000	C 22 SEL	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[Y] 2000	C 22 SEL	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[Y] 2000	C 22 SEL	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[Y] 2000	C 22 SEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[Y] 2000	C 22 SEL	AOH (Add On Heater)	●	●	●	●
Vectra-B	[Y] 2000	C 22 SEL	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[Y] 2000	C 22 SEL	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[Y] 2000	X 25 XE	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[Y] 2000	X 25 XE	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[Y] 2000	X 25 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[Y] 2000	X 25 XE	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[Y] 2000	X 25 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[Y] 2000	X 25 XE	AOH (Add On Heater)	●	●	●	●
Vectra-B	[Y] 2000	X 25 XE	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[Y] 2000	X 25 XE	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[X] 1999	X 16 XEL	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[X] 1999	X 16 XEL	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[X] 1999	X 16 XEL	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[X] 1999	X 16 XEL	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[X] 1999	X 16 XEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[X] 1999	X 16 XEL	AOH (Add On Heater)	●	●	●	●
Vectra-B	[X] 1999	X 16 XEL	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[X] 1999	X 16 XEL	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[X] 1999	X 16 SZR	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[X] 1999	X 16 SZR	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[X] 1999	X 16 SZR	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[X] 1999	X 16 SZR	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[X] 1999	X 16 SZR	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[X] 1999	X 16 SZR	AOH (Add On Heater)	●	●	●	●
Vectra-B	[X] 1999	X 16 SZR	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[X] 1999	X 16 SZR	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[X] 1999	X 18 XE	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[X] 1999	X 18 XE	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[X] 1999	X 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[X] 1999	X 18 XE	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[X] 1999	X 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[X] 1999	X 18 XE	AOH (Add On Heater)	●	●	●	●
Vectra-B	[X] 1999	X 18 XE	HAL (Headlamp Adjustment Left)	●	●	●	●

Vectra-B	[X] 1999	X 18 XE	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[X] 1999	X 18 XE1	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[X] 1999	X 18 XE1	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[X] 1999	X 18 XE1	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[X] 1999	X 18 XE1	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[X] 1999	X 18 XE1	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[X] 1999	X 18 XE1	AOH (Add On Heater)	●	●	●	●
Vectra-B	[X] 1999	X 18 XE1	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[X] 1999	X 18 XE1	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[X] 1999	C 20 SEL	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[X] 1999	C 20 SEL	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[X] 1999	C 20 SEL	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[X] 1999	C 20 SEL	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[X] 1999	C 20 SEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[X] 1999	C 20 SEL	AOH (Add On Heater)	●	●	●	●
Vectra-B	[X] 1999	C 20 SEL	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[X] 1999	C 20 SEL	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[X] 1999	X 20 XEV	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[X] 1999	X 20 XEV	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[X] 1999	X 20 XEV	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[X] 1999	X 20 XEV	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[X] 1999	X 20 XEV	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[X] 1999	X 20 XEV	AOH (Add On Heater)	●	●	●	●
Vectra-B	[X] 1999	X 20 XEV	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[X] 1999	X 20 XEV	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[X] 1999	X 20 DTL	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[X] 1999	X 20 DTL	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[X] 1999	X 20 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[X] 1999	X 20 DTL	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[X] 1999	X 20 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[X] 1999	X 20 DTL	AOH (Add On Heater)	●	●	●	●
Vectra-B	[X] 1999	X 20 DTL	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[X] 1999	X 20 DTL	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[X] 1999	X 20 DTH	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[X] 1999	X 20 DTH	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[X] 1999	X 20 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[X] 1999	X 20 DTH	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[X] 1999	X 20 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[X] 1999	X 20 DTH	AOH (Add On Heater)	●	●	●	●
Vectra-B	[X] 1999	X 20 DTH	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[X] 1999	X 20 DTH	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[X] 1999	C 22 SEL	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[X] 1999	C 22 SEL	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[X] 1999	C 22 SEL	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[X] 1999	C 22 SEL	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[X] 1999	C 22 SEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[X] 1999	C 22 SEL	AOH (Add On Heater)	●	●	●	●
Vectra-B	[X] 1999	C 22 SEL	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[X] 1999	C 22 SEL	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[X] 1999	X 25 XE	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[X] 1999	X 25 XE	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[X] 1999	X 25 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[X] 1999	X 25 XE	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[X] 1999	X 25 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[X] 1999	X 25 XE	AOH (Add On Heater)	●	●	●	●
Vectra-B	[X] 1999	X 25 XE	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[X] 1999	X 25 XE	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[W] 1998	X 16 XEL	ECM (Engine Control Module)	●	●	●	●

Vectra-B	[W] 1998	X 16 XEL	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[W] 1998	X 16 XEL	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[W] 1998	X 16 XEL	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[W] 1998	X 16 XEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[W] 1998	X 16 XEL	AOH (Add On Heater)	●	●	●	●
Vectra-B	[W] 1998	X 16 XEL	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[W] 1998	X 16 XEL	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[W] 1998	X 16 SZR	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[W] 1998	X 16 SZR	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[W] 1998	X 16 SZR	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[W] 1998	X 16 SZR	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[W] 1998	X 16 SZR	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[W] 1998	X 16 SZR	AOH (Add On Heater)	●	●	●	●
Vectra-B	[W] 1998	X 16 SZR	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[W] 1998	X 16 SZR	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[W] 1998	X 18 XE	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[W] 1998	X 18 XE	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[W] 1998	X 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[W] 1998	X 18 XE	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[W] 1998	X 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[W] 1998	X 18 XE	AOH (Add On Heater)	●	●	●	●
Vectra-B	[W] 1998	X 18 XE	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[W] 1998	X 18 XE	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[W] 1998	X 18 XE1	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[W] 1998	X 18 XE1	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[W] 1998	X 18 XE1	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[W] 1998	X 18 XE1	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[W] 1998	X 18 XE1	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[W] 1998	X 18 XE1	AOH (Add On Heater)	●	●	●	●
Vectra-B	[W] 1998	X 18 XE1	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[W] 1998	X 18 XE1	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[W] 1998	C 20 SEL	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[W] 1998	C 20 SEL	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[W] 1998	C 20 SEL	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[W] 1998	C 20 SEL	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[W] 1998	C 20 SEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[W] 1998	C 20 SEL	AOH (Add On Heater)	●	●	●	●
Vectra-B	[W] 1998	C 20 SEL	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[W] 1998	C 20 SEL	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[W] 1998	X 20 XEV	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[W] 1998	X 20 XEV	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[W] 1998	X 20 XEV	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[W] 1998	X 20 XEV	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[W] 1998	X 20 XEV	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[W] 1998	X 20 XEV	AOH (Add On Heater)	●	●	●	●
Vectra-B	[W] 1998	X 20 XEV	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[W] 1998	X 20 XEV	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[W] 1998	X 20 DTL	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[W] 1998	X 20 DTL	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[W] 1998	X 20 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[W] 1998	X 20 DTL	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[W] 1998	X 20 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[W] 1998	X 20 DTL	AOH (Add On Heater)	●	●	●	●
Vectra-B	[W] 1998	X 20 DTL	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[W] 1998	X 20 DTL	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[W] 1998	X 20 DTH	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[W] 1998	X 20 DTH	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[W] 1998	X 20 DTH	AF 13-II/17/20/22 CAN	●	●	●	●

Vectra-B	[W] 1998	X 20 DTH	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[W] 1998	X 20 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[W] 1998	X 20 DTH	AOH (Add On Heater)	●	●	●	●
Vectra-B	[W] 1998	X 20 DTH	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[W] 1998	X 20 DTH	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[W] 1998	C 22 SEL	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[W] 1998	C 22 SEL	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[W] 1998	C 22 SEL	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[W] 1998	C 22 SEL	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[W] 1998	C 22 SEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[W] 1998	C 22 SEL	AOH (Add On Heater)	●	●	●	●
Vectra-B	[W] 1998	C 22 SEL	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[W] 1998	C 22 SEL	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[W] 1998	X 25 XE	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[W] 1998	X 25 XE	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[W] 1998	X 25 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[W] 1998	X 25 XE	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[W] 1998	X 25 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[W] 1998	X 25 XE	AOH (Add On Heater)	●	●	●	●
Vectra-B	[W] 1998	X 25 XE	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[W] 1998	X 25 XE	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[V] 1997	X 16 XEL	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[V] 1997	X 16 XEL	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[V] 1997	X 16 XEL	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[V] 1997	X 16 XEL	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[V] 1997	X 16 XEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[V] 1997	X 16 XEL	AOH (Add On Heater)	●	●	●	●
Vectra-B	[V] 1997	X 16 XEL	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[V] 1997	X 16 XEL	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[V] 1997	X 16 SZR	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[V] 1997	X 16 SZR	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[V] 1997	X 16 SZR	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[V] 1997	X 16 SZR	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[V] 1997	X 16 SZR	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[V] 1997	X 16 SZR	AOH (Add On Heater)	●	●	●	●
Vectra-B	[V] 1997	X 16 SZR	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[V] 1997	X 16 SZR	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[V] 1997	X 18 XE	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[V] 1997	X 18 XE	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[V] 1997	X 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[V] 1997	X 18 XE	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[V] 1997	X 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[V] 1997	X 18 XE	AOH (Add On Heater)	●	●	●	●
Vectra-B	[V] 1997	X 18 XE	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[V] 1997	X 18 XE	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[V] 1997	C 20 SEL	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[V] 1997	C 20 SEL	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[V] 1997	C 20 SEL	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[V] 1997	C 20 SEL	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[V] 1997	C 20 SEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[V] 1997	C 20 SEL	AOH (Add On Heater)	●	●	●	●
Vectra-B	[V] 1997	C 20 SEL	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[V] 1997	C 20 SEL	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[V] 1997	X 20 DTL	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[V] 1997	X 20 DTL	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[V] 1997	X 20 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[V] 1997	X 20 DTL	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[V] 1997	X 20 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●

Vectra-B	[V] 1997	X 20 DTL	AOH (Add On Heater)	●	●	●	●
Vectra-B	[V] 1997	X 20 DTL	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[V] 1997	X 20 DTL	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[V] 1997	X 20 XEV	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[V] 1997	X 20 XEV	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[V] 1997	X 20 XEV	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[V] 1997	X 20 XEV	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[V] 1997	X 20 XEV	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[V] 1997	X 20 XEV	AOH (Add On Heater)	●	●	●	●
Vectra-B	[V] 1997	X 20 XEV	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[V] 1997	X 20 XEV	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-B	[V] 1997	X 25 XE	ECM (Engine Control Module)	●	●	●	●
Vectra-B	[V] 1997	X 25 XE	AF 13-II/17/20/22	●	●	●	●
Vectra-B	[V] 1997	X 25 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Vectra-B	[V] 1997	X 25 XE	ABS (Anti-locked Braking System 430)	●	●	●	●
Vectra-B	[V] 1997	X 25 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Vectra-B	[V] 1997	X 25 XE	AOH (Add On Heater)	●	●	●	●
Vectra-B	[V] 1997	X 25 XE	HAL (Headlamp Adjustment Left)	●	●	●	●
Vectra-B	[V] 1997	X 25 XE	HAR (Headlamp Adjustment Right)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 30 DT	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 30 DT	CVTronic	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 30 DT	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 30 DT	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 30 DT	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 30 DT	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 30 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 30 DT	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 30 DT	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 30 DT	Electrical Horn	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 30 DT	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 30 DT	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 30 DT	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 30 DT	Interior Lighting	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 30 DT	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 30 DT	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 30 DT	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 30 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 30 DT	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 30 DT	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 30 DT	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 30 DT	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 30 DT	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 30 DT	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 30 DT	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 30 DT	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 30 DT	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 30 DT	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 30 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 30 DT	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 32 SE	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 32 SE	CVTronic	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 32 SE	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 32 SE	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 32 SE	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 32 SE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 32 SE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 32 SE	EHPS (Electrohydraulic Power Steering)	●	●	●	●

Vectra-C/Signum	[8] 2008	Z 32 SE	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 32 SE	Electrical Horn	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 32 SE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 32 SE	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 32 SE	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 32 SE	Interior Lighting	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 32 SE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 32 SE	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 32 SE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 32 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 32 SE	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 32 SE	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 32 SE	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 32 SE	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 32 SE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 32 SE	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 32 SE	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 32 SE	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 32 SE	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 32 SE	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 32 SE	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 32 SE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEH	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEH	CVTronic	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEH	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEH	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEH	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEH	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEH	Electrical Horn	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEH	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEH	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEH	Interior Lighting	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEH	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEH	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEH	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEH	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEH	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEH	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEH	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEH	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEH	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEH	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEH	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEH	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEL	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEL	CVTronic	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEL	MTA (Easytronic)	●	●	●	●

Vectra-C/Signum	[8] 2008	Z 28 NEL	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEL	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEL	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEL	Electrical Horn	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEL	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEL	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEL	Interior Lighting	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEL	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEL	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEL	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEL	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEL	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEL	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEL	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEL	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEL	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEL	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEL	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEL	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEL	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NEL	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NET	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NET	CVTronic	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NET	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NET	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NET	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NET	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NET	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NET	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NET	Electrical Horn	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NET	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NET	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NET	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NET	Interior Lighting	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NET	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NET	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NET	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NET	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NET	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NET	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NET	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NET	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NET	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NET	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NET	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NET	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NET	SLM (Shift Lever Module)	●	●	●	●

Vectra-C/Signum	[8] 2008	Z 28 NET	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 28 NET	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 SE	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 SE	CVTronic	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 SE	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 SE	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 SE	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 SE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 SE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 SE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 SE	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 SE	Electrical Horn	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 SE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 SE	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 SE	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 SE	Interior Lighting	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 SE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 SE	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 SE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 SE	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 SE	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 SE	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 SE	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 SE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 SE	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 SE	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 SE	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 SE	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 SE	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 SE	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 SE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 20 DTH	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 20 DTH	CVTronic	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 20 DTH	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 20 DTH	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 20 DTH	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 20 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 20 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 20 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 20 DTH	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 20 DTH	Electrical Horn	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 20 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 20 DTH	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 20 DTH	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 20 DTH	Interior Lighting	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 20 DTH	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 20 DTH	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 20 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 20 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 20 DTH	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 20 DTH	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 20 DTH	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 20 DTH	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 20 DTH	REC (Rear Electrical Centre)	●	●	●	●

Vectra-C/Signum	[8] 2008	Y 20 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 20 DTH	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 20 DTH	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 20 DTH	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 20 DTH	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 20 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 20 DTH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XE	CVTronic	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XE	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XE	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XE	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XE	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XE	Electrical Horn	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XE	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XE	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XE	Interior Lighting	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XE	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XE	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XE	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XE	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XE	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XE	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XE	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XE	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XE	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XER	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XER	CVTronic	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XER	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XER	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XER	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XER	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XER	Electrical Horn	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XER	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XER	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XER	Interior Lighting	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XER	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XER	BCM (Body Control Module)	●	●	●	●

Vectra-C/Signum	[8] 2008	Z 18 XER	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XER	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XER	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XER	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XER	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XER	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XER	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XER	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 18 XER	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 22 DTR	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 22 DTR	CVTronic	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 22 DTR	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 22 DTR	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 22 DTR	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 22 DTR	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 22 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 22 DTR	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 22 DTR	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 22 DTR	Electrical Horn	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 22 DTR	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 22 DTR	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 22 DTR	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 22 DTR	Interior Lighting	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 22 DTR	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 22 DTR	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 22 DTR	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 22 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 22 DTR	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 22 DTR	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 22 DTR	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 22 DTR	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 22 DTR	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 22 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 22 DTR	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 22 DTR	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 22 DTR	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 22 DTR	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 22 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Y 22 DTR	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XE	CVTronic	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XE	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XE	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XE	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XE	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XE	Electrical Horn	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XE	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XE	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XE	Interior Lighting	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●

Vectra-C/Signum	[8] 2008	Z 16 XE	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XE	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XE	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XE	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XE	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XE	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XE	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XE	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XE	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XE	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XEP	CVTronic	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XEP	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XEP	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XEP	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XEP	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XEP	Electrical Horn	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XEP	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XEP	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XEP	Interior Lighting	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XEP	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XEP	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XEP	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XEP	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XEP	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XEP	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XEP	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XEP	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XEP	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XEP	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 16 XEP	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DT	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DT	CVTronic	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DT	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DT	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DT	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DT	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DT	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DT	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DT	Electrical Horn	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DT	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●

Vectra-C/Signum	[8] 2008	Z 19 DT	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DT	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DT	Interior Lighting	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DT	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DT	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DT	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DT	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DT	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DT	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DT	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DT	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DT	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DT	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DT	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DT	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DT	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 YH	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 YH	CVTronic	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 YH	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 YH	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 YH	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 YH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 YH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 YH	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 YH	Electrical Horn	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 YH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 YH	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 YH	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 YH	Interior Lighting	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 YH	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 YH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 YH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 YH	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 YH	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 YH	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 YH	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 YH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 YH	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 YH	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 YH	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 YH	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 YH	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 YH	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 22 YH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DTH	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DTH	CVTronic	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DTH	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DTH	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DTH	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●

Vectra-C/Signum	[8] 2008	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DTH	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DTH	Electrical Horn	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DTH	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DTH	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DTH	Interior Lighting	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DTH	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DTH	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DTH	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DTH	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DTH	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DTH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DTH	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DTH	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DTH	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DTH	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 19 DTH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 20 NET	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 20 NET	CVTronic	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 20 NET	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 20 NET	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 20 NET	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 20 NET	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 20 NET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 20 NET	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 20 NET	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 20 NET	Electrical Horn	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 20 NET	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 20 NET	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 20 NET	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 20 NET	Interior Lighting	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 20 NET	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 20 NET	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 20 NET	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 20 NET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 20 NET	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 20 NET	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 20 NET	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 20 NET	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 20 NET	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 20 NET	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 20 NET	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 20 NET	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 20 NET	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 20 NET	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 20 NET	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 20 NET	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Z 20 NET	ECM (Engine Control Module)	●	●	●	●

Vectra-C/Signum	[8] 2008	Engine(default)	CVTronic	●	●	●	●
Vectra-C/Signum	[8] 2008	Engine(default)	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[8] 2008	Engine(default)	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[8] 2008	Engine(default)	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Engine(default)	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Engine(default)	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[8] 2008	Engine(default)	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Engine(default)	Electrical Horn	●	●	●	●
Vectra-C/Signum	[8] 2008	Engine(default)	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[8] 2008	Engine(default)	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[8] 2008	Engine(default)	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Engine(default)	Interior Lighting	●	●	●	●
Vectra-C/Signum	[8] 2008	Engine(default)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[8] 2008	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[8] 2008	Engine(default)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Engine(default)	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Engine(default)	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Engine(default)	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[8] 2008	Engine(default)	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[8] 2008	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[8] 2008	Engine(default)	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[8] 2008	Engine(default)	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[8] 2008	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[8] 2008	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 30 DT	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 30 DT	CVTronic	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 30 DT	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 30 DT	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 30 DT	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 30 DT	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 30 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 30 DT	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 30 DT	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 30 DT	Electrical Horn	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 30 DT	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 30 DT	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 30 DT	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 30 DT	Interior Lighting	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 30 DT	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 30 DT	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 30 DT	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 30 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●

Vectra-C/Signum	[7] 2007	Z 30 DT	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 30 DT	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 30 DT	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 30 DT	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 30 DT	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 30 DT	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 30 DT	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 30 DT	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 30 DT	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 30 DT	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 30 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 30 DT	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEH	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEH	CVTronic	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEH	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEH	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEH	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEH	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEH	Electrical Horn	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEH	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEH	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEH	Interior Lighting	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEH	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEH	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEH	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEH	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEH	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEH	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEH	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEH	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEH	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEH	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEH	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEH	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEL	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEL	CVTronic	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEL	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEL	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEL	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEL	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEL	Electrical Horn	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEL	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEL	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEL	Interior Lighting	●	●	●	●

Vectra-C/Signum	[7] 2007	Z 28 NEL	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEL	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEL	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEL	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEL	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEL	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEL	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEL	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEL	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEL	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEL	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEL	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEL	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NEL	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NET	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NET	CVTronic	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NET	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NET	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NET	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NET	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NET	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NET	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NET	Electrical Horn	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NET	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NET	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NET	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NET	Interior Lighting	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NET	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NET	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NET	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NET	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NET	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NET	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NET	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NET	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NET	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NET	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NET	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NET	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NET	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NET	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 28 NET	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 22 DTR	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 22 DTR	CVTronic	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 22 DTR	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 22 DTR	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 22 DTR	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 22 DTR	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 22 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 22 DTR	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 22 DTR	CDC (Continuous Damping Control)	●	●	●	●

Vectra-C/Signum	[7] 2007	Y 22 DTR	Electrical Horn	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 22 DTR	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 22 DTR	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 22 DTR	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 22 DTR	Interior Lighting	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 22 DTR	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 22 DTR	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 22 DTR	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 22 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 22 DTR	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 22 DTR	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 22 DTR	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 22 DTR	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 22 DTR	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 22 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 22 DTR	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 22 DTR	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 22 DTR	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 22 DTR	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 22 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 22 DTR	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XE	CVTronic	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XE	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XE	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XE	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XE	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XE	Electrical Horn	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XE	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XE	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XE	Interior Lighting	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XE	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XE	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XE	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XE	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XE	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XE	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XE	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XE	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XE	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XER	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XER	CVTronic	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XER	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XER	AF 23-5/33-5/40-6	●	●	●	●

Vectra-C/Signum	[7] 2007	Z 18 XER	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XER	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XER	Electrical Horn	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XER	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XER	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XER	Interior Lighting	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XER	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XER	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XER	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XER	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XER	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XER	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XER	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XER	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XER	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XER	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 18 XER	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 20 DTH	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 20 DTH	CVTronic	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 20 DTH	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 20 DTH	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 20 DTH	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 20 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 20 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 20 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 20 DTH	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 20 DTH	Electrical Horn	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 20 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 20 DTH	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 20 DTH	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 20 DTH	Interior Lighting	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 20 DTH	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 20 DTH	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 20 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 20 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 20 DTH	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 20 DTH	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 20 DTH	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 20 DTH	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 20 DTH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 20 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 20 DTH	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 20 DTH	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 20 DTH	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 20 DTH	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Y 20 DTH	UEC (Underhood Electrical Centre)	●	●	●	●

Vectra-C/Signum	[7] 2007	Y 20 DTH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 SE	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 SE	CVTronic	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 SE	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 SE	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 SE	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 SE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 SE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 SE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 SE	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 SE	Electrical Horn	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 SE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 SE	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 SE	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 SE	Interior Lighting	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 SE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 SE	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 SE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 SE	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 SE	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 SE	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 SE	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 SE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 SE	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 SE	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 SE	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 SE	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 SE	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 SE	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 SE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 YH	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 YH	CVTronic	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 YH	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 YH	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 YH	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 YH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 YH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 YH	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 YH	Electrical Horn	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 YH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 YH	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 YH	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 YH	Interior Lighting	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 YH	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 YH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 YH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 YH	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 YH	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 YH	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 YH	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 YH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 YH	ATWS (Anti Theft Warning System)	●	●	●	●

Vectra-C/Signum	[7] 2007	Z 22 YH	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 YH	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 YH	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 YH	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 YH	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 22 YH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 32 SE	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 32 SE	CVTronic	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 32 SE	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 32 SE	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 32 SE	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 32 SE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 32 SE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 32 SE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 32 SE	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 32 SE	Electrical Horn	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 32 SE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 32 SE	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 32 SE	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 32 SE	Interior Lighting	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 32 SE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 32 SE	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 32 SE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 32 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 32 SE	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 32 SE	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 32 SE	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 32 SE	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 32 SE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 32 SE	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 32 SE	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 32 SE	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 32 SE	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 32 SE	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 32 SE	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 32 SE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DTH	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DTH	CVTronic	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DTH	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DTH	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DTH	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DTH	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DTH	Electrical Horn	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DTH	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DTH	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DTH	Interior Lighting	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DTH	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DTH	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DTH	DDM (Driver Door Module)	●	●	●	●

Vectra-C/Signum	[7] 2007	Z 19 DTH	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DTH	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DTH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DTH	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DTH	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DTH	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DTH	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DTH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XE	CVTronic	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XE	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XE	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XE	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XE	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XE	Electrical Horn	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XE	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XE	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XE	Interior Lighting	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XE	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XE	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XE	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XE	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XE	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XE	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XE	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XE	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XE	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XE	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XEP	CVTronic	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XEP	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XEP	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XEP	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XEP	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XEP	Electrical Horn	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XEP	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XEP	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XEP	Interior Lighting	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XEP	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●

Vectra-C/Signum	[7] 2007	Z 16 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XEP	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XEP	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XEP	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XEP	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XEP	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XEP	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XEP	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XEP	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XEP	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 16 XEP	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DT	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DT	CVTronic	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DT	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DT	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DT	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DT	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DT	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DT	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DT	Electrical Horn	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DT	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DT	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DT	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DT	Interior Lighting	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DT	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DT	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DT	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DT	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DT	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DT	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DT	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DT	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DT	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DT	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DT	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DT	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 19 DT	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 20 NET	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 20 NET	CVTronic	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 20 NET	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 20 NET	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 20 NET	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 20 NET	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 20 NET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 20 NET	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 20 NET	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 20 NET	Electrical Horn	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 20 NET	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 20 NET	SAC (Automatic Climate Control)	●	●	●	●

Vectra-C/Signum	[7] 2007	Z 20 NET	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 20 NET	Interior Lighting	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 20 NET	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 20 NET	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 20 NET	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 20 NET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 20 NET	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 20 NET	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 20 NET	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 20 NET	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 20 NET	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 20 NET	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 20 NET	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 20 NET	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 20 NET	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 20 NET	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 20 NET	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Z 20 NET	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Engine(default)	CVTronic	●	●	●	●
Vectra-C/Signum	[7] 2007	Engine(default)	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[7] 2007	Engine(default)	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[7] 2007	Engine(default)	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Engine(default)	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Engine(default)	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[7] 2007	Engine(default)	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Engine(default)	Electrical Horn	●	●	●	●
Vectra-C/Signum	[7] 2007	Engine(default)	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Engine(default)	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[7] 2007	Engine(default)	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Engine(default)	Interior Lighting	●	●	●	●
Vectra-C/Signum	[7] 2007	Engine(default)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[7] 2007	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[7] 2007	Engine(default)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Engine(default)	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Engine(default)	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Engine(default)	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[7] 2007	Engine(default)	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[7] 2007	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[7] 2007	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[7] 2007	Engine(default)	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[7] 2007	Engine(default)	SLM (Shift Lever Module)	●	●	●	●

Vectra-C/Signum	[7] 2007	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[7] 2007	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEH	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEH	CVTronic	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEH	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEH	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEH	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEH	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEH	Electrical Horn	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEH	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEH	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEH	Interior Lighting	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEH	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEH	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEH	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEH	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEH	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEH	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEH	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEH	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEH	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEH	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEH	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEH	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEL	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEL	CVTronic	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEL	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEL	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEL	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEL	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEL	Electrical Horn	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEL	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEL	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEL	Interior Lighting	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEL	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEL	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEL	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEL	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEL	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEL	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEL	REC (Rear Electrical Centre)	●	●	●	●

Vectra-C/Signum	[6] 2006	Z 28 NEL	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEL	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEL	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEL	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEL	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEL	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NEL	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NET	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NET	CVTronic	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NET	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NET	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NET	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NET	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NET	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NET	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NET	Electrical Horn	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NET	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NET	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NET	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NET	Interior Lighting	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NET	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NET	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NET	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NET	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NET	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NET	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NET	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NET	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NET	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NET	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NET	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NET	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NET	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NET	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 28 NET	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 22 DTR	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 22 DTR	CVTronic	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 22 DTR	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 22 DTR	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 22 DTR	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 22 DTR	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 22 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 22 DTR	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 22 DTR	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 22 DTR	Electrical Horn	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 22 DTR	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 22 DTR	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 22 DTR	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 22 DTR	Interior Lighting	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 22 DTR	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 22 DTR	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 22 DTR	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 22 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 22 DTR	BCM (Body Control Module)	●	●	●	●

Vectra-C/Signum	[6] 2006	Y 22 DTR	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 22 DTR	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 22 DTR	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 22 DTR	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 22 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 22 DTR	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 22 DTR	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 22 DTR	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 22 DTR	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 22 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 22 DTR	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XE	CVTronic	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XE	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XE	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XE	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XE	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XE	Electrical Horn	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XE	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XE	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XE	Interior Lighting	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XE	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XE	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XE	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XE	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XE	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XE	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XE	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XE	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XE	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XE	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XE	CVTronic	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XE	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XE	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XE	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XE	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XE	Electrical Horn	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XE	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XE	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XE	Interior Lighting	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●

Vectra-C/Signum	[6] 2006	Z 18 XE	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XE	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XE	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XE	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XE	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XE	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XE	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XE	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XE	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XER	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XER	CVTronic	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XER	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XER	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XER	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XER	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XER	Electrical Horn	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XER	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XER	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XER	Interior Lighting	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XER	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XER	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XER	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XER	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XER	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XER	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XER	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XER	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XER	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XER	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 18 XER	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 20 DTH	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 20 DTH	CVTronic	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 20 DTH	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 20 DTH	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 20 DTH	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 20 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 20 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 20 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 20 DTH	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 20 DTH	Electrical Horn	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 20 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●

Vectra-C/Signum	[6] 2006	Y 20 DTH	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 20 DTH	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 20 DTH	Interior Lighting	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 20 DTH	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 20 DTH	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 20 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 20 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 20 DTH	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 20 DTH	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 20 DTH	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 20 DTH	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 20 DTH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 20 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 20 DTH	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 20 DTH	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 20 DTH	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 20 DTH	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 20 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Y 20 DTH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 20 NET	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 20 NET	CVTronic	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 20 NET	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 20 NET	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 20 NET	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 20 NET	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 20 NET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 20 NET	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 20 NET	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 20 NET	Electrical Horn	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 20 NET	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 20 NET	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 20 NET	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 20 NET	Interior Lighting	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 20 NET	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 20 NET	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 20 NET	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 20 NET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 20 NET	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 20 NET	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 20 NET	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 20 NET	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 20 NET	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 20 NET	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 20 NET	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 20 NET	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 20 NET	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 20 NET	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 20 NET	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 20 NET	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 SE	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 SE	CVTronic	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 SE	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 SE	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 SE	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 SE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●

Vectra-C/Signum	[6] 2006	Z 22 SE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 SE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 SE	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 SE	Electrical Horn	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 SE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 SE	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 SE	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 SE	Interior Lighting	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 SE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 SE	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 SE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 SE	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 SE	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 SE	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 SE	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 SE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 SE	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 SE	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 SE	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 SE	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 SE	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 SE	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 SE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 YH	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 YH	CVTronic	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 YH	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 YH	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 YH	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 YH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 YH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 YH	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 YH	Electrical Horn	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 YH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 YH	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 YH	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 YH	Interior Lighting	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 YH	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 YH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 YH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 YH	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 YH	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 YH	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 YH	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 YH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 YH	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 YH	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 YH	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 YH	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 YH	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 YH	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 22 YH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 30 DT	ECM (Engine Control Module)	●	●	●	●

Vectra-C/Signum	[6] 2006	Z 30 DT	CVTronic	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 30 DT	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 30 DT	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 30 DT	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 30 DT	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 30 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 30 DT	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 30 DT	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 30 DT	Electrical Horn	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 30 DT	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 30 DT	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 30 DT	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 30 DT	Interior Lighting	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 30 DT	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 30 DT	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 30 DT	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 30 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 30 DT	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 30 DT	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 30 DT	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 30 DT	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 30 DT	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 30 DT	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 30 DT	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 30 DT	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 30 DT	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 30 DT	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 30 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 30 DT	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 32 SE	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 32 SE	CVTronic	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 32 SE	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 32 SE	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 32 SE	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 32 SE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 32 SE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 32 SE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 32 SE	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 32 SE	Electrical Horn	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 32 SE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 32 SE	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 32 SE	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 32 SE	Interior Lighting	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 32 SE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 32 SE	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 32 SE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 32 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 32 SE	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 32 SE	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 32 SE	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 32 SE	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 32 SE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 32 SE	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 32 SE	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 32 SE	EHS (Electrical Heater System)	●	●	●	●

Vectra-C/Signum	[6] 2006	Z 32 SE	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 32 SE	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 32 SE	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 32 SE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DTH	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DTH	CVTronic	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DTH	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DTH	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DTH	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DTH	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DTH	Electrical Horn	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DTH	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DTH	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DTH	Interior Lighting	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DTH	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DTH	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DTH	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DTH	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DTH	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DTH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DTH	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DTH	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DTH	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DTH	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DTH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XEP	CVTronic	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XEP	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XEP	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XEP	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XEP	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XEP	Electrical Horn	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XEP	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XEP	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XEP	Interior Lighting	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XEP	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XEP	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XEP	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XEP	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●

Vectra-C/Signum	[6] 2006	Z 16 XEP	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XEP	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XEP	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XEP	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XEP	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XEP	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 16 XEP	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DT	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DT	CVTronic	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DT	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DT	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DT	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DT	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DT	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DT	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DT	Electrical Horn	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DT	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DT	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DT	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DT	Interior Lighting	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DT	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DT	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DT	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DT	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DT	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DT	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DT	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DT	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DT	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DT	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DT	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DT	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Z 19 DT	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Engine(default)	CVTronic	●	●	●	●
Vectra-C/Signum	[6] 2006	Engine(default)	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[6] 2006	Engine(default)	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[6] 2006	Engine(default)	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Engine(default)	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Engine(default)	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[6] 2006	Engine(default)	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Engine(default)	Electrical Horn	●	●	●	●
Vectra-C/Signum	[6] 2006	Engine(default)	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[6] 2006	Engine(default)	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[6] 2006	Engine(default)	SRM (Sun Roof Module)	●	●	●	●

Vectra-C/Signum	[6] 2006	Engine(default)	Interior Lighting	●	●	●	●
Vectra-C/Signum	[6] 2006	Engine(default)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[6] 2006	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[6] 2006	Engine(default)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Engine(default)	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Engine(default)	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Engine(default)	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[6] 2006	Engine(default)	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[6] 2006	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[6] 2006	Engine(default)	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[6] 2006	Engine(default)	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[6] 2006	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[6] 2006	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 22 DTR	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 22 DTR	CVTronic	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 22 DTR	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 22 DTR	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 22 DTR	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 22 DTR	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 22 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 22 DTR	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 22 DTR	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 22 DTR	Electrical Horn	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 22 DTR	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 22 DTR	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 22 DTR	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 22 DTR	Interior Lighting	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 22 DTR	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 22 DTR	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 22 DTR	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 22 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 22 DTR	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 22 DTR	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 22 DTR	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 22 DTR	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 22 DTR	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 22 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 22 DTR	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 22 DTR	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 22 DTR	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 22 DTR	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 22 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 22 DTR	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 18 XE	CVTronic	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 18 XE	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 18 XE	AF 23-5/33-5/40-6	●	●	●	●

Vectra-C/Signum	[5] 2005	Z 18 XE	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 18 XE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 18 XE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 18 XE	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 18 XE	Electrical Horn	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 18 XE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 18 XE	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 18 XE	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 18 XE	Interior Lighting	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 18 XE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 18 XE	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 18 XE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 18 XE	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 18 XE	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 18 XE	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 18 XE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 18 XE	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 18 XE	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 18 XE	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 18 XE	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 18 XE	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 18 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 18 XE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 20 DTH	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 20 DTH	CVTronic	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 20 DTH	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 20 DTH	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 20 DTH	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 20 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 20 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 20 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 20 DTH	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 20 DTH	Electrical Horn	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 20 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 20 DTH	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 20 DTH	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 20 DTH	Interior Lighting	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 20 DTH	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 20 DTH	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 20 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 20 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 20 DTH	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 20 DTH	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 20 DTH	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 20 DTH	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 20 DTH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 20 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 20 DTH	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 20 DTH	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 20 DTH	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 20 DTH	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 20 DTH	UEC (Underhood Electrical Centre)	●	●	●	●

Vectra-C/Signum	[5] 2005	Y 20 DTH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 SE	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 SE	CVTronic	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 SE	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 SE	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 SE	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 SE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 SE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 SE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 SE	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 SE	Electrical Horn	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 SE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 SE	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 SE	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 SE	Interior Lighting	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 SE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 SE	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 SE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 SE	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 SE	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 SE	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 SE	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 SE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 SE	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 SE	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 SE	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 SE	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 SE	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 SE	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 SE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 YH	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 YH	CVTronic	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 YH	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 YH	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 YH	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 YH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 YH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 YH	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 YH	Electrical Horn	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 YH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 YH	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 YH	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 YH	Interior Lighting	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 YH	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 YH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 YH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 YH	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 YH	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 YH	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 YH	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 YH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 YH	ATWS (Anti Theft Warning System)	●	●	●	●

Vectra-C/Signum	[5] 2005	Z 22 YH	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 YH	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 YH	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 YH	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 YH	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 22 YH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 30 DT	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 30 DT	CVTronic	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 30 DT	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 30 DT	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 30 DT	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 30 DT	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 30 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 30 DT	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 30 DT	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 30 DT	Electrical Horn	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 30 DT	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 30 DT	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 30 DT	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 30 DT	Interior Lighting	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 30 DT	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 30 DT	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 30 DT	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 30 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 30 DT	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 30 DT	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 30 DT	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 30 DT	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 30 DT	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 30 DT	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 30 DT	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 30 DT	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 30 DT	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 30 DT	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 30 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Y 30 DT	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 32 SE	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 32 SE	CVTronic	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 32 SE	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 32 SE	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 32 SE	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 32 SE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 32 SE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 32 SE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 32 SE	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 32 SE	Electrical Horn	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 32 SE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 32 SE	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 32 SE	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 32 SE	Interior Lighting	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 32 SE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 32 SE	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 32 SE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 32 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 32 SE	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 32 SE	DDM (Driver Door Module)	●	●	●	●

Vectra-C/Signum	[5] 2005	Z 32 SE	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 32 SE	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 32 SE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 32 SE	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 32 SE	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 32 SE	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 32 SE	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 32 SE	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 32 SE	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 32 SE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DTH	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DTH	CVTronic	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DTH	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DTH	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DTH	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DTH	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DTH	Electrical Horn	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DTH	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DTH	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DTH	Interior Lighting	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DTH	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DTH	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DTH	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DTH	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DTH	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DTH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DTH	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DTH	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DTH	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DTH	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DTH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 16 XE	CVTronic	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 16 XE	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 16 XE	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 16 XE	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 16 XE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 16 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 16 XE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 16 XE	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 16 XE	Electrical Horn	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 16 XE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 16 XE	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 16 XE	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 16 XE	Interior Lighting	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 16 XE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 16 XE	IC (Instrument Cluster)	●	●	●	●

Vectra-C/Signum	[5] 2005	Z 16 XE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 16 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 16 XE	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 16 XE	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 16 XE	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 16 XE	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 16 XE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 16 XE	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 16 XE	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 16 XE	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 16 XE	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 16 XE	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 16 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 16 XE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DT	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DT	CVTronic	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DT	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DT	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DT	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DT	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DT	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DT	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DT	Electrical Horn	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DT	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DT	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DT	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DT	Interior Lighting	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DT	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DT	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DT	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DT	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DT	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DT	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DT	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DT	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DT	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DT	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DT	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DT	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 19 DT	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 20 NET	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 20 NET	CVTronic	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 20 NET	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 20 NET	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 20 NET	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 20 NET	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 20 NET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 20 NET	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 20 NET	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 20 NET	Electrical Horn	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 20 NET	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 20 NET	SAC (Automatic Climate Control)	●	●	●	●

Vectra-C/Signum	[5] 2005	Z 20 NET	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 20 NET	Interior Lighting	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 20 NET	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 20 NET	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 20 NET	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 20 NET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 20 NET	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 20 NET	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 20 NET	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 20 NET	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 20 NET	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 20 NET	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 20 NET	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 20 NET	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 20 NET	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 20 NET	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 20 NET	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Z 20 NET	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Engine(default)	CVTronic	●	●	●	●
Vectra-C/Signum	[5] 2005	Engine(default)	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[5] 2005	Engine(default)	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[5] 2005	Engine(default)	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Engine(default)	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Engine(default)	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[5] 2005	Engine(default)	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Engine(default)	Electrical Horn	●	●	●	●
Vectra-C/Signum	[5] 2005	Engine(default)	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[5] 2005	Engine(default)	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[5] 2005	Engine(default)	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Engine(default)	Interior Lighting	●	●	●	●
Vectra-C/Signum	[5] 2005	Engine(default)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[5] 2005	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[5] 2005	Engine(default)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Engine(default)	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Engine(default)	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Engine(default)	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[5] 2005	Engine(default)	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[5] 2005	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[5] 2005	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[5] 2005	Engine(default)	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[5] 2005	Engine(default)	SLM (Shift Lever Module)	●	●	●	●

Vectra-C/Signum	[5] 2005	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[5] 2005	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 18 XE	CVTronic	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 18 XE	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 18 XE	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 18 XE	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 18 XE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 18 XE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 18 XE	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 18 XE	Electrical Horn	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 18 XE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 18 XE	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 18 XE	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 18 XE	Interior Lighting	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 18 XE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 18 XE	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 18 XE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 18 XE	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 18 XE	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 18 XE	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 18 XE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 18 XE	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 18 XE	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 18 XE	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 18 XE	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 18 XE	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 18 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 18 XE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 20 DTH	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 20 DTH	CVTronic	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 20 DTH	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 20 DTH	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 20 DTH	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 20 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 20 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 20 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 20 DTH	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 20 DTH	Electrical Horn	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 20 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 20 DTH	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 20 DTH	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 20 DTH	Interior Lighting	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 20 DTH	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 20 DTH	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 20 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 20 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 20 DTH	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 20 DTH	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 20 DTH	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 20 DTH	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 20 DTH	REC (Rear Electrical Centre)	●	●	●	●

Vectra-C/Signum	[4] 2004	Y 20 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 20 DTH	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 20 DTH	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 20 DTH	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 20 DTH	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 20 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 20 DTH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 22 DTR	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 22 DTR	CVTronic	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 22 DTR	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 22 DTR	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 22 DTR	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 22 DTR	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 22 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 22 DTR	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 22 DTR	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 22 DTR	Electrical Horn	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 22 DTR	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 22 DTR	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 22 DTR	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 22 DTR	Interior Lighting	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 22 DTR	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 22 DTR	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 22 DTR	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 22 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 22 DTR	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 22 DTR	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 22 DTR	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 22 DTR	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 22 DTR	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 22 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 22 DTR	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 22 DTR	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 22 DTR	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 22 DTR	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 22 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 22 DTR	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 SE	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 SE	CVTronic	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 SE	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 SE	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 SE	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 SE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 SE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 SE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 SE	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 SE	Electrical Horn	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 SE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 SE	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 SE	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 SE	Interior Lighting	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 SE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 SE	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 SE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 SE	BCM (Body Control Module)	●	●	●	●

Vectra-C/Signum	[4] 2004	Z 22 SE	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 SE	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 SE	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 SE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 SE	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 SE	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 SE	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 SE	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 SE	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 SE	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 SE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 YH	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 YH	CVTronic	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 YH	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 YH	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 YH	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 YH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 YH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 YH	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 YH	Electrical Horn	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 YH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 YH	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 YH	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 YH	Interior Lighting	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 YH	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 YH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 YH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 YH	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 YH	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 YH	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 YH	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 YH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 YH	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 YH	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 YH	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 YH	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 YH	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 YH	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 22 YH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 30 DT	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 30 DT	CVTronic	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 30 DT	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 30 DT	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 30 DT	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 30 DT	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 30 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 30 DT	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 30 DT	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 30 DT	Electrical Horn	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 30 DT	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 30 DT	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 30 DT	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 30 DT	Interior Lighting	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 30 DT	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●

Vectra-C/Signum	[4] 2004	Y 30 DT	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 30 DT	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 30 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 30 DT	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 30 DT	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 30 DT	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 30 DT	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 30 DT	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 30 DT	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 30 DT	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 30 DT	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 30 DT	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 30 DT	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 30 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Y 30 DT	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 32 SE	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 32 SE	CVTronic	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 32 SE	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 32 SE	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 32 SE	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 32 SE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 32 SE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 32 SE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 32 SE	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 32 SE	Electrical Horn	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 32 SE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 32 SE	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 32 SE	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 32 SE	Interior Lighting	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 32 SE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 32 SE	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 32 SE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 32 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 32 SE	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 32 SE	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 32 SE	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 32 SE	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 32 SE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 32 SE	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 32 SE	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 32 SE	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 32 SE	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 32 SE	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 32 SE	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 32 SE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 16 XE	CVTronic	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 16 XE	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 16 XE	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 16 XE	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 16 XE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 16 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 16 XE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 16 XE	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 16 XE	Electrical Horn	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 16 XE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●

Vectra-C/Signum	[4] 2004	Z 16 XE	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 16 XE	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 16 XE	Interior Lighting	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 16 XE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 16 XE	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 16 XE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 16 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 16 XE	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 16 XE	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 16 XE	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 16 XE	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 16 XE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 16 XE	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 16 XE	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 16 XE	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 16 XE	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 16 XE	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 16 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 16 XE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DT	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DT	CVTronic	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DT	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DT	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DT	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DT	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DT	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DT	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DT	Electrical Horn	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DT	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DT	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DT	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DT	Interior Lighting	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DT	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DT	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DT	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DT	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DT	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DT	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DT	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DT	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DT	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DT	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DT	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DT	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DT	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DTH	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DTH	CVTronic	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DTH	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DTH	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DTH	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●

Vectra-C/Signum	[4] 2004	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DTH	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DTH	Electrical Horn	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DTH	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DTH	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DTH	Interior Lighting	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DTH	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DTH	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DTH	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DTH	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DTH	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DTH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DTH	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DTH	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DTH	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DTH	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 19 DTH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 20 NET	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 20 NET	CVTronic	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 20 NET	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 20 NET	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 20 NET	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 20 NET	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 20 NET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 20 NET	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 20 NET	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 20 NET	Electrical Horn	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 20 NET	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 20 NET	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 20 NET	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 20 NET	Interior Lighting	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 20 NET	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 20 NET	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 20 NET	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 20 NET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 20 NET	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 20 NET	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 20 NET	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 20 NET	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 20 NET	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 20 NET	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 20 NET	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 20 NET	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 20 NET	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 20 NET	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 20 NET	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 20 NET	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Z 20 NET	ECM (Engine Control Module)	●	●	●	●

Vectra-C/Signum	[4] 2004	Engine(default)	CVTronic	●	●	●	●
Vectra-C/Signum	[4] 2004	Engine(default)	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[4] 2004	Engine(default)	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[4] 2004	Engine(default)	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Engine(default)	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Engine(default)	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[4] 2004	Engine(default)	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Engine(default)	Electrical Horn	●	●	●	●
Vectra-C/Signum	[4] 2004	Engine(default)	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[4] 2004	Engine(default)	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[4] 2004	Engine(default)	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Engine(default)	Interior Lighting	●	●	●	●
Vectra-C/Signum	[4] 2004	Engine(default)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[4] 2004	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[4] 2004	Engine(default)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Engine(default)	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Engine(default)	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Engine(default)	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[4] 2004	Engine(default)	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[4] 2004	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[4] 2004	Engine(default)	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[4] 2004	Engine(default)	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[4] 2004	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[4] 2004	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 18 XE	CVTronic	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 18 XE	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 18 XE	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 18 XE	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 18 XE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 18 XE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 18 XE	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 18 XE	Electrical Horn	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 18 XE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 18 XE	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 18 XE	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 18 XE	Interior Lighting	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 18 XE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 18 XE	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 18 XE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●

Vectra-C/Signum	[3] 2003	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 18 XE	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 18 XE	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 18 XE	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 18 XE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 18 XE	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 18 XE	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 18 XE	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 18 XE	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 18 XE	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 18 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 18 XE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 20 DTH	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 20 DTH	CVTronic	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 20 DTH	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 20 DTH	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 20 DTH	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 20 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 20 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 20 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 20 DTH	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 20 DTH	Electrical Horn	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 20 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 20 DTH	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 20 DTH	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 20 DTH	Interior Lighting	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 20 DTH	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 20 DTH	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 20 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 20 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 20 DTH	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 20 DTH	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 20 DTH	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 20 DTH	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 20 DTH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 20 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 20 DTH	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 20 DTH	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 20 DTH	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 20 DTH	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 20 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 20 DTH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 22 DTR	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 22 DTR	CVTronic	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 22 DTR	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 22 DTR	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 22 DTR	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 22 DTR	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 22 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 22 DTR	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 22 DTR	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 22 DTR	Electrical Horn	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 22 DTR	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 22 DTR	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 22 DTR	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 22 DTR	Interior Lighting	●	●	●	●

Vectra-C/Signum	[3] 2003	Y 22 DTR	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 22 DTR	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 22 DTR	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 22 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 22 DTR	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 22 DTR	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 22 DTR	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 22 DTR	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 22 DTR	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 22 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 22 DTR	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 22 DTR	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 22 DTR	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 22 DTR	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 22 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 22 DTR	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 SE	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 SE	CVTronic	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 SE	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 SE	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 SE	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 SE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 SE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 SE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 SE	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 SE	Electrical Horn	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 SE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 SE	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 SE	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 SE	Interior Lighting	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 SE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 SE	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 SE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 SE	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 SE	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 SE	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 SE	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 SE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 SE	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 SE	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 SE	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 SE	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 SE	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 SE	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 SE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 YH	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 YH	CVTronic	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 YH	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 YH	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 YH	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 YH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 YH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 YH	CDC (Continuous Damping Control)	●	●	●	●

Vectra-C/Signum	[3] 2003	Z 22 YH	Electrical Horn	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 YH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 YH	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 YH	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 YH	Interior Lighting	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 YH	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 YH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 YH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 YH	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 YH	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 YH	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 YH	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 YH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 YH	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 YH	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 YH	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 YH	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 YH	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 YH	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 22 YH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 30 DT	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 30 DT	CVTronic	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 30 DT	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 30 DT	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 30 DT	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 30 DT	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 30 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 30 DT	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 30 DT	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 30 DT	Electrical Horn	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 30 DT	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 30 DT	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 30 DT	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 30 DT	Interior Lighting	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 30 DT	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 30 DT	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 30 DT	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 30 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 30 DT	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 30 DT	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 30 DT	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 30 DT	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 30 DT	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 30 DT	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 30 DT	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 30 DT	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 30 DT	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 30 DT	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 30 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[3] 2003	Y 30 DT	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 32 SE	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 32 SE	CVTronic	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 32 SE	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 32 SE	AF 23-5/33-5/40-6	●	●	●	●

Vectra-C/Signum	[3] 2003	Z 32 SE	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 32 SE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 32 SE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 32 SE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 32 SE	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 32 SE	Electrical Horn	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 32 SE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 32 SE	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 32 SE	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 32 SE	Interior Lighting	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 32 SE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 32 SE	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 32 SE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 32 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 32 SE	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 32 SE	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 32 SE	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 32 SE	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 32 SE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 32 SE	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 32 SE	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 32 SE	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 32 SE	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 32 SE	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 32 SE	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 32 SE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 16 XE	CVTronic	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 16 XE	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 16 XE	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 16 XE	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 16 XE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 16 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 16 XE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 16 XE	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 16 XE	Electrical Horn	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 16 XE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 16 XE	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 16 XE	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 16 XE	Interior Lighting	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 16 XE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 16 XE	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 16 XE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 16 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 16 XE	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 16 XE	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 16 XE	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 16 XE	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 16 XE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 16 XE	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 16 XE	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 16 XE	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 16 XE	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 16 XE	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 16 XE	UEC (Underhood Electrical Centre)	●	●	●	●

Vectra-C/Signum	[3] 2003	Z 16 XE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 20 NET	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 20 NET	CVTronic	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 20 NET	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 20 NET	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 20 NET	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 20 NET	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 20 NET	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 20 NET	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 20 NET	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 20 NET	Electrical Horn	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 20 NET	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 20 NET	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 20 NET	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 20 NET	Interior Lighting	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 20 NET	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 20 NET	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 20 NET	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 20 NET	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 20 NET	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 20 NET	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 20 NET	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 20 NET	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 20 NET	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 20 NET	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 20 NET	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 20 NET	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 20 NET	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 20 NET	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 20 NET	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[3] 2003	Z 20 NET	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[3] 2003	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Engine(default)	CVTronic	●	●	●	●
Vectra-C/Signum	[3] 2003	Engine(default)	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[3] 2003	Engine(default)	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[3] 2003	Engine(default)	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[3] 2003	Engine(default)	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Engine(default)	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[3] 2003	Engine(default)	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[3] 2003	Engine(default)	Electrical Horn	●	●	●	●
Vectra-C/Signum	[3] 2003	Engine(default)	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[3] 2003	Engine(default)	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[3] 2003	Engine(default)	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Engine(default)	Interior Lighting	●	●	●	●
Vectra-C/Signum	[3] 2003	Engine(default)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[3] 2003	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[3] 2003	Engine(default)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Engine(default)	BCM (Body Control Module)	●	●	●	●

Vectra-C/Signum	[3] 2003	Engine(default)	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Engine(default)	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[3] 2003	Engine(default)	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[3] 2003	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[3] 2003	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[3] 2003	Engine(default)	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[3] 2003	Engine(default)	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[3] 2003	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[3] 2003	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 18 XE	CVTronic	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 18 XE	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 18 XE	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 18 XE	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 18 XE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 18 XE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 18 XE	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 18 XE	Electrical Horn	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 18 XE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 18 XE	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 18 XE	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 18 XE	Interior Lighting	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 18 XE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 18 XE	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 18 XE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 18 XE	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 18 XE	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 18 XE	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 18 XE	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 18 XE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 18 XE	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 18 XE	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 18 XE	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 18 XE	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 18 XE	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 18 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 18 XE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 20 DTH	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 20 DTH	CVTronic	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 20 DTH	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 20 DTH	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 20 DTH	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 20 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 20 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 20 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 20 DTH	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 20 DTH	Electrical Horn	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 20 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 20 DTH	SAC (Automatic Climate Control)	●	●	●	●

Vectra-C/Signum	[2] 2002	Y 20 DTH	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 20 DTH	Interior Lighting	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 20 DTH	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 20 DTH	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 20 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 20 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 20 DTH	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 20 DTH	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 20 DTH	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 20 DTH	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 20 DTH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 20 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 20 DTH	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 20 DTH	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 20 DTH	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 20 DTH	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 20 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 20 DTH	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 22 SE	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 22 SE	CVTronic	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 22 SE	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 22 SE	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 22 SE	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 22 SE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 22 SE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 22 SE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 22 SE	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 22 SE	Electrical Horn	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 22 SE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 22 SE	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 22 SE	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 22 SE	Interior Lighting	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 22 SE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 22 SE	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 22 SE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 22 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 22 SE	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 22 SE	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 22 SE	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 22 SE	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 22 SE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 22 SE	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 22 SE	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 22 SE	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 22 SE	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 22 SE	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 22 SE	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 22 SE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 22 DTR	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 22 DTR	CVTronic	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 22 DTR	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 22 DTR	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 22 DTR	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 22 DTR	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 22 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●

Vectra-C/Signum	[2] 2002	Y 22 DTR	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 22 DTR	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 22 DTR	Electrical Horn	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 22 DTR	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 22 DTR	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 22 DTR	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 22 DTR	Interior Lighting	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 22 DTR	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 22 DTR	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 22 DTR	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 22 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 22 DTR	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 22 DTR	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 22 DTR	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 22 DTR	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 22 DTR	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 22 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 22 DTR	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 22 DTR	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 22 DTR	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 22 DTR	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 22 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[2] 2002	Y 22 DTR	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 32 SE	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 32 SE	CVTronic	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 32 SE	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 32 SE	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 32 SE	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 32 SE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 32 SE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 32 SE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 32 SE	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 32 SE	Electrical Horn	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 32 SE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 32 SE	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 32 SE	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 32 SE	Interior Lighting	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 32 SE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 32 SE	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 32 SE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 32 SE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 32 SE	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 32 SE	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 32 SE	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 32 SE	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 32 SE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 32 SE	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 32 SE	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 32 SE	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 32 SE	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 32 SE	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 32 SE	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 32 SE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 16 XE	CVTronic	●	●	●	●

Vectra-C/Signum	[2] 2002	Z 16 XE	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 16 XE	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 16 XE	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 16 XE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 16 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 16 XE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 16 XE	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 16 XE	Electrical Horn	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 16 XE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 16 XE	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 16 XE	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 16 XE	Interior Lighting	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 16 XE	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 16 XE	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 16 XE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 16 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 16 XE	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 16 XE	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 16 XE	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 16 XE	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 16 XE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 16 XE	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 16 XE	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 16 XE	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 16 XE	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 16 XE	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 16 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[2] 2002	Z 16 XE	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[2] 2002	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Engine(default)	CVTronic	●	●	●	●
Vectra-C/Signum	[2] 2002	Engine(default)	MTA (Easytronic)	●	●	●	●
Vectra-C/Signum	[2] 2002	Engine(default)	AF 23-5/33-5/40-6	●	●	●	●
Vectra-C/Signum	[2] 2002	Engine(default)	ECC (Electronic Cruise Control)	●	●	●	●
Vectra-C/Signum	[2] 2002	Engine(default)	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Vectra-C/Signum	[2] 2002	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Vectra-C/Signum	[2] 2002	Engine(default)	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Vectra-C/Signum	[2] 2002	Engine(default)	CDC (Continuous Damping Control)	●	●	●	●
Vectra-C/Signum	[2] 2002	Engine(default)	Electrical Horn	●	●	●	●
Vectra-C/Signum	[2] 2002	Engine(default)	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Vectra-C/Signum	[2] 2002	Engine(default)	SAC (Automatic Climate Control)	●	●	●	●
Vectra-C/Signum	[2] 2002	Engine(default)	SRM (Sun Roof Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Engine(default)	Interior Lighting	●	●	●	●
Vectra-C/Signum	[2] 2002	Engine(default)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vectra-C/Signum	[2] 2002	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Vectra-C/Signum	[2] 2002	Engine(default)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Engine(default)	BCM (Body Control Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Engine(default)	DDM (Driver Door Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Engine(default)	ESM/ESH (Electronic Seat Memory/Seat Heating)	●	●	●	●

Vectra-C/Signum	[2] 2002	Engine(default)	PDM (Passenger Door Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Vectra-C/Signum	[2] 2002	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Vectra-C/Signum	[2] 2002	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Vectra-C/Signum	[2] 2002	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Vectra-C/Signum	[2] 2002	Engine(default)	PAS (Park Pilot)	●	●	●	●
Vectra-C/Signum	[2] 2002	Engine(default)	SLM (Shift Lever Module)	●	●	●	●
Vectra-C/Signum	[2] 2002	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Vectra-C/Signum	[2] 2002	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Vivaro	[D] 2013	Engine Type"+F9Q 760/762 (1.9L)	ECM (Engine Control Module)	●	●	●	●
Vivaro	[D] 2013	Engine Type"+F9Q 760/762 (1.9L)	MTA (Tecshift)	●	●	●	●
Vivaro	[D] 2013	Engine Type"+F9Q 760/762 (1.9L)	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Vivaro	[D] 2013	Engine Type"+F9Q 760/762 (1.9L)	ABS (Anti-locked Braking System)	●	●	●	●
Vivaro	[D] 2013	Engine Type"+F9Q 760/762 (1.9L)	PAS (Park Pilot)	●	●	●	●
Vivaro	[D] 2013	Engine Type"+F9Q 760/762 (1.9L)	AOH (Add On Heater)	●	●	●	●
Vivaro	[D] 2013	Engine Type"+F9Q 760/762 (1.9L)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vivaro	[D] 2013	Engine Type"+F9Q 760/762 (1.9L)	BCM (Body Control Module)	●	●	●	●
Vivaro	[C] 2012	Engine Type"+F9Q 760/762 (1.9L)	ECM (Engine Control Module)	●	●	●	●
Vivaro	[C] 2012	Engine Type"+F9Q 760/762 (1.9L)	MTA (Tecshift)	●	●	●	●
Vivaro	[C] 2012	Engine Type"+F9Q 760/762 (1.9L)	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Vivaro	[C] 2012	Engine Type"+F9Q 760/762 (1.9L)	ABS (Anti-locked Braking System)	●	●	●	●
Vivaro	[C] 2012	Engine Type"+F9Q 760/762 (1.9L)	PAS (Park Pilot)	●	●	●	●
Vivaro	[C] 2012	Engine Type"+F9Q 760/762 (1.9L)	AOH (Add On Heater)	●	●	●	●
Vivaro	[C] 2012	Engine Type"+F9Q 760/762 (1.9L)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vivaro	[C] 2012	Engine Type"+F9Q 760/762 (1.9L)	BCM (Body Control Module)	●	●	●	●
Vivaro	[B] 2011	F9Q 760/762 (1.9L)	ECM (Engine Control Module)	●	●	●	●
Vivaro	[B] 2011	F9Q 760/762 (1.9L)	MTA (Tecshift)	●	●	●	●

Vivaro	[B] 2011	F9Q 760/762 (1.9L)	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Vivaro	[B] 2011	F9Q 760/762 (1.9L)	ABS (Anti-locked Braking System)	●	●	●	●
Vivaro	[B] 2011	F9Q 760/762 (1.9L)	PAS (Park Pilot)	●	●	●	●
Vivaro	[B] 2011	F9Q 760/762 (1.9L)	AOH (Add On Heater)	●	●	●	●
Vivaro	[B] 2011	F9Q 760/762 (1.9L)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vivaro	[B] 2011	F9Q 760/762 (1.9L)	BCM (Body Control Module)	●	●	●	●
Vivaro	[A] 2010	F9Q 760/762 (1.9L)	ECM (Engine Control Module)	●	●	●	●
Vivaro	[A] 2010	F9Q 760/762 (1.9L)	MTA (Tecshift)	●	●	●	●
Vivaro	[A] 2010	F9Q 760/762 (1.9L)	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Vivaro	[A] 2010	F9Q 760/762 (1.9L)	ABS (Anti-locked Braking System)	●	●	●	●
Vivaro	[A] 2010	F9Q 760/762 (1.9L)	PAS (Park Pilot)	●	●	●	●
Vivaro	[A] 2010	F9Q 760/762 (1.9L)	AOH (Add On Heater)	●	●	●	●
Vivaro	[A] 2010	F9Q 760/762 (1.9L)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vivaro	[A] 2010	F9Q 760/762 (1.9L)	BCM (Body Control Module)	●	●	●	●
Vivaro	[9] 2009	F9Q 760/762 (1.9L)	ECM (Engine Control Module)	●	●	●	●
Vivaro	[9] 2009	F9Q 760/762 (1.9L)	MTA (Tecshift)	●	●	●	●
Vivaro	[9] 2009	F9Q 760/762 (1.9L)	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Vivaro	[9] 2009	F9Q 760/762 (1.9L)	ABS (Anti-locked Braking System)	●	●	●	●
Vivaro	[9] 2009	F9Q 760/762 (1.9L)	PAS (Park Pilot)	●	●	●	●
Vivaro	[9] 2009	F9Q 760/762 (1.9L)	AOH (Add On Heater)	●	●	●	●
Vivaro	[9] 2009	F9Q 760/762 (1.9L)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vivaro	[9] 2009	F9Q 760/762 (1.9L)	BCM (Body Control Module)	●	●	●	●
Vivaro	[8] 2008	F9Q 760/762 (1.9L)	ECM (Engine Control Module)	●	●	●	●
Vivaro	[8] 2008	F9Q 760/762 (1.9L)	MTA (Tecshift)	●	●	●	●
Vivaro	[8] 2008	F9Q 760/762 (1.9L)	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Vivaro	[8] 2008	F9Q 760/762 (1.9L)	ABS (Anti-locked Braking System)	●	●	●	●
Vivaro	[8] 2008	F9Q 760/762 (1.9L)	PAS (Park Pilot)	●	●	●	●
Vivaro	[8] 2008	F9Q 760/762 (1.9L)	AOH (Add On Heater)	●	●	●	●
Vivaro	[8] 2008	F9Q 760/762 (1.9L)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vivaro	[8] 2008	F9Q 760/762 (1.9L)	BCM (Body Control Module)	●	●	●	●
Vivaro	[7] 2007	F9Q 760/762 (1.9L)	ECM (Engine Control Module)	●	●	●	●
Vivaro	[7] 2007	F9Q 760/762 (1.9L)	MTA (Tecshift)	●	●	●	●
Vivaro	[7] 2007	F9Q 760/762 (1.9L)	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Vivaro	[7] 2007	F9Q 760/762 (1.9L)	ABS (Anti-locked Braking System)	●	●	●	●
Vivaro	[7] 2007	F9Q 760/762 (1.9L)	PAS (Park Pilot)	●	●	●	●
Vivaro	[7] 2007	F9Q 760/762 (1.9L)	AOH (Add On Heater)	●	●	●	●
Vivaro	[7] 2007	F9Q 760/762 (1.9L)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vivaro	[7] 2007	F9Q 760/762 (1.9L)	BCM (Body Control Module)	●	●	●	●
Vivaro	[6] 2006	F9Q 760/762 (1.9L)	ECM (Engine Control Module)	●	●	●	●
Vivaro	[6] 2006	F9Q 760/762 (1.9L)	MTA (Tecshift)	●	●	●	●
Vivaro	[6] 2006	F9Q 760/762 (1.9L)	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Vivaro	[6] 2006	F9Q 760/762 (1.9L)	ABS (Anti-locked Braking System)	●	●	●	●
Vivaro	[6] 2006	F9Q 760/762 (1.9L)	PAS (Park Pilot)	●	●	●	●

Vivaro	[6] 2006	F9Q 760/762 (1.9L)	AOH (Add On Heater)	●	●	●	●
Vivaro	[6] 2006	F9Q 760/762 (1.9L)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vivaro	[6] 2006	F9Q 760/762 (1.9L)	BCM (Body Control Module)	●	●	●	●
Vivaro	[5] 2005	F9Q 760/762 (1.9L)	ECM (Engine Control Module)	●	●	●	●
Vivaro	[5] 2005	F9Q 760/762 (1.9L)	MTA (Tecshift)	●	●	●	●
Vivaro	[5] 2005	F9Q 760/762 (1.9L)	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Vivaro	[5] 2005	F9Q 760/762 (1.9L)	ABS (Anti-locked Braking System)	●	●	●	●
Vivaro	[5] 2005	F9Q 760/762 (1.9L)	PAS (Park Pilot)	●	●	●	●
Vivaro	[5] 2005	F9Q 760/762 (1.9L)	AOH (Add On Heater)	●	●	●	●
Vivaro	[5] 2005	F9Q 760/762 (1.9L)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vivaro	[5] 2005	F9Q 760/762 (1.9L)	BCM (Body Control Module)	●	●	●	●
Vivaro	[4] 2004	F9Q 760/762 (1.9L)	ECM (Engine Control Module)	●	●	●	●
Vivaro	[4] 2004	F9Q 760/762 (1.9L)	MTA (Tecshift)	●	●	●	●
Vivaro	[4] 2004	F9Q 760/762 (1.9L)	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Vivaro	[4] 2004	F9Q 760/762 (1.9L)	ABS (Anti-locked Braking System)	●	●	●	●
Vivaro	[4] 2004	F9Q 760/762 (1.9L)	PAS (Park Pilot)	●	●	●	●
Vivaro	[4] 2004	F9Q 760/762 (1.9L)	AOH (Add On Heater)	●	●	●	●
Vivaro	[4] 2004	F9Q 760/762 (1.9L)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vivaro	[4] 2004	F9Q 760/762 (1.9L)	BCM (Body Control Module)	●	●	●	●
Vivaro	[3] 2003	F9Q 760/762 (1.9L)	ECM (Engine Control Module)	●	●	●	●
Vivaro	[3] 2003	F9Q 760/762 (1.9L)	MTA (Tecshift)	●	●	●	●
Vivaro	[3] 2003	F9Q 760/762 (1.9L)	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Vivaro	[3] 2003	F9Q 760/762 (1.9L)	ABS (Anti-locked Braking System)	●	●	●	●
Vivaro	[3] 2003	F9Q 760/762 (1.9L)	PAS (Park Pilot)	●	●	●	●
Vivaro	[3] 2003	F9Q 760/762 (1.9L)	AOH (Add On Heater)	●	●	●	●
Vivaro	[3] 2003	F9Q 760/762 (1.9L)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vivaro	[3] 2003	F9Q 760/762 (1.9L)	BCM (Body Control Module)	●	●	●	●
Vivaro	[2] 2002	F9Q 760/762 (1.9L)	ECM (Engine Control Module)	●	●	●	●
Vivaro	[2] 2002	F9Q 760/762 (1.9L)	MTA (Tecshift)	●	●	●	●
Vivaro	[2] 2002	F9Q 760/762 (1.9L)	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Vivaro	[2] 2002	F9Q 760/762 (1.9L)	ABS (Anti-locked Braking System)	●	●	●	●
Vivaro	[2] 2002	F9Q 760/762 (1.9L)	PAS (Park Pilot)	●	●	●	●
Vivaro	[2] 2002	F9Q 760/762 (1.9L)	AOH (Add On Heater)	●	●	●	●
Vivaro	[2] 2002	F9Q 760/762 (1.9L)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vivaro	[2] 2002	F9Q 760/762 (1.9L)	BCM (Body Control Module)	●	●	●	●
Vivaro	[1] 2001	F9Q 760/762 (1.9L)	ECM (Engine Control Module)	●	●	●	●
Vivaro	[1] 2001	F9Q 760/762 (1.9L)	MTA (Tecshift)	●	●	●	●
Vivaro	[1] 2001	F9Q 760/762 (1.9L)	ABS/ESP (Anti-locked Braking System)	●	●	●	●
Vivaro	[1] 2001	F9Q 760/762 (1.9L)	ABS (Anti-locked Braking System)	●	●	●	●
Vivaro	[1] 2001	F9Q 760/762 (1.9L)	PAS (Park Pilot)	●	●	●	●
Vivaro	[1] 2001	F9Q 760/762 (1.9L)	AOH (Add On Heater)	●	●	●	●
Vivaro	[1] 2001	F9Q 760/762 (1.9L)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vivaro	[1] 2001	F9Q 760/762 (1.9L)	BCM (Body Control Module)	●	●	●	●

Vivaro-B	[G] 2016	Exhaust Emission Standard	ECM (Engine Control Module)	●	●	●	●
Vivaro-B	[G] 2016	Exhaust Emission Standard	EBCM (Electronic Brake Control Module)	●	●	●	●
Vivaro-B	[G] 2016	Exhaust Emission Standard	PSCM (Power Steering Control Module)	●	●	●	●
Vivaro-B	[G] 2016	Exhaust Emission Standard	BCM (Body Control Module)	●	●	●	●
Vivaro-B	[G] 2016	Exhaust Emission Standard	ABCM (Auxiliary Body Control Module)	●	●	●	●
Vivaro-B	[G] 2016	Exhaust Emission Standard	SDGM (Serial Data Gateway Module)	●	●	●	●
Vivaro-B	[G] 2016	Exhaust Emission Standard	MACM (Multifunction Accessory Control Module)	●	●	●	●
Vivaro-B	[G] 2016	Exhaust Emission Standard	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vivaro-B	[G] 2016	Exhaust Emission Standard	IC (Instrument Cluster)	●	●	●	●
Vivaro-B	[G] 2016	Exhaust Emission Standard	Radio	●	●	●	●
Vivaro-B	[G] 2016	Exhaust Emission Standard	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vivaro-B	[G] 2016	Exhaust Emission Standard	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Vivaro-B	[G] 2016	Exhaust Emission Standard	IDM (Info Display Module)	●	●	●	●
Vivaro-B	[G] 2016	Exhaust Emission Standard	KECM (Keyless Entry Control Module)	●	●	●	●
Vivaro-B	[G] 2016	Exhaust Emission Standard	PACM (Parking Assist Control Module)	●	●	●	●
Vivaro-B	[G] 2016	Exhaust Emission Standard	RCM (Reductant Control Module)	●	●	●	●
Vivaro-B	[G] 2016	Exhaust Emission Standard (Euro6 NTA)	ECM (Engine Control Module)	●	●	●	●
Vivaro-B	[G] 2016	Exhaust Emission Standard (Euro6 NTA)	EBCM (Electronic Brake Control Module)	●	●	●	●
Vivaro-B	[G] 2016	Exhaust Emission Standard (Euro6 NTA)	PSCM (Power Steering Control Module)	●	●	●	●
Vivaro-B	[G] 2016	Exhaust Emission Standard (Euro6 NTA)	BCM (Body Control Module)	●	●	●	●
Vivaro-B	[G] 2016	Exhaust Emission Standard (Euro6 NTA)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Vivaro-B	[G] 2016	Exhaust Emission Standard (Euro6 NTA)	SDGM (Serial Data Gateway Module)	●	●	●	●
Vivaro-B	[G] 2016	Exhaust Emission Standard (Euro6 NTA)	MACM (Multifunction Accessory Control Module)	●	●	●	●
Vivaro-B	[G] 2016	Exhaust Emission Standard (Euro6 NTA)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vivaro-B	[G] 2016	Exhaust Emission Standard (Euro6 NTA)	IC (Instrument Cluster)	●	●	●	●

Vivaro-B	[G] 2016	Exhaust Emission Standard (Euro6 NTA)	Radio	●	●	●	●
Vivaro-B	[G] 2016	Exhaust Emission Standard (Euro6 NTA)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vivaro-B	[G] 2016	Exhaust Emission Standard (Euro6 NTA)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Vivaro-B	[G] 2016	Exhaust Emission Standard (Euro6 NTA)	IDM (Info Display Module)	●	●	●	●
Vivaro-B	[G] 2016	Exhaust Emission Standard (Euro6 NTA)	KECM (Keyless Entry Control Module)	●	●	●	●
Vivaro-B	[G] 2016	Exhaust Emission Standard (Euro6 NTA)	PACM (Parking Assist Control Module)	●	●	●	●
Vivaro-B	[G] 2016	Exhaust Emission Standard (Euro6 NTA)	RCM (Reductant Control Module)	●	●	●	●
Vivaro-B	[F] 2015	ECM (Engine Control Module)	ECM (Engine Control Module)	●	●	●	●
Vivaro-B	[F] 2015	ECM (Engine Control Module)	EBCM (Electronic Brake Control Module)	●	●	●	●
Vivaro-B	[F] 2015	ECM (Engine Control Module)	PSCM (Power Steering Control Module)	●	●	●	●
Vivaro-B	[F] 2015	ECM (Engine Control Module)	BCM (Body Control Module)	●	●	●	●
Vivaro-B	[F] 2015	ECM (Engine Control Module)	ABCM (Auxiliary Body Control Module)	●	●	●	●
Vivaro-B	[F] 2015	ECM (Engine Control Module)	SDGM (Serial Data Gateway Module)	●	●	●	●
Vivaro-B	[F] 2015	ECM (Engine Control Module)	MACM (Multifunction Accessory Control Module)	●	●	●	●
Vivaro-B	[F] 2015	ECM (Engine Control Module)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Vivaro-B	[F] 2015	ECM (Engine Control Module)	IC (Instrument Cluster)	●	●	●	●
Vivaro-B	[F] 2015	ECM (Engine Control Module)	Radio	●	●	●	●
Vivaro-B	[F] 2015	ECM (Engine Control Module)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Vivaro-B	[F] 2015	ECM (Engine Control Module)	AHCM (Auxiliary Heater Control Module)	●	●	●	●
Vivaro-B	[F] 2015	ECM (Engine Control Module)	IDM (Info Display Module)	●	●	●	●
Vivaro-B	[F] 2015	ECM (Engine Control Module)	KECM (Keyless Entry Control Module)	●	●	●	●
Vivaro-B	[F] 2015	ECM (Engine Control Module)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira	[5] 2005	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Zafira	[5] 2005	Z 16 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[5] 2005	Z 16 XE	AF 13-II/17/20/22	●	●	●	●
Zafira	[5] 2005	Z 16 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[5] 2005	Z 16 XE	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[5] 2005	Z 16 XE	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[5] 2005	Z 16 XE	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[5] 2005	Z 16 XE	HAR (Headlamp Adjustment Right)	●	●	●	●

Zafira	[5] 2005	Z 16 XE	IMMO (Immobiliser)	●	●	●	●
Zafira	[5] 2005	Z 16 YNG	ECM (Engine Control Module)	●	●	●	●
Zafira	[5] 2005	Z 16 YNG	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[5] 2005	Z 16 YNG	AF 13-II/17/20/22	●	●	●	●
Zafira	[5] 2005	Z 16 YNG	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[5] 2005	Z 16 YNG	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[5] 2005	Z 16 YNG	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[5] 2005	Z 16 YNG	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[5] 2005	Z 16 YNG	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[5] 2005	Z 16 YNG	IMMO (Immobiliser)	●	●	●	●
Zafira	[5] 2005	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Zafira	[5] 2005	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[5] 2005	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Zafira	[5] 2005	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[5] 2005	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[5] 2005	Z 18 XE	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[5] 2005	Z 18 XE	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[5] 2005	Z 18 XE	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[5] 2005	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Zafira	[5] 2005	Z 18 XEL	ECM (Engine Control Module)	●	●	●	●
Zafira	[5] 2005	Z 18 XEL	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[5] 2005	Z 18 XEL	AF 13-II/17/20/22	●	●	●	●
Zafira	[5] 2005	Z 18 XEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[5] 2005	Z 18 XEL	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[5] 2005	Z 18 XEL	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[5] 2005	Z 18 XEL	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[5] 2005	Z 18 XEL	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[5] 2005	Z 18 XEL	IMMO (Immobiliser)	●	●	●	●
Zafira	[5] 2005	Y 20 DTH	ECM (Engine Control Module)	●	●	●	●
Zafira	[5] 2005	Y 20 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[5] 2005	Y 20 DTH	AF 13-II/17/20/22	●	●	●	●
Zafira	[5] 2005	Y 20 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[5] 2005	Y 20 DTH	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[5] 2005	Y 20 DTH	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[5] 2005	Y 20 DTH	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[5] 2005	Y 20 DTH	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[5] 2005	Y 20 DTH	IMMO (Immobiliser)	●	●	●	●
Zafira	[5] 2005	Z 20 LET	ECM (Engine Control Module)	●	●	●	●
Zafira	[5] 2005	Z 20 LET	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[5] 2005	Z 20 LET	AF 13-II/17/20/22	●	●	●	●
Zafira	[5] 2005	Z 20 LET	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[5] 2005	Z 20 LET	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[5] 2005	Z 20 LET	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[5] 2005	Z 20 LET	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[5] 2005	Z 20 LET	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[5] 2005	Z 20 LET	IMMO (Immobiliser)	●	●	●	●
Zafira	[5] 2005	Y 22 DTR	ECM (Engine Control Module)	●	●	●	●
Zafira	[5] 2005	Y 22 DTR	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[5] 2005	Y 22 DTR	AF 13-II/17/20/22	●	●	●	●
Zafira	[5] 2005	Y 22 DTR	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[5] 2005	Y 22 DTR	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[5] 2005	Y 22 DTR	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[5] 2005	Y 22 DTR	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[5] 2005	Y 22 DTR	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[5] 2005	Y 22 DTR	IMMO (Immobiliser)	●	●	●	●
Zafira	[5] 2005	Z 22 SE	ECM (Engine Control Module)	●	●	●	●
Zafira	[5] 2005	Z 22 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[5] 2005	Z 22 SE	AF 13-II/17/20/22	●	●	●	●

Zafira	[5] 2005	Z 22 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[5] 2005	Z 22 SE	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[5] 2005	Z 22 SE	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[5] 2005	Z 22 SE	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[5] 2005	Z 22 SE	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[5] 2005	Z 22 SE	IMMO (Immobiliser)	●	●	●	●
Zafira	[4] 2004	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Zafira	[4] 2004	Z 16 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[4] 2004	Z 16 XE	AF 13-II/17/20/22	●	●	●	●
Zafira	[4] 2004	Z 16 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[4] 2004	Z 16 XE	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[4] 2004	Z 16 XE	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[4] 2004	Z 16 XE	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[4] 2004	Z 16 XE	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[4] 2004	Z 16 XE	IMMO (Immobiliser)	●	●	●	●
Zafira	[4] 2004	Z 16 YNG	ECM (Engine Control Module)	●	●	●	●
Zafira	[4] 2004	Z 16 YNG	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[4] 2004	Z 16 YNG	AF 13-II/17/20/22	●	●	●	●
Zafira	[4] 2004	Z 16 YNG	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[4] 2004	Z 16 YNG	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[4] 2004	Z 16 YNG	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[4] 2004	Z 16 YNG	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[4] 2004	Z 16 YNG	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[4] 2004	Z 16 YNG	IMMO (Immobiliser)	●	●	●	●
Zafira	[4] 2004	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Zafira	[4] 2004	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[4] 2004	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Zafira	[4] 2004	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[4] 2004	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[4] 2004	Z 18 XE	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[4] 2004	Z 18 XE	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[4] 2004	Z 18 XE	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[4] 2004	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Zafira	[4] 2004	Z 18 XEL	ECM (Engine Control Module)	●	●	●	●
Zafira	[4] 2004	Z 18 XEL	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[4] 2004	Z 18 XEL	AF 13-II/17/20/22	●	●	●	●
Zafira	[4] 2004	Z 18 XEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[4] 2004	Z 18 XEL	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[4] 2004	Z 18 XEL	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[4] 2004	Z 18 XEL	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[4] 2004	Z 18 XEL	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[4] 2004	Z 18 XEL	IMMO (Immobiliser)	●	●	●	●
Zafira	[4] 2004	Y 20 DTH	ECM (Engine Control Module)	●	●	●	●
Zafira	[4] 2004	Y 20 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[4] 2004	Y 20 DTH	AF 13-II/17/20/22	●	●	●	●
Zafira	[4] 2004	Y 20 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[4] 2004	Y 20 DTH	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[4] 2004	Y 20 DTH	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[4] 2004	Y 20 DTH	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[4] 2004	Y 20 DTH	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[4] 2004	Y 20 DTH	IMMO (Immobiliser)	●	●	●	●
Zafira	[4] 2004	Z 20 LET	ECM (Engine Control Module)	●	●	●	●
Zafira	[4] 2004	Z 20 LET	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[4] 2004	Z 20 LET	AF 13-II/17/20/22	●	●	●	●
Zafira	[4] 2004	Z 20 LET	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[4] 2004	Z 20 LET	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[4] 2004	Z 20 LET	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[4] 2004	Z 20 LET	HAL (Headlamp Adjustment Left)	●	●	●	●

Zafira	[4] 2004	Z 20 LET	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[4] 2004	Z 20 LET	IMMO (Immobiliser)	●	●	●	●
Zafira	[4] 2004	Y 22 DTR	ECM (Engine Control Module)	●	●	●	●
Zafira	[4] 2004	Y 22 DTR	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[4] 2004	Y 22 DTR	AF 13-II/17/20/22	●	●	●	●
Zafira	[4] 2004	Y 22 DTR	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[4] 2004	Y 22 DTR	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[4] 2004	Y 22 DTR	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[4] 2004	Y 22 DTR	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[4] 2004	Y 22 DTR	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[4] 2004	Y 22 DTR	IMMO (Immobiliser)	●	●	●	●
Zafira	[4] 2004	Z 22 SE	ECM (Engine Control Module)	●	●	●	●
Zafira	[4] 2004	Z 22 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[4] 2004	Z 22 SE	AF 13-II/17/20/22	●	●	●	●
Zafira	[4] 2004	Z 22 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[4] 2004	Z 22 SE	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[4] 2004	Z 22 SE	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[4] 2004	Z 22 SE	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[4] 2004	Z 22 SE	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[4] 2004	Z 22 SE	IMMO (Immobiliser)	●	●	●	●
Zafira	[3] 2003	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Zafira	[3] 2003	Z 16 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[3] 2003	Z 16 XE	AF 13-II/17/20/22	●	●	●	●
Zafira	[3] 2003	Z 16 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[3] 2003	Z 16 XE	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[3] 2003	Z 16 XE	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[3] 2003	Z 16 XE	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[3] 2003	Z 16 XE	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[3] 2003	Z 16 XE	IMMO (Immobiliser)	●	●	●	●
Zafira	[3] 2003	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Zafira	[3] 2003	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[3] 2003	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Zafira	[3] 2003	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[3] 2003	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[3] 2003	Z 18 XE	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[3] 2003	Z 18 XE	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[3] 2003	Z 18 XE	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[3] 2003	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Zafira	[3] 2003	Z 18 XEL	ECM (Engine Control Module)	●	●	●	●
Zafira	[3] 2003	Z 18 XEL	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[3] 2003	Z 18 XEL	AF 13-II/17/20/22	●	●	●	●
Zafira	[3] 2003	Z 18 XEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[3] 2003	Z 18 XEL	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[3] 2003	Z 18 XEL	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[3] 2003	Z 18 XEL	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[3] 2003	Z 18 XEL	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[3] 2003	Z 18 XEL	IMMO (Immobiliser)	●	●	●	●
Zafira	[3] 2003	Y 20 DTH	ECM (Engine Control Module)	●	●	●	●
Zafira	[3] 2003	Y 20 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[3] 2003	Y 20 DTH	AF 13-II/17/20/22	●	●	●	●
Zafira	[3] 2003	Y 20 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[3] 2003	Y 20 DTH	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[3] 2003	Y 20 DTH	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[3] 2003	Y 20 DTH	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[3] 2003	Y 20 DTH	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[3] 2003	Y 20 DTH	IMMO (Immobiliser)	●	●	●	●
Zafira	[3] 2003	Z 20 LET	ECM (Engine Control Module)	●	●	●	●
Zafira	[3] 2003	Z 20 LET	AF 13-II/17/20/22 CAN	●	●	●	●

Zafira	[3] 2003	Z 20 LET	AF 13-II/17/20/22	●	●	●	●
Zafira	[3] 2003	Z 20 LET	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[3] 2003	Z 20 LET	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[3] 2003	Z 20 LET	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[3] 2003	Z 20 LET	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[3] 2003	Z 20 LET	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[3] 2003	Z 20 LET	IMMO (Immobiliser)	●	●	●	●
Zafira	[3] 2003	Y 22 DTR	ECM (Engine Control Module)	●	●	●	●
Zafira	[3] 2003	Y 22 DTR	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[3] 2003	Y 22 DTR	AF 13-II/17/20/22	●	●	●	●
Zafira	[3] 2003	Y 22 DTR	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[3] 2003	Y 22 DTR	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[3] 2003	Y 22 DTR	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[3] 2003	Y 22 DTR	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[3] 2003	Y 22 DTR	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[3] 2003	Y 22 DTR	IMMO (Immobiliser)	●	●	●	●
Zafira	[3] 2003	Z 22 SE	ECM (Engine Control Module)	●	●	●	●
Zafira	[3] 2003	Z 22 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[3] 2003	Z 22 SE	AF 13-II/17/20/22	●	●	●	●
Zafira	[3] 2003	Z 22 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[3] 2003	Z 22 SE	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[3] 2003	Z 22 SE	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[3] 2003	Z 22 SE	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[3] 2003	Z 22 SE	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[3] 2003	Z 22 SE	IMMO (Immobiliser)	●	●	●	●
Zafira	[2] 2002	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Zafira	[2] 2002	Z 16 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[2] 2002	Z 16 XE	AF 13-II/17/20/22	●	●	●	●
Zafira	[2] 2002	Z 16 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[2] 2002	Z 16 XE	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[2] 2002	Z 16 XE	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[2] 2002	Z 16 XE	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[2] 2002	Z 16 XE	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[2] 2002	Z 16 XE	IMMO (Immobiliser)	●	●	●	●
Zafira	[2] 2002	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Zafira	[2] 2002	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[2] 2002	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Zafira	[2] 2002	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[2] 2002	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[2] 2002	Z 18 XE	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[2] 2002	Z 18 XE	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[2] 2002	Z 18 XE	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[2] 2002	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Zafira	[2] 2002	Z 18 XEL	ECM (Engine Control Module)	●	●	●	●
Zafira	[2] 2002	Z 18 XEL	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[2] 2002	Z 18 XEL	AF 13-II/17/20/22	●	●	●	●
Zafira	[2] 2002	Z 18 XEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[2] 2002	Z 18 XEL	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[2] 2002	Z 18 XEL	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[2] 2002	Z 18 XEL	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[2] 2002	Z 18 XEL	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[2] 2002	Z 18 XEL	IMMO (Immobiliser)	●	●	●	●
Zafira	[2] 2002	Y 20 DTH	ECM (Engine Control Module)	●	●	●	●
Zafira	[2] 2002	Y 20 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[2] 2002	Y 20 DTH	AF 13-II/17/20/22	●	●	●	●
Zafira	[2] 2002	Y 20 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[2] 2002	Y 20 DTH	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[2] 2002	Y 20 DTH	ESP (Electronic Stability Program)	●	●	●	●

Zafira	[2] 2002	Y 20 DTH	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[2] 2002	Y 20 DTH	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[2] 2002	Y 20 DTH	IMMO (Immobiliser)	●	●	●	●
Zafira	[2] 2002	Z 20 LET	ECM (Engine Control Module)	●	●	●	●
Zafira	[2] 2002	Z 20 LET	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[2] 2002	Z 20 LET	AF 13-II/17/20/22	●	●	●	●
Zafira	[2] 2002	Z 20 LET	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[2] 2002	Z 20 LET	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[2] 2002	Z 20 LET	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[2] 2002	Z 20 LET	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[2] 2002	Z 20 LET	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[2] 2002	Z 20 LET	IMMO (Immobiliser)	●	●	●	●
Zafira	[2] 2002	Y 22 DTR	ECM (Engine Control Module)	●	●	●	●
Zafira	[2] 2002	Y 22 DTR	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[2] 2002	Y 22 DTR	AF 13-II/17/20/22	●	●	●	●
Zafira	[2] 2002	Y 22 DTR	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[2] 2002	Y 22 DTR	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[2] 2002	Y 22 DTR	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[2] 2002	Y 22 DTR	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[2] 2002	Y 22 DTR	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[2] 2002	Y 22 DTR	IMMO (Immobiliser)	●	●	●	●
Zafira	[2] 2002	Z 22 SE	ECM (Engine Control Module)	●	●	●	●
Zafira	[2] 2002	Z 22 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[2] 2002	Z 22 SE	AF 13-II/17/20/22	●	●	●	●
Zafira	[2] 2002	Z 22 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[2] 2002	Z 22 SE	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[2] 2002	Z 22 SE	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[2] 2002	Z 22 SE	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[2] 2002	Z 22 SE	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[2] 2002	Z 22 SE	IMMO (Immobiliser)	●	●	●	●
Zafira	[1] 2001	Z 16 XE	ECM (Engine Control Module)	●	●	●	●
Zafira	[1] 2001	Z 16 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[1] 2001	Z 16 XE	AF 13-II/17/20/22	●	●	●	●
Zafira	[1] 2001	Z 16 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[1] 2001	Z 16 XE	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[1] 2001	Z 16 XE	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[1] 2001	Z 16 XE	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[1] 2001	Z 16 XE	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[1] 2001	Z 16 XE	IMMO (Immobiliser)	●	●	●	●
Zafira	[1] 2001	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Zafira	[1] 2001	Z 18 XE	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[1] 2001	Z 18 XE	AF 13-II/17/20/22	●	●	●	●
Zafira	[1] 2001	Z 18 XE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[1] 2001	Z 18 XE	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[1] 2001	Z 18 XE	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[1] 2001	Z 18 XE	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[1] 2001	Z 18 XE	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[1] 2001	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Zafira	[1] 2001	Z 18 XEL	ECM (Engine Control Module)	●	●	●	●
Zafira	[1] 2001	Z 18 XEL	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[1] 2001	Z 18 XEL	AF 13-II/17/20/22	●	●	●	●
Zafira	[1] 2001	Z 18 XEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[1] 2001	Z 18 XEL	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[1] 2001	Z 18 XEL	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[1] 2001	Z 18 XEL	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[1] 2001	Z 18 XEL	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[1] 2001	Z 18 XEL	IMMO (Immobiliser)	●	●	●	●
Zafira	[1] 2001	Y 20 DTH	ECM (Engine Control Module)	●	●	●	●

Zafira	[1]	2001	Y 20 DTH	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[1]	2001	Y 20 DTH	AF 13-II/17/20/22	●	●	●	●
Zafira	[1]	2001	Y 20 DTH	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[1]	2001	Y 20 DTH	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[1]	2001	Y 20 DTH	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[1]	2001	Y 20 DTH	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[1]	2001	Y 20 DTH	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[1]	2001	Y 20 DTH	IMMO (Immobiliser)	●	●	●	●
Zafira	[1]	2001	Z 22 SE	ECM (Engine Control Module)	●	●	●	●
Zafira	[1]	2001	Z 22 SE	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[1]	2001	Z 22 SE	AF 13-II/17/20/22	●	●	●	●
Zafira	[1]	2001	Z 22 SE	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[1]	2001	Z 22 SE	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[1]	2001	Z 22 SE	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[1]	2001	Z 22 SE	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[1]	2001	Z 22 SE	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[1]	2001	Z 22 SE	IMMO (Immobiliser)	●	●	●	●
Zafira	[Y]	2000	X 16 XEL	ECM (Engine Control Module)	●	●	●	●
Zafira	[Y]	2000	X 16 XEL	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[Y]	2000	X 16 XEL	AF 13-II/17/20/22	●	●	●	●
Zafira	[Y]	2000	X 16 XEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[Y]	2000	X 16 XEL	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[Y]	2000	X 16 XEL	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[Y]	2000	X 16 XEL	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[Y]	2000	X 16 XEL	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[Y]	2000	X 16 XEL	IMMO (Immobiliser)	●	●	●	●
Zafira	[Y]	2000	X 18 XE1	ECM (Engine Control Module)	●	●	●	●
Zafira	[Y]	2000	X 18 XE1	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[Y]	2000	X 18 XE1	AF 13-II/17/20/22	●	●	●	●
Zafira	[Y]	2000	X 18 XE1	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[Y]	2000	X 18 XE1	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[Y]	2000	X 18 XE1	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[Y]	2000	X 18 XE1	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[Y]	2000	X 18 XE1	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[Y]	2000	X 18 XE1	IMMO (Immobiliser)	●	●	●	●
Zafira	[Y]	2000	X 20 DTL	ECM (Engine Control Module)	●	●	●	●
Zafira	[Y]	2000	X 20 DTL	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[Y]	2000	X 20 DTL	AF 13-II/17/20/22	●	●	●	●
Zafira	[Y]	2000	X 20 DTL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[Y]	2000	X 20 DTL	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[Y]	2000	X 20 DTL	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[Y]	2000	X 20 DTL	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[Y]	2000	X 20 DTL	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[Y]	2000	X 20 DTL	IMMO (Immobiliser)	●	●	●	●
Zafira	[X]	1999	X 16 XEL	ECM (Engine Control Module)	●	●	●	●
Zafira	[X]	1999	X 16 XEL	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[X]	1999	X 16 XEL	AF 13-II/17/20/22	●	●	●	●
Zafira	[X]	1999	X 16 XEL	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[X]	1999	X 16 XEL	EPS (Electronic Power Steering)	●	●	●	●
Zafira	[X]	1999	X 16 XEL	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[X]	1999	X 16 XEL	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[X]	1999	X 16 XEL	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[X]	1999	X 16 XEL	IMMO (Immobiliser)	●	●	●	●
Zafira	[X]	1999	X 18 XE1	ECM (Engine Control Module)	●	●	●	●
Zafira	[X]	1999	X 18 XE1	AF 13-II/17/20/22 CAN	●	●	●	●
Zafira	[X]	1999	X 18 XE1	AF 13-II/17/20/22	●	●	●	●
Zafira	[X]	1999	X 18 XE1	ABS (Anti-locked Braking System 5.3/5.4)	●	●	●	●
Zafira	[X]	1999	X 18 XE1	EPS (Electronic Power Steering)	●	●	●	●

Zafira	[X] 1999	X 18 XE1	ESP (Electronic Stability Program)	●	●	●	●
Zafira	[X] 1999	X 18 XE1	HAL (Headlamp Adjustment Left)	●	●	●	●
Zafira	[X] 1999	X 18 XE1	HAR (Headlamp Adjustment Right)	●	●	●	●
Zafira	[X] 1999	X 18 XE1	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XE1	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XE1	AF 40-6	●	●	●	●
Zafira-B	[E] 2014	Z 16 XE1	MTA (Easytronic)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XE1	AF 22-4	●	●	●	●
Zafira-B	[E] 2014	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XE1	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XE1	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XE1	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XE1	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XE1	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XE1	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[E] 2014	Z 16 XE1	Interior Lighting	●	●	●	●
Zafira-B	[E] 2014	Z 16 XE1	Wipers/Washer	●	●	●	●
Zafira-B	[E] 2014	Z 16 XE1	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XE1	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XE1	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XE1	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XE1	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XE1	PAS (Park Pilot)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XE1	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XE1	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XE1	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XE1	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XE1	PEPS (Open&Start)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XE1	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XEP	AF 40-6	●	●	●	●
Zafira-B	[E] 2014	Z 16 XEP	MTA (Easytronic)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XEP	AF 22-4	●	●	●	●
Zafira-B	[E] 2014	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XEP	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[E] 2014	Z 16 XEP	Interior Lighting	●	●	●	●
Zafira-B	[E] 2014	Z 16 XEP	Wipers/Washer	●	●	●	●
Zafira-B	[E] 2014	Z 16 XEP	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XEP	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XEP	PAS (Park Pilot)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XEP	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XEP	REC (Rear Electrical Centre)	●	●	●	●

Zafira-B	[E] 2014	Z 16 XEP	PEPS (Open&Start)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XER	AF 40-6	●	●	●	●
Zafira-B	[E] 2014	Z 16 XER	MTA (Easytronic)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XER	AF 22-4	●	●	●	●
Zafira-B	[E] 2014	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[E] 2014	Z 16 XER	Interior Lighting	●	●	●	●
Zafira-B	[E] 2014	Z 16 XER	Wipers/Washer	●	●	●	●
Zafira-B	[E] 2014	Z 16 XER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[E] 2014	Z 16 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[E] 2014	Z 16 YNG	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[E] 2014	Z 16 YNG	AF 40-6	●	●	●	●
Zafira-B	[E] 2014	Z 16 YNG	MTA (Easytronic)	●	●	●	●
Zafira-B	[E] 2014	Z 16 YNG	AF 22-4	●	●	●	●
Zafira-B	[E] 2014	Z 16 YNG	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[E] 2014	Z 16 YNG	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[E] 2014	Z 16 YNG	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[E] 2014	Z 16 YNG	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[E] 2014	Z 16 YNG	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[E] 2014	Z 16 YNG	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[E] 2014	Z 16 YNG	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[E] 2014	Z 16 YNG	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[E] 2014	Z 16 YNG	Interior Lighting	●	●	●	●
Zafira-B	[E] 2014	Z 16 YNG	Wipers/Washer	●	●	●	●
Zafira-B	[E] 2014	Z 16 YNG	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[E] 2014	Z 16 YNG	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[E] 2014	Z 16 YNG	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[E] 2014	Z 16 YNG	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[E] 2014	Z 16 YNG	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[E] 2014	Z 16 YNG	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[E] 2014	Z 16 YNG	PAS (Park Pilot)	●	●	●	●
Zafira-B	[E] 2014	Z 16 YNG	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[E] 2014	Z 16 YNG	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[E] 2014	Z 16 YNG	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[E] 2014	Z 16 YNG	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[E] 2014	Z 16 YNG	PEPS (Open&Start)	●	●	●	●

Zafira-B	[E] 2014	Z 16 YNG	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[E] 2014	Z 16 YNG	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[E] 2014	A 16 XER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[E] 2014	A 16 XER	AF 40-6	●	●	●	●
Zafira-B	[E] 2014	A 16 XER	MTA (Easytronic)	●	●	●	●
Zafira-B	[E] 2014	A 16 XER	AF 22-4	●	●	●	●
Zafira-B	[E] 2014	A 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[E] 2014	A 16 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[E] 2014	A 16 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[E] 2014	A 16 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[E] 2014	A 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[E] 2014	A 16 XER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[E] 2014	A 16 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[E] 2014	A 16 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[E] 2014	A 16 XER	Interior Lighting	●	●	●	●
Zafira-B	[E] 2014	A 16 XER	Wipers/Washer	●	●	●	●
Zafira-B	[E] 2014	A 16 XER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[E] 2014	A 16 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[E] 2014	A 16 XER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[E] 2014	A 16 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[E] 2014	A 16 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[E] 2014	A 16 XER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[E] 2014	A 16 XER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[E] 2014	A 16 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[E] 2014	A 16 XER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[E] 2014	A 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[E] 2014	A 16 XER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[E] 2014	A 16 XER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[E] 2014	A 16 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[E] 2014	A 16 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[E] 2014	Z 17 DTJ	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[E] 2014	Z 17 DTJ	AF 40-6	●	●	●	●
Zafira-B	[E] 2014	Z 17 DTJ	MTA (Easytronic)	●	●	●	●
Zafira-B	[E] 2014	Z 17 DTJ	AF 22-4	●	●	●	●
Zafira-B	[E] 2014	Z 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[E] 2014	Z 17 DTJ	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[E] 2014	Z 17 DTJ	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[E] 2014	Z 17 DTJ	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[E] 2014	Z 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[E] 2014	Z 17 DTJ	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[E] 2014	Z 17 DTJ	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[E] 2014	Z 17 DTJ	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[E] 2014	Z 17 DTJ	Interior Lighting	●	●	●	●
Zafira-B	[E] 2014	Z 17 DTJ	Wipers/Washer	●	●	●	●
Zafira-B	[E] 2014	Z 17 DTJ	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[E] 2014	Z 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[E] 2014	Z 17 DTJ	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[E] 2014	Z 17 DTJ	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[E] 2014	Z 17 DTJ	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[E] 2014	Z 17 DTJ	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[E] 2014	Z 17 DTJ	PAS (Park Pilot)	●	●	●	●
Zafira-B	[E] 2014	Z 17 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[E] 2014	Z 17 DTJ	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[E] 2014	Z 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[E] 2014	Z 17 DTJ	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[E] 2014	Z 17 DTJ	PEPS (Open&Start)	●	●	●	●
Zafira-B	[E] 2014	Z 17 DTJ	IC (Instrument Cluster)	●	●	●	●

Zafira-B	[E] 2014	Z 17 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTJ	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTJ	AF 40-6	●	●	●	●
Zafira-B	[E] 2014	A 17 DTJ	MTA (Easytronic)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTJ	AF 22-4	●	●	●	●
Zafira-B	[E] 2014	A 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTJ	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTJ	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTJ	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTJ	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTJ	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTJ	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[E] 2014	A 17 DTJ	Interior Lighting	●	●	●	●
Zafira-B	[E] 2014	A 17 DTJ	Wipers/Washer	●	●	●	●
Zafira-B	[E] 2014	A 17 DTJ	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTJ	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTJ	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTJ	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTJ	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTJ	PAS (Park Pilot)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTJ	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTJ	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTJ	PEPS (Open&Start)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTR	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTR	AF 40-6	●	●	●	●
Zafira-B	[E] 2014	A 17 DTR	MTA (Easytronic)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTR	AF 22-4	●	●	●	●
Zafira-B	[E] 2014	A 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTR	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTR	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTR	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTR	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTR	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTR	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[E] 2014	A 17 DTR	Interior Lighting	●	●	●	●
Zafira-B	[E] 2014	A 17 DTR	Wipers/Washer	●	●	●	●
Zafira-B	[E] 2014	A 17 DTR	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTR	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTR	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTR	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTR	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTR	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTR	PAS (Park Pilot)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTR	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTR	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTR	PEPS (Open&Start)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTR	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[E] 2014	A 17 DTR	ATWS (Anti Theft Warning System)	●	●	●	●

Zafira-B	[E] 2014	Z 18 XER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[E] 2014	Z 18 XER	AF 40-6	●	●	●	●
Zafira-B	[E] 2014	Z 18 XER	MTA (Easytronic)	●	●	●	●
Zafira-B	[E] 2014	Z 18 XER	AF 22-4	●	●	●	●
Zafira-B	[E] 2014	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[E] 2014	Z 18 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[E] 2014	Z 18 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[E] 2014	Z 18 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[E] 2014	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[E] 2014	Z 18 XER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[E] 2014	Z 18 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[E] 2014	Z 18 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[E] 2014	Z 18 XER	Interior Lighting	●	●	●	●
Zafira-B	[E] 2014	Z 18 XER	Wipers/Washer	●	●	●	●
Zafira-B	[E] 2014	Z 18 XER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[E] 2014	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[E] 2014	Z 18 XER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[E] 2014	Z 18 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[E] 2014	Z 18 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[E] 2014	Z 18 XER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[E] 2014	Z 18 XER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[E] 2014	Z 18 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[E] 2014	Z 18 XER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[E] 2014	Z 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[E] 2014	Z 18 XER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[E] 2014	Z 18 XER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[E] 2014	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[E] 2014	Z 18 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[E] 2014	A 18 XER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[E] 2014	A 18 XER	AF 40-6	●	●	●	●
Zafira-B	[E] 2014	A 18 XER	MTA (Easytronic)	●	●	●	●
Zafira-B	[E] 2014	A 18 XER	AF 22-4	●	●	●	●
Zafira-B	[E] 2014	A 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[E] 2014	A 18 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[E] 2014	A 18 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[E] 2014	A 18 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[E] 2014	A 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[E] 2014	A 18 XER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[E] 2014	A 18 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[E] 2014	A 18 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[E] 2014	A 18 XER	Interior Lighting	●	●	●	●
Zafira-B	[E] 2014	A 18 XER	Wipers/Washer	●	●	●	●
Zafira-B	[E] 2014	A 18 XER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[E] 2014	A 18 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[E] 2014	A 18 XER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[E] 2014	A 18 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[E] 2014	A 18 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[E] 2014	A 18 XER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[E] 2014	A 18 XER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[E] 2014	A 18 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[E] 2014	A 18 XER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[E] 2014	A 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[E] 2014	A 18 XER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[E] 2014	A 18 XER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[E] 2014	A 18 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[E] 2014	A 18 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DT	ECM (Engine Control Module)	●	●	●	●

Zafira-B	[E] 2014	Z 19 DT	AF 40-6	●	●	●	●
Zafira-B	[E] 2014	Z 19 DT	MTA (Easytronic)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DT	AF 22-4	●	●	●	●
Zafira-B	[E] 2014	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DT	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DT	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DT	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DT	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DT	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DT	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[E] 2014	Z 19 DT	Interior Lighting	●	●	●	●
Zafira-B	[E] 2014	Z 19 DT	Wipers/Washer	●	●	●	●
Zafira-B	[E] 2014	Z 19 DT	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DT	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DT	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DT	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DT	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DT	PAS (Park Pilot)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DT	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DT	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DT	PEPS (Open&Start)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DT	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DTH	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DTH	AF 40-6	●	●	●	●
Zafira-B	[E] 2014	Z 19 DTH	MTA (Easytronic)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DTH	AF 22-4	●	●	●	●
Zafira-B	[E] 2014	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DTH	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[E] 2014	Z 19 DTH	Interior Lighting	●	●	●	●
Zafira-B	[E] 2014	Z 19 DTH	Wipers/Washer	●	●	●	●
Zafira-B	[E] 2014	Z 19 DTH	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DTH	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DTH	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DTH	PAS (Park Pilot)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DTH	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DTH	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DTH	PEPS (Open&Start)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[E] 2014	Z 19 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LEH	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LEH	AF 40-6	●	●	●	●

Zafira-B	[E] 2014	Z 20 LEH	MTA (Easytronic)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LEH	AF 22-4	●	●	●	●
Zafira-B	[E] 2014	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LEH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LEH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LEH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LEH	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LEH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LEH	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[E] 2014	Z 20 LEH	Interior Lighting	●	●	●	●
Zafira-B	[E] 2014	Z 20 LEH	Wipers/Washer	●	●	●	●
Zafira-B	[E] 2014	Z 20 LEH	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LEH	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LEH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LEH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LEH	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LEH	PAS (Park Pilot)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LEH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LEH	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LEH	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LEH	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LEH	PEPS (Open&Start)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LEH	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LER	AF 40-6	●	●	●	●
Zafira-B	[E] 2014	Z 20 LER	MTA (Easytronic)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LER	AF 22-4	●	●	●	●
Zafira-B	[E] 2014	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[E] 2014	Z 20 LER	Interior Lighting	●	●	●	●
Zafira-B	[E] 2014	Z 20 LER	Wipers/Washer	●	●	●	●
Zafira-B	[E] 2014	Z 20 LER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[E] 2014	Z 20 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[E] 2014	Z 22 YH	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[E] 2014	Z 22 YH	AF 40-6	●	●	●	●
Zafira-B	[E] 2014	Z 22 YH	MTA (Easytronic)	●	●	●	●

Zafira-B	[E] 2014	Z 22 YH	AF 22-4	●	●	●	●
Zafira-B	[E] 2014	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[E] 2014	Z 22 YH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[E] 2014	Z 22 YH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[E] 2014	Z 22 YH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[E] 2014	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[E] 2014	Z 22 YH	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[E] 2014	Z 22 YH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[E] 2014	Z 22 YH	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[E] 2014	Z 22 YH	Interior Lighting	●	●	●	●
Zafira-B	[E] 2014	Z 22 YH	Wipers/Washer	●	●	●	●
Zafira-B	[E] 2014	Z 22 YH	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[E] 2014	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[E] 2014	Z 22 YH	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[E] 2014	Z 22 YH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[E] 2014	Z 22 YH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[E] 2014	Z 22 YH	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[E] 2014	Z 22 YH	PAS (Park Pilot)	●	●	●	●
Zafira-B	[E] 2014	Z 22 YH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[E] 2014	Z 22 YH	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[E] 2014	Z 22 YH	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[E] 2014	Z 22 YH	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[E] 2014	Z 22 YH	PEPS (Open&Start)	●	●	●	●
Zafira-B	[E] 2014	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[E] 2014	Z 22 YH	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[E] 2014	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[E] 2014	Engine(default)	AF 40-6	●	●	●	●
Zafira-B	[E] 2014	Engine(default)	MTA (Easytronic)	●	●	●	●
Zafira-B	[E] 2014	Engine(default)	AF 22-4	●	●	●	●
Zafira-B	[E] 2014	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[E] 2014	Engine(default)	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[E] 2014	Engine(default)	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[E] 2014	Engine(default)	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[E] 2014	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[E] 2014	Engine(default)	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[E] 2014	Engine(default)	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[E] 2014	Engine(default)	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[E] 2014	Engine(default)	Interior Lighting	●	●	●	●
Zafira-B	[E] 2014	Engine(default)	Wipers/Washer	●	●	●	●
Zafira-B	[E] 2014	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[E] 2014	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[E] 2014	Engine(default)	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[E] 2014	Engine(default)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[E] 2014	Engine(default)	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[E] 2014	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[E] 2014	Engine(default)	PAS (Park Pilot)	●	●	●	●
Zafira-B	[E] 2014	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[E] 2014	Engine(default)	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[E] 2014	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●

Zafira-B	[E] 2014	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[E] 2014	Engine(default)	PEPS (Open&Start)	●	●	●	●
Zafira-B	[E] 2014	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[E] 2014	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XE1	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XE1	AF 40-6	●	●	●	●
Zafira-B	[D] 2013	Z 16 XE1	MTA (Easytronic)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XE1	AF 22-4	●	●	●	●
Zafira-B	[D] 2013	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XE1	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XE1	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XE1	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XE1	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XE1	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XE1	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[D] 2013	Z 16 XE1	Interior Lighting	●	●	●	●
Zafira-B	[D] 2013	Z 16 XE1	Wipers/Washer	●	●	●	●
Zafira-B	[D] 2013	Z 16 XE1	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XE1	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XE1	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XE1	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XE1	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XE1	PAS (Park Pilot)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XE1	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XE1	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XE1	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XE1	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XE1	PEPS (Open&Start)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XE1	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XEP	AF 40-6	●	●	●	●
Zafira-B	[D] 2013	Z 16 XEP	MTA (Easytronic)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XEP	AF 22-4	●	●	●	●
Zafira-B	[D] 2013	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XEP	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[D] 2013	Z 16 XEP	Interior Lighting	●	●	●	●
Zafira-B	[D] 2013	Z 16 XEP	Wipers/Washer	●	●	●	●
Zafira-B	[D] 2013	Z 16 XEP	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XEP	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XEP	PAS (Park Pilot)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XEP	SLM (Shift Lever Module)	●	●	●	●

Zafira-B	[D] 2013	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XEP	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XEP	PEPS (Open&Start)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XER	AF 40-6	●	●	●	●
Zafira-B	[D] 2013	Z 16 XER	MTA (Easytronic)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XER	AF 22-4	●	●	●	●
Zafira-B	[D] 2013	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[D] 2013	Z 16 XER	Interior Lighting	●	●	●	●
Zafira-B	[D] 2013	Z 16 XER	Wipers/Washer	●	●	●	●
Zafira-B	[D] 2013	Z 16 XER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[D] 2013	Z 16 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[D] 2013	Z 16 YNG	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[D] 2013	Z 16 YNG	AF 40-6	●	●	●	●
Zafira-B	[D] 2013	Z 16 YNG	MTA (Easytronic)	●	●	●	●
Zafira-B	[D] 2013	Z 16 YNG	AF 22-4	●	●	●	●
Zafira-B	[D] 2013	Z 16 YNG	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[D] 2013	Z 16 YNG	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[D] 2013	Z 16 YNG	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[D] 2013	Z 16 YNG	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[D] 2013	Z 16 YNG	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[D] 2013	Z 16 YNG	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[D] 2013	Z 16 YNG	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[D] 2013	Z 16 YNG	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[D] 2013	Z 16 YNG	Interior Lighting	●	●	●	●
Zafira-B	[D] 2013	Z 16 YNG	Wipers/Washer	●	●	●	●
Zafira-B	[D] 2013	Z 16 YNG	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[D] 2013	Z 16 YNG	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[D] 2013	Z 16 YNG	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[D] 2013	Z 16 YNG	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[D] 2013	Z 16 YNG	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[D] 2013	Z 16 YNG	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[D] 2013	Z 16 YNG	PAS (Park Pilot)	●	●	●	●
Zafira-B	[D] 2013	Z 16 YNG	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[D] 2013	Z 16 YNG	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[D] 2013	Z 16 YNG	UEC (Underhood Electrical Centre)	●	●	●	●

Zafira-B	[D] 2013	Z 16 YNG	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[D] 2013	Z 16 YNG	PEPS (Open&Start)	●	●	●	●
Zafira-B	[D] 2013	Z 16 YNG	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[D] 2013	Z 16 YNG	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[D] 2013	A 16 XER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[D] 2013	A 16 XER	AF 40-6	●	●	●	●
Zafira-B	[D] 2013	A 16 XER	MTA (Easytronic)	●	●	●	●
Zafira-B	[D] 2013	A 16 XER	AF 22-4	●	●	●	●
Zafira-B	[D] 2013	A 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[D] 2013	A 16 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[D] 2013	A 16 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[D] 2013	A 16 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[D] 2013	A 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[D] 2013	A 16 XER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[D] 2013	A 16 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[D] 2013	A 16 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[D] 2013	A 16 XER	Interior Lighting	●	●	●	●
Zafira-B	[D] 2013	A 16 XER	Wipers/Washer	●	●	●	●
Zafira-B	[D] 2013	A 16 XER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[D] 2013	A 16 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[D] 2013	A 16 XER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[D] 2013	A 16 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[D] 2013	A 16 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[D] 2013	A 16 XER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[D] 2013	A 16 XER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[D] 2013	A 16 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[D] 2013	A 16 XER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[D] 2013	A 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[D] 2013	A 16 XER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[D] 2013	A 16 XER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[D] 2013	A 16 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[D] 2013	A 16 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[D] 2013	Z 17 DTJ	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[D] 2013	Z 17 DTJ	AF 40-6	●	●	●	●
Zafira-B	[D] 2013	Z 17 DTJ	MTA (Easytronic)	●	●	●	●
Zafira-B	[D] 2013	Z 17 DTJ	AF 22-4	●	●	●	●
Zafira-B	[D] 2013	Z 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[D] 2013	Z 17 DTJ	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[D] 2013	Z 17 DTJ	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[D] 2013	Z 17 DTJ	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[D] 2013	Z 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[D] 2013	Z 17 DTJ	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[D] 2013	Z 17 DTJ	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[D] 2013	Z 17 DTJ	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[D] 2013	Z 17 DTJ	Interior Lighting	●	●	●	●
Zafira-B	[D] 2013	Z 17 DTJ	Wipers/Washer	●	●	●	●
Zafira-B	[D] 2013	Z 17 DTJ	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[D] 2013	Z 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[D] 2013	Z 17 DTJ	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[D] 2013	Z 17 DTJ	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[D] 2013	Z 17 DTJ	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[D] 2013	Z 17 DTJ	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[D] 2013	Z 17 DTJ	PAS (Park Pilot)	●	●	●	●
Zafira-B	[D] 2013	Z 17 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[D] 2013	Z 17 DTJ	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[D] 2013	Z 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[D] 2013	Z 17 DTJ	REC (Rear Electrical Centre)	●	●	●	●

Zafira-B	[D] 2013	Z 17 DTJ	PEPS (Open&Start)	●	●	●	●
Zafira-B	[D] 2013	Z 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[D] 2013	Z 17 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTJ	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTJ	AF 40-6	●	●	●	●
Zafira-B	[D] 2013	A 17 DTJ	MTA (Easytronic)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTJ	AF 22-4	●	●	●	●
Zafira-B	[D] 2013	A 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTJ	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTJ	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTJ	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTJ	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTJ	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTJ	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[D] 2013	A 17 DTJ	Interior Lighting	●	●	●	●
Zafira-B	[D] 2013	A 17 DTJ	Wipers/Washer	●	●	●	●
Zafira-B	[D] 2013	A 17 DTJ	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTJ	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTJ	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTJ	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTJ	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTJ	PAS (Park Pilot)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTJ	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTJ	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTJ	PEPS (Open&Start)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTR	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTR	AF 40-6	●	●	●	●
Zafira-B	[D] 2013	A 17 DTR	MTA (Easytronic)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTR	AF 22-4	●	●	●	●
Zafira-B	[D] 2013	A 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTR	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTR	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTR	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTR	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTR	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTR	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[D] 2013	A 17 DTR	Interior Lighting	●	●	●	●
Zafira-B	[D] 2013	A 17 DTR	Wipers/Washer	●	●	●	●
Zafira-B	[D] 2013	A 17 DTR	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTR	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTR	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTR	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTR	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTR	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTR	PAS (Park Pilot)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTR	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTR	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTR	PEPS (Open&Start)	●	●	●	●

Zafira-B	[D] 2013	A 17 DTR	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[D] 2013	A 17 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[D] 2013	Z 18 XER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[D] 2013	Z 18 XER	AF 40-6	●	●	●	●
Zafira-B	[D] 2013	Z 18 XER	MTA (Easytronic)	●	●	●	●
Zafira-B	[D] 2013	Z 18 XER	AF 22-4	●	●	●	●
Zafira-B	[D] 2013	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[D] 2013	Z 18 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[D] 2013	Z 18 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[D] 2013	Z 18 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[D] 2013	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[D] 2013	Z 18 XER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[D] 2013	Z 18 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[D] 2013	Z 18 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[D] 2013	Z 18 XER	Interior Lighting	●	●	●	●
Zafira-B	[D] 2013	Z 18 XER	Wipers/Washer	●	●	●	●
Zafira-B	[D] 2013	Z 18 XER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[D] 2013	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[D] 2013	Z 18 XER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[D] 2013	Z 18 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[D] 2013	Z 18 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[D] 2013	Z 18 XER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[D] 2013	Z 18 XER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[D] 2013	Z 18 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[D] 2013	Z 18 XER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[D] 2013	Z 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[D] 2013	Z 18 XER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[D] 2013	Z 18 XER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[D] 2013	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[D] 2013	Z 18 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[D] 2013	A 18 XER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[D] 2013	A 18 XER	AF 40-6	●	●	●	●
Zafira-B	[D] 2013	A 18 XER	MTA (Easytronic)	●	●	●	●
Zafira-B	[D] 2013	A 18 XER	AF 22-4	●	●	●	●
Zafira-B	[D] 2013	A 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[D] 2013	A 18 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[D] 2013	A 18 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[D] 2013	A 18 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[D] 2013	A 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[D] 2013	A 18 XER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[D] 2013	A 18 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[D] 2013	A 18 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[D] 2013	A 18 XER	Interior Lighting	●	●	●	●
Zafira-B	[D] 2013	A 18 XER	Wipers/Washer	●	●	●	●
Zafira-B	[D] 2013	A 18 XER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[D] 2013	A 18 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[D] 2013	A 18 XER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[D] 2013	A 18 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[D] 2013	A 18 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[D] 2013	A 18 XER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[D] 2013	A 18 XER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[D] 2013	A 18 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[D] 2013	A 18 XER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[D] 2013	A 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[D] 2013	A 18 XER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[D] 2013	A 18 XER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[D] 2013	A 18 XER	IC (Instrument Cluster)	●	●	●	●

Zafira-B	[D] 2013	A 18 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DT	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DT	AF 40-6	●	●	●	●
Zafira-B	[D] 2013	Z 19 DT	MTA (Easytronic)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DT	AF 22-4	●	●	●	●
Zafira-B	[D] 2013	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DT	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DT	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DT	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DT	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DT	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DT	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[D] 2013	Z 19 DT	Interior Lighting	●	●	●	●
Zafira-B	[D] 2013	Z 19 DT	Wipers/Washer	●	●	●	●
Zafira-B	[D] 2013	Z 19 DT	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DT	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DT	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DT	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DT	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DT	PAS (Park Pilot)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DT	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DT	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DT	PEPS (Open&Start)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DT	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DTH	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DTH	AF 40-6	●	●	●	●
Zafira-B	[D] 2013	Z 19 DTH	MTA (Easytronic)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DTH	AF 22-4	●	●	●	●
Zafira-B	[D] 2013	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DTH	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[D] 2013	Z 19 DTH	Interior Lighting	●	●	●	●
Zafira-B	[D] 2013	Z 19 DTH	Wipers/Washer	●	●	●	●
Zafira-B	[D] 2013	Z 19 DTH	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DTH	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DTH	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DTH	PAS (Park Pilot)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DTH	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DTH	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DTH	PEPS (Open&Start)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[D] 2013	Z 19 DTH	ATWS (Anti Theft Warning System)	●	●	●	●

Zafira-B	[D] 2013	Z 20 LEH	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LEH	AF 40-6	●	●	●	●
Zafira-B	[D] 2013	Z 20 LEH	MTA (Easytronic)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LEH	AF 22-4	●	●	●	●
Zafira-B	[D] 2013	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LEH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LEH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LEH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LEH	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LEH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LEH	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[D] 2013	Z 20 LEH	Interior Lighting	●	●	●	●
Zafira-B	[D] 2013	Z 20 LEH	Wipers/Washer	●	●	●	●
Zafira-B	[D] 2013	Z 20 LEH	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LEH	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LEH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LEH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LEH	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LEH	PAS (Park Pilot)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LEH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LEH	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LEH	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LEH	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LEH	PEPS (Open&Start)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LEH	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LER	AF 40-6	●	●	●	●
Zafira-B	[D] 2013	Z 20 LER	MTA (Easytronic)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LER	AF 22-4	●	●	●	●
Zafira-B	[D] 2013	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[D] 2013	Z 20 LER	Interior Lighting	●	●	●	●
Zafira-B	[D] 2013	Z 20 LER	Wipers/Washer	●	●	●	●
Zafira-B	[D] 2013	Z 20 LER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[D] 2013	Z 20 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[D] 2013	Z 22 YH	ECM (Engine Control Module)	●	●	●	●

Zafira-B	[D] 2013	Z 22 YH	AF 40-6	●	●	●	●
Zafira-B	[D] 2013	Z 22 YH	MTA (Easytronic)	●	●	●	●
Zafira-B	[D] 2013	Z 22 YH	AF 22-4	●	●	●	●
Zafira-B	[D] 2013	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[D] 2013	Z 22 YH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[D] 2013	Z 22 YH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[D] 2013	Z 22 YH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[D] 2013	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[D] 2013	Z 22 YH	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[D] 2013	Z 22 YH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[D] 2013	Z 22 YH	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[D] 2013	Z 22 YH	Interior Lighting	●	●	●	●
Zafira-B	[D] 2013	Z 22 YH	Wipers/Washer	●	●	●	●
Zafira-B	[D] 2013	Z 22 YH	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[D] 2013	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[D] 2013	Z 22 YH	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[D] 2013	Z 22 YH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[D] 2013	Z 22 YH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[D] 2013	Z 22 YH	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[D] 2013	Z 22 YH	PAS (Park Pilot)	●	●	●	●
Zafira-B	[D] 2013	Z 22 YH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[D] 2013	Z 22 YH	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[D] 2013	Z 22 YH	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[D] 2013	Z 22 YH	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[D] 2013	Z 22 YH	PEPS (Open&Start)	●	●	●	●
Zafira-B	[D] 2013	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[D] 2013	Z 22 YH	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[D] 2013	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[D] 2013	Engine(default)	AF 40-6	●	●	●	●
Zafira-B	[D] 2013	Engine(default)	MTA (Easytronic)	●	●	●	●
Zafira-B	[D] 2013	Engine(default)	AF 22-4	●	●	●	●
Zafira-B	[D] 2013	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[D] 2013	Engine(default)	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[D] 2013	Engine(default)	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[D] 2013	Engine(default)	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[D] 2013	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[D] 2013	Engine(default)	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[D] 2013	Engine(default)	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[D] 2013	Engine(default)	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[D] 2013	Engine(default)	Interior Lighting	●	●	●	●
Zafira-B	[D] 2013	Engine(default)	Wipers/Washer	●	●	●	●
Zafira-B	[D] 2013	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[D] 2013	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[D] 2013	Engine(default)	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[D] 2013	Engine(default)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[D] 2013	Engine(default)	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[D] 2013	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[D] 2013	Engine(default)	PAS (Park Pilot)	●	●	●	●
Zafira-B	[D] 2013	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●

Zafira-B	[D] 2013	Engine(default)	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[D] 2013	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[D] 2013	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[D] 2013	Engine(default)	PEPS (Open&Start)	●	●	●	●
Zafira-B	[D] 2013	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[D] 2013	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XE1	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XE1	AF 40-6	●	●	●	●
Zafira-B	[C] 2012	Z 16 XE1	MTA (Easytronic)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XE1	AF 22-4	●	●	●	●
Zafira-B	[C] 2012	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XE1	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XE1	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XE1	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XE1	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XE1	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XE1	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[C] 2012	Z 16 XE1	Interior Lighting	●	●	●	●
Zafira-B	[C] 2012	Z 16 XE1	Wipers/Washer	●	●	●	●
Zafira-B	[C] 2012	Z 16 XE1	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XE1	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XE1	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XE1	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XE1	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XE1	PAS (Park Pilot)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XE1	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XE1	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XE1	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XE1	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XE1	PEPS (Open&Start)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XE1	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XEP	AF 40-6	●	●	●	●
Zafira-B	[C] 2012	Z 16 XEP	MTA (Easytronic)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XEP	AF 22-4	●	●	●	●
Zafira-B	[C] 2012	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XEP	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[C] 2012	Z 16 XEP	Interior Lighting	●	●	●	●
Zafira-B	[C] 2012	Z 16 XEP	Wipers/Washer	●	●	●	●
Zafira-B	[C] 2012	Z 16 XEP	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XEP	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XEP	PAS (Park Pilot)	●	●	●	●

Zafira-B	[C] 2012	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XEP	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XEP	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XEP	PEPS (Open&Start)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XER	AF 40-6	●	●	●	●
Zafira-B	[C] 2012	Z 16 XER	MTA (Easytronic)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XER	AF 22-4	●	●	●	●
Zafira-B	[C] 2012	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[C] 2012	Z 16 XER	Interior Lighting	●	●	●	●
Zafira-B	[C] 2012	Z 16 XER	Wipers/Washer	●	●	●	●
Zafira-B	[C] 2012	Z 16 XER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[C] 2012	Z 16 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[C] 2012	Z 16 YNG	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[C] 2012	Z 16 YNG	AF 40-6	●	●	●	●
Zafira-B	[C] 2012	Z 16 YNG	MTA (Easytronic)	●	●	●	●
Zafira-B	[C] 2012	Z 16 YNG	AF 22-4	●	●	●	●
Zafira-B	[C] 2012	Z 16 YNG	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[C] 2012	Z 16 YNG	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[C] 2012	Z 16 YNG	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[C] 2012	Z 16 YNG	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[C] 2012	Z 16 YNG	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[C] 2012	Z 16 YNG	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[C] 2012	Z 16 YNG	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[C] 2012	Z 16 YNG	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[C] 2012	Z 16 YNG	Interior Lighting	●	●	●	●
Zafira-B	[C] 2012	Z 16 YNG	Wipers/Washer	●	●	●	●
Zafira-B	[C] 2012	Z 16 YNG	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[C] 2012	Z 16 YNG	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[C] 2012	Z 16 YNG	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[C] 2012	Z 16 YNG	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[C] 2012	Z 16 YNG	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[C] 2012	Z 16 YNG	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[C] 2012	Z 16 YNG	PAS (Park Pilot)	●	●	●	●

Zafira-B	[C] 2012	Z 16 YNG	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[C] 2012	Z 16 YNG	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[C] 2012	Z 16 YNG	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[C] 2012	Z 16 YNG	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[C] 2012	Z 16 YNG	PEPS (Open&Start)	●	●	●	●
Zafira-B	[C] 2012	Z 16 YNG	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[C] 2012	Z 16 YNG	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[C] 2012	A 16 XER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[C] 2012	A 16 XER	AF 40-6	●	●	●	●
Zafira-B	[C] 2012	A 16 XER	MTA (Easytronic)	●	●	●	●
Zafira-B	[C] 2012	A 16 XER	AF 22-4	●	●	●	●
Zafira-B	[C] 2012	A 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[C] 2012	A 16 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[C] 2012	A 16 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[C] 2012	A 16 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[C] 2012	A 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[C] 2012	A 16 XER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[C] 2012	A 16 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[C] 2012	A 16 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[C] 2012	A 16 XER	Interior Lighting	●	●	●	●
Zafira-B	[C] 2012	A 16 XER	Wipers/Washer	●	●	●	●
Zafira-B	[C] 2012	A 16 XER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[C] 2012	A 16 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[C] 2012	A 16 XER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[C] 2012	A 16 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[C] 2012	A 16 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[C] 2012	A 16 XER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[C] 2012	A 16 XER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[C] 2012	A 16 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[C] 2012	A 16 XER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[C] 2012	A 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[C] 2012	A 16 XER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[C] 2012	A 16 XER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[C] 2012	A 16 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[C] 2012	A 16 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[C] 2012	Z 17 DTJ	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[C] 2012	Z 17 DTJ	AF 40-6	●	●	●	●
Zafira-B	[C] 2012	Z 17 DTJ	MTA (Easytronic)	●	●	●	●
Zafira-B	[C] 2012	Z 17 DTJ	AF 22-4	●	●	●	●
Zafira-B	[C] 2012	Z 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[C] 2012	Z 17 DTJ	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[C] 2012	Z 17 DTJ	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[C] 2012	Z 17 DTJ	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[C] 2012	Z 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[C] 2012	Z 17 DTJ	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[C] 2012	Z 17 DTJ	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[C] 2012	Z 17 DTJ	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[C] 2012	Z 17 DTJ	Interior Lighting	●	●	●	●
Zafira-B	[C] 2012	Z 17 DTJ	Wipers/Washer	●	●	●	●
Zafira-B	[C] 2012	Z 17 DTJ	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[C] 2012	Z 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[C] 2012	Z 17 DTJ	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[C] 2012	Z 17 DTJ	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[C] 2012	Z 17 DTJ	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[C] 2012	Z 17 DTJ	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[C] 2012	Z 17 DTJ	PAS (Park Pilot)	●	●	●	●

Zafira-B	[C] 2012	Z 17 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[C] 2012	Z 17 DTJ	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[C] 2012	Z 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[C] 2012	Z 17 DTJ	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[C] 2012	Z 17 DTJ	PEPS (Open&Start)	●	●	●	●
Zafira-B	[C] 2012	Z 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[C] 2012	Z 17 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTJ	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTJ	AF 40-6	●	●	●	●
Zafira-B	[C] 2012	A 17 DTJ	MTA (Easytronic)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTJ	AF 22-4	●	●	●	●
Zafira-B	[C] 2012	A 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTJ	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTJ	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTJ	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTJ	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTJ	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTJ	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[C] 2012	A 17 DTJ	Interior Lighting	●	●	●	●
Zafira-B	[C] 2012	A 17 DTJ	Wipers/Washer	●	●	●	●
Zafira-B	[C] 2012	A 17 DTJ	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTJ	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTJ	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTJ	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTJ	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTJ	PAS (Park Pilot)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTJ	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTJ	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTJ	PEPS (Open&Start)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTR	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTR	AF 40-6	●	●	●	●
Zafira-B	[C] 2012	A 17 DTR	MTA (Easytronic)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTR	AF 22-4	●	●	●	●
Zafira-B	[C] 2012	A 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTR	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTR	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTR	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTR	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTR	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTR	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[C] 2012	A 17 DTR	Interior Lighting	●	●	●	●
Zafira-B	[C] 2012	A 17 DTR	Wipers/Washer	●	●	●	●
Zafira-B	[C] 2012	A 17 DTR	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTR	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTR	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTR	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTR	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTR	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTR	PAS (Park Pilot)	●	●	●	●

Zafira-B	[C] 2012	A 17 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTR	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTR	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTR	PEPS (Open&Start)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTR	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[C] 2012	A 17 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[C] 2012	Z 18 XER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[C] 2012	Z 18 XER	AF 40-6	●	●	●	●
Zafira-B	[C] 2012	Z 18 XER	MTA (Easytronic)	●	●	●	●
Zafira-B	[C] 2012	Z 18 XER	AF 22-4	●	●	●	●
Zafira-B	[C] 2012	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[C] 2012	Z 18 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[C] 2012	Z 18 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[C] 2012	Z 18 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[C] 2012	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[C] 2012	Z 18 XER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[C] 2012	Z 18 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[C] 2012	Z 18 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[C] 2012	Z 18 XER	Interior Lighting	●	●	●	●
Zafira-B	[C] 2012	Z 18 XER	Wipers/Washer	●	●	●	●
Zafira-B	[C] 2012	Z 18 XER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[C] 2012	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[C] 2012	Z 18 XER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[C] 2012	Z 18 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[C] 2012	Z 18 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[C] 2012	Z 18 XER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[C] 2012	Z 18 XER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[C] 2012	Z 18 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[C] 2012	Z 18 XER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[C] 2012	Z 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[C] 2012	Z 18 XER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[C] 2012	Z 18 XER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[C] 2012	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[C] 2012	Z 18 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[C] 2012	A 18 XER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[C] 2012	A 18 XER	AF 40-6	●	●	●	●
Zafira-B	[C] 2012	A 18 XER	MTA (Easytronic)	●	●	●	●
Zafira-B	[C] 2012	A 18 XER	AF 22-4	●	●	●	●
Zafira-B	[C] 2012	A 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[C] 2012	A 18 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[C] 2012	A 18 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[C] 2012	A 18 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[C] 2012	A 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[C] 2012	A 18 XER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[C] 2012	A 18 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[C] 2012	A 18 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[C] 2012	A 18 XER	Interior Lighting	●	●	●	●
Zafira-B	[C] 2012	A 18 XER	Wipers/Washer	●	●	●	●
Zafira-B	[C] 2012	A 18 XER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[C] 2012	A 18 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[C] 2012	A 18 XER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[C] 2012	A 18 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[C] 2012	A 18 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[C] 2012	A 18 XER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[C] 2012	A 18 XER	PAS (Park Pilot)	●	●	●	●

Zafira-B	[C] 2012	A 18 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[C] 2012	A 18 XER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[C] 2012	A 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[C] 2012	A 18 XER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[C] 2012	A 18 XER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[C] 2012	A 18 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[C] 2012	A 18 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DT	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DT	AF 40-6	●	●	●	●
Zafira-B	[C] 2012	Z 19 DT	MTA (Easytronic)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DT	AF 22-4	●	●	●	●
Zafira-B	[C] 2012	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DT	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DT	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DT	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DT	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DT	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DT	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[C] 2012	Z 19 DT	Interior Lighting	●	●	●	●
Zafira-B	[C] 2012	Z 19 DT	Wipers/Washer	●	●	●	●
Zafira-B	[C] 2012	Z 19 DT	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DT	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DT	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DT	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DT	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DT	PAS (Park Pilot)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DT	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DT	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DT	PEPS (Open&Start)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DT	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DTH	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DTH	AF 40-6	●	●	●	●
Zafira-B	[C] 2012	Z 19 DTH	MTA (Easytronic)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DTH	AF 22-4	●	●	●	●
Zafira-B	[C] 2012	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DTH	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[C] 2012	Z 19 DTH	Interior Lighting	●	●	●	●
Zafira-B	[C] 2012	Z 19 DTH	Wipers/Washer	●	●	●	●
Zafira-B	[C] 2012	Z 19 DTH	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DTH	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DTH	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DTH	PAS (Park Pilot)	●	●	●	●

Zafira-B	[C] 2012	Z 19 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DTH	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DTH	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DTH	PEPS (Open&Start)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[C] 2012	Z 19 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LEH	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LEH	AF 40-6	●	●	●	●
Zafira-B	[C] 2012	Z 20 LEH	MTA (Easytronic)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LEH	AF 22-4	●	●	●	●
Zafira-B	[C] 2012	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LEH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LEH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LEH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LEH	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LEH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LEH	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[C] 2012	Z 20 LEH	Interior Lighting	●	●	●	●
Zafira-B	[C] 2012	Z 20 LEH	Wipers/Washer	●	●	●	●
Zafira-B	[C] 2012	Z 20 LEH	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LEH	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LEH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LEH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LEH	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LEH	PAS (Park Pilot)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LEH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LEH	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LEH	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LEH	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LEH	PEPS (Open&Start)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LEH	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LER	AF 40-6	●	●	●	●
Zafira-B	[C] 2012	Z 20 LER	MTA (Easytronic)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LER	AF 22-4	●	●	●	●
Zafira-B	[C] 2012	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[C] 2012	Z 20 LER	Interior Lighting	●	●	●	●
Zafira-B	[C] 2012	Z 20 LER	Wipers/Washer	●	●	●	●
Zafira-B	[C] 2012	Z 20 LER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LER	PAS (Park Pilot)	●	●	●	●

Zafira-B	[C] 2012	Z 20 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[C] 2012	Z 20 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[C] 2012	Z 22 YH	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[C] 2012	Z 22 YH	AF 40-6	●	●	●	●
Zafira-B	[C] 2012	Z 22 YH	MTA (Easytronic)	●	●	●	●
Zafira-B	[C] 2012	Z 22 YH	AF 22-4	●	●	●	●
Zafira-B	[C] 2012	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[C] 2012	Z 22 YH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[C] 2012	Z 22 YH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[C] 2012	Z 22 YH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[C] 2012	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[C] 2012	Z 22 YH	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[C] 2012	Z 22 YH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[C] 2012	Z 22 YH	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[C] 2012	Z 22 YH	Interior Lighting	●	●	●	●
Zafira-B	[C] 2012	Z 22 YH	Wipers/Washer	●	●	●	●
Zafira-B	[C] 2012	Z 22 YH	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[C] 2012	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[C] 2012	Z 22 YH	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[C] 2012	Z 22 YH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[C] 2012	Z 22 YH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[C] 2012	Z 22 YH	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[C] 2012	Z 22 YH	PAS (Park Pilot)	●	●	●	●
Zafira-B	[C] 2012	Z 22 YH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[C] 2012	Z 22 YH	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[C] 2012	Z 22 YH	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[C] 2012	Z 22 YH	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[C] 2012	Z 22 YH	PEPS (Open&Start)	●	●	●	●
Zafira-B	[C] 2012	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[C] 2012	Z 22 YH	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[C] 2012	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[C] 2012	Engine(default)	AF 40-6	●	●	●	●
Zafira-B	[C] 2012	Engine(default)	MTA (Easytronic)	●	●	●	●
Zafira-B	[C] 2012	Engine(default)	AF 22-4	●	●	●	●
Zafira-B	[C] 2012	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[C] 2012	Engine(default)	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[C] 2012	Engine(default)	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[C] 2012	Engine(default)	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[C] 2012	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[C] 2012	Engine(default)	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[C] 2012	Engine(default)	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[C] 2012	Engine(default)	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[C] 2012	Engine(default)	Interior Lighting	●	●	●	●
Zafira-B	[C] 2012	Engine(default)	Wipers/Washer	●	●	●	●
Zafira-B	[C] 2012	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[C] 2012	Engine(default)	IC (Instrument Cluster)	●	●	●	●

Zafira-B	[C] 2012	Engine(default)	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[C] 2012	Engine(default)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[C] 2012	Engine(default)	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[C] 2012	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[C] 2012	Engine(default)	PAS (Park Pilot)	●	●	●	●
Zafira-B	[C] 2012	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[C] 2012	Engine(default)	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[C] 2012	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[C] 2012	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[C] 2012	Engine(default)	PEPS (Open&Start)	●	●	●	●
Zafira-B	[C] 2012	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[C] 2012	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XE1	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XE1	AF 40-6	●	●	●	●
Zafira-B	[B] 2011	Z 16 XE1	MTA (Easytronic)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XE1	AF 22-4	●	●	●	●
Zafira-B	[B] 2011	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XE1	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XE1	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XE1	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XE1	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XE1	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XE1	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[B] 2011	Z 16 XE1	Interior Lighting	●	●	●	●
Zafira-B	[B] 2011	Z 16 XE1	Wipers/Washer	●	●	●	●
Zafira-B	[B] 2011	Z 16 XE1	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XE1	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XE1	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XE1	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XE1	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XE1	PAS (Park Pilot)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XE1	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XE1	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XE1	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XE1	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XE1	PEPS (Open&Start)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XE1	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XEP	AF 40-6	●	●	●	●
Zafira-B	[B] 2011	Z 16 XEP	MTA (Easytronic)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XEP	AF 22-4	●	●	●	●
Zafira-B	[B] 2011	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XEP	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[B] 2011	Z 16 XEP	Interior Lighting	●	●	●	●

Zafira-B	[B] 2011	Z 16 XEP	Wipers/Washer	●	●	●	●
Zafira-B	[B] 2011	Z 16 XEP	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XEP	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XEP	PAS (Park Pilot)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XEP	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XEP	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XEP	PEPS (Open&Start)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XER	AF 40-6	●	●	●	●
Zafira-B	[B] 2011	Z 16 XER	MTA (Easytronic)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XER	AF 22-4	●	●	●	●
Zafira-B	[B] 2011	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[B] 2011	Z 16 XER	Interior Lighting	●	●	●	●
Zafira-B	[B] 2011	Z 16 XER	Wipers/Washer	●	●	●	●
Zafira-B	[B] 2011	Z 16 XER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[B] 2011	Z 16 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[B] 2011	Z 16 YNG	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[B] 2011	Z 16 YNG	AF 40-6	●	●	●	●
Zafira-B	[B] 2011	Z 16 YNG	MTA (Easytronic)	●	●	●	●
Zafira-B	[B] 2011	Z 16 YNG	AF 22-4	●	●	●	●
Zafira-B	[B] 2011	Z 16 YNG	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[B] 2011	Z 16 YNG	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[B] 2011	Z 16 YNG	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[B] 2011	Z 16 YNG	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[B] 2011	Z 16 YNG	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[B] 2011	Z 16 YNG	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[B] 2011	Z 16 YNG	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[B] 2011	Z 16 YNG	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[B] 2011	Z 16 YNG	Interior Lighting	●	●	●	●
Zafira-B	[B] 2011	Z 16 YNG	Wipers/Washer	●	●	●	●

Zafira-B	[B] 2011	Z 16 YNG	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[B] 2011	Z 16 YNG	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[B] 2011	Z 16 YNG	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[B] 2011	Z 16 YNG	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[B] 2011	Z 16 YNG	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[B] 2011	Z 16 YNG	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[B] 2011	Z 16 YNG	PAS (Park Pilot)	●	●	●	●
Zafira-B	[B] 2011	Z 16 YNG	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[B] 2011	Z 16 YNG	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[B] 2011	Z 16 YNG	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[B] 2011	Z 16 YNG	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[B] 2011	Z 16 YNG	PEPS (Open&Start)	●	●	●	●
Zafira-B	[B] 2011	Z 16 YNG	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[B] 2011	Z 16 YNG	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[B] 2011	A 16 XER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[B] 2011	A 16 XER	AF 40-6	●	●	●	●
Zafira-B	[B] 2011	A 16 XER	MTA (Easytronic)	●	●	●	●
Zafira-B	[B] 2011	A 16 XER	AF 22-4	●	●	●	●
Zafira-B	[B] 2011	A 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[B] 2011	A 16 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[B] 2011	A 16 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[B] 2011	A 16 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[B] 2011	A 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[B] 2011	A 16 XER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[B] 2011	A 16 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[B] 2011	A 16 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[B] 2011	A 16 XER	Interior Lighting	●	●	●	●
Zafira-B	[B] 2011	A 16 XER	Wipers/Washer	●	●	●	●
Zafira-B	[B] 2011	A 16 XER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[B] 2011	A 16 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[B] 2011	A 16 XER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[B] 2011	A 16 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[B] 2011	A 16 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[B] 2011	A 16 XER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[B] 2011	A 16 XER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[B] 2011	A 16 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[B] 2011	A 16 XER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[B] 2011	A 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[B] 2011	A 16 XER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[B] 2011	A 16 XER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[B] 2011	A 16 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[B] 2011	A 16 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[B] 2011	Z 17 DTJ	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[B] 2011	Z 17 DTJ	AF 40-6	●	●	●	●
Zafira-B	[B] 2011	Z 17 DTJ	MTA (Easytronic)	●	●	●	●
Zafira-B	[B] 2011	Z 17 DTJ	AF 22-4	●	●	●	●
Zafira-B	[B] 2011	Z 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[B] 2011	Z 17 DTJ	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[B] 2011	Z 17 DTJ	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[B] 2011	Z 17 DTJ	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[B] 2011	Z 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[B] 2011	Z 17 DTJ	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[B] 2011	Z 17 DTJ	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[B] 2011	Z 17 DTJ	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[B] 2011	Z 17 DTJ	Interior Lighting	●	●	●	●
Zafira-B	[B] 2011	Z 17 DTJ	Wipers/Washer	●	●	●	●
Zafira-B	[B] 2011	Z 17 DTJ	CDL (Central Door Lock)	●	●	●	●

Zafira-B	[B] 2011	Z 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[B] 2011	Z 17 DTJ	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[B] 2011	Z 17 DTJ	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[B] 2011	Z 17 DTJ	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[B] 2011	Z 17 DTJ	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[B] 2011	Z 17 DTJ	PAS (Park Pilot)	●	●	●	●
Zafira-B	[B] 2011	Z 17 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[B] 2011	Z 17 DTJ	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[B] 2011	Z 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[B] 2011	Z 17 DTJ	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[B] 2011	Z 17 DTJ	PEPS (Open&Start)	●	●	●	●
Zafira-B	[B] 2011	Z 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[B] 2011	Z 17 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTJ	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTJ	AF 40-6	●	●	●	●
Zafira-B	[B] 2011	A 17 DTJ	MTA (Easytronic)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTJ	AF 22-4	●	●	●	●
Zafira-B	[B] 2011	A 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTJ	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTJ	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTJ	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTJ	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTJ	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTJ	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[B] 2011	A 17 DTJ	Interior Lighting	●	●	●	●
Zafira-B	[B] 2011	A 17 DTJ	Wipers/Washer	●	●	●	●
Zafira-B	[B] 2011	A 17 DTJ	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTJ	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTJ	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTJ	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTJ	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTJ	PAS (Park Pilot)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTJ	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTJ	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTJ	PEPS (Open&Start)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTR	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTR	AF 40-6	●	●	●	●
Zafira-B	[B] 2011	A 17 DTR	MTA (Easytronic)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTR	AF 22-4	●	●	●	●
Zafira-B	[B] 2011	A 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTR	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTR	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTR	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTR	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTR	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTR	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[B] 2011	A 17 DTR	Interior Lighting	●	●	●	●
Zafira-B	[B] 2011	A 17 DTR	Wipers/Washer	●	●	●	●
Zafira-B	[B] 2011	A 17 DTR	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTR	IC (Instrument Cluster)	●	●	●	●

Zafira-B	[B] 2011	A 17 DTR	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTR	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTR	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTR	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTR	PAS (Park Pilot)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTR	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTR	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTR	PEPS (Open&Start)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTR	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[B] 2011	A 17 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[B] 2011	Z 18 XER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[B] 2011	Z 18 XER	AF 40-6	●	●	●	●
Zafira-B	[B] 2011	Z 18 XER	MTA (Easytronic)	●	●	●	●
Zafira-B	[B] 2011	Z 18 XER	AF 22-4	●	●	●	●
Zafira-B	[B] 2011	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[B] 2011	Z 18 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[B] 2011	Z 18 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[B] 2011	Z 18 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[B] 2011	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[B] 2011	Z 18 XER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[B] 2011	Z 18 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[B] 2011	Z 18 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[B] 2011	Z 18 XER	Interior Lighting	●	●	●	●
Zafira-B	[B] 2011	Z 18 XER	Wipers/Washer	●	●	●	●
Zafira-B	[B] 2011	Z 18 XER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[B] 2011	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[B] 2011	Z 18 XER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[B] 2011	Z 18 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[B] 2011	Z 18 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[B] 2011	Z 18 XER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[B] 2011	Z 18 XER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[B] 2011	Z 18 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[B] 2011	Z 18 XER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[B] 2011	Z 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[B] 2011	Z 18 XER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[B] 2011	Z 18 XER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[B] 2011	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[B] 2011	Z 18 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[B] 2011	A 18 XER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[B] 2011	A 18 XER	AF 40-6	●	●	●	●
Zafira-B	[B] 2011	A 18 XER	MTA (Easytronic)	●	●	●	●
Zafira-B	[B] 2011	A 18 XER	AF 22-4	●	●	●	●
Zafira-B	[B] 2011	A 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[B] 2011	A 18 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[B] 2011	A 18 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[B] 2011	A 18 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[B] 2011	A 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[B] 2011	A 18 XER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[B] 2011	A 18 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[B] 2011	A 18 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[B] 2011	A 18 XER	Interior Lighting	●	●	●	●
Zafira-B	[B] 2011	A 18 XER	Wipers/Washer	●	●	●	●
Zafira-B	[B] 2011	A 18 XER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[B] 2011	A 18 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[B] 2011	A 18 XER	IMMO (Immobiliser)	●	●	●	●

Zafira-B	[B] 2011	A 18 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[B] 2011	A 18 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[B] 2011	A 18 XER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[B] 2011	A 18 XER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[B] 2011	A 18 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[B] 2011	A 18 XER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[B] 2011	A 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[B] 2011	A 18 XER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[B] 2011	A 18 XER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[B] 2011	A 18 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[B] 2011	A 18 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DT	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DT	AF 40-6	●	●	●	●
Zafira-B	[B] 2011	Z 19 DT	MTA (Easytronic)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DT	AF 22-4	●	●	●	●
Zafira-B	[B] 2011	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DT	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DT	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DT	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DT	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DT	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DT	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[B] 2011	Z 19 DT	Interior Lighting	●	●	●	●
Zafira-B	[B] 2011	Z 19 DT	Wipers/Washer	●	●	●	●
Zafira-B	[B] 2011	Z 19 DT	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DT	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DT	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DT	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DT	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DT	PAS (Park Pilot)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DT	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DT	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DT	PEPS (Open&Start)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DT	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DTH	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DTH	AF 40-6	●	●	●	●
Zafira-B	[B] 2011	Z 19 DTH	MTA (Easytronic)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DTH	AF 22-4	●	●	●	●
Zafira-B	[B] 2011	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DTH	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[B] 2011	Z 19 DTH	Interior Lighting	●	●	●	●
Zafira-B	[B] 2011	Z 19 DTH	Wipers/Washer	●	●	●	●
Zafira-B	[B] 2011	Z 19 DTH	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DTH	IMMO (Immobiliser)	●	●	●	●

Zafira-B	[B] 2011	Z 19 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DTH	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DTH	PAS (Park Pilot)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DTH	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DTH	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DTH	PEPS (Open&Start)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[B] 2011	Z 19 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LEH	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LEH	AF 40-6	●	●	●	●
Zafira-B	[B] 2011	Z 20 LEH	MTA (Easytronic)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LEH	AF 22-4	●	●	●	●
Zafira-B	[B] 2011	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LEH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LEH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LEH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LEH	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LEH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LEH	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[B] 2011	Z 20 LEH	Interior Lighting	●	●	●	●
Zafira-B	[B] 2011	Z 20 LEH	Wipers/Washer	●	●	●	●
Zafira-B	[B] 2011	Z 20 LEH	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LEH	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LEH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LEH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LEH	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LEH	PAS (Park Pilot)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LEH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LEH	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LEH	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LEH	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LEH	PEPS (Open&Start)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LEH	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LER	AF 40-6	●	●	●	●
Zafira-B	[B] 2011	Z 20 LER	MTA (Easytronic)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LER	AF 22-4	●	●	●	●
Zafira-B	[B] 2011	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[B] 2011	Z 20 LER	Interior Lighting	●	●	●	●
Zafira-B	[B] 2011	Z 20 LER	Wipers/Washer	●	●	●	●
Zafira-B	[B] 2011	Z 20 LER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LER	IMMO (Immobiliser)	●	●	●	●

Zafira-B	[B] 2011	Z 20 LER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[B] 2011	Z 20 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[B] 2011	Z 22 YH	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[B] 2011	Z 22 YH	AF 40-6	●	●	●	●
Zafira-B	[B] 2011	Z 22 YH	MTA (Easytronic)	●	●	●	●
Zafira-B	[B] 2011	Z 22 YH	AF 22-4	●	●	●	●
Zafira-B	[B] 2011	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[B] 2011	Z 22 YH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[B] 2011	Z 22 YH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[B] 2011	Z 22 YH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[B] 2011	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[B] 2011	Z 22 YH	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[B] 2011	Z 22 YH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[B] 2011	Z 22 YH	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[B] 2011	Z 22 YH	Interior Lighting	●	●	●	●
Zafira-B	[B] 2011	Z 22 YH	Wipers/Washer	●	●	●	●
Zafira-B	[B] 2011	Z 22 YH	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[B] 2011	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[B] 2011	Z 22 YH	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[B] 2011	Z 22 YH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[B] 2011	Z 22 YH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[B] 2011	Z 22 YH	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[B] 2011	Z 22 YH	PAS (Park Pilot)	●	●	●	●
Zafira-B	[B] 2011	Z 22 YH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[B] 2011	Z 22 YH	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[B] 2011	Z 22 YH	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[B] 2011	Z 22 YH	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[B] 2011	Z 22 YH	PEPS (Open&Start)	●	●	●	●
Zafira-B	[B] 2011	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[B] 2011	Z 22 YH	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[B] 2011	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[B] 2011	Engine(default)	AF 40-6	●	●	●	●
Zafira-B	[B] 2011	Engine(default)	MTA (Easytronic)	●	●	●	●
Zafira-B	[B] 2011	Engine(default)	AF 22-4	●	●	●	●
Zafira-B	[B] 2011	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[B] 2011	Engine(default)	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[B] 2011	Engine(default)	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[B] 2011	Engine(default)	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[B] 2011	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[B] 2011	Engine(default)	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[B] 2011	Engine(default)	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[B] 2011	Engine(default)	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[B] 2011	Engine(default)	Interior Lighting	●	●	●	●

Zafira-B	[B] 2011	Engine(default)	Wipers/Washer	●	●	●	●
Zafira-B	[B] 2011	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[B] 2011	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[B] 2011	Engine(default)	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[B] 2011	Engine(default)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[B] 2011	Engine(default)	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[B] 2011	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[B] 2011	Engine(default)	PAS (Park Pilot)	●	●	●	●
Zafira-B	[B] 2011	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[B] 2011	Engine(default)	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[B] 2011	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[B] 2011	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[B] 2011	Engine(default)	PEPS (Open&Start)	●	●	●	●
Zafira-B	[B] 2011	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[B] 2011	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DTH	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DTH	AF 40-6	●	●	●	●
Zafira-B	[A] 2010	Z 19 DTH	MTA (Easytronic)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DTH	AF 22-4	●	●	●	●
Zafira-B	[A] 2010	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DTH	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[A] 2010	Z 19 DTH	Interior Lighting	●	●	●	●
Zafira-B	[A] 2010	Z 19 DTH	Wipers/Washer	●	●	●	●
Zafira-B	[A] 2010	Z 19 DTH	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DTH	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DTH	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DTH	PAS (Park Pilot)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DTH	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DTH	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DTH	PEPS (Open&Start)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XER	AF 40-6	●	●	●	●
Zafira-B	[A] 2010	Z 16 XER	MTA (Easytronic)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XER	AF 22-4	●	●	●	●
Zafira-B	[A] 2010	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●

Zafira-B	[A] 2010	Z 16 XER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[A] 2010	Z 16 XER	Interior Lighting	●	●	●	●
Zafira-B	[A] 2010	Z 16 XER	Wipers/Washer	●	●	●	●
Zafira-B	[A] 2010	Z 16 XER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[A] 2010	Z 16 YNG	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[A] 2010	Z 16 YNG	AF 40-6	●	●	●	●
Zafira-B	[A] 2010	Z 16 YNG	MTA (Easytronic)	●	●	●	●
Zafira-B	[A] 2010	Z 16 YNG	AF 22-4	●	●	●	●
Zafira-B	[A] 2010	Z 16 YNG	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[A] 2010	Z 16 YNG	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[A] 2010	Z 16 YNG	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[A] 2010	Z 16 YNG	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[A] 2010	Z 16 YNG	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[A] 2010	Z 16 YNG	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[A] 2010	Z 16 YNG	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[A] 2010	Z 16 YNG	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[A] 2010	Z 16 YNG	Interior Lighting	●	●	●	●
Zafira-B	[A] 2010	Z 16 YNG	Wipers/Washer	●	●	●	●
Zafira-B	[A] 2010	Z 16 YNG	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[A] 2010	Z 16 YNG	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[A] 2010	Z 16 YNG	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[A] 2010	Z 16 YNG	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[A] 2010	Z 16 YNG	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[A] 2010	Z 16 YNG	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[A] 2010	Z 16 YNG	PAS (Park Pilot)	●	●	●	●
Zafira-B	[A] 2010	Z 16 YNG	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[A] 2010	Z 16 YNG	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[A] 2010	Z 16 YNG	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[A] 2010	Z 16 YNG	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[A] 2010	Z 16 YNG	PEPS (Open&Start)	●	●	●	●
Zafira-B	[A] 2010	Z 16 YNG	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[A] 2010	Z 16 YNG	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[A] 2010	Z 18 XER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[A] 2010	Z 18 XER	AF 40-6	●	●	●	●
Zafira-B	[A] 2010	Z 18 XER	MTA (Easytronic)	●	●	●	●
Zafira-B	[A] 2010	Z 18 XER	AF 22-4	●	●	●	●
Zafira-B	[A] 2010	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[A] 2010	Z 18 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[A] 2010	Z 18 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[A] 2010	Z 18 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[A] 2010	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[A] 2010	Z 18 XER	CDC (Continuous Damping Control)	●	●	●	●

Zafira-B	[A] 2010	Z 18 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[A] 2010	Z 18 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[A] 2010	Z 18 XER	Interior Lighting	●	●	●	●
Zafira-B	[A] 2010	Z 18 XER	Wipers/Washer	●	●	●	●
Zafira-B	[A] 2010	Z 18 XER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[A] 2010	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[A] 2010	Z 18 XER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[A] 2010	Z 18 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[A] 2010	Z 18 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[A] 2010	Z 18 XER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[A] 2010	Z 18 XER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[A] 2010	Z 18 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[A] 2010	Z 18 XER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[A] 2010	Z 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[A] 2010	Z 18 XER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[A] 2010	Z 18 XER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[A] 2010	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[A] 2010	Z 18 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[A] 2010	Z 22 YH	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[A] 2010	Z 22 YH	AF 40-6	●	●	●	●
Zafira-B	[A] 2010	Z 22 YH	MTA (Easytronic)	●	●	●	●
Zafira-B	[A] 2010	Z 22 YH	AF 22-4	●	●	●	●
Zafira-B	[A] 2010	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[A] 2010	Z 22 YH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[A] 2010	Z 22 YH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[A] 2010	Z 22 YH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[A] 2010	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[A] 2010	Z 22 YH	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[A] 2010	Z 22 YH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[A] 2010	Z 22 YH	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[A] 2010	Z 22 YH	Interior Lighting	●	●	●	●
Zafira-B	[A] 2010	Z 22 YH	Wipers/Washer	●	●	●	●
Zafira-B	[A] 2010	Z 22 YH	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[A] 2010	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[A] 2010	Z 22 YH	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[A] 2010	Z 22 YH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[A] 2010	Z 22 YH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[A] 2010	Z 22 YH	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[A] 2010	Z 22 YH	PAS (Park Pilot)	●	●	●	●
Zafira-B	[A] 2010	Z 22 YH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[A] 2010	Z 22 YH	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[A] 2010	Z 22 YH	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[A] 2010	Z 22 YH	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[A] 2010	Z 22 YH	PEPS (Open&Start)	●	●	●	●
Zafira-B	[A] 2010	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[A] 2010	Z 22 YH	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LER	AF 40-6	●	●	●	●
Zafira-B	[A] 2010	Z 20 LER	MTA (Easytronic)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LER	AF 22-4	●	●	●	●
Zafira-B	[A] 2010	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●

Zafira-B	[A] 2010	Z 20 LER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[A] 2010	Z 20 LER	Interior Lighting	●	●	●	●
Zafira-B	[A] 2010	Z 20 LER	Wipers/Washer	●	●	●	●
Zafira-B	[A] 2010	Z 20 LER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LEH	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LEH	AF 40-6	●	●	●	●
Zafira-B	[A] 2010	Z 20 LEH	MTA (Easytronic)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LEH	AF 22-4	●	●	●	●
Zafira-B	[A] 2010	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LEH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LEH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LEH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LEH	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LEH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LEH	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[A] 2010	Z 20 LEH	Interior Lighting	●	●	●	●
Zafira-B	[A] 2010	Z 20 LEH	Wipers/Washer	●	●	●	●
Zafira-B	[A] 2010	Z 20 LEH	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LEH	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LEH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LEH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LEH	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LEH	PAS (Park Pilot)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LEH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LEH	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LEH	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LEH	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LEH	PEPS (Open&Start)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[A] 2010	Z 20 LEH	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DT	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DT	AF 40-6	●	●	●	●
Zafira-B	[A] 2010	Z 19 DT	MTA (Easytronic)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DT	AF 22-4	●	●	●	●
Zafira-B	[A] 2010	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DT	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DT	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DT	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DT	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DT	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DT	Exterior Lighting/Turn Indicator System	●	●	●	●

Zafira-B	[A] 2010	Z 19 DT	Interior Lighting	●	●	●	●
Zafira-B	[A] 2010	Z 19 DT	Wipers/Washer	●	●	●	●
Zafira-B	[A] 2010	Z 19 DT	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DT	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DT	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DT	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DT	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DT	PAS (Park Pilot)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DT	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DT	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DT	PEPS (Open&Start)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[A] 2010	Z 19 DT	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XE1	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XE1	AF 40-6	●	●	●	●
Zafira-B	[A] 2010	Z 16 XE1	MTA (Easytronic)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XE1	AF 22-4	●	●	●	●
Zafira-B	[A] 2010	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XE1	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XE1	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XE1	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XE1	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XE1	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XE1	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[A] 2010	Z 16 XE1	Interior Lighting	●	●	●	●
Zafira-B	[A] 2010	Z 16 XE1	Wipers/Washer	●	●	●	●
Zafira-B	[A] 2010	Z 16 XE1	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XE1	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XE1	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XE1	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XE1	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XE1	PAS (Park Pilot)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XE1	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XE1	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XE1	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XE1	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XE1	PEPS (Open&Start)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XE1	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XEP	AF 40-6	●	●	●	●
Zafira-B	[A] 2010	Z 16 XEP	MTA (Easytronic)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XEP	AF 22-4	●	●	●	●
Zafira-B	[A] 2010	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XEP	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[A] 2010	Z 16 XEP	Interior Lighting	●	●	●	●

Zafira-B	[A] 2010	Z 16 XEP	Wipers/Washer	●	●	●	●
Zafira-B	[A] 2010	Z 16 XEP	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XEP	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XEP	PAS (Park Pilot)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XEP	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XEP	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XEP	PEPS (Open&Start)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[A] 2010	Z 16 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTJ	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTJ	AF 40-6	●	●	●	●
Zafira-B	[A] 2010	A 17 DTJ	MTA (Easytronic)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTJ	AF 22-4	●	●	●	●
Zafira-B	[A] 2010	A 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTJ	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTJ	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTJ	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTJ	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTJ	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTJ	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[A] 2010	A 17 DTJ	Interior Lighting	●	●	●	●
Zafira-B	[A] 2010	A 17 DTJ	Wipers/Washer	●	●	●	●
Zafira-B	[A] 2010	A 17 DTJ	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTJ	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTJ	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTJ	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTJ	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTJ	PAS (Park Pilot)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTJ	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTJ	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTJ	PEPS (Open&Start)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTR	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTR	AF 40-6	●	●	●	●
Zafira-B	[A] 2010	A 17 DTR	MTA (Easytronic)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTR	AF 22-4	●	●	●	●
Zafira-B	[A] 2010	A 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTR	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTR	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTR	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTR	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTR	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTR	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[A] 2010	A 17 DTR	Interior Lighting	●	●	●	●
Zafira-B	[A] 2010	A 17 DTR	Wipers/Washer	●	●	●	●

Zafira-B	[A] 2010	A 17 DTR	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTR	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTR	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTR	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTR	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTR	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTR	PAS (Park Pilot)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTR	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTR	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTR	PEPS (Open&Start)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTR	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[A] 2010	A 17 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[A] 2010	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[A] 2010	Engine(default)	AF 40-6	●	●	●	●
Zafira-B	[A] 2010	Engine(default)	MTA (Easytronic)	●	●	●	●
Zafira-B	[A] 2010	Engine(default)	AF 22-4	●	●	●	●
Zafira-B	[A] 2010	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[A] 2010	Engine(default)	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[A] 2010	Engine(default)	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[A] 2010	Engine(default)	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[A] 2010	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[A] 2010	Engine(default)	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[A] 2010	Engine(default)	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[A] 2010	Engine(default)	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[A] 2010	Engine(default)	Interior Lighting	●	●	●	●
Zafira-B	[A] 2010	Engine(default)	Wipers/Washer	●	●	●	●
Zafira-B	[A] 2010	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[A] 2010	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[A] 2010	Engine(default)	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[A] 2010	Engine(default)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[A] 2010	Engine(default)	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[A] 2010	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[A] 2010	Engine(default)	PAS (Park Pilot)	●	●	●	●
Zafira-B	[A] 2010	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[A] 2010	Engine(default)	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[A] 2010	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[A] 2010	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[A] 2010	Engine(default)	PEPS (Open&Start)	●	●	●	●
Zafira-B	[A] 2010	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[A] 2010	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DTH	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DTH	AF 40-6	●	●	●	●
Zafira-B	[9] 2009	Z 19 DTH	MTA (Easytronic)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DTH	AF 22-4	●	●	●	●
Zafira-B	[9] 2009	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●

Zafira-B	[9] 2009	Z 19 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DTH	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[9] 2009	Z 19 DTH	Interior Lighting	●	●	●	●
Zafira-B	[9] 2009	Z 19 DTH	Wipers/Washer	●	●	●	●
Zafira-B	[9] 2009	Z 19 DTH	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DTH	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DTH	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DTH	PAS (Park Pilot)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DTH	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DTH	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DTH	PEPS (Open&Start)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XER	AF 40-6	●	●	●	●
Zafira-B	[9] 2009	Z 16 XER	MTA (Easytronic)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XER	AF 22-4	●	●	●	●
Zafira-B	[9] 2009	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[9] 2009	Z 16 XER	Interior Lighting	●	●	●	●
Zafira-B	[9] 2009	Z 16 XER	Wipers/Washer	●	●	●	●
Zafira-B	[9] 2009	Z 16 XER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[9] 2009	Z 16 YNG	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[9] 2009	Z 16 YNG	AF 40-6	●	●	●	●
Zafira-B	[9] 2009	Z 16 YNG	MTA (Easytronic)	●	●	●	●
Zafira-B	[9] 2009	Z 16 YNG	AF 22-4	●	●	●	●
Zafira-B	[9] 2009	Z 16 YNG	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[9] 2009	Z 16 YNG	TPM (Tyre Pressure Monitoring)	●	●	●	●

Zafira-B	[9] 2009	Z 16 YNG	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[9] 2009	Z 16 YNG	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[9] 2009	Z 16 YNG	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[9] 2009	Z 16 YNG	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[9] 2009	Z 16 YNG	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[9] 2009	Z 16 YNG	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[9] 2009	Z 16 YNG	Interior Lighting	●	●	●	●
Zafira-B	[9] 2009	Z 16 YNG	Wipers/Washer	●	●	●	●
Zafira-B	[9] 2009	Z 16 YNG	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[9] 2009	Z 16 YNG	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[9] 2009	Z 16 YNG	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[9] 2009	Z 16 YNG	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[9] 2009	Z 16 YNG	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[9] 2009	Z 16 YNG	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[9] 2009	Z 16 YNG	PAS (Park Pilot)	●	●	●	●
Zafira-B	[9] 2009	Z 16 YNG	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[9] 2009	Z 16 YNG	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[9] 2009	Z 16 YNG	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[9] 2009	Z 16 YNG	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[9] 2009	Z 16 YNG	PEPS (Open&Start)	●	●	●	●
Zafira-B	[9] 2009	Z 16 YNG	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[9] 2009	Z 16 YNG	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[9] 2009	Z 18 XER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[9] 2009	Z 18 XER	AF 40-6	●	●	●	●
Zafira-B	[9] 2009	Z 18 XER	MTA (Easytronic)	●	●	●	●
Zafira-B	[9] 2009	Z 18 XER	AF 22-4	●	●	●	●
Zafira-B	[9] 2009	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[9] 2009	Z 18 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[9] 2009	Z 18 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[9] 2009	Z 18 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[9] 2009	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[9] 2009	Z 18 XER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[9] 2009	Z 18 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[9] 2009	Z 18 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[9] 2009	Z 18 XER	Interior Lighting	●	●	●	●
Zafira-B	[9] 2009	Z 18 XER	Wipers/Washer	●	●	●	●
Zafira-B	[9] 2009	Z 18 XER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[9] 2009	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[9] 2009	Z 18 XER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[9] 2009	Z 18 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[9] 2009	Z 18 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[9] 2009	Z 18 XER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[9] 2009	Z 18 XER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[9] 2009	Z 18 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[9] 2009	Z 18 XER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[9] 2009	Z 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[9] 2009	Z 18 XER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[9] 2009	Z 18 XER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[9] 2009	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[9] 2009	Z 18 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[9] 2009	Z 22 YH	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[9] 2009	Z 22 YH	AF 40-6	●	●	●	●
Zafira-B	[9] 2009	Z 22 YH	MTA (Easytronic)	●	●	●	●
Zafira-B	[9] 2009	Z 22 YH	AF 22-4	●	●	●	●
Zafira-B	[9] 2009	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[9] 2009	Z 22 YH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[9] 2009	Z 22 YH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●

Zafira-B	[9] 2009	Z 22 YH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[9] 2009	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[9] 2009	Z 22 YH	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[9] 2009	Z 22 YH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[9] 2009	Z 22 YH	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[9] 2009	Z 22 YH	Interior Lighting	●	●	●	●
Zafira-B	[9] 2009	Z 22 YH	Wipers/Washer	●	●	●	●
Zafira-B	[9] 2009	Z 22 YH	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[9] 2009	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[9] 2009	Z 22 YH	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[9] 2009	Z 22 YH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[9] 2009	Z 22 YH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[9] 2009	Z 22 YH	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[9] 2009	Z 22 YH	PAS (Park Pilot)	●	●	●	●
Zafira-B	[9] 2009	Z 22 YH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[9] 2009	Z 22 YH	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[9] 2009	Z 22 YH	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[9] 2009	Z 22 YH	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[9] 2009	Z 22 YH	PEPS (Open&Start)	●	●	●	●
Zafira-B	[9] 2009	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[9] 2009	Z 22 YH	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LER	AF 40-6	●	●	●	●
Zafira-B	[9] 2009	Z 20 LER	MTA (Easytronic)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LER	AF 22-4	●	●	●	●
Zafira-B	[9] 2009	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[9] 2009	Z 20 LER	Interior Lighting	●	●	●	●
Zafira-B	[9] 2009	Z 20 LER	Wipers/Washer	●	●	●	●
Zafira-B	[9] 2009	Z 20 LER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LEH	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LEH	AF 40-6	●	●	●	●
Zafira-B	[9] 2009	Z 20 LEH	MTA (Easytronic)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LEH	AF 22-4	●	●	●	●
Zafira-B	[9] 2009	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LEH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LEH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LEH	EHPS (Electrohydraulic Power Steering)	●	●	●	●

Zafira-B	[9] 2009	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LEH	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LEH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LEH	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[9] 2009	Z 20 LEH	Interior Lighting	●	●	●	●
Zafira-B	[9] 2009	Z 20 LEH	Wipers/Washer	●	●	●	●
Zafira-B	[9] 2009	Z 20 LEH	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LEH	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LEH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LEH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LEH	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LEH	PAS (Park Pilot)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LEH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LEH	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LEH	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LEH	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LEH	PEPS (Open&Start)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[9] 2009	Z 20 LEH	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DT	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DT	AF 40-6	●	●	●	●
Zafira-B	[9] 2009	Z 19 DT	MTA (Easytronic)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DT	AF 22-4	●	●	●	●
Zafira-B	[9] 2009	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DT	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DT	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DT	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DT	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DT	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DT	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[9] 2009	Z 19 DT	Interior Lighting	●	●	●	●
Zafira-B	[9] 2009	Z 19 DT	Wipers/Washer	●	●	●	●
Zafira-B	[9] 2009	Z 19 DT	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DT	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DT	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DT	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DT	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DT	PAS (Park Pilot)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DT	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DT	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DT	PEPS (Open&Start)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[9] 2009	Z 19 DT	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XE1	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XE1	AF 40-6	●	●	●	●
Zafira-B	[9] 2009	Z 16 XE1	MTA (Easytronic)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XE1	AF 22-4	●	●	●	●
Zafira-B	[9] 2009	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XE1	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XE1	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XE1	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●

Zafira-B	[9] 2009	Z 16 XE1	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XE1	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XE1	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[9] 2009	Z 16 XE1	Interior Lighting	●	●	●	●
Zafira-B	[9] 2009	Z 16 XE1	Wipers/Washer	●	●	●	●
Zafira-B	[9] 2009	Z 16 XE1	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XE1	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XE1	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XE1	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XE1	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XE1	PAS (Park Pilot)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XE1	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XE1	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XE1	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XE1	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XE1	PEPS (Open&Start)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XE1	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XEP	AF 40-6	●	●	●	●
Zafira-B	[9] 2009	Z 16 XEP	MTA (Easytronic)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XEP	AF 22-4	●	●	●	●
Zafira-B	[9] 2009	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XEP	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[9] 2009	Z 16 XEP	Interior Lighting	●	●	●	●
Zafira-B	[9] 2009	Z 16 XEP	Wipers/Washer	●	●	●	●
Zafira-B	[9] 2009	Z 16 XEP	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XEP	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XEP	PAS (Park Pilot)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XEP	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XEP	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XEP	PEPS (Open&Start)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[9] 2009	Z 16 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTJ	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTJ	AF 40-6	●	●	●	●
Zafira-B	[9] 2009	A 17 DTJ	MTA (Easytronic)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTJ	AF 22-4	●	●	●	●
Zafira-B	[9] 2009	A 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTJ	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTJ	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTJ	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTJ	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTJ	CDC (Continuous Damping Control)	●	●	●	●

Zafira-B	[9] 2009	A 17 DTJ	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTJ	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[9] 2009	A 17 DTJ	Interior Lighting	●	●	●	●
Zafira-B	[9] 2009	A 17 DTJ	Wipers/Washer	●	●	●	●
Zafira-B	[9] 2009	A 17 DTJ	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTJ	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTJ	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTJ	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTJ	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTJ	PAS (Park Pilot)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTJ	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTJ	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTJ	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTJ	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTJ	PEPS (Open&Start)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTJ	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTJ	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTR	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTR	AF 40-6	●	●	●	●
Zafira-B	[9] 2009	A 17 DTR	MTA (Easytronic)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTR	AF 22-4	●	●	●	●
Zafira-B	[9] 2009	A 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTR	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTR	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTR	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTR	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTR	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTR	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTR	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[9] 2009	A 17 DTR	Interior Lighting	●	●	●	●
Zafira-B	[9] 2009	A 17 DTR	Wipers/Washer	●	●	●	●
Zafira-B	[9] 2009	A 17 DTR	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTR	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTR	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTR	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTR	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTR	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTR	PAS (Park Pilot)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTR	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTR	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTR	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTR	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTR	PEPS (Open&Start)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTR	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[9] 2009	A 17 DTR	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[9] 2009	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[9] 2009	Engine(default)	AF 40-6	●	●	●	●
Zafira-B	[9] 2009	Engine(default)	MTA (Easytronic)	●	●	●	●
Zafira-B	[9] 2009	Engine(default)	AF 22-4	●	●	●	●
Zafira-B	[9] 2009	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[9] 2009	Engine(default)	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[9] 2009	Engine(default)	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[9] 2009	Engine(default)	EHPS (Electrohydraulic Power Steering)	●	●	●	●

Zafira-B	[9] 2009	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[9] 2009	Engine(default)	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[9] 2009	Engine(default)	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[9] 2009	Engine(default)	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[9] 2009	Engine(default)	Interior Lighting	●	●	●	●
Zafira-B	[9] 2009	Engine(default)	Wipers/Washer	●	●	●	●
Zafira-B	[9] 2009	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[9] 2009	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[9] 2009	Engine(default)	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[9] 2009	Engine(default)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[9] 2009	Engine(default)	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[9] 2009	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[9] 2009	Engine(default)	PAS (Park Pilot)	●	●	●	●
Zafira-B	[9] 2009	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[9] 2009	Engine(default)	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[9] 2009	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[9] 2009	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[9] 2009	Engine(default)	PEPS (Open&Start)	●	●	●	●
Zafira-B	[9] 2009	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[9] 2009	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DTH	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DTH	AF 40-6	●	●	●	●
Zafira-B	[8] 2008	Z 19 DTH	MTA (Easytronic)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DTH	AF 22-4	●	●	●	●
Zafira-B	[8] 2008	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DTH	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[8] 2008	Z 19 DTH	Interior Lighting	●	●	●	●
Zafira-B	[8] 2008	Z 19 DTH	Wipers/Washer	●	●	●	●
Zafira-B	[8] 2008	Z 19 DTH	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DTH	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DTH	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DTH	PAS (Park Pilot)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DTH	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DTH	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DTH	PEPS (Open&Start)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XER	AF 40-6	●	●	●	●

Zafira-B	[8] 2008	Z 16 XER	MTA (Easytronic)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XER	AF 22-4	●	●	●	●
Zafira-B	[8] 2008	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[8] 2008	Z 16 XER	Interior Lighting	●	●	●	●
Zafira-B	[8] 2008	Z 16 XER	Wipers/Washer	●	●	●	●
Zafira-B	[8] 2008	Z 16 XER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[8] 2008	Z 16 YNG	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[8] 2008	Z 16 YNG	AF 40-6	●	●	●	●
Zafira-B	[8] 2008	Z 16 YNG	MTA (Easytronic)	●	●	●	●
Zafira-B	[8] 2008	Z 16 YNG	AF 22-4	●	●	●	●
Zafira-B	[8] 2008	Z 16 YNG	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[8] 2008	Z 16 YNG	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[8] 2008	Z 16 YNG	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[8] 2008	Z 16 YNG	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[8] 2008	Z 16 YNG	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[8] 2008	Z 16 YNG	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[8] 2008	Z 16 YNG	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[8] 2008	Z 16 YNG	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[8] 2008	Z 16 YNG	Interior Lighting	●	●	●	●
Zafira-B	[8] 2008	Z 16 YNG	Wipers/Washer	●	●	●	●
Zafira-B	[8] 2008	Z 16 YNG	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[8] 2008	Z 16 YNG	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[8] 2008	Z 16 YNG	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[8] 2008	Z 16 YNG	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[8] 2008	Z 16 YNG	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[8] 2008	Z 16 YNG	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[8] 2008	Z 16 YNG	PAS (Park Pilot)	●	●	●	●
Zafira-B	[8] 2008	Z 16 YNG	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[8] 2008	Z 16 YNG	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[8] 2008	Z 16 YNG	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[8] 2008	Z 16 YNG	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[8] 2008	Z 16 YNG	PEPS (Open&Start)	●	●	●	●
Zafira-B	[8] 2008	Z 16 YNG	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[8] 2008	Z 16 YNG	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[8] 2008	Z 18 XER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[8] 2008	Z 18 XER	AF 40-6	●	●	●	●
Zafira-B	[8] 2008	Z 18 XER	MTA (Easytronic)	●	●	●	●

Zafira-B	[8] 2008	Z 18 XER	AF 22-4	●	●	●	●
Zafira-B	[8] 2008	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[8] 2008	Z 18 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[8] 2008	Z 18 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[8] 2008	Z 18 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[8] 2008	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[8] 2008	Z 18 XER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[8] 2008	Z 18 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[8] 2008	Z 18 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[8] 2008	Z 18 XER	Interior Lighting	●	●	●	●
Zafira-B	[8] 2008	Z 18 XER	Wipers/Washer	●	●	●	●
Zafira-B	[8] 2008	Z 18 XER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[8] 2008	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[8] 2008	Z 18 XER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[8] 2008	Z 18 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[8] 2008	Z 18 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[8] 2008	Z 18 XER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[8] 2008	Z 18 XER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[8] 2008	Z 18 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[8] 2008	Z 18 XER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[8] 2008	Z 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[8] 2008	Z 18 XER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[8] 2008	Z 18 XER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[8] 2008	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[8] 2008	Z 18 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[8] 2008	Z 22 YH	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[8] 2008	Z 22 YH	AF 40-6	●	●	●	●
Zafira-B	[8] 2008	Z 22 YH	MTA (Easytronic)	●	●	●	●
Zafira-B	[8] 2008	Z 22 YH	AF 22-4	●	●	●	●
Zafira-B	[8] 2008	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[8] 2008	Z 22 YH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[8] 2008	Z 22 YH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[8] 2008	Z 22 YH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[8] 2008	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[8] 2008	Z 22 YH	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[8] 2008	Z 22 YH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[8] 2008	Z 22 YH	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[8] 2008	Z 22 YH	Interior Lighting	●	●	●	●
Zafira-B	[8] 2008	Z 22 YH	Wipers/Washer	●	●	●	●
Zafira-B	[8] 2008	Z 22 YH	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[8] 2008	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[8] 2008	Z 22 YH	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[8] 2008	Z 22 YH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[8] 2008	Z 22 YH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[8] 2008	Z 22 YH	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[8] 2008	Z 22 YH	PAS (Park Pilot)	●	●	●	●
Zafira-B	[8] 2008	Z 22 YH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[8] 2008	Z 22 YH	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[8] 2008	Z 22 YH	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[8] 2008	Z 22 YH	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[8] 2008	Z 22 YH	PEPS (Open&Start)	●	●	●	●
Zafira-B	[8] 2008	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[8] 2008	Z 22 YH	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LER	AF 40-6	●	●	●	●
Zafira-B	[8] 2008	Z 20 LER	MTA (Easytronic)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LER	AF 22-4	●	●	●	●

Zafira-B	[8] 2008	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[8] 2008	Z 20 LER	Interior Lighting	●	●	●	●
Zafira-B	[8] 2008	Z 20 LER	Wipers/Washer	●	●	●	●
Zafira-B	[8] 2008	Z 20 LER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LEH	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LEH	AF 40-6	●	●	●	●
Zafira-B	[8] 2008	Z 20 LEH	MTA (Easytronic)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LEH	AF 22-4	●	●	●	●
Zafira-B	[8] 2008	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LEH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LEH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LEH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LEH	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LEH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LEH	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[8] 2008	Z 20 LEH	Interior Lighting	●	●	●	●
Zafira-B	[8] 2008	Z 20 LEH	Wipers/Washer	●	●	●	●
Zafira-B	[8] 2008	Z 20 LEH	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LEH	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LEH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LEH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LEH	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LEH	PAS (Park Pilot)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LEH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LEH	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LEH	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LEH	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LEH	PEPS (Open&Start)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[8] 2008	Z 20 LEH	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DT	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DT	AF 40-6	●	●	●	●
Zafira-B	[8] 2008	Z 19 DT	MTA (Easytronic)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DT	AF 22-4	●	●	●	●
Zafira-B	[8] 2008	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●

Zafira-B	[8] 2008	Z 19 DT	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DT	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DT	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DT	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DT	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DT	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[8] 2008	Z 19 DT	Interior Lighting	●	●	●	●
Zafira-B	[8] 2008	Z 19 DT	Wipers/Washer	●	●	●	●
Zafira-B	[8] 2008	Z 19 DT	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DT	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DT	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DT	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DT	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DT	PAS (Park Pilot)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DT	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DT	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DT	PEPS (Open&Start)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[8] 2008	Z 19 DT	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XE1	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XE1	AF 40-6	●	●	●	●
Zafira-B	[8] 2008	Z 16 XE1	MTA (Easytronic)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XE1	AF 22-4	●	●	●	●
Zafira-B	[8] 2008	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XE1	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XE1	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XE1	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XE1	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XE1	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XE1	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[8] 2008	Z 16 XE1	Interior Lighting	●	●	●	●
Zafira-B	[8] 2008	Z 16 XE1	Wipers/Washer	●	●	●	●
Zafira-B	[8] 2008	Z 16 XE1	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XE1	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XE1	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XE1	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XE1	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XE1	PAS (Park Pilot)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XE1	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XE1	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XE1	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XE1	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XE1	PEPS (Open&Start)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XE1	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XEP	AF 40-6	●	●	●	●
Zafira-B	[8] 2008	Z 16 XEP	MTA (Easytronic)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XEP	AF 22-4	●	●	●	●
Zafira-B	[8] 2008	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●

Zafira-B	[8] 2008	Z 16 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XEP	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[8] 2008	Z 16 XEP	Interior Lighting	●	●	●	●
Zafira-B	[8] 2008	Z 16 XEP	Wipers/Washer	●	●	●	●
Zafira-B	[8] 2008	Z 16 XEP	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XEP	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XEP	PAS (Park Pilot)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XEP	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XEP	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XEP	PEPS (Open&Start)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[8] 2008	Z 16 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[8] 2008	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[8] 2008	Engine(default)	AF 40-6	●	●	●	●
Zafira-B	[8] 2008	Engine(default)	MTA (Easytronic)	●	●	●	●
Zafira-B	[8] 2008	Engine(default)	AF 22-4	●	●	●	●
Zafira-B	[8] 2008	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[8] 2008	Engine(default)	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[8] 2008	Engine(default)	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[8] 2008	Engine(default)	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[8] 2008	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[8] 2008	Engine(default)	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[8] 2008	Engine(default)	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[8] 2008	Engine(default)	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[8] 2008	Engine(default)	Interior Lighting	●	●	●	●
Zafira-B	[8] 2008	Engine(default)	Wipers/Washer	●	●	●	●
Zafira-B	[8] 2008	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[8] 2008	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[8] 2008	Engine(default)	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[8] 2008	Engine(default)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[8] 2008	Engine(default)	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[8] 2008	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[8] 2008	Engine(default)	PAS (Park Pilot)	●	●	●	●
Zafira-B	[8] 2008	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[8] 2008	Engine(default)	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[8] 2008	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[8] 2008	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[8] 2008	Engine(default)	PEPS (Open&Start)	●	●	●	●

Zafira-B	[8] 2008	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[8] 2008	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XER	AF 40-6	●	●	●	●
Zafira-B	[7] 2007	Z 16 XER	MTA (Easytronic)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XER	AF 22-4	●	●	●	●
Zafira-B	[7] 2007	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[7] 2007	Z 16 XER	Interior Lighting	●	●	●	●
Zafira-B	[7] 2007	Z 16 XER	Wipers/Washer	●	●	●	●
Zafira-B	[7] 2007	Z 16 XER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[7] 2007	Z 16 YNG	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[7] 2007	Z 16 YNG	AF 40-6	●	●	●	●
Zafira-B	[7] 2007	Z 16 YNG	MTA (Easytronic)	●	●	●	●
Zafira-B	[7] 2007	Z 16 YNG	AF 22-4	●	●	●	●
Zafira-B	[7] 2007	Z 16 YNG	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[7] 2007	Z 16 YNG	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[7] 2007	Z 16 YNG	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[7] 2007	Z 16 YNG	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[7] 2007	Z 16 YNG	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[7] 2007	Z 16 YNG	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[7] 2007	Z 16 YNG	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[7] 2007	Z 16 YNG	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[7] 2007	Z 16 YNG	Interior Lighting	●	●	●	●
Zafira-B	[7] 2007	Z 16 YNG	Wipers/Washer	●	●	●	●
Zafira-B	[7] 2007	Z 16 YNG	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[7] 2007	Z 16 YNG	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[7] 2007	Z 16 YNG	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[7] 2007	Z 16 YNG	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[7] 2007	Z 16 YNG	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[7] 2007	Z 16 YNG	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[7] 2007	Z 16 YNG	PAS (Park Pilot)	●	●	●	●
Zafira-B	[7] 2007	Z 16 YNG	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[7] 2007	Z 16 YNG	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[7] 2007	Z 16 YNG	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[7] 2007	Z 16 YNG	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[7] 2007	Z 16 YNG	PEPS (Open&Start)	●	●	●	●

Zafira-B	[7] 2007	Z 16 YNG	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[7] 2007	Z 16 YNG	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LER	AF 40-6	●	●	●	●
Zafira-B	[7] 2007	Z 20 LER	MTA (Easytronic)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LER	AF 22-4	●	●	●	●
Zafira-B	[7] 2007	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[7] 2007	Z 20 LER	Interior Lighting	●	●	●	●
Zafira-B	[7] 2007	Z 20 LER	Wipers/Washer	●	●	●	●
Zafira-B	[7] 2007	Z 20 LER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LEH	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LEH	AF 40-6	●	●	●	●
Zafira-B	[7] 2007	Z 20 LEH	MTA (Easytronic)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LEH	AF 22-4	●	●	●	●
Zafira-B	[7] 2007	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LEH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LEH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LEH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LEH	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LEH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LEH	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[7] 2007	Z 20 LEH	Interior Lighting	●	●	●	●
Zafira-B	[7] 2007	Z 20 LEH	Wipers/Washer	●	●	●	●
Zafira-B	[7] 2007	Z 20 LEH	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LEH	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LEH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LEH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LEH	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LEH	PAS (Park Pilot)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LEH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LEH	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LEH	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LEH	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LEH	PEPS (Open&Start)	●	●	●	●
Zafira-B	[7] 2007	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●

Zafira-B	[7] 2007	Z 20 LEH	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XE1	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XE1	AF 40-6	●	●	●	●
Zafira-B	[7] 2007	Z 16 XE1	MTA (Easytronic)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XE1	AF 22-4	●	●	●	●
Zafira-B	[7] 2007	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XE1	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XE1	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XE1	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XE1	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XE1	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XE1	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[7] 2007	Z 16 XE1	Interior Lighting	●	●	●	●
Zafira-B	[7] 2007	Z 16 XE1	Wipers/Washer	●	●	●	●
Zafira-B	[7] 2007	Z 16 XE1	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XE1	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XE1	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XE1	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XE1	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XE1	PAS (Park Pilot)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XE1	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XE1	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XE1	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XE1	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XE1	PEPS (Open&Start)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XE1	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XEP	AF 40-6	●	●	●	●
Zafira-B	[7] 2007	Z 16 XEP	MTA (Easytronic)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XEP	AF 22-4	●	●	●	●
Zafira-B	[7] 2007	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XEP	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[7] 2007	Z 16 XEP	Interior Lighting	●	●	●	●
Zafira-B	[7] 2007	Z 16 XEP	Wipers/Washer	●	●	●	●
Zafira-B	[7] 2007	Z 16 XEP	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XEP	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XEP	PAS (Park Pilot)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XEP	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XEP	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XEP	PEPS (Open&Start)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[7] 2007	Z 16 XEP	ATWS (Anti Theft Warning System)	●	●	●	●

Zafira-B	[7] 2007	Z 18 XER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[7] 2007	Z 18 XER	AF 40-6	●	●	●	●
Zafira-B	[7] 2007	Z 18 XER	MTA (Easytronic)	●	●	●	●
Zafira-B	[7] 2007	Z 18 XER	AF 22-4	●	●	●	●
Zafira-B	[7] 2007	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[7] 2007	Z 18 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[7] 2007	Z 18 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[7] 2007	Z 18 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[7] 2007	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[7] 2007	Z 18 XER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[7] 2007	Z 18 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[7] 2007	Z 18 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[7] 2007	Z 18 XER	Interior Lighting	●	●	●	●
Zafira-B	[7] 2007	Z 18 XER	Wipers/Washer	●	●	●	●
Zafira-B	[7] 2007	Z 18 XER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[7] 2007	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[7] 2007	Z 18 XER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[7] 2007	Z 18 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[7] 2007	Z 18 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[7] 2007	Z 18 XER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[7] 2007	Z 18 XER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[7] 2007	Z 18 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[7] 2007	Z 18 XER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[7] 2007	Z 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[7] 2007	Z 18 XER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[7] 2007	Z 18 XER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[7] 2007	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[7] 2007	Z 18 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DT	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DT	AF 40-6	●	●	●	●
Zafira-B	[7] 2007	Z 19 DT	MTA (Easytronic)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DT	AF 22-4	●	●	●	●
Zafira-B	[7] 2007	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DT	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DT	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DT	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DT	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DT	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DT	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[7] 2007	Z 19 DT	Interior Lighting	●	●	●	●
Zafira-B	[7] 2007	Z 19 DT	Wipers/Washer	●	●	●	●
Zafira-B	[7] 2007	Z 19 DT	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DT	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DT	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DT	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DT	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DT	PAS (Park Pilot)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DT	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DT	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DT	PEPS (Open&Start)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DT	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DTH	ECM (Engine Control Module)	●	●	●	●

Zafira-B	[7] 2007	Z 19 DTH	AF 40-6	●	●	●	●
Zafira-B	[7] 2007	Z 19 DTH	MTA (Easytronic)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DTH	AF 22-4	●	●	●	●
Zafira-B	[7] 2007	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DTH	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[7] 2007	Z 19 DTH	Interior Lighting	●	●	●	●
Zafira-B	[7] 2007	Z 19 DTH	Wipers/Washer	●	●	●	●
Zafira-B	[7] 2007	Z 19 DTH	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DTH	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DTH	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DTH	PAS (Park Pilot)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DTH	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DTH	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DTH	PEPS (Open&Start)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[7] 2007	Z 19 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[7] 2007	Z 22 YH	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[7] 2007	Z 22 YH	AF 40-6	●	●	●	●
Zafira-B	[7] 2007	Z 22 YH	MTA (Easytronic)	●	●	●	●
Zafira-B	[7] 2007	Z 22 YH	AF 22-4	●	●	●	●
Zafira-B	[7] 2007	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[7] 2007	Z 22 YH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[7] 2007	Z 22 YH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[7] 2007	Z 22 YH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[7] 2007	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[7] 2007	Z 22 YH	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[7] 2007	Z 22 YH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[7] 2007	Z 22 YH	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[7] 2007	Z 22 YH	Interior Lighting	●	●	●	●
Zafira-B	[7] 2007	Z 22 YH	Wipers/Washer	●	●	●	●
Zafira-B	[7] 2007	Z 22 YH	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[7] 2007	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[7] 2007	Z 22 YH	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[7] 2007	Z 22 YH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[7] 2007	Z 22 YH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[7] 2007	Z 22 YH	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[7] 2007	Z 22 YH	PAS (Park Pilot)	●	●	●	●
Zafira-B	[7] 2007	Z 22 YH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[7] 2007	Z 22 YH	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[7] 2007	Z 22 YH	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[7] 2007	Z 22 YH	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[7] 2007	Z 22 YH	PEPS (Open&Start)	●	●	●	●
Zafira-B	[7] 2007	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[7] 2007	Z 22 YH	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[7] 2007	Engine(default)	ECM (Engine Control Module)	●	●	●	●

Zafira-B	[7] 2007	Engine(default)	AF 40-6	●	●	●	●
Zafira-B	[7] 2007	Engine(default)	MTA (Easytronic)	●	●	●	●
Zafira-B	[7] 2007	Engine(default)	AF 22-4	●	●	●	●
Zafira-B	[7] 2007	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[7] 2007	Engine(default)	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[7] 2007	Engine(default)	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[7] 2007	Engine(default)	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[7] 2007	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[7] 2007	Engine(default)	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[7] 2007	Engine(default)	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[7] 2007	Engine(default)	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[7] 2007	Engine(default)	Interior Lighting	●	●	●	●
Zafira-B	[7] 2007	Engine(default)	Wipers/Washer	●	●	●	●
Zafira-B	[7] 2007	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[7] 2007	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[7] 2007	Engine(default)	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[7] 2007	Engine(default)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[7] 2007	Engine(default)	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[7] 2007	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[7] 2007	Engine(default)	PAS (Park Pilot)	●	●	●	●
Zafira-B	[7] 2007	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[7] 2007	Engine(default)	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[7] 2007	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[7] 2007	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[7] 2007	Engine(default)	PEPS (Open&Start)	●	●	●	●
Zafira-B	[7] 2007	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[7] 2007	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[6] 2006	Z 16 YNG	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[6] 2006	Z 16 YNG	AF 40-6	●	●	●	●
Zafira-B	[6] 2006	Z 16 YNG	MTA (Easytronic)	●	●	●	●
Zafira-B	[6] 2006	Z 16 YNG	AF 22-4	●	●	●	●
Zafira-B	[6] 2006	Z 16 YNG	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[6] 2006	Z 16 YNG	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[6] 2006	Z 16 YNG	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[6] 2006	Z 16 YNG	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[6] 2006	Z 16 YNG	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[6] 2006	Z 16 YNG	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[6] 2006	Z 16 YNG	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[6] 2006	Z 16 YNG	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[6] 2006	Z 16 YNG	Interior Lighting	●	●	●	●
Zafira-B	[6] 2006	Z 16 YNG	Wipers/Washer	●	●	●	●
Zafira-B	[6] 2006	Z 16 YNG	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[6] 2006	Z 16 YNG	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[6] 2006	Z 16 YNG	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[6] 2006	Z 16 YNG	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[6] 2006	Z 16 YNG	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[6] 2006	Z 16 YNG	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[6] 2006	Z 16 YNG	PAS (Park Pilot)	●	●	●	●

Zafira-B	[6] 2006	Z 16 YNG	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[6] 2006	Z 16 YNG	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[6] 2006	Z 16 YNG	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[6] 2006	Z 16 YNG	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[6] 2006	Z 16 YNG	PEPS (Open&Start)	●	●	●	●
Zafira-B	[6] 2006	Z 16 YNG	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[6] 2006	Z 16 YNG	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LER	AF 40-6	●	●	●	●
Zafira-B	[6] 2006	Z 20 LER	MTA (Easytronic)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LER	AF 22-4	●	●	●	●
Zafira-B	[6] 2006	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[6] 2006	Z 20 LER	Interior Lighting	●	●	●	●
Zafira-B	[6] 2006	Z 20 LER	Wipers/Washer	●	●	●	●
Zafira-B	[6] 2006	Z 20 LER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LEH	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LEH	AF 40-6	●	●	●	●
Zafira-B	[6] 2006	Z 20 LEH	MTA (Easytronic)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LEH	AF 22-4	●	●	●	●
Zafira-B	[6] 2006	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LEH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LEH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LEH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LEH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LEH	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LEH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LEH	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[6] 2006	Z 20 LEH	Interior Lighting	●	●	●	●
Zafira-B	[6] 2006	Z 20 LEH	Wipers/Washer	●	●	●	●
Zafira-B	[6] 2006	Z 20 LEH	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LEH	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LEH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LEH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LEH	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LEH	PAS (Park Pilot)	●	●	●	●

Zafira-B	[6] 2006	Z 20 LEH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LEH	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LEH	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LEH	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LEH	PEPS (Open&Start)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LEH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[6] 2006	Z 20 LEH	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XER	AF 40-6	●	●	●	●
Zafira-B	[6] 2006	Z 16 XER	MTA (Easytronic)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XER	AF 22-4	●	●	●	●
Zafira-B	[6] 2006	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[6] 2006	Z 16 XER	Interior Lighting	●	●	●	●
Zafira-B	[6] 2006	Z 16 XER	Wipers/Washer	●	●	●	●
Zafira-B	[6] 2006	Z 16 XER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XE1	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XE1	AF 40-6	●	●	●	●
Zafira-B	[6] 2006	Z 16 XE1	MTA (Easytronic)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XE1	AF 22-4	●	●	●	●
Zafira-B	[6] 2006	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XE1	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XE1	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XE1	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XE1	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XE1	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XE1	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[6] 2006	Z 16 XE1	Interior Lighting	●	●	●	●
Zafira-B	[6] 2006	Z 16 XE1	Wipers/Washer	●	●	●	●
Zafira-B	[6] 2006	Z 16 XE1	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XE1	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XE1	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XE1	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XE1	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XE1	PAS (Park Pilot)	●	●	●	●

Zafira-B	[6] 2006	Z 16 XE1	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XE1	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XE1	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XE1	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XE1	PEPS (Open&Start)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XE1	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XEP	AF 40-6	●	●	●	●
Zafira-B	[6] 2006	Z 16 XEP	MTA (Easytronic)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XEP	AF 22-4	●	●	●	●
Zafira-B	[6] 2006	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XEP	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[6] 2006	Z 16 XEP	Interior Lighting	●	●	●	●
Zafira-B	[6] 2006	Z 16 XEP	Wipers/Washer	●	●	●	●
Zafira-B	[6] 2006	Z 16 XEP	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XEP	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XEP	PAS (Park Pilot)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XEP	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XEP	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XEP	PEPS (Open&Start)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[6] 2006	Z 16 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XE	AF 40-6	●	●	●	●
Zafira-B	[6] 2006	Z 18 XE	MTA (Easytronic)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XE	AF 22-4	●	●	●	●
Zafira-B	[6] 2006	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XE	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XE	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XE	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[6] 2006	Z 18 XE	Interior Lighting	●	●	●	●
Zafira-B	[6] 2006	Z 18 XE	Wipers/Washer	●	●	●	●
Zafira-B	[6] 2006	Z 18 XE	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XE	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XE	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XE	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XE	PAS (Park Pilot)	●	●	●	●

Zafira-B	[6] 2006	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XE	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XE	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XE	PEPS (Open&Start)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XE	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XE	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XER	AF 40-6	●	●	●	●
Zafira-B	[6] 2006	Z 18 XER	MTA (Easytronic)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XER	AF 22-4	●	●	●	●
Zafira-B	[6] 2006	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[6] 2006	Z 18 XER	Interior Lighting	●	●	●	●
Zafira-B	[6] 2006	Z 18 XER	Wipers/Washer	●	●	●	●
Zafira-B	[6] 2006	Z 18 XER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[6] 2006	Z 18 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DT	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DT	AF 40-6	●	●	●	●
Zafira-B	[6] 2006	Z 19 DT	MTA (Easytronic)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DT	AF 22-4	●	●	●	●
Zafira-B	[6] 2006	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DT	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DT	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DT	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DT	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DT	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DT	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[6] 2006	Z 19 DT	Interior Lighting	●	●	●	●
Zafira-B	[6] 2006	Z 19 DT	Wipers/Washer	●	●	●	●
Zafira-B	[6] 2006	Z 19 DT	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DT	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DT	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DT	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DT	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DT	PAS (Park Pilot)	●	●	●	●

Zafira-B	[6] 2006	Z 19 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DT	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DT	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DT	PEPS (Open&Start)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DT	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTL	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTL	AF 40-6	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTL	MTA (Easytronic)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTL	AF 22-4	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTL	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTL	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTL	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTL	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTL	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTL	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTL	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTL	Interior Lighting	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTL	Wipers/Washer	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTL	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTL	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTL	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTL	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTL	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTL	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTL	PAS (Park Pilot)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTL	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTL	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTL	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTL	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTL	PEPS (Open&Start)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTL	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTL	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTH	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTH	AF 40-6	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTH	MTA (Easytronic)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTH	AF 22-4	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTH	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTH	Interior Lighting	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTH	Wipers/Washer	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTH	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTH	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTH	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTH	PAS (Park Pilot)	●	●	●	●

Zafira-B	[6] 2006	Z 19 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTH	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTH	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTH	PEPS (Open&Start)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[6] 2006	Z 19 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[6] 2006	Z 22 YH	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[6] 2006	Z 22 YH	AF 40-6	●	●	●	●
Zafira-B	[6] 2006	Z 22 YH	MTA (Easytronic)	●	●	●	●
Zafira-B	[6] 2006	Z 22 YH	AF 22-4	●	●	●	●
Zafira-B	[6] 2006	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[6] 2006	Z 22 YH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[6] 2006	Z 22 YH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[6] 2006	Z 22 YH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[6] 2006	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[6] 2006	Z 22 YH	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[6] 2006	Z 22 YH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[6] 2006	Z 22 YH	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[6] 2006	Z 22 YH	Interior Lighting	●	●	●	●
Zafira-B	[6] 2006	Z 22 YH	Wipers/Washer	●	●	●	●
Zafira-B	[6] 2006	Z 22 YH	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[6] 2006	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[6] 2006	Z 22 YH	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[6] 2006	Z 22 YH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[6] 2006	Z 22 YH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[6] 2006	Z 22 YH	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[6] 2006	Z 22 YH	PAS (Park Pilot)	●	●	●	●
Zafira-B	[6] 2006	Z 22 YH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[6] 2006	Z 22 YH	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[6] 2006	Z 22 YH	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[6] 2006	Z 22 YH	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[6] 2006	Z 22 YH	PEPS (Open&Start)	●	●	●	●
Zafira-B	[6] 2006	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[6] 2006	Z 22 YH	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[6] 2006	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[6] 2006	Engine(default)	AF 40-6	●	●	●	●
Zafira-B	[6] 2006	Engine(default)	MTA (Easytronic)	●	●	●	●
Zafira-B	[6] 2006	Engine(default)	AF 22-4	●	●	●	●
Zafira-B	[6] 2006	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[6] 2006	Engine(default)	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[6] 2006	Engine(default)	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[6] 2006	Engine(default)	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[6] 2006	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[6] 2006	Engine(default)	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[6] 2006	Engine(default)	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[6] 2006	Engine(default)	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[6] 2006	Engine(default)	Interior Lighting	●	●	●	●
Zafira-B	[6] 2006	Engine(default)	Wipers/Washer	●	●	●	●
Zafira-B	[6] 2006	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[6] 2006	Engine(default)	IC (Instrument Cluster)	●	●	●	●

Zafira-B	[6] 2006	Engine(default)	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[6] 2006	Engine(default)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[6] 2006	Engine(default)	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[6] 2006	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[6] 2006	Engine(default)	PAS (Park Pilot)	●	●	●	●
Zafira-B	[6] 2006	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[6] 2006	Engine(default)	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[6] 2006	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[6] 2006	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[6] 2006	Engine(default)	PEPS (Open&Start)	●	●	●	●
Zafira-B	[6] 2006	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[6] 2006	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[5] 2005	Z 20 LER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[5] 2005	Z 20 LER	AF 40-6	●	●	●	●
Zafira-B	[5] 2005	Z 20 LER	MTA (Easytronic)	●	●	●	●
Zafira-B	[5] 2005	Z 20 LER	AF 22-4	●	●	●	●
Zafira-B	[5] 2005	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[5] 2005	Z 20 LER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[5] 2005	Z 20 LER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[5] 2005	Z 20 LER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[5] 2005	Z 20 LER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[5] 2005	Z 20 LER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[5] 2005	Z 20 LER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[5] 2005	Z 20 LER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[5] 2005	Z 20 LER	Interior Lighting	●	●	●	●
Zafira-B	[5] 2005	Z 20 LER	Wipers/Washer	●	●	●	●
Zafira-B	[5] 2005	Z 20 LER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[5] 2005	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[5] 2005	Z 20 LER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[5] 2005	Z 20 LER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[5] 2005	Z 20 LER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[5] 2005	Z 20 LER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[5] 2005	Z 20 LER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[5] 2005	Z 20 LER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[5] 2005	Z 20 LER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[5] 2005	Z 20 LER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[5] 2005	Z 20 LER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[5] 2005	Z 20 LER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[5] 2005	Z 20 LER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[5] 2005	Z 20 LER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XER	AF 40-6	●	●	●	●
Zafira-B	[5] 2005	Z 16 XER	MTA (Easytronic)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XER	AF 22-4	●	●	●	●
Zafira-B	[5] 2005	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[5] 2005	Z 16 XER	Interior Lighting	●	●	●	●

Zafira-B	[5] 2005	Z 16 XER	Wipers/Washer	●	●	●	●
Zafira-B	[5] 2005	Z 16 XER	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XE1	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XE1	AF 40-6	●	●	●	●
Zafira-B	[5] 2005	Z 16 XE1	MTA (Easytronic)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XE1	AF 22-4	●	●	●	●
Zafira-B	[5] 2005	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XE1	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XE1	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XE1	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XE1	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XE1	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XE1	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XE1	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[5] 2005	Z 16 XE1	Interior Lighting	●	●	●	●
Zafira-B	[5] 2005	Z 16 XE1	Wipers/Washer	●	●	●	●
Zafira-B	[5] 2005	Z 16 XE1	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XE1	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XE1	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XE1	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XE1	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XE1	PAS (Park Pilot)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XE1	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XE1	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XE1	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XE1	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XE1	PEPS (Open&Start)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XE1	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XE1	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XEP	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XEP	AF 40-6	●	●	●	●
Zafira-B	[5] 2005	Z 16 XEP	MTA (Easytronic)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XEP	AF 22-4	●	●	●	●
Zafira-B	[5] 2005	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XEP	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XEP	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XEP	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XEP	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XEP	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XEP	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XEP	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[5] 2005	Z 16 XEP	Interior Lighting	●	●	●	●
Zafira-B	[5] 2005	Z 16 XEP	Wipers/Washer	●	●	●	●

Zafira-B	[5] 2005	Z 16 XEP	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XEP	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XEP	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XEP	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XEP	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XEP	PAS (Park Pilot)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XEP	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XEP	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XEP	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XEP	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XEP	PEPS (Open&Start)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XEP	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[5] 2005	Z 16 XEP	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XE	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XE	AF 40-6	●	●	●	●
Zafira-B	[5] 2005	Z 18 XE	MTA (Easytronic)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XE	AF 22-4	●	●	●	●
Zafira-B	[5] 2005	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XE	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XE	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XE	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XE	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XE	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XE	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XE	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[5] 2005	Z 18 XE	Interior Lighting	●	●	●	●
Zafira-B	[5] 2005	Z 18 XE	Wipers/Washer	●	●	●	●
Zafira-B	[5] 2005	Z 18 XE	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XE	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XE	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XE	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XE	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XE	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XE	PAS (Park Pilot)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XE	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XE	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XE	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XE	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XE	PEPS (Open&Start)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XE	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XE	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XER	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XER	AF 40-6	●	●	●	●
Zafira-B	[5] 2005	Z 18 XER	MTA (Easytronic)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XER	AF 22-4	●	●	●	●
Zafira-B	[5] 2005	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XER	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XER	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XER	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XER	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XER	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XER	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XER	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[5] 2005	Z 18 XER	Interior Lighting	●	●	●	●
Zafira-B	[5] 2005	Z 18 XER	Wipers/Washer	●	●	●	●
Zafira-B	[5] 2005	Z 18 XER	CDL (Central Door Lock)	●	●	●	●

Zafira-B	[5] 2005	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XER	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XER	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XER	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XER	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XER	PAS (Park Pilot)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XER	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XER	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XER	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XER	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XER	PEPS (Open&Start)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XER	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[5] 2005	Z 18 XER	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DT	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DT	AF 40-6	●	●	●	●
Zafira-B	[5] 2005	Z 19 DT	MTA (Easytronic)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DT	AF 22-4	●	●	●	●
Zafira-B	[5] 2005	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DT	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DT	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DT	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DT	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DT	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DT	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DT	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[5] 2005	Z 19 DT	Interior Lighting	●	●	●	●
Zafira-B	[5] 2005	Z 19 DT	Wipers/Washer	●	●	●	●
Zafira-B	[5] 2005	Z 19 DT	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DT	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DT	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DT	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DT	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DT	PAS (Park Pilot)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DT	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DT	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DT	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DT	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DT	PEPS (Open&Start)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DT	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DT	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DTH	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DTH	AF 40-6	●	●	●	●
Zafira-B	[5] 2005	Z 19 DTH	MTA (Easytronic)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DTH	AF 22-4	●	●	●	●
Zafira-B	[5] 2005	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DTH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DTH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DTH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DTH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DTH	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DTH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DTH	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[5] 2005	Z 19 DTH	Interior Lighting	●	●	●	●
Zafira-B	[5] 2005	Z 19 DTH	Wipers/Washer	●	●	●	●
Zafira-B	[5] 2005	Z 19 DTH	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●

Zafira-B	[5] 2005	Z 19 DTH	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DTH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DTH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DTH	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DTH	PAS (Park Pilot)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DTH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DTH	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DTH	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DTH	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DTH	PEPS (Open&Start)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DTH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[5] 2005	Z 19 DTH	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[5] 2005	Z 22 YH	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[5] 2005	Z 22 YH	AF 40-6	●	●	●	●
Zafira-B	[5] 2005	Z 22 YH	MTA (Easytronic)	●	●	●	●
Zafira-B	[5] 2005	Z 22 YH	AF 22-4	●	●	●	●
Zafira-B	[5] 2005	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[5] 2005	Z 22 YH	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[5] 2005	Z 22 YH	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[5] 2005	Z 22 YH	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[5] 2005	Z 22 YH	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[5] 2005	Z 22 YH	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[5] 2005	Z 22 YH	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[5] 2005	Z 22 YH	Exterior Lighting/Turn Indicator System	●	●	●	●
Zafira-B	[5] 2005	Z 22 YH	Interior Lighting	●	●	●	●
Zafira-B	[5] 2005	Z 22 YH	Wipers/Washer	●	●	●	●
Zafira-B	[5] 2005	Z 22 YH	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[5] 2005	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[5] 2005	Z 22 YH	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[5] 2005	Z 22 YH	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[5] 2005	Z 22 YH	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[5] 2005	Z 22 YH	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[5] 2005	Z 22 YH	PAS (Park Pilot)	●	●	●	●
Zafira-B	[5] 2005	Z 22 YH	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[5] 2005	Z 22 YH	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[5] 2005	Z 22 YH	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[5] 2005	Z 22 YH	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[5] 2005	Z 22 YH	PEPS (Open&Start)	●	●	●	●
Zafira-B	[5] 2005	Z 22 YH	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[5] 2005	Z 22 YH	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-B	[5] 2005	Engine(default)	ECM (Engine Control Module)	●	●	●	●
Zafira-B	[5] 2005	Engine(default)	AF 40-6	●	●	●	●
Zafira-B	[5] 2005	Engine(default)	MTA (Easytronic)	●	●	●	●
Zafira-B	[5] 2005	Engine(default)	AF 22-4	●	●	●	●
Zafira-B	[5] 2005	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[5] 2005	Engine(default)	TPM (Tyre Pressure Monitoring)	●	●	●	●
Zafira-B	[5] 2005	Engine(default)	TPMS (Tyre Pressure Monitoring System)	●	●	●	●
Zafira-B	[5] 2005	Engine(default)	EHPS (Electrohydraulic Power Steering)	●	●	●	●
Zafira-B	[5] 2005	Engine(default)	ABS/TC/ESP (Anti-locked Braking System)	●	●	●	●
Zafira-B	[5] 2005	Engine(default)	CDC (Continuous Damping Control)	●	●	●	●
Zafira-B	[5] 2005	Engine(default)	AHL/AFL (Automatic Headlamp Levelling)	●	●	●	●
Zafira-B	[5] 2005	Engine(default)	Exterior Lighting/Turn Indicator System	●	●	●	●

Zafira-B	[5] 2005	Engine(default)	Interior Lighting	●	●	●	●
Zafira-B	[5] 2005	Engine(default)	Wipers/Washer	●	●	●	●
Zafira-B	[5] 2005	Engine(default)	CDL (Central Door Lock)	●	●	●	●
Zafira-B	[5] 2005	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[5] 2005	Engine(default)	IMMO (Immobiliser)	●	●	●	●
Zafira-B	[5] 2005	Engine(default)	SCLCM (Steering Column Lock Control Module)	●	●	●	●
Zafira-B	[5] 2005	Engine(default)	ECC/SAC (Electronic Climate Control)	●	●	●	●
Zafira-B	[5] 2005	Engine(default)	EHS (Electrical Heater System)	●	●	●	●
Zafira-B	[5] 2005	Engine(default)	PAS (Park Pilot)	●	●	●	●
Zafira-B	[5] 2005	Engine(default)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-B	[5] 2005	Engine(default)	SLM (Shift Lever Module)	●	●	●	●
Zafira-B	[5] 2005	Engine(default)	UEC (Underhood Electrical Centre)	●	●	●	●
Zafira-B	[5] 2005	Engine(default)	REC (Rear Electrical Centre)	●	●	●	●
Zafira-B	[5] 2005	Engine(default)	PEPS (Open&Start)	●	●	●	●
Zafira-B	[5] 2005	Engine(default)	IC (Instrument Cluster)	●	●	●	●
Zafira-B	[5] 2005	Engine(default)	ATWS (Anti Theft Warning System)	●	●	●	●
Zafira-C	[G] 2016	1.4L (LUJ)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.4L (LUJ)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[G] 2016	1.4L (LUJ)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[G] 2016	1.4L (LUJ)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.4L (LUJ)	CCM (Chassis Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.4L (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.4L (LUJ)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.4L (LUJ)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.4L (LUJ)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.4L (LUJ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[G] 2016	1.4L (LUJ)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[G] 2016	1.4L (LUJ)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.4L (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[G] 2016	1.4L (LUJ)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[G] 2016	1.4L (LUJ)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.4L (LUJ)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[G] 2016	1.4L (LUJ)	Radio	●	●	●	●
Zafira-C	[G] 2016	1.4L (LUJ)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.4L (LUJ)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.4L (LUJ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[G] 2016	1.4L (LUJ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.4L (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.4L (LUJ)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LGE)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LGE)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LGE)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LGE)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LGE)	CCM (Chassis Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LGE)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LGE)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LGE)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LGE)	PSCM (Power Steering Control Module)	●	●	●	●

Zafira-C	[G] 2016	1.6L (LGE)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LGE)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LGE)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LGE)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LGE)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LGE)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LGE)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LGE)	Radio	●	●	●	●
Zafira-C	[G] 2016	1.6L (LGE)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LGE)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LGE)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LGE)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LGE)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LGE)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LVL)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LVL)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LVL)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHT MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LVL)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LVL)	CCM (Chassis Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LVL)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LVL)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LVL)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LVL)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LVL)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LVL)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LVL)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LVL)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LVL)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LVL)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LVL)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LVL)	Radio	●	●	●	●
Zafira-C	[G] 2016	1.6L (LVL)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LVL)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LVL)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LVL)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LVL)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LVL)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LWC)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LWC)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LWC)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHT MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LWC)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LWC)	CCM (Chassis Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LWC)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LWC)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LWC)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LWC)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LWC)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LWC)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LWC)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LWC)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LWC)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LWC)	HCM (Headlamp Control Module)	●	●	●	●

Zafira-C	[G] 2016	1.6L (LWC)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LWC)	Radio	●	●	●	●
Zafira-C	[G] 2016	1.6L (LWC)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LWC)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LWC)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LWC)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LWC)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.6L (LWC)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[G] 2016	1.8L (2HO)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.8L (2HO)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[G] 2016	1.8L (2HO)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[G] 2016	1.8L (2HO)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.8L (2HO)	CCM (Chassis Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.8L (2HO)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.8L (2HO)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.8L (2HO)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.8L (2HO)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.8L (2HO)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[G] 2016	1.8L (2HO)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[G] 2016	1.8L (2HO)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.8L (2HO)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[G] 2016	1.8L (2HO)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[G] 2016	1.8L (2HO)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.8L (2HO)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[G] 2016	1.8L (2HO)	Radio	●	●	●	●
Zafira-C	[G] 2016	1.8L (2HO)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.8L (2HO)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.8L (2HO)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[G] 2016	1.8L (2HO)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.8L (2HO)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[G] 2016	1.8L (2HO)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBR)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBR)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBR)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBR)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBR)	CCM (Chassis Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBR)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBR)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBR)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBR)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBR)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBR)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBR)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBR)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBR)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBR)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBR)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBR)	Radio	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBR)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBR)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBR)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●

Zafira-C	[G] 2016	2.0L (LBR)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBR)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBR)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBS)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBS)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBS)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBS)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBS)	CCM (Chassis Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBS)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBS)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBS)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBS)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBS)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBS)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBS)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBS)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBS)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBS)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBS)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBS)	Radio	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBS)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBS)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBS)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBS)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBS)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LBS)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LFS)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LFS)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LFS)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LFS)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LFS)	CCM (Chassis Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LFS)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LFS)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LFS)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LFS)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LFS)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LFS)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LFS)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LFS)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LFS)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LFS)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LFS)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LFS)	Radio	●	●	●	●
Zafira-C	[G] 2016	2.0L (LFS)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LFS)	TCICM (Telematics Communication Interface Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LFS)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LFS)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LFS)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[G] 2016	2.0L (LFS)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[F] 2015	1.4L (LUJ)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.4L (LUJ)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[F] 2015	1.4L (LUJ)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●

Zafira-C	[F] 2015	1.4L (LUJ)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.4L (LUJ)	CCM (Chassis Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.4L (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.4L (LUJ)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.4L (LUJ)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.4L (LUJ)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.4L (LUJ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[F] 2015	1.4L (LUJ)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[F] 2015	1.4L (LUJ)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.4L (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[F] 2015	1.4L (LUJ)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[F] 2015	1.4L (LUJ)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.4L (LUJ)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[F] 2015	1.4L (LUJ)	Radio	●	●	●	●
Zafira-C	[F] 2015	1.4L (LUJ)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.4L (LUJ)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[F] 2015	1.4L (LUJ)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.4L (LUJ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[F] 2015	1.4L (LUJ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.4L (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.4L (LUJ)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LGE)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LGE)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LGE)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LGE)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LGE)	CCM (Chassis Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LGE)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LGE)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LGE)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LGE)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LGE)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LGE)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LGE)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LGE)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LGE)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LGE)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LGE)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LGE)	Radio	●	●	●	●
Zafira-C	[F] 2015	1.6L (LGE)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LGE)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LGE)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LGE)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LGE)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LGE)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LGE)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVL)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVL)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVL)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVL)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVL)	CCM (Chassis Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVL)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVL)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVL)	PBCM (Parking Brake Control Module)	●	●	●	●

Zafira-C	[F] 2015	1.6L (LVL)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVL)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVL)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVL)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVL)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVL)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVL)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVL)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVL)	Radio	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVL)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVL)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVL)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVL)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVL)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVL)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVL)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVP)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVP)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVP)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVP)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVP)	CCM (Chassis Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVP)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVP)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVP)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVP)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVP)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVP)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVP)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVP)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVP)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVP)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVP)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVP)	Radio	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVP)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVP)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVP)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVP)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVP)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVP)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LVP)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LWC)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LWC)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LWC)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LWC)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LWC)	CCM (Chassis Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LWC)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LWC)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LWC)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LWC)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LWC)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LWC)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LWC)	BCM (Body Control Module)	●	●	●	●

Zafira-C	[F] 2015	1.6L (LWC)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LWC)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LWC)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LWC)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LWC)	Radio	●	●	●	●
Zafira-C	[F] 2015	1.6L (LWC)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LWC)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LWC)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LWC)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LWC)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LWC)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.6L (LWC)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[F] 2015	1.8L (2HO)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.8L (2HO)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[F] 2015	1.8L (2HO)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[F] 2015	1.8L (2HO)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.8L (2HO)	CCM (Chassis Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.8L (2HO)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.8L (2HO)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.8L (2HO)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.8L (2HO)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.8L (2HO)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[F] 2015	1.8L (2HO)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[F] 2015	1.8L (2HO)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.8L (2HO)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[F] 2015	1.8L (2HO)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[F] 2015	1.8L (2HO)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.8L (2HO)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[F] 2015	1.8L (2HO)	Radio	●	●	●	●
Zafira-C	[F] 2015	1.8L (2HO)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.8L (2HO)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[F] 2015	1.8L (2HO)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.8L (2HO)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[F] 2015	1.8L (2HO)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.8L (2HO)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[F] 2015	1.8L (2HO)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBQ)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBQ)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBQ)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBQ)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBQ)	CCM (Chassis Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBQ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBQ)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBQ)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBQ)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBQ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBQ)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBQ)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBQ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBQ)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBQ)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBQ)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBQ)	Radio	●	●	●	●

Zafira-C	[F] 2015	2.0L (LBQ)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBQ)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBQ)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBQ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBQ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBQ)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBQ)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBR)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBR)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBR)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBR)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBR)	CCM (Chassis Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBR)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBR)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBR)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBR)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBR)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBR)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBR)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBR)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBR)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBR)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBR)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBR)	Radio	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBR)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBR)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBR)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBR)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBR)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBR)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBR)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBS)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBS)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBS)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBS)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBS)	CCM (Chassis Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBS)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBS)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBS)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBS)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBS)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBS)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBS)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBS)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBS)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBS)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBS)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBS)	Radio	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBS)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBS)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBS)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBS)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●

Zafira-C	[F] 2015	2.0L (LBS)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBS)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBS)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBY)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBY)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBY)	TCM (Transmission Control Module) - T76 (MH7 M88 M99 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBY)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBY)	CCM (Chassis Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBY)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBY)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBY)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBY)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBY)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBY)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBY)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBY)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBY)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBY)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBY)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBY)	Radio	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBY)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBY)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBY)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBY)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBY)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBY)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LBY)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LFS)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LFS)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LFS)	TCM (Transmission Control Module) - T76 (MH7 M88 M99 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LFS)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LFS)	CCM (Chassis Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LFS)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LFS)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LFS)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LFS)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LFS)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LFS)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LFS)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LFS)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LFS)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LFS)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LFS)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LFS)	Radio	●	●	●	●
Zafira-C	[F] 2015	2.0L (LFS)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LFS)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LFS)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LFS)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LFS)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LFS)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[F] 2015	2.0L (LFS)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[E] 2014	1.4L (LUJ)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.4L (LUJ)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●

Zafira-C	[E] 2014	1.4L (LUJ)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[E] 2014	1.4L (LUJ)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.4L (LUJ)	CCM (Chassis Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.4L (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.4L (LUJ)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.4L (LUJ)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.4L (LUJ)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Zafira-C	[E] 2014	1.4L (LUJ)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.4L (LUJ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[E] 2014	1.4L (LUJ)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[E] 2014	1.4L (LUJ)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.4L (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[E] 2014	1.4L (LUJ)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[E] 2014	1.4L (LUJ)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.4L (LUJ)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[E] 2014	1.4L (LUJ)	Radio	●	●	●	●
Zafira-C	[E] 2014	1.4L (LUJ)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.4L (LUJ)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[E] 2014	1.4L (LUJ)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.4L (LUJ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[E] 2014	1.4L (LUJ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.4L (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.4L (LUJ)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LGE)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LGE)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LGE)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LGE)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LGE)	CCM (Chassis Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LGE)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LGE)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LGE)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LGE)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LGE)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LGE)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LGE)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LGE)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LGE)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LGE)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LGE)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LGE)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LGE)	Radio	●	●	●	●
Zafira-C	[E] 2014	1.6L (LGE)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LGE)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LGE)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LGE)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LGE)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LGE)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LGE)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVL)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVL)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVL)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVL)	FICM (Fuel Injector Control Module)	●	●	●	●

Zafira-C	[E] 2014	1.6L (LVL)	CCM (Chassis Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVL)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVL)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVL)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVL)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVL)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVL)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVL)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVL)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVL)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVL)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVL)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVL)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVL)	Radio	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVL)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVL)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVL)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVL)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVL)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVL)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVL)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVP)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVP)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVP)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVP)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVP)	CCM (Chassis Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVP)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVP)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVP)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVP)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVP)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVP)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVP)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVP)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVP)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVP)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVP)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVP)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVP)	Radio	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVP)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVP)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVP)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVP)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVP)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVP)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LVP)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LWC)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LWC)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LWC)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LWC)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LWC)	CCM (Chassis Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LWC)	EBCM (Electronic Brake Control Module)	●	●	●	●

Zafira-C	[E] 2014	1.6L (LWC)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LWC)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LWC)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LWC)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LWC)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LWC)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LWC)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LWC)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LWC)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LWC)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LWC)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LWC)	Radio	●	●	●	●
Zafira-C	[E] 2014	1.6L (LWC)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LWC)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LWC)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LWC)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LWC)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LWC)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.6L (LWC)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[E] 2014	1.8L (2HO)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.8L (2HO)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[E] 2014	1.8L (2HO)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[E] 2014	1.8L (2HO)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.8L (2HO)	CCM (Chassis Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.8L (2HO)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.8L (2HO)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.8L (2HO)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.8L (2HO)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Zafira-C	[E] 2014	1.8L (2HO)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.8L (2HO)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[E] 2014	1.8L (2HO)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[E] 2014	1.8L (2HO)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.8L (2HO)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[E] 2014	1.8L (2HO)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[E] 2014	1.8L (2HO)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.8L (2HO)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[E] 2014	1.8L (2HO)	Radio	●	●	●	●
Zafira-C	[E] 2014	1.8L (2HO)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.8L (2HO)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[E] 2014	1.8L (2HO)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.8L (2HO)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[E] 2014	1.8L (2HO)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.8L (2HO)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[E] 2014	1.8L (2HO)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBQ)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBQ)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBQ)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBQ)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBQ)	CCM (Chassis Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBQ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBQ)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBQ)	PBCM (Parking Brake Control Module)	●	●	●	●

Zafira-C	[E] 2014	2.0L (LBQ)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBQ)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBQ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBQ)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBQ)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBQ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBQ)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBQ)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBQ)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBQ)	Radio	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBQ)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBQ)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBQ)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBQ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBQ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBQ)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBQ)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBR)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBR)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBR)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBR)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBR)	CCM (Chassis Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBR)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBR)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBR)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBR)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBR)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBR)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBR)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBR)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBR)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBR)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBR)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBR)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBR)	Radio	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBR)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBR)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBR)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBR)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBR)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBR)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBR)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBS)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBS)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBS)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBS)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBS)	CCM (Chassis Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBS)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBS)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBS)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBS)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBS)	PSCM (Power Steering Control Module)	●	●	●	●

Zafira-C	[E] 2014	2.0L (LBS)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBS)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBS)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBS)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBS)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBS)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBS)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBS)	Radio	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBS)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBS)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBS)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBS)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBS)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBS)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBS)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBX)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBX)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBX)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBX)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBX)	CCM (Chassis Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBX)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBX)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBX)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBX)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBX)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBX)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBX)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBX)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBX)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBX)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBX)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBX)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBX)	Radio	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBX)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBX)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBX)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBX)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBX)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBX)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBX)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBY)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBY)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBY)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBY)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBY)	CCM (Chassis Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBY)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBY)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBY)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBY)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBY)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBY)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBY)	ESC (Electronic Suspension Control)	●	●	●	●

Zafira-C	[E] 2014	2.0L (LBY)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBY)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBY)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBY)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBY)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBY)	Radio	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBY)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBY)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBY)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBY)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBY)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBY)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[E] 2014	2.0L (LBY)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[D] 2013	1.4L (LUJ)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.4L (LUJ)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.4L (LUJ)	FPCM (Fuel Pump Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.4L (LUJ)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[D] 2013	1.4L (LUJ)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[D] 2013	1.4L (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.4L (LUJ)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.4L (LUJ)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.4L (LUJ)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Zafira-C	[D] 2013	1.4L (LUJ)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.4L (LUJ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[D] 2013	1.4L (LUJ)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[D] 2013	1.4L (LUJ)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.4L (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[D] 2013	1.4L (LUJ)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[D] 2013	1.4L (LUJ)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.4L (LUJ)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[D] 2013	1.4L (LUJ)	Radio	●	●	●	●
Zafira-C	[D] 2013	1.4L (LUJ)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.4L (LUJ)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[D] 2013	1.4L (LUJ)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.4L (LUJ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[D] 2013	1.4L (LUJ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.4L (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.4L (LUJ)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LGE)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LGE)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LGE)	FPCM (Fuel Pump Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LGE)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LGE)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LGE)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LGE)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LGE)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LGE)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LGE)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LGE)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LGE)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LGE)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LGE)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●

Zafira-C	[D] 2013	1.6L (LGE)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LGE)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LGE)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LGE)	Radio	●	●	●	●
Zafira-C	[D] 2013	1.6L (LGE)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LGE)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LGE)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LGE)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LGE)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LGE)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LGE)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVL)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVL)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVL)	FPCM (Fuel Pump Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVL)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVL)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVL)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVL)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVL)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVL)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVL)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVL)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVL)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVL)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVL)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVL)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVL)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVL)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVL)	Radio	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVL)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVL)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVL)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVL)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVL)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVL)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVL)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVP)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVP)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVP)	FPCM (Fuel Pump Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVP)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVP)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVP)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVP)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVP)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVP)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVP)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVP)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVP)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVP)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVP)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVP)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVP)	HCM (Headlamp Control Module)	●	●	●	●

Zafira-C	[D] 2013	1.6L (LVP)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVP)	Radio	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVP)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVP)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVP)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVP)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVP)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVP)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.6L (LVP)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[D] 2013	1.8L (2HO)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.8L (2HO)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.8L (2HO)	FPCM (Fuel Pump Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.8L (2HO)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[D] 2013	1.8L (2HO)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[D] 2013	1.8L (2HO)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.8L (2HO)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.8L (2HO)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.8L (2HO)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Zafira-C	[D] 2013	1.8L (2HO)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.8L (2HO)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[D] 2013	1.8L (2HO)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[D] 2013	1.8L (2HO)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.8L (2HO)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[D] 2013	1.8L (2HO)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[D] 2013	1.8L (2HO)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.8L (2HO)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[D] 2013	1.8L (2HO)	Radio	●	●	●	●
Zafira-C	[D] 2013	1.8L (2HO)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.8L (2HO)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[D] 2013	1.8L (2HO)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.8L (2HO)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[D] 2013	1.8L (2HO)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.8L (2HO)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[D] 2013	1.8L (2HO)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBQ)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBQ)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBQ)	FPCM (Fuel Pump Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBQ)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBQ)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBQ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBQ)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBQ)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBQ)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBQ)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBQ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBQ)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBQ)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBQ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBQ)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBQ)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBQ)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBQ)	Radio	●	●	●	●

Zafira-C	[D] 2013	2.0L (LBQ)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBQ)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBQ)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBQ)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBQ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBQ)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBQ)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBR)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBR)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBR)	FPCM (Fuel Pump Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBR)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBR)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBR)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBR)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBR)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBR)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBR)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBR)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBR)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBR)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBR)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBR)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBR)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBR)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBR)	Radio	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBR)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBR)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBR)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBR)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBR)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBR)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBR)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBS)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBS)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBS)	FPCM (Fuel Pump Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBS)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBS)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBS)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBS)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBS)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBS)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBS)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBS)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBS)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBS)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBS)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBS)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBS)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBS)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBS)	Radio	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBS)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBS)	MPIM (Multimedia Player Interface Module)	●	●	●	●

Zafira-C	[D] 2013	2.0L (LBS)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBS)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBS)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBS)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBS)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBX)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBX)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBX)	FPCM (Fuel Pump Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBX)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBX)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBX)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBX)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBX)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBX)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBX)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBX)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBX)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBX)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBX)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBX)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBX)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBX)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBX)	Radio	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBX)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBX)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBX)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBX)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBX)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBX)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBX)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBY)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBY)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBY)	FPCM (Fuel Pump Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBY)	TCM (Transmission Control Module) - AF40 (M36 MDK)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBY)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK MHB MHC MNR)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBY)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBY)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBY)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBY)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBY)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBY)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBY)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBY)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBY)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBY)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBY)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBY)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBY)	Radio	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBY)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBY)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBY)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBY)	HVAC (Heating Ventilation Air-conditioning and Cooling)	●	●	●	●

Zafira-C	[D] 2013	2.0L (LBY)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBY)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[D] 2013	2.0L (LBY)	FCM (Frontview Camera Module)	●	●	●	●
Zafira-C	[C] 2012	1.4L (LUJ)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.4L (LUJ)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.4L (LUJ)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Zafira-C	[C] 2012	1.4L (LUJ)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Zafira-C	[C] 2012	1.4L (LUJ)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK)	●	●	●	●
Zafira-C	[C] 2012	1.4L (LUJ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.4L (LUJ)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.4L (LUJ)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.4L (LUJ)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Zafira-C	[C] 2012	1.4L (LUJ)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.4L (LUJ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[C] 2012	1.4L (LUJ)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[C] 2012	1.4L (LUJ)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.4L (LUJ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[C] 2012	1.4L (LUJ)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[C] 2012	1.4L (LUJ)	CACM (Chime Alarm Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.4L (LUJ)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.4L (LUJ)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[C] 2012	1.4L (LUJ)	Radio	●	●	●	●
Zafira-C	[C] 2012	1.4L (LUJ)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.4L (LUJ)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[C] 2012	1.4L (LUJ)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.4L (LUJ)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.4L (LUJ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.4L (LUJ)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.4L (LUJ)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.6L (LGE)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.6L (LGE)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.6L (LGE)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Zafira-C	[C] 2012	1.6L (LGE)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Zafira-C	[C] 2012	1.6L (LGE)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK)	●	●	●	●
Zafira-C	[C] 2012	1.6L (LGE)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.6L (LGE)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.6L (LGE)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.6L (LGE)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Zafira-C	[C] 2012	1.6L (LGE)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.6L (LGE)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[C] 2012	1.6L (LGE)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[C] 2012	1.6L (LGE)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.6L (LGE)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[C] 2012	1.6L (LGE)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[C] 2012	1.6L (LGE)	CACM (Chime Alarm Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.6L (LGE)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.6L (LGE)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[C] 2012	1.6L (LGE)	Radio	●	●	●	●
Zafira-C	[C] 2012	1.6L (LGE)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.6L (LGE)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[C] 2012	1.6L (LGE)	MTCM (Mobile Telephone Control Module)	●	●	●	●

Zafira-C	[C] 2012	1.6L (LGE)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.6L (LGE)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.6L (LGE)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.6L (LGE)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.8L (2HO)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.8L (2HO)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.8L (2HO)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Zafira-C	[C] 2012	1.8L (2HO)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Zafira-C	[C] 2012	1.8L (2HO)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK)	●	●	●	●
Zafira-C	[C] 2012	1.8L (2HO)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.8L (2HO)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.8L (2HO)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.8L (2HO)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Zafira-C	[C] 2012	1.8L (2HO)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.8L (2HO)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[C] 2012	1.8L (2HO)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[C] 2012	1.8L (2HO)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.8L (2HO)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[C] 2012	1.8L (2HO)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[C] 2012	1.8L (2HO)	CACM (Chime Alarm Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.8L (2HO)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.8L (2HO)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[C] 2012	1.8L (2HO)	Radio	●	●	●	●
Zafira-C	[C] 2012	1.8L (2HO)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.8L (2HO)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[C] 2012	1.8L (2HO)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.8L (2HO)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.8L (2HO)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.8L (2HO)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[C] 2012	1.8L (2HO)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBQ)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBQ)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBQ)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBQ)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBQ)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHI MHK)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBQ)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBQ)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBQ)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBQ)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBQ)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBQ)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBQ)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBQ)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBQ)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBQ)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBQ)	CACM (Chime Alarm Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBQ)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBQ)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBQ)	Radio	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBQ)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBQ)	MPIM (Multimedia Player Interface Module)	●	●	●	●

Zafira-C	[C] 2012	2.0L (LBQ)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBQ)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBQ)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBQ)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBQ)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBR)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBR)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBR)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBR)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBR)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBR)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBR)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBR)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBR)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBR)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBR)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBR)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBR)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBR)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBR)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBR)	CACM (Chime Alarm Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBR)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBR)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBR)	Radio	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBR)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBR)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBR)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBR)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBR)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBR)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBR)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBS)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBS)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBS)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBS)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBS)	TCM (Transmission Control Module) - T76 (MH7 MH8 MH9 MHH MHJ MHK)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBS)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBS)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBS)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBS)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBS)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBS)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBS)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBS)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBS)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBS)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBS)	CACM (Chime Alarm Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBS)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBS)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBS)	Radio	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBS)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●

Zafira-C	[C] 2012	2.0L (LBS)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBS)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBS)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBS)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBS)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBS)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBX)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBX)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBX)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBX)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBX)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBX)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBX)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBX)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBX)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBX)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBX)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBX)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBX)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBX)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBX)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBX)	CACM (Chime Alarm Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBX)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBX)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBX)	Radio	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBX)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBX)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBX)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBX)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBX)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBX)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBX)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBY)	ECM (Engine Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBY)	FICM (Fuel Injector Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBY)	TCM (Transmission Control Module) - AF40 (M36)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBY)	TCM (Transmission Control Module) - AF40 Gen II (MDK)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBY)	TCM (Transmission Control Module) - T76 (MH7 MHS MH9 MHH MHI MHK)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBY)	EBCM (Electronic Brake Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBY)	DSCCM (Distance Sensing Cruise Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBY)	PBCM (Parking Brake Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBY)	MASM (Multi-Axis Acceleration Sensor Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBY)	PSCM (Power Steering Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBY)	SWASM (Steering Wheel Angle Sensor Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBY)	ESC (Electronic Suspension Control)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBY)	BCM (Body Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBY)	SRS (Inflatable Restraint Sensing and Diagnostic Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBY)	IC (Instrument Cluster)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBY)	CACM (Chime Alarm Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBY)	HCM (Headlamp Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBY)	TIM (Trailer Interface Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBY)	Radio	●	●	●	●

Zafira-C	[C] 2012	2.0L (LBY)	DRRCM (Digital Radio Receiver Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBY)	MPIM (Multimedia Player Interface Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBY)	MTCM (Mobile Telephone Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBY)	RHACCM (Remote Heater and Air Conditioning Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBY)	FSHCM (Front Seat Heating Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBY)	PACM (Parking Assist Control Module)	●	●	●	●
Zafira-C	[C] 2012	2.0L (LBY)	VDCCM (Vehicle Direction Camera Control Module)	●	●	●	●

OPEL_V01.10 DPF Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Model Year	DPF
INSIGNIA	2010	●

OPEL_V01.10 EPB Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Model Year	EPB
CASCADA	2013 - 2014	●
ANTARA	2012 - 2015	●
ZAFIRA-C	2012 - 2014	●
AMPERA	2012 - 2014	●
ASTRA-J	2012 - 2014	●
INSIGN	2012 - 2014	●
MERIVA-B	2012 - 2014	●

OPEL_V01.10 ETC Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Model Year	ETC
ADAM	2013 - 2014	●
AMPERA	2012 - 2014	●
CASCADA	2013 - 2014	●
ZAFIRA-C	2012 - 2014	●
INSIGNIA	2009 - 2014	●
ASTRA-J	2010 - 2014	●
MOKKA	2013 - 2014	●
CORSA-D	2007 - 2014	●

OPEL_V01.10 OIL Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Model Year	OIL
ADAM	2014	●
AGILA	2000 - 2012	●
AGILA-A	2000 - 2012	●
AGILA-B	2013 - 2014	●
AGILA-B	2008 - 2012	●
AGILA-B	2008	●
AMPERA	2012 - 2014	●
ANTARA	2012 - 2014	●
ASTRA	1998 - 2006	●
ASTRA-CLASSIC-II	1998 - 2006	●
ASTRA-CLASSIC-III	2004 - 2012	●
ASTRA-G	1998 - 2006	●
ASTRA-H	2004 - 2012	●
ASTRA-J	2013 - 2014	●
ASTRA-J	2009 - 2012	●
CASCADA	2014	●
COMBO	2001 - 2012	●
COMBO-C	2001 - 2012	●
CORSA-C	2004 - 2012	●
CORSA-C	2000 - 2003	●
CORSA-D	2013 - 2014	●
CORSA-D	2010 - 2012	●
CORSA-D	2006 - 2009	●
ICD-CORSA-ASTRA-ETC	ALL	●
INSIGNIA	2009 - 2014	●
MERIVA-B	2010 - 2014	●
MOKKA	2014	●
MOVANO	2007 - 2012	●
SIGNUM	2003 - 2008	●
VAUXHALL	1999	●
VAUXHALLVXR8	2005 - 2014	●
VECTRA	ALL	●
VECTRA-C	2002 - 2008	●
VIVARO	ALL	●
ZAFIRA	2005 - 2011	●
ZAFIRA-A	ALL	●
ZAFIRA-A05	2005 - 2011	●
ZAFIRA-B	2014	●
ZAFIRA-B	2012 - 2013	●
ZAFIRA-B	2005 - 2011	●
ZAFIRA-C	2015	●
ZAFIRA-C	2014	●
ZAFIRA-C	2013	●
ZAFIRA-C	2012	●
ZAFIRA-F75	1999 - 2005	●
ZAFIRA-MINIVAN	2005 - 2011	●

ZAFIRA-P12	2011 - 2012	●
------------	-------------	---



OPEL_V01.10 SAS Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	Model Year	SAS
CORSA-C	2001 - 2012	●
TIGRA-B	2005 - 2009	●
MERIVA	2005 - 2013	●
Corsa-D	2007 - 2014	●
Meriva-B	2013 - 2014	●
Meriva-B	2010 - 2012	●
Zafira-B	2005 - 2013	●
Astra-J	2009 - 2014	●
Insignia	2009 - 2014	●
Astra-H	2004 - 2013	●
AMPERA	2014	●
CASCADA	2014	●
ZAFIRA-C	2014	●
MOKKA	2014	●