

SUBARU\_V01.10 Daig Function List (Note: For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Vehicle	System	EcuInfo	Read Codes	Erase Codes	Live Data
FORESTER	ECM(Engine Control System)	●	●	●	※
FORESTER	TCM(Transmission Control System)	●	●	●	※
FORESTER	ABS(Brake Control System)	●	●	●	※
FORESTER	SRS(Supplemental Inflatable Restraint System)	●	●	●	●
FORESTER	BCM(Integrated unit mode)	●	●	●	●
FORESTER	EPS(Electric Power steering)	●	●	●	●
FORESTER	EPB(Parking Brake System)	●	●	●	●
FORESTER	TPM(Tire pressure monitor)	●	●	●	●
FORESTER	CAN System	●	●	●	●
FORESTER	NAV(Cruise Control System)	●	●	●	●
FORESTER	AC(Air Condition System)	●	●	●	●
FORESTER	SSP(Air Suspension System)	●	●	●	●
FORESTER	Keyless access system(Collation ECM)	●	●	●	●
FORESTER	Keyless access system(Power Supply ECM)	●	●	●	●
IMPREZA	ECM(Engine Control System)	●	●	●	※
IMPREZA	TCM(Transmission Control System)	●	●	●	※
IMPREZA	ABS(Brake Control System)	●	●	●	※
IMPREZA	SRS(Supplemental Inflatable Restraint System)	●	●	●	●
IMPREZA	BCM(Integrated unit mode)	●	●	●	●
IMPREZA	EPS(Electric Power steering)	●	●	●	●
IMPREZA	EPB(Parking Brake System)	●	●	●	●
IMPREZA	TPM(Tire pressure monitor)	●	●	●	●
IMPREZA	CAN System	●	●	●	●
IMPREZA	NAV(Cruise Control System)	●	●	●	●
IMPREZA	AC(Air Condition System)	●	●	●	●
IMPREZA	SSP(Air Suspension System)	●	●	●	●
IMPREZA	Keyless access system(Collation ECM)	●	●	●	●
IMPREZA	Keyless access system(Power Supply ECM)	●	●	●	●
LEGACY	ECM(Engine Control System)	●	●	●	※
LEGACY	TCM(Transmission Control System)	●	●	●	※
LEGACY	ABS(Brake Control System)	●	●	●	※
LEGACY	SRS(Supplemental Inflatable Restraint System)	●	●	●	●
LEGACY	BCM(Integrated unit mode)	●	●	●	●
LEGACY	EPS(Electric Power steering)	●	●	●	●
LEGACY	EPB(Parking Brake System)	●	●	●	●
LEGACY	TPM(Tire pressure monitor)	●	●	●	●
LEGACY	CAN System	●	●	●	●
LEGACY	NAV(Cruise Control System)	●	●	●	●
LEGACY	AC(Air Condition System)	●	●	●	●
LEGACY	SSP(Air Suspension System)	●	●	●	●
LEGACY	Keyless access system(Collation ECM)	●	●	●	●
LEGACY	Keyless access system(Power Supply ECM)	●	●	●	●
OUTBACK	ECM(Engine Control System)	●	●	●	※
OUTBACK	TCM(Transmission Control System)	●	●	●	※
OUTBACK	ABS(Brake Control System)	●	●	●	※
OUTBACK	SRS(Supplemental Inflatable Restraint System)	●	●	●	●
OUTBACK	BCM(Integrated unit mode)	●	●	●	●

OUTBACK	EPS(Electric Power steering)	●	●	●	●
OUTBACK	EPB(Parking Brake System)	●	●	●	●
OUTBACK	TPM(Tire pressure monitor)	●	●	●	●
OUTBACK	CAN System	●	●	●	●
OUTBACK	NAV(Cruise Control System)	●	●	●	●
OUTBACK	AC(Air Condition System)	●	●	●	●
OUTBACK	SSP(Air Suspension System)	●	●	●	●
OUTBACK	Keyless access system(Collation ECM)	●	●	●	●
OUTBACK	Keyless access system(Power Supply ECM)	●	●	●	●
PLEO	ECM(Engine Control System)	●	●	●	※
PLEO	TCM(Transmission Control System)	●	●	●	※
PLEO	ABS(Brake Control System)	●	●	●	※
PLEO	SRS(Supplemental Inflatable Restraint System)	●	●	●	●
PLEO	BCM(Integrated unit mode)	●	●	●	●
PLEO	EPS(Electric Power steering)	●	●	●	●
PLEO	EPB(Parking Brake System)	●	●	●	●
PLEO	TPM(Tire pressure monitor)	●	●	●	●
PLEO	CAN System	●	●	●	●
PLEO	NAV(Cruise Control System)	●	●	●	●
PLEO	AC(Air Condition System)	●	●	●	●
PLEO	SSP(Air Suspension System)	●	●	●	●
PLEO	Keyless access system(Collation ECM)	●	●	●	●
PLEO	Keyless access system(Power Supply ECM)	●	●	●	●
R2	ECM(Engine Control System)	●	●	●	※
R2	TCM(Transmission Control System)	●	●	●	※
R2	ABS(Brake Control System)	●	●	●	※
R2	SRS(Supplemental Inflatable Restraint System)	●	●	●	●
R2	BCM(Integrated unit mode)	●	●	●	●
R2	EPS(Electric Power steering)	●	●	●	●
R2	EPB(Parking Brake System)	●	●	●	●
R2	TPM(Tire pressure monitor)	●	●	●	●
R2	CAN System	●	●	●	●
R2	NAV(Cruise Control System)	●	●	●	●
R2	AC(Air Condition System)	●	●	●	●
R2	SSP(Air Suspension System)	●	●	●	●
R2	Keyless access system(Collation ECM)	●	●	●	●
R2	Keyless access system(Power Supply ECM)	●	●	●	●
VIVIO	ECM(Engine Control System)	●	●	●	※
VIVIO	TCM(Transmission Control System)	●	●	●	※
VIVIO	ABS(Brake Control System)	●	●	●	※
VIVIO	SRS(Supplemental Inflatable Restraint System)	●	●	●	●
VIVIO	BCM(Integrated unit mode)	●	●	●	●
VIVIO	EPS(Electric Power steering)	●	●	●	●
VIVIO	EPB(Parking Brake System)	●	●	●	●
VIVIO	TPM(Tire pressure monitor)	●	●	●	●
VIVIO	CAN System	●	●	●	●
VIVIO	NAV(Cruise Control System)	●	●	●	●
VIVIO	AC(Air Condition System)	●	●	●	●
VIVIO	SSP(Air Suspension System)	●	●	●	●
VIVIO	Keyless access system(Collation ECM)	●	●	●	●
VIVIO	Keyless access system(Power Supply ECM)	●	●	●	●

SUBARU\_V01.10 DPF Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Vehicle	Year	DPF
FORESTER	Up to 2016	※
IMPREZA	Up to 2016	※
LEGACY	Up to 2016	※
OUTBACK	Up to 2016	※
R2	Up to 2016	※
PLEO	Up to 2016	※
VIVIO	Up to 2016	※

SUBARU\_V01.10 OIL Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Vehicle	Year	OIL
FORESTER	up to 2016	※
IMPREZA	up to 2016	※
LEGACY	up to 2016	※
OUTBACK	up to 2016	※
R2	up to 2016	※
PLEO	up to 2016	※
VIVIO	up to 2016	※

SUBARU\_V01.10 SAS Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Vehicle	Year	SAS
FORESTER	Up to 2016	※
IMPREZA	Up to 2016	※
LEGACY	Up to 2016	※
OUTBACK	Up to 2016	※
R2	Up to 2016	※
PLEO	Up to 2016	※
VIVIO	Up to 2016	※