	PEUGEOT_V01.10 Daig Function List(N	Note:For r	eference	only)					
NOTES:									
• This function	1 is supported.								
✗ This function	n may be supported, which depends on the actual cond	dition of the	vehicle.						
O This function	n is not supported.								
▲ This function is the new feature in this version.									
Vehicle	System Name	EcuInfo.	Read Codes	Erase Codes	LiveData				
106	Engine Control Moduel	•	Oues	Oues	•				
106	Additional Heating	•	•	•	•				
107	Engine Control Moduel	•	•	•	•				
107	Manual Gearbox (MMT)	•	•	•	•				
107	ESP (BOSCH 8.0 C1)	•	•	•	•				
107	Airbag	•	•	•	•				
107	Electric Power Steering	•	•	•	•				
107	Coded Anti Start	•	•	•	•				
108	Engine Control Moduel	•	•	•	•				
108	Gearbox	•	•	•	•				
108	ABS/ESP	•	•	•	•				
108	Airbag	•	•	•	•				
108	Instrument Panel	•	•	•	•				
108	Air Conditioning	•	•	•	•				
108	Electric Power Steering	•	•	•	•				
108	Start/Stop Control	•	•	•	•				
108	Engine Immobiliser\Hands Free Starting Access Electric Module	•	•	•	•				
108	Multifunction Display	•	•	•	•				
206	Engine Control Moduel	•	•	•	•				
206	Auto Gearbox	•	•	•	•				
206	Active Safety (ABS)	•	•	•	•				
206	Airbag	•	•	•	•				
206	Instrument Panel	•	•	•	•				
206	Built-in System Interface (BSI)	•	•	•	•				
206	Air Conditioning	•	•	•	•				
206	Diesel Additive Function	•	•	•	•				
206	Electric Power Steering	•	•	•	•				
206	Steering Wheel Switching Module	•	•	•	•				
206	Rain/Brightness Sensor	•	•	•	•				
206	Driver School Module	•	•	•	•				
206	Display/Telematics	•	•	•	•				
206	Service Module	•	•	•	•				
206	Multifunction Display	•	•	•	•				
206	CD Player	•	•	•	•				
206	Alarm	•	•	•	•				
206	Radio	•	•	•	•				
207	Engine Control Moduel	•	•	•	•				
207	Auto Gearbox	•	•	•	•				
207	Active Safety (ABS)	•	•	•	•				
207	Airbag	•	•	•	•				
207	Instrument Panel	•	•	•	•				
207	Built-in System Interface (BSI)	•	•	•	•				
207	Air Conditioning	•	•	•	•				
207	Engine Relay Unit	•	•	•	•				
207	Trailer Relay Unit	•	•	•	•				
207	Electric Power Steering	•	•	•	•				
207	Steering Wheel Switching Module	•	•	•	•				
207	Parking Assistance Module	•	•	•	•				
207	Rain/Brightness Sensor	•	•	•	•				

		1-		1-	-
207	Battery Charge Status Unit	•	•	•	•
207	Service Module	•	•	•	•
207	Hands Free Control Unit	•	•	•	•
207	Display/Telematics	•	•	•	•
207	Not Fastened Warning Light (TNB)	•	•	•	•
207	Multiplexed Additive Adding Pump	•	•	•	•
207	High Frequency Receiver	•	•	•	•
207	Under Inflation Detection	•	•	•	•
207	Driver School Module	•	•	•	•
		-		-	-
207	Directional Headlamps	•	•	•	•
207	Stolen Vehicle Location Control Unit	•	•	•	•
207	Folding Roof	•	•	•	•
207	Multifunction Display	•	•	•	•
207	CD Player	•	•	•	•
207	Alarm	•	•	•	•
207	Radio	•	•	•	•
208	Engine Control Moduel	•	•	•	•
208	Auto Gearbox	•	•	•	•
208	Active Safety (ABS)	•	•	•	•
		-	-	-	-
208	Airbag	•	•	•	•
208	Instrument Panel	•	•	•	•
208	Built-in System Interface (BSI)	•	•	•	•
208	Air Conditioning	•	•	•	•
208	Trailer Relay Unit	•	•	•	•
208	Lighting Relay Unit	•	•	•	•
208	Electric Power Steering	•	•	•	•
208	Steering Wheel Switching Module	•	•	•	•
208	Steering Wheel With Fixed Central Control	•	•	•	•
		-	-	-	-
208	Parking Assistance Module	•	•	•	•
208	Multiplexed Additive Adding Pump	•	•	•	•
208	Rain/Brightness Sensor	•	•	•	•
208	Battery Charge Status Unit	•	•	•	•
208	Multiplexed Control Panel	•	•	•	•
208	Driver School Module	•	•	•	•
208	Independent Telematic Unit (BTA)	•	•	•	•
208	Matrix Screen Integral To The Instrument Panel	•	•	•	•
208	Telematic Unit	•	•	•	•
208	Siren	•	•	•	•
			•		•
208	CD Player	•		•	
208	Alarm	•	•	•	•
208	Audio Amplifier	•	•	•	•
208	Radio	•	•	•	•
208 (Ai91)	Engine Control Moduel	•	•	•	•
208 (Ai91)	Auto Gearbox	•	•	•	•
208 (Ai91)	Active Safety (ABS)	•	•	•	•
208 (Ai91)	Airbag	•	•	•	•
208 (Ai91)	Instrument Panel	•	•	•	•
208 (A191) 208 (Ai91)	Built-in System Interface (BSI)	•	•	•	•
208 (Ai91)	Air Conditioning	•	•	•	•
208 (Ai91)	Electric Power Steering	•	•	•	•
208 (Ai91)	Steering Wheel Switching Module	•	•	•	•
208 (Ai91)	Steering Wheel With Fixed Central Control	•	•	•	•
208 (Ai91)	Parking Assistance Module	•	•	•	•
208 (Ai91)	Rain/Brightness Sensor	•	•	•	•
208 (Ai91)	Independent Telematic Unit	•	•	•	•
208 (Ai91)	Multiplexed Control Panel	•	•	•	•
208 (Ai91)	External CD Player	•	•	•	•
208 (A191) 208 (A191)	Telematic Unit	•	•	•	•
200 (N191)	ICICMATIC UNIT	–	–	-	-

208 (Ai91)	Siren			•	
208 (Ai91)	Alarm	•	•	•	•
208 (Ai91)	Radio	•	•	•	•
301	Engine Control Moduel	•	•	•	•
301	Auto Gearbox	•	•	•	•
301	Active Safety (ABS)	•	•	•	•
301	Airbag	•	•	•	•
301	Instrument Panel	•	•	•	•
301	Trailer Relay Unit	•	•	•	•
301	Electric Power Steering	•	•	•	•
301	Multiplexed Additive Adding Pump	•	•	•	•
301	Steering Wheel Switching Module	•	•	•	•
		•	•	•	•
301 301	Parking Assistance Module		•		
301	Multifunction Display	•	•	•	•
	Siren	-	-	•	-
301	Radio	•	•	•	•
306	Engine Control Moduel	•	•	•	•
306	Auto Gearbox	•	•	•	•
306	ABS (BOSCH 5.3)	•	•	•	•
306	Airbag	•	•	•	•
307	Engine Control Moduel	•	•	•	•
307	Auto Gearbox	•	•	•	•
307	Active Safety (ABS)	•	•	•	•
307	Airbag	•	•	•	•
307	Instrument Panel	•	•	•	•
307	Built-in System Interface (BSI)	•	•	•	•
307	Air Conditioning	•	•	•	•
307	Engine Relay Unit	•	•	•	•
307	Trailer Relay Unit	•	•	•	•
307	Diesel Additive Function	•	•	•	•
307	Electric Power Steering	•	•	•	•
307	Steering Wheel Switching Module	•	•	•	•
307	Parking Assistance Module	•	•	•	•
307	Driver Door module	•	•	•	•
307	Passenger Door Module	•	•	•	•
307	Right Headlamp Beam Level Corrector	•	•	•	•
307	Left Headlamp Beam Level Corrector	•	•	•	•
307	Rain/Brightness Sensor	•	•	•	•
307	Driver School Module	•	•	•	•
307	Hands Free Control Unit	•	•	•	•
307	Multifunction Display	•	•	•	•
307	High Frequency Receiver	•	•	•	•
307	Service Module"	•	•	•	•
307	Under Inflation Detection	•	•	•	•
307	Telematic Unit	•	•	•	•
307	Sunroof	•	•	•	•
307	Folding Roof	•	•	•	•
307	CD Player	•	•	•	•
307	Alarm	•	•	•	•
307	Radio	•	•	•	•
308	Engine Control Moduel	•	•	•	•
308	Auto Gearbox	•	•	•	•
		•	•	•	•
308	Active Safety (ABS)	-		-	
308	Airbag	•	•	•	•
308	Instrument Panel	•	•	•	•
308	Built-in System Interface (BSI)	•	•	•	•
308	Air Conditioning	•	•	•	•
308	Engine Relay Unit	•	•	•	•

308	Trailer Relay Unit	•	•	•	•
308	Electric Power Steering	•	•	•	•
308	Steering Wheel Switching Module	•	•	•	•
308	Parking Assistance Module	•	•	•	•
308	Multiplexed Additive Adding Pump	•	•	•	•
308	Driver Door Module	•	•	•	•
308	Driver Seat Memory Unit	•	•	•	•
308	Passenger Seat Memory Unit	•	•	•	•
308	Directional Headlamps	•	•	•	•
308	Hands Free Control Unit	•	•	•	•
308	Battery Charge Status Unit	•	•	•	•
308	Not Fastened Warning Light (TNB)	•	•	•	•
308	Rain/Brightness Sensor	•	•	•	•
308	Display/Telematics	•	•	•	•
308	Service Module"	•	•	•	•
		-	-	•	•
308	Multifunction Display	•	•	-	-
308	High Frequency Receiver	•	•	•	•
308	Lane Departure Warning System	•	•	•	•
308	Windscreen Wiper	•	•	•	•
308	Matrix Screen Integral To The Instrument Panel	•	•	•	•
308	Moving Panel Deflector	•	•	•	•
308	Under Inflation Detection	•	•	•	•
308	Driver School Module	•	•	•	•
308	Audio Amplifier	•	•	•	•
308	Electropump Assembly	•	•	•	•
308	Sunroof	•	•	•	•
308	Folding Roof	•	•	•	•
308	CD Player	•	•	•	•
308	Radio	•	•	•	•
308	Alarm	•	•	•	•
308 (T9)	Engine Control Moduel	•	•	•	•
308 (T9)	Auto Gearbox	•	•	•	•
308 (T9)	Active Safety (ABS)	•	•	•	•
308 (T9)	Vehicle Distance Assistance	•	•	•	•
308 (T9)	Airbag	•	•	•	•
308 (T9)	Instrument Panel	•	•	•	•
308 (T9)	Air Conditioning	•	•	•	•
308 (T9)	Engine Relay Unit	•	•	•	•
308 (T9)	Trailer Relay Unit	•	•	•	•
308 (T9)	Electric Power Steering	•	•	•	•
308 (T9)	Electric Steering Lock	•	•	•	•
308 (T9)	Steering Wheel Switching Module	•	•	•	•
308 (T9)	Parking Assistance Module	•	•	•	•
308 (T9)	Additional Heating	•	•	•	•
308 (T9)	Driver Door control panel	•	•	•	•
308 (T9)	Driver Seat Memory Unit	•	•	•	•
308 (T9)	Seat Belts Not Fastened LED Unit	•	•	•	•
308 (T9) 308 (T9)	Directional Headlamps	•	•	•	•
308 (19) 308 (T9)	-	•	•	•	•
	Rain/Brightness Sensor				
308 (T9)	Hands Free Starting Access Electric Module	•	•	•	•
308 (T9)	Electric Key Reader	•	•	•	•
308 (T9)	Battery Charge Status Unit	•	•	•	•
308 (T9)	Voltage Retaining Device	•	•	•	•
308 (T9)	Matrix Screen Integral To The Instrument Panel	•	•	•	•
308 (T9)	Supply Protection And Management Unit	•	•	•	•
308 (T9)	Independent Telematic Unit (BTA)	•	•	•	•
308 (T9)	PADDGO INERGY	•	•	•	•
308 (T9)	Multifunction Display	•	•	•	•

308 (T9)	Multiplexed Control Panel	•	•	•	•
308 (T9)	External CD Player	•	•	•	•
308 (T9)	Telematic Unit/Radio Navigation	•	•	•	•
308 (T9)	Audio Amplifier	•	•	•	•
308 (T9)	Touch Screen	•	•	•	•
	Radio/Telephone	•	•	•	•
	Alarm	•	•	•	•
	Siren	•	•	•	•
	Radio	•	•	•	•
308 (S)	Engine Control Moduel	•	•	•	•
308 (S)	Auto Gearbox	•	•	•	•
308 (S)	Active Safety (ABS)	•	•	•	•
308 (S)		•	•	•	•
308 (S)	Airbag Instrument Panel	•	•	•	•
			•	•	•
308 (S)	Built-in System Interface (BSI)	•	-	-	-
308 (S)	Air Conditioning	•	•	•	•
308 (S)	Engine Relay Unit	•	•	•	•
308 (S)	Electric Power Steering	•	•	•	•
	Electric Steering Lock	•	•	•	•
	Steering Wheel Switching Module	•	•	•	•
308 (S)	Parking Assistance Module	•	•	•	•
308 (S)	Driver Seat Memory Unit	•	•	•	•
308 (S)	Directional Headlamps	•	•	•	•
308 (S)	Battery Charge Status Unit	•	•	•	•
308 (S)	Voltage Retaining Device	•	•	•	•
308 (S)	Hands Free Starting Access Electric Module	•	•	•	•
308 (S)	Electric Key Reader	•	•	•	•
308 (S)	Supply Protection And Management Unit	•	•	•	•
308 (S)	Rain/Brightness Sensor	•	•	•	•
308 (S)	Matrix Screen Integral To The Instrument Panel	•	•	•	•
308 (S)	Multiplexed Control Panel	•	•	•	•
308 (S)	Multifunction Display	•	•	•	•
308 (S)	Touch Screen	•	•	•	•
308 (S)	Telematic Unit	•	•	•	•
308 (S)	Radio/Telephone	•	•	•	•
308 (S)	Service Module	•	•	•	•
308 (S)	Alarm	•	•	•	•
308 (S)	Radio	•	•	•	•
405	Engine Control Moduel	•	•	•	•
406	Engine Control Moduel	•	•	•	•
406	Auto Gearbox	•	•	•	•
406	Active Safety (ABS)	•	•	•	•
406	Airbag	•	•	•	•
406	Instrument Panel	•	•	•	•
406	Built-in System Interface (BSI)	•	•	•	•
	Air Conditioning	•	•	•	•
406	Diesel Additive Function	•	•	•	•
	Steering Wheel Switching Module	•	•	•	•
	Rain/Brightness Sensor	•	•	•	•
406	Multifunction Display	•	•	•	•
406	CD Player	•	•	•	•
- · · -	Alarm	•	•	•	•
406	Radio	•	•	•	•
406 406			~	-	~
406		•	•	•	
406 407	Engine Control Moduel	•	•	•	•
406 407 407	Engine Control Moduel Auto Gearbox	•	•	•	•
406 407 407 407	Engine Control Moduel Auto Gearbox Active Safety (ABS)	•	•	•	•
406 407 407 407	Engine Control Moduel Auto Gearbox	•	•	•	•

r					- <u>-</u>
407	Built-in System Interface (BSI)	•	•	•	•
407	Air Conditioning	•	•	•	•
407	Engine Relay Unit	•	•	•	•
407	Trailer Relay Unit	•	•	•	•
407	Diesel Additive Function	•	•	•	•
407	Electronically Managed Suspension	•	•	•	•
407	Electric Power Steering	•	•	•	•
407	Steering Wheel Switching Module	•	•	•	•
407	Parking Assistance Module	•	•	•	•
407	Driver Door module	•	•	•	•
407	Passenger Door Module	•	•	•	•
407	Driver Seat Memory Unit	•	•	•	•
407	Passenger Seat Memory Unit	•	•	•	•
407	Right Headlamp Beam Level Corrector	•	•	•	•
407	Left Headlamp Beam Level Corrector	•	•	•	•
407	Directional Headlamps	•	•	•	•
407	Rain/Brightness Sensor	•	•	•	•
407	Hands Free Control Unit	•	•	•	•
407	Battery Charge Status Unit	•	•	•	•
407	High Frequency Receiver	•	•	•	•
407	Under Inflation Detection	•	•	•	•
407	Multifunction Display	•	•	•	•
407	Display/Telematics	•	•	•	•
407	Sunroof	•	•	•	•
407	Windscreen Wiper	•	•	•	•
407	Additional Heating	•	•	•	•
407	Boot Wiring	•	•	•	•
407	CD Player	•	•	•	•
407	Alarm	•	•	•	•
407	Radio	•	•	•	•
407 408 (T73)	Engine Control Moduel	•	-	•	•
		-	-	-	-
408 (T73)	Auto Gearbox	•	•	•	•
408 (T73)	Active Safety (ABS)	•	•	•	•
408 (T73)	Airbag	•	•	•	•
408 (T73)	Instrument Panel	•	•	•	•
408 (T73)	Built-in System Interface (BSI)	•	•	•	•
408 (T73)	Air Conditioning	•	•	•	•
408 (T73)	Engine Relay Unit	•	•	•	•
408 (T73)	Trailer Relay Unit	•	•	•	•
408 (T73)	Electric Power Steering	•	•	•	•
408 (T73)	Steering Wheel Switching Module	•	•	•	•
408 (T73)	Parking Assistance Module	•	•	•	•
408 (T73)	Driver Door Module	•	•	•	•
408 (T73)	Driver Seat Memory Unit	•	•	•	•
408 (T73)	Passenger Seat Memory Unit	•	•	•	•
408 (T73)	Rain/Brightness Sensor	•	•	•	•
408 (T73)	Display/Telematics	•	•	•	•
408 (T73)	Multiplexed Additive Adding Pump	•	•	•	•
408 (T73) 408 (T73)	Hands Free Control Unit	•	•	•	•
	Service Module"	•	•	•	•
408 (T73)					
408 (T73)	Battery Charge Status Unit	•	•	•	•
408 (T73)	Multifunction Display	•	•	•	•
408 (T73)	Not Fastened Warning Light (TNB)	•	•	•	•
408 (T73)	High Frequency Receiver	•	•	•	•
408 (T73)	Lane Departure Warning System	•	•	•	•
408 (T73)	Matrix Screen Integral To The Instrument Panel	•	•	•	•
	Moving Panel Deflector	•	•	•	•
408 (T73) 408 (T73)	MOVINg Lanel Deflector	•	•	•	•

408 (T73)	Driver School Module	•	•	•	•
408 (T73)	Directional Headlamps	•	•	•	•
408 (T73)	Windscreen Wiper	•	•	•	•
408 (T73)	Sunroof	•	•	•	•
408 (T73)	Folding Roof	•	•	•	•
408 (T73)	CD Player	•	•	•	•
408 (T73)	Radio	•	•	•	•
408 (T73)	Audio Amplifier	•	•	•	•
408 (T73)	Alarm	•	•	•	•
408 (T73)	Alarm	•	•	•	•
408 (T93)	Engine Control Moduel	•	•	•	•
408 (T93)	Auto Gearbox	•	•	•	•
408 (T93)	Active Safety (ABS)	•	•	•	•
408 (T93)	Airbag	•	•	•	•
408 (T93) 408 (T93)	Instrument Panel	•	•	•	•
		•	-	•	•
408 (T93)	Air Conditioning	-	•	-	-
408 (T93)	Engine Relay Unit	•	•	•	•
408 (T93)	Electric Power Steering	•	•	•	•
408 (T93)	Electric Steering Lock	•	•	•	•
408 (T93)	Steering Wheel Switching Module	•	•	•	•
408 (T93)	Parking Assistance Module	•	•	•	•
408 (T93)	Hands Free Starting Access Electric Module	•	•	•	•
408 (T93)	Electric Key Reader	•	•	•	•
408 (T93)	Battery Charge Status Unit	•	•	•	•
408 (T93)	Voltage Retaining Device	•	•	•	•
408 (T93)	Driver Seat Memory Unit	•	•	•	•
408 (T93)	Directional Headlamps	•	•	•	•
408 (T93)	Rain/Brightness Sensor	•	•	•	•
408 (T93)	Independent Telematic Unit (BTA)	•	•	•	•
408 (T93)	Matrix Screen Integral To The Instrument Panel	•	•	•	•
408 (T93)	Multifunction Display	•	•	•	•
408 (T93)	Supply Protection And Management Unit	•	•	•	•
408 (T93)	Telematic Unit/Radio Navigation	•	•	•	•
408 (T93)	Multiplexed Control Panel	•	•	•	•
408 (T93)	Touch Screen	•	•	•	•
408 (T93)	Radio/Telephone	•	•	•	•
408 (T93)	Alarm	•	•	•	•
408 (T93)	Radio	•	•	•	•
508	Engine Control Moduel	•	•	•	•
508	Auto Gearbox	•	•	•	•
508	Active Safety (ABS)	•	•	•	•
508	Electric Secondary Brake	•	•	•	•
508	Airbag	•	•	•	•
508	Instrument Panel	•	•	•	•
508	Built-in System Interface (BSI)	•	•	•	•
508	Air Conditioning	•	•	•	•
508	Rear Air Conditioning	•	•	•	•
508	Engine Relay Unit	•	•	•	•
508	Trailer Relay Unit	•	•	•	•
508	Electric Power Steering	•	•	•	•
508	Steering Wheel Switching Module	•	•	•	•
508	Steering Wheel With Fixed Central Control	•	•	•	•
508	Electric Steering Lock	•	•	•	•
508	Parking Assistance Module	•	-	•	-
	-		•		•
508	Driver Door control panel	•	•	•	•
508	Driver Seat Memory Unit	•	•	•	•
508	Main Beams Assistant	•	•	•	•
508	Seat Belts Not Fastened LED Unit	•	•	•	•

r		-	-	-	-
508	Active Damper Electronic Unit	•	•	•	•
508	Traction Battery	•	•	•	•
508	Battery Charge Status Unit	•	•	•	•
508	Rain/Brightness Sensor (CDPL)	•	•	•	•
508	Hands Free Control Unit	•	•	•	•
508	Electric Key Reader	•	•	•	•
508	Matrix Screen Integral To The Instrument Panel	•	•	•	•
508	Multifunction Display	•	•	•	•
508	High Head Vision	•	•	•	•
508	Multiplexed Control Panel	•	•	•	•
508	Hybrid Control 1	•	•	•	•
508	Hybrid Control 2	•	•	•	•
508	Hybrid Mode Selector	•	•	•	•
508	Independent Telematic Unit (BTA)	•	•	•	•
508	Under Inflation Detection	•	•	•	•
508	Discharge Bulbs Vertical And Horizontal Adjustment	•	•	•	•
508	Additional Heating	•	•	•	•
508	Supply Protection And Management Unit	•	•	•	•
		-	-	-	-
508	Windscreen Wiper (Right)	•	•	•	•
508	Windscreen Wiper (Left)	•	•	•	•
508	Telematic Navigator	•	•	•	•
508	Display/Telematics	•	•	•	•
508	Alarm	•	•	•	•
508	Audio Amplifier	•	•	•	•
508	Radio (RD5)	•	•	•	•
508	Motorised Boot	•	•	•	•
605	Engine Control Moduel	•	•	•	•
607	Engine Control Moduel	•	•	•	•
607	Auto Gearbox	•	•	•	•
607	Active Safety (ABS)	•	•	•	•
607	Airbag	•	•	•	•
607	Instrument Panel	•	•	•	•
607	Built-in System Interface (BSI)	•	•	•	•
607	Air Conditioning	•	•	•	•
607	Engine Relay Unit	•	•	•	•
607	Trailer Relay Unit		•	•	•
607	Diesel Additive Function	•	•	•	•
607	Electronically Managed Suspension	•	•	•	•
607	· · · ·	•	•	•	•
	Electric Power Steering				
607	Steering Wheel Switching Module	•	•	•	•
607	Parking Assistance Module	•	•	•	•
607	Driver Door control panel	•	•	•	•
607	Passenger Door Control Panel	•	•	•	•
607	Driver Seat Memory Unit	•	•	•	•
607	Headlamp Height Corrector	•	•	•	•
607	Hands Free Control Unit	•	•	•	•
607	Under Inflation Detection	•	•	•	•
607	Rain/Brightness Sensor	•	•	•	•
607	Storing Of The Driving Position	•	•	•	•
607	Multifunction Display	•	•	•	•
607	Telematic Unit	•	•	•	•
607	CD Player	•	•	•	•
607	Alarm	•	•	•	•
607	Radio	•	•	•	•
806	Engine Control Moduel	•	•	•	•
806	Auto Gearbox	•	•	•	•
806		•	•	•	•
	Airbag		-	•	•
807	Engine Control Moduel	•	•	-	•

807	Auto Gearbox	•	•	•	•
807	Active Safety (ABS)	•	•	•	•
807	Airbag	•	•	•	•
807	Instrument Panel	•	•	•	•
807	Built-in System Interface (BSI)	•	•	•	•
807	Air Conditioning	•	•	•	•
807	Diesel Additive Function	•	•	•	•
807	Electric Power Steering (GEP)	•	•	•	•
807	-		•	•	•
807	Steering Wheel Switching Module	•	•	•	•
807	Parking Assistance Module Driver Door Module	•	•	•	•
			•	•	•
807	Passenger Door Module	•	-	-	-
807	Sliding Side Doors Module	•	•	•	•
807	Driver Seat Memory Unit	•	•	•	•
807	Left Headlamp Beam Level Corrector	•	•	•	•
807	Right Headlamp Beam Level Corrector	•	•	•	•
807	Warning Lights/Odometer unit	•	•	•	•
807	Telematic Receiver Control	•	•	•	•
807	Additional Heating	•	•	•	•
807	Hands Free Control Unit	•	•	•	•
807	Storing Of The Driving Position	•	•	•	•
807	Under Inflation Detection	•	•	•	•
807	Rain/Brightness Sensor	•	•	•	•
807	Rear Sunroof	•	•	•	•
807	Front Sunroof	•	•	•	•
807	Middle Sunroof	•	•	•	•
807	Multifunction Display	•	•	•	•
807	Display/Telematics	•	•	•	•
807	CD Player	•	•	•	•
807	Alarm	•	•	•	•
807	Radio	•	•	•	•
1007	Engine Control Moduel	•	•	•	•
1007	Manual Gearbox (BVMP)	•	•	•	•
1007	Active Safety (ABS)	•	•	•	•
1007	Airbag	•	•	•	•
1007	Instrument Panel	•	•	•	•
1007	Built-in System Interface (BSI)	•	•	•	•
1007	Air Conditioning	•	•	•	•
1007	Electric Power Steering	•	•	•	•
1007	Steering Wheel Switching Module	•	•	•	•
1007	Parking Assistance Module	•	•	•	•
1007	Sliding Side Doors Module	•	•	•	•
1007	Rain/Brightness Sensor	•	•	•	•
1007	Hands Free Control Unit	•	•	•	•
1007	Multiplexed Additive Adding Pump	•	•	•	•
1007	Under Inflation Detection	•	•	•	•
1007	Multifunction Display	•	•	•	•
1007	Radio	•	•	•	•
1007	CD Player	•	•	•	•
1007	Telematic Unit	•	•	•	•
1007	Alarm	•	•	•	•
2008	Engine Control Moduel	•	•	•	•
2008	Auto Gearbox	•	•	•	•
2008	Active Safety (ABS)	•	•	•	•
2008		•	•	•	•
2008	Airbag				•
	Instrument Panel	•	•	•	-
2008	Air Conditioning	•	•	•	•
2008	Trailer Relay Unit	•	•	•	•

2008	Electric Power Steering		•	•	
2008	Steering Wheel Switching Module	•	•	•	•
2008	Steering Wheel With Fixed Central Control	•	•	•	•
2008	Parking Assistance Module	•	•	•	•
2008	Rain/Brightness Sensor	•	•	•	•
2008	Multiplexed Control Panel	•	•	•	•
2008	Battery Charge Status Unit	•	•	•	•
2008	Independent Telematic Unit (BTA)	•	•	•	•
2008	Matrix Screen Integral To The Instrument Panel	•	•	•	•
2008	Multiplexed Additive Adding Pump	•	•	•	•
2008	Siren	•	•	•	•
2008	Telematic Unit	•	•	•	•
2008	External CD Player	•	•	•	•
2008	Alarm	•	•	•	•
		•	•		•
2008	Audio Amplifier	-	-	•	-
2008	Radio	•	•	•	•
3008	Engine Control Moduel	•	•	•	•
3008	Auto Gearbox	•	•	•	•
3008	Active Safety (ABS)	•	•	•	•
3008	Electric Secondary Brake	•	•	•	•
3008	Airbag	•	•	•	•
3008	Instrument Panel	•	•	•	•
3008	Built-in System Interface (BSI)	•	•	•	•
3008	Air Conditioning	•	•	•	•
3008	Engine Relay Unit	•	•	•	•
3008	Trailer Relay Unit	•	•	•	•
3008	Electric Power Steering	•	•	•	•
3008	Steering Wheel Switching Module	•	•	•	•
3008	Parking Assistance Module	•	•	•	•
3008	Driver Door control panel	•	•	•	•
3008	Not Fastened Warning Light (TNB)	•	•	•	•
3008	Headlamp Height Corrector	•	•	•	•
3008	Traction Battery	•	•	•	•
3008	Battery Charge Status Unit	•	•	•	•
3008	Hands Free Control Unit	•	•	•	•
3008	Rain/Brightness Sensor	•	•	•	•
3008	Display/Telematics	•	•	•	•
3008	Multiplexed Additive Adding Pump	•	•	•	•
3008	Service Module	•	•	•	•
3008	Multifunction Display	•	•	•	•
3008	High Head Vision	•	•	•	•
3008	Network Isolation Unit	•	•	•	•
3008	High Frequency Receiver	•	•	•	•
3008	Matrix Screen Integral To The Instrument Panel	•	•	•	•
3008	Under Inflation Detection	•	•	•	•
3008	Assistance In Complying With The Inter Vehicle Time	•	•	•	•
3008	Anti-slip Mode Selector	•	•	•	•
3008	Hybrid Control 1	•	•	•	•
3008	Hybrid Control 2	•	•	•	•
3008	Hybrid Mode Selector	•	•	•	•
3008	Windscreen Wiper	•	•	•	•
3008	CD Player	•	•	•	•
3008	Audio Amplifier	•	•	•	•
3008	Radio	•	•	•	•
3008	Alarm	•	•	•	•
3008 4007	Alarm Engine Control Moduel	•	•	•	•
		-		-	

4007	Airbag	•	•	•	•
4007	Instrument Panel	•	•	•	•
4007	Built-in System Interface (BSI)	•	•	•	•
4007	Air Conditioning	•	•	•	•
4007	Steering Wheel Angle Sensor	•	•	•	•
4007	Gear Lever (DCT)	•	•	•	•
4007	4x4 Transmission	•	•	•	•
4007	Parking Assistance Module	•	•	•	•
4007	Coded Anti Start	•	•	•	•
4007	Rear Final Drive Piloted Clutch	•	•	•	•
4007	Hands Free Control Unit	•	•	•	•
4007	Static AFS	•	•	•	•
4007	Navigation	•	•	•	•
4007	Radio	•	•	•	•
	Auto Gearbox	•	•	•	•
4008		_	-	_	-
4008	Airbag	•	•	•	•
4008	Instrument Panel	•	•	•	•
4008	Air Conditioning	•	•	•	•
4008	Electric Power Steering	•	•	•	•
4008	Steering Wheel Angle Sensor	•	•	•	•
4008	Parking Assistance Module	•	•	•	•
4008	Hands Free Control Unit	•	•	•	•
4008	Rear Final Drive Piloted Clutch	•	•	•	•
4008	Starting Authorisation	•	•	•	•
4008	Start/Stop Control	•	•	•	•
4008	Radio/Telephone	•	•	•	•
4008	Navigation	•	•	•	•
5008	Engine Control Moduel	•	•	•	•
5008	Auto Gearbox	•	•	•	•
5008	Active Safety (ABS)	•	•	•	•
5008	Electric Parking Brake	•	•	•	•
5008	Electric Secondary Brake	•	•	•	•
5008	Airbag	•	•	•	•
5008	Instrument Panel	•	•	•	•
5008	Built-in System Interface (BSI)	•	•	•	•
5008	Air Conditioning	•	•	•	•
5008	Engine Relay Unit	•	•	•	•
5008	Trailer Relay Unit	•	•	•	•
5008	Electric Power Steering	•	•	•	•
5008	Steering Wheel Switching Module	•	•	•	•
5008	Parking Assistance Module	•	•	•	•
5008	Driver Door control panel	•	•	•	•
5008	Not Fastened Warning Light (TNB)	•	•	•	•
5008	Headlamp Height Corrector	•	•	•	•
	Battery Charge Status Unit	_	•	•	•
5008 5008	Rain/Brightness Sensor	•	•	•	•
5008					•
	Hands Free Control Unit	•	•	•	
5008	Multiplexed Additive Adding Pump	•	•	•	•
5008	Service Module	•	•	•	•
5008	High Head Vision	•	•	•	•
5008	Network Isolation Unit	•	•	•	•
5008	High Frequency Receiver	•	•	•	•
5008	Control Panel Dot Matrix Display	•	•	•	•
5008	Under Inflation Detection	•	•	•	•
5008	Assistance In Complying With The Inter Vehicle Time	•	•	•	•
5008	Anti-slip Mode Selector	•	•	•	•
	Lane Departure Warning System	•	•	•	•
5008	Lane Departure warning System				

5008	Portable Unit		•		
5008	Multifunction Display	•	•	•	•
5008	Display/Telematics	•	•	•	•
5008	CD Player	•	•	•	•
5008	Audio Amplifier	•	•	•	•
5008	Radio	•	•	•	•
5008	Alarm	•	•	•	•
5008	Steering Wheel With Fixed Central Control	•	•	•	•
5008	Multiplexed Control Panel	•	•	•	•
5008	Hybrid Mode Selector	•	•	•	•
5008	Independent Telematic Unit (BTA)	•	•	•	•
5008	Discharge Bulbs Vertical And Horizontal Adjustment	•	•	•	•
iON	Electric Vehicle Management	•	•	•	•
iON	Electric Machine Management	•	•	•	•
iON		•	•	•	
	Active Safety (ABS)	-	-	-	-
iON	Airbag	•	•	•	•
iON	Instrument Panel	•	•	•	•
iON	Electric Power Steering	•	•	•	•
iON	Steering Wheel Angle Sensor	•	•	•	•
iON	Passenger Compartment Air Heanting Resistor	•	•	•	•
iON	Gateway Wiring Housing	•	•	•	•
iON	Onboard Charger Of The Traction Battery	•	•	•	•
iON	Independent Telematic Unit (BTA)	•	•	•	•
iON	Direct Voltage Transformer	•	•	•	•
iON	Traction Battery	•	•	•	•
iON	Traction Battery Cells Management 01	•	•	•	•
iON	Traction Battery Cells Management 02	•	•	•	•
iON	Traction Battery Cells Management 03	•	•	•	•
iON	Traction Battery Cells Management 04	•	•	•	•
iON	Traction Battery Cells Management 05	•	•	•	•
iON	Traction Battery Cells Management 07	•	•	•	•
iON	Traction Battery Cells Management 08	•	•	•	•
iON	Traction Battery Cells Management 09	•	•	•	•
iON	Traction Battery Cells Management 10	•	•	•	•
iON	Traction Battery Cells Management 11	•	•	•	•
iON	Radio	•	•	•	•
HOGGAR	Engine Control Moduel	•	•	•	•
HOGGAR	Auto Gearbox	•	•	•	•
HOGGAR	Active Safety (ABS)	•	•	•	•
HOGGAR	Airbag	•	•	•	•
HOGGAR	Instrument Panel	•	•	•	•
HOGGAR	Built-in System Interface (BSI)	•	•	•	•
HOGGAR	Air Conditioning	•	•	•	•
HOGGAR	Electric Power Steering	•	•	•	•
HOGGAR	Steering Wheel Switching Module	•	•	•	•
HOGGAR	Rain/Brightness Sensor	•	•	•	•
HOGGAR	Stolen Vehicle Location Control Unit	•	•	•	•
HOGGAR	Multifunction Display	•	•	•	•
HOGGAR	Service Module	•	•	•	•
HOGGAR	CD Player	•	•	•	•
HOGGAR	Radio	•	•	•	•
HOGGAR	Alarm	•	•	•	•
RCZ	Engine Control Moduel	•	•	•	•
RCZ	Auto Gearbox	•	•	•	•
RCZ	Active Safety (ABS)	•	•	•	•
RCZ	Airbag	•	•	•	•
					Τ-
RCZ	Instrument Panel	•	•	•	•

RCZ	Air Conditioning		•	•	•
RCZ	Engine Relay Unit	•	•	•	•
RCZ	Trailer Relay Unit	•	•	•	•
RCZ	Electric Power Steering	•	•	•	•
RCZ	Steering Wheel Switching Module	•	•	•	•
RCZ	Parking Assistance Module	•	•	•	•
RCZ	Driver Door Module	•	•	•	•
RCZ	Driver Seat Memory Unit	•	•	•	•
RCZ		•	•	•	•
RCZ	Passenger Seat Memory Unit	•	•	•	•
RCZ	Not Fastened Warning Light (TNB)	-	•	-	-
RCZ	Directional Headlamps	•	•	•	•
	Hands Free Control Unit	-	-	-	-
RCZ	Battery Charge Status Unit	•	•	•	•
RCZ	High Frequency Receiver	•	•	•	•
RCZ	Lane Departure Warning System	•	•	•	•
RCZ	Rain/Brightness Sensor	•	•	•	•
RCZ	Display/Telematics	•	•	•	•
RCZ	Multiplexed Additive Adding Pump	•	•	•	•
RCZ	Matrix Screen Integral To The Instrument Panel	•	•	•	•
RCZ	Service Module"	•	•	•	•
RCZ	Multifunction Display	•	•	•	•
RCZ	Moving Panel Deflector	•	•	•	•
RCZ	Under Inflation Detection	•	•	•	•
RCZ	Driver School Module	•	•	•	•
RCZ	Sunroof	•	•	•	•
RCZ	Folding Roof	•	•	•	•
RCZ	Windscreen Wiper	•	•	•	•
RCZ	CD Player	•	•	•	•
RCZ	Radio	•	•	•	•
RCZ	Alarm	•	•	•	•
RCZ	Alarm	•	•	•	•
RCZ	Audio Amplifier	•	•	•	•
BIPPER	Auto Gearbox	•	•	•	•
BIPPER	Active Safety (ABS)	•	•	•	•
BIPPER	Airbag	•	•	•	•
BIPPER	Instrument Panel	•	•	•	•
BIPPER	Parking Assistance Module	•	•	•	•
BOXER	Engine Control Moduel	•	•	•	•
BOXER	Auto Gearbox (4HP20)	•	•	•	•
BOXER	Active Safety (ABS)	•	•	•	•
BOXER	Electric Power Steering	•	•	•	•
BOXER	Additional Heating	•	•	•	•
BOXER	Tachograph	•	•	•	•
EXPERT	Engine Control Moduel	•	•	•	•
EXPERT	Auto Gearbox	•	•	•	•
EXPERT	Active Safety (ABS)	•	•	•	•
EXPERT	Airbag	•	•	•	•
EXPERT	Instrument Panel	•	•	•	•
EXPERT	Built-in System Interface (BSI)	•	•	•	•
EXPERT	Air Conditioning	•	•	•	•
EXPERT	Rear Air Conditioning	•	•	•	•
EXPERT	Engine Relay Unit	•	•	•	•
EXPERT	Trailer Relay Unit	•	•	•	•
EXPERT	Electric Power Steering	•	•	•	•
EXPERT	Steering Wheel Switching Module	•	•	•	•
EXPERT	Parking Assistance Module	•	•	•	•
EXPERT	Battery Charge Status Unit	•	•	•	•
EXPERT	Rain/Brightness Sensor	•	•	•	•
EALENT	NATH DI IGH MICOS JENSOL	-			-

EXPERT	Additional Hasting	•	•	•	
EXPERT	Additional Heating	•	•	•	•
EXPERT	Anti-slip Mode Selector Hands Free Control Unit	•	•	•	-
EXPERT			•	•	•
	High Frequency Receiver	•	-	-	•
EXPERT	Pneumatic Suspension	•	•	•	•
EXPERT	Deflation Detection (DSG)	•	•	•	•
EXPERT	Bodywork Conversion Unit	•	•	•	•
EXPERT	Display/Telematics	•	•	•	•
EXPERT	Multifunction Display	•	•	•	•
EXPERT	CD Player	•	•	•	•
EXPERT	Radio	•	•	•	•
EXPERT	Alarm	•	•	•	•
PARTNER	Engine Control Moduel	•	•	•	•
PARTNER	Auto Gearbox	•	•	•	•
PARTNER	Active Safety (ABS)	•	•	•	•
PARTNER	Airbag	•	•	•	•
PARTNER	Instrument Panel	•	•	•	•
PARTNER	Built-in System Interface (BSI)	•	•	•	•
PARTNER	Air Conditioning	•	•	•	•
PARTNER	Air Conditioning	•	•	•	•
PARTNER	Engine Relay Unit	•	•	•	•
PARTNER	Trailer Relay Unit	•	•	•	•
PARTNER	Electric Power Steering	•	•	•	•
PARTNER	Steering Wheel Switching Module	•	•	•	•
PARTNER	Parking Assistance Module	•	•	•	•
PARTNER	Passenger Compartment Air Heanting Resistor	•	•	•	•
PARTNER	Hands Free Control Unit	•	•	•	•
PARTNER	Rain/Brightness Sensor	•	•	•	•
PARTNER	Onboard Charger Of The Traction Battery	•	•	•	•
PARTNER	Bodywork Conversion Unit	•	•	•	•
PARTNER	Electric Machine Management	•	•	•	•
PARTNER	High Frequency Receiver	•	•	•	•
PARTNER	Under Inflation Detection	•	•	•	•
PARTNER	Anti-slip Mode Selector	•	•	•	•
PARTNER	Additional Heating	•	•	•	•
PARTNER	Battery Charge Status Unit	•	•	•	•
PARTNER	Traction Battery Cells Management 01	•	•	•	•
PARTNER	Traction Battery Cells Management 02	•	•	•	•
PARTNER	Traction Battery Cells Management 03	•	•	•	•
PARTNER	Traction Battery Cells Management 04	•	•	•	•
PARTNER	Traction Battery Cells Management 05	•	•	•	•
PARTNER	Traction Battery Cells Management 07	•	•	•	•
PARTNER	Traction Battery Cells Management 08	•	•	•	•
PARTNER	Traction Battery Cells Management 09	•	•	•	•
PARTNER	Traction Battery Cells Management 10	•	•	•	•
PARTNER	Multifunction Display	•	•	•	•
PARTNER	Display/Telematics	•	•	•	•
	Multiplexed Additive Adding Pump	•	•	•	•
PARTNER	Service Module"	•	•		
PARTNER				•	•
PARTNER	CD Player	•	•	•	•
PARTNER	Alarm	•	•	•	•
PARTNER	Radio	•	•	•	•

PEUGEOT_V01.	10 BMS Function List (Note:For reference only)
NOTES:	
• This function is supported.	
* This function may be supported	d, which depends on the actual condition of the vehicle.
O This function is not supported	l.
▲ This function is the new featu	ure in this version.
Vehicle	BMS
207	•
208	•
308	•
308 (T9)	•
308 (S)	•
407	•
408 (T73)	•
408 (T93)	•
508	\bullet
2008	
3008	•
5008	•
RCZ	•
EXPERT	•
PARTNER	•

	PEUGEOT_V01.10 DPF Function Li	st (Note:For reference only)
NOTES:		
 This function is 	s sunnorted	
	ay be supported, which depends on the actu	al condition of the vehicle.
O This function is		
	s the new feature in this version.	
Vehicle	Chassis	DPF
207 CAN	EDC16C3	•
207 CAN	HDI_SID807	•
207 CAN	EDC17C10	•
207 CAN	HDI_SID807_BR2	•
207 CAN	EDC17C10_BR2	•
207+	EDC16C3	•
207+	HDI_SID807	•
207+	EDC17C10	•
207+	HDI_SID807_BR2	•
207+	EDC17C10_BR2	•
208	EDC17C10_BR2	•
208	HDI_SID807_BR2	•
301	EDC17C10_BR2	•
306 R	EDC15C2	•
307 CAN	DCM34	•
307 CAN	EDC16C3	•
307 CAN	HDI SID803	•
307 CAN	HDI_SID803A	•
307 VAN	EDC16C3	•
307 VAN	HDI_SID803	•
308 (T9)	HDI SID807 BR2	•
308 (T9)	EDC17C10_BR2	•
308	DCM34	•
308	DCM35	•
308	DCM35_BR2	•
308	EDC16C3	•
308	HDI_SID807	•
308	EDC17C10_BR2	•
308	EDC17C10	•
308	HDI_SID807_BR2	•
308 (4 portes)	DCM34	•
308 (4 portes)	DCM35	•
308 (4 portes)	DCM35_BR2	•
308 (4 portes)	EDC16C3	•
308 (4 portes)	HDI_SID807	•
308 (4 portes)	EDC17C10_BR2	•
308 (4 portes)	EDC17C10	•
308 (4 portes)	HDI_SID807_BR2	•
406 R	EDC15C2	•
406 R Coupe	EDC15C2	•
407	HDI_SID803	•
407	EDC16C3	•
407	HDI_SID803A	•
407	DCM34	•
407	DCM34 DCM35	•
407	DCM35 DCM35_BR2	

407	EDC16CP39	•
407	EDC17CP11	•
407	HDI_SID201	•
408	DCM34	•
408	DCM35	•
408	EDC16C3	•
408	HDI_SID807	•
408	EDC17C10	•
408	EDC17C10_BR2	•
408	HDI_SID807_BR2	•
408	DCM35_BR2	•
508	DCM62	•
508	DCM34_P	•
508	DCM35_BR2	•
508	HDI_SID807_BR2	•
508	EDC17CP42	•
508 HYbrid4	DCM35_HY	•
508 RHX HYbrid4	DCM35_HY	•
607 R	HDI_SID201	•
607 R	EDC16CP39	•
607 R	HDI_SID803A	•
807 CAN	EDC15C2	•
807 CAN	HDI_SID803A	•
807 CAN	EDC16CP39	•
807 CAN	DCM35	•
807 CAN	DCM35_BR2	•
1007 CAN	EDC16C3	•
2008	EDC17C10_BR2	•
2008	HDI_SID807_BR2	•
3008	DCM62	•
3008	EDC16C3	•
3008	DCM35	•
3008	DCM35_BR2	•
3008	HDI SID807	•
3008	HDI_SID807_BR2	•
3008	DCM35 HY	•
3008 China	EDC16C3	•
3008 China	DCM35	•
3008 China	HDI_SID807	•
3008 China	HDI_SID807_BR2	•
3008 China	DCM35_BR2	•
3008 China	DCM35_HY	•
3008 HYbrid4	DCM35_HY	•
3008 HYbrid4	HDI_SID807_BR2	•
4007	EDC16CP39	•
4007	EDC16CP39_E5	•
4008	HDI_SID807_J3J4	•
5008	DCM62	•
5008	EDC16C3	•
5008	DCM35	•
5008	DCM35_BR2	•
5008	HDI_SID807	•
5008	HDI_SID807_BR2	-

RCZ	DCM34	•
RCZ	DCM35	\bullet
RCZ	DCM35_BR2	•
RCZ	EDC16C3	•
RCZ	HDI_SID807	•
RCZ	EDC17C10	•
RCZ	HDI_SID807_BR2	•
RCZ	EDC17C10_BR2	•
BOXER 3	EDC17CP52	•
BOXER 3 MiniBus	EDC17CP52	•
EXPERT 3	EDC16C3	•
EXPERT 3	EDC17C10_BR2	•
EXPERT 3	HDI_SID803A	•
EXPERT 3	DCM35	•
EXPERT 3	DCM35_BR2	•
EXPERT 2	HDI_SID803A	•
EXPERT 2	DCM35	•
EXPERT 2	DCM35_BR2	•
PARTNER B9	EDC16C3	•
PARTNER B9	EDC17C10_BR2	•
PARTNER B9	HDI_SID807	•
PARTNER B9	HDI_SID807_BR2	•

PEUGEOT_V01.10 EPB Function List (Note:For reference only)

NOTES:			
• This function is supported.			
※ This function may be supported	, which depends on the actual condition of the vehicle.		
O This function is not supported			
▲ This function is the new featu	re in this version.		
Vehicle	EPB		
508	•		
3008	3008		
5008	•		

PEUGEOT_	V01.10 ETC Function List (Note:For reference only)
NOTES:	
• This function is support	ed.
* This function may be sup	ported, which depends on the actual condition of the vehicle.
O This function is not sup	ported.
▲ This function is the new	feature in this version.
Vehicle	ETC
106	•
107	•
206	•
207	•
208	•
301	•
306	\bullet
307	
308	•
405	•
406	•
407	•
408	•
508	•
607	•
806	•
807	•
1007	•
2008	•
3008	•
5008	•
HOGGAR	•
RCZ	•
BOXER	•
EXPERT	•
PARTNER	•

PEUG	EOT_V01.10 OIL Function List (Note:For reference only)
NOTES:	
• This function is s	upported.
※ This function may	be supported, which depends on the actual condition of the vehicle.
O This function is n	ot supported.
	he new feature in this version.
Vehicle 106	OIL •
108	
206	
208	
207	
301	
301	
308	
307	
406	
400	
407	
408 508	
607	
806	
808	
1007	
2008	
3008	
4007	
4007	
4008 5008	•
10N	
HOGGAR	
RCZ	
BIPPER	
BIPPER BOXER	
EXPERT	
PARTNER	
FARINER	

PEUGE	OT_V01.10 SAS Function List (Note:For reference only)
NOTES:	
 This function is sup 	ported.
X This function may be	supported, which depends on the actual condition of the vehicle.
O This function is not	supported.
	new feature in this version.
Vehicle	SAS
107	•
206	•
207	•
208 301	•
301	•
308	•
407	•
408	•
508 607	
807	•
1007	•
2008 3008	•
4007	•
4007	
4008 5008	
iON HOGGAR	•
RCZ	
BIPPER	
BOXER	
EXPERT	
PARTNER	