

INFINITI_V01.10 Daig Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

| Vehicle | Model Year | | | |
|------------------------|------------|-----------|------------|----------|
| EX25 | ALL | | | |
| EX35 | ALL | | | |
| EX37 | ALL | | | |
| FX30d | ALL | | | |
| FX45 | ALL | | | |
| FX50 | ALL | | | |
| G20 | ALL | | | |
| G35 | ALL | | | |
| G37 | ALL | | | |
| I30 | ALL | | | |
| I35 | ALL | | | |
| M25/M37 | ALL | | | |
| M35/M45 | ALL | | | |
| M37/M56 | ALL | | | |
| M37/M56/M30d | ALL | | | |
| M45 | ALL | | | |
| Q45 | ALL | | | |
| QX4 | ALL | | | |
| QX56 | ALL | | | |
| Systemlist | EcuInfo. | ReadCodes | EraseCodes | LiveData |
| Engine | ● | ● | ● | ● |
| Transmission | ● | ● | ● | ● |
| ABS | ● | ● | ● | ● |
| Air Bag | ● | ● | ● | ● |
| Meter/M&A | ● | ● | ● | ● |
| SUB Meter | ● | ● | ● | ● |
| EPS/DAST 3 | ● | ● | ● | ● |
| Air Pressure Monitor | ● | ● | ● | ● |
| HVAC | ● | ● | ● | ● |
| BCM | ● | ● | ● | ● |
| Motor Control | ● | ● | ● | ● |
| ICC/ADAS | ● | ● | ● | ● |
| All Mode AWD/4WD | ● | ● | ● | ● |
| E-4WD | ● | ● | ● | ● |
| 4WAS (MAIN) /RAS/HICAS | ● | ● | ● | ● |
| 4WAS (Front) | ● | ● | ● | ● |
| Difference Lock | ● | ● | ● | ● |
| CAN Gateway | ● | ● | ● | ● |
| Accele Pedal ACT | ● | ● | ● | ● |
| Brake | ● | ● | ● | ● |
| Chassis Control | ● | ● | ● | ● |
| Adaptive Light | ● | ● | ● | ● |
| Head Lamp Levelizer | ● | ● | ● | ● |
| Auto Drive Position | ● | ● | ● | ● |

| | | | | |
|-----------------------|---|---|---|---|
| Intelligent Key | ● | ● | ● | ● |
| Smart Entrance | ● | ● | ● | ● |
| Auto Slide Door | ● | ● | ● | ● |
| Auto Slide Door Right | ● | ● | ● | ● |
| Auto Back Door | ● | ● | ● | ● |
| Precrash Seatbelt | ● | ● | ● | ● |
| Convertible Roof | ● | ● | ● | ● |
| EV/HEV | ● | ● | ● | ● |
| HV Battery | ● | ● | ● | ● |
| Charger/PD Module | ● | ● | ● | ● |
| PTC Heater | ● | ● | ● | ● |
| Laser/Radar | ● | ● | ● | ● |
| Side Radar Left | ● | ● | ● | ● |
| Side Radar Right | ● | ● | ● | ● |
| Lane Camera | ● | ● | ● | ● |
| Rearview Camera | ● | ● | ● | ● |
| S/Blind Camera | ● | ● | ● | ● |
| Multi Display | ● | ● | ● | ● |
| Multi AV | ● | ● | ● | ● |
| Sonar | ● | ● | ● | ● |
| BSW/Buzzer | ● | ● | ● | ● |
| EHS/PKB | ● | ● | ● | ● |
| IPDM E/R | ● | ● | ● | ● |
| BAC | ● | ● | ● | ● |
| DIU | ● | ● | ● | ● |
| Shift | ● | ● | ● | ● |
| E-SUS | ● | ● | ● | ● |
| ANC | ● | ● | ● | ● |
| Telematics | ● | ● | ● | ● |
| HAS | ● | ● | ● | ● |
| AVM | ● | ● | ● | ● |
| DAST 1 | ● | ● | ● | ● |
| DAST 2 | ● | ● | ● | ● |
| Cluster | ● | ● | ● | ● |
| PMAS | ● | ● | ● | ● |
| Radio | ● | ● | ● | ● |
| VSP | ● | ● | ● | ● |
| Nats Immu | ● | ● | ● | ● |
| Air Levelizer | ● | ● | ● | ● |
| Motor Assist | ● | ● | ● | ● |

INFINITI_V01.10 BMS Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

| Vehicle | BMS |
|-----------------|-----|
| ESQ | ● |
| EX25/EX35 | ● |
| EX25/EX37 | ● |
| EX35 | ● |
| EX37 | ● |
| FX35/FX45 | ● |
| FX35/FX50 | ● |
| FX35/FX50/FX30d | ● |
| FX37 | ● |
| FX37/FX50 | ● |
| FX37/FX50/FX30d | ● |
| G20 | ● |
| G25/G37 Sedan | ● |
| G35 | ● |
| G37 | ● |
| I30 | ● |
| I35 | ● |
| InfinitiM35/M45 | ● |
| InfinitiQ70L | ● |
| JX35 | ● |
| M25/M37 | ● |
| M25/M37/M56 | ● |
| M35h | ● |
| M37 | ● |
| M37/M30d | ● |
| M37/M56 | ● |
| M37/M56/M30d | ● |
| M45 | ● |
| Q40 Sedan | ● |
| Q45 | ● |
| Q50 | ● |
| Q60 | ● |
| Q70 | ● |
| QX4 | ● |
| QX50 | ● |
| QX56 | ● |
| QX60 | ● |
| QX70 | ● |
| QX80 | ● |

INFINITI_V01.10 DPF Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

| Vehicle | Years | DPF |
|-------------|-----------|-----|
| All vehicle | All years | ※ |

INFINITI_V01.10 ETC Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

| Vehicle | Years | ETC |
|-------------|-----------|-----|
| All vehicle | All years | ※ |

INFINITI_V01.10 OIL Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

| Vehicle | OIL |
|---------|-----|
| EX35 | ● |
| FX35 | ● |
| FX45 | ● |
| FX50 | ● |
| G25 | ● |
| G35 | ● |
| G37 | ● |
| M35 | ● |
| M37 | ● |
| M45 | ● |
| M56 | ● |
| Q45 | ● |
| QX56 | ● |

INFINITI_V01.10 SAS Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

| Vehicle | Years | SAS |
|-------------|-----------|-----|
| All vehicle | All years | ※ |