LEXUS_V01.10 Daig Function List(Note:For reference only)

- This function is supported.
- * This function may be supported, which depends on the actual condition of the vehicle.
- \bigcirc This function is not supported.
- ▲ This function is the new feature in this version.

Model	EcuInfo	Read Codes	Erase Codes	Live Data
Engine	0	•		•
ECT	0	•	•	•
ABS	0	•	•	•
EMPS	0	•	•	•
Free-Tronic	0		•	•
Air suspension	0			
AHC AHC	0		•	
VGRS	0		•	
EMS .	0			
Tire Pressure Monitor	0		•	
SRS Airbag	0			
BODY	0	•		
Immobiliser	0	_		•
	0			
Tvss	0	_	•	
Entry&Start		_		
Occupant Detection	0	*	•	
D-SEAT SW		*	*	
AFS	0	•	•	
Pre-Crash	0	•	•	
D-Door Motor	0	•	•	•
Theft Deterrent	0	•	•	•
Air Conditioner	0		•	•
Combination Meter	0	*	*	•
Back Door	0	•	•	•
Driver Seat	0	*	*	•
Tilt&Telescopic	0	•	•	•
Mirror	0	*	*	•
Gateway	0	•	•	•
Passenger Door	0	•	•	•
Rear left Door	0	•	•	•
Rear right door	0	•	•	•
Sliding Roof	0	*	*	•
Driver Door	0	•	•	•
Master Switch	0	•	•	•
Rear Right Seat	0	•	•	•
Rear Left Seat	0	*	*	•
Rear Seat Switch	0	*	*	•
Steering Pad Switch	0	*	*	•
Clearance Sonar	0	•	•	•
Rain Sensor	0	*	*	•
Wiper	0	*	*	•
Combination Switch	0	*	*	•
Steering Lock	0	•	•	•
Passenger Seat	0	*	*	•
Retractable Hardtop	0	•	•	•

	<u> </u>	i		1
Main Body	0	•	•	•
P-Door Motor	0	•	•	•
RL-Door Motor	0	•	•	•
RR-Door Motor	0	•	•	•
HV Gateway	0	•	•	•
Night View	0	•	•	•
HL Autoleveling	0	•	•	•
ECM Gateway	0	•	•	•
ECB Gateway	0	•	•	•
WIL Gateway	0	•	•	•
Center Console Switch	0	*	*	•
Rear Console Switch	0	•	•	•
Front Left Seat A/C	0	•	•	•
Front Right Seat A/C	0	•	•	•
Rear left Seat A/C	0	•	•	•
Rear Right Seat A/C	0	•	•	•
Electric Power Control	0	•	•	•
Active Headrest R	0	•	•	•
Active Headrest L	0	•	•	•
Pre-Crash 2	0	•	•	•
Accessory Gateway	0	•	•	•
MIRROR R	0	•	•	•
MIRROR L	0	•	•	•
Navigation System	0	•	•	•
PM1 Gateway	0	•	•	•
Charging Control	0	•	•	•
Starting Control	0	•	•	•
PM2 Gateway	0	•	•	•
Remote Engine Starter	0	•	•	•
Gateway BEAN	0	•	•	•
Gateway CAN	0	•	•	•
Back DoorPW	0	•	•	•
Transmission Control	0	•	•	•
Parking Assist Monitor System	0	•	•	•
Power Source Control	0	•	•	•
EHPS	0	•	•	•
Four Wheel Drive	0	•	•	•
Stabilizer	0	•	•	•
Intelligent Parking Assist	0	•	•	•
Electric Parking Brake	0	•	•	•
Lane Keeping Assist	0		•	•
Front Stabilizer	0	•	•	•
Rear Stabilizer	0	•	•	
ENGINE AND ECT	0	•	•	•
Cruise Control	0	•	•	•
	0	•	•	•
ENGINE (LH Bank)	0			•
ENGINE (RH Bank)				
HV Battery	0			•
Hybrid Control	0	_		•
Sequential M/T	0	•	•	•
Multi-Mode M/T	0	•	•	
Stop And Go	0	<u> </u>	•	-
Radar Cruise	0	<u> </u>	<u> </u>	<u> </u>
Laser Cruise	0	i •	•	•

E-ACM	0	•	•	•
Telematics	0	•	•	•
PPS PPS	0	•	•	•
Advanced Parking Guidance System	0		•	
FC	0	•	•	
FCHV	0	•	•	•
EV	0	•	•	•
Battery	0	•	•	•
Front Right Door	0	*	*	•
Front Left Door	0	*	*	•
KDSS	0	•	•	•
Telematics	0	•	•	•
A/B	0	•	•	0
A/T	0	•	•	•
AMT	0	•	•	•
ARS	0	•	•	•
ASG	0	•	•	•
Bluetooth communication module	0	•	•	•
CAN bus gateway	0	•	•	0
CAN bus gateway V	0	•	•	0
CVT	0	•	•	•
DRS	0	•	•	•
eco IDLE	0	•	•	•
ECT (SIL)	0	•	•	•
EFI EFI	0	•	•	•
EPS	0	•	•	•
FC	0	•	•	0
FCHV	0	•	•	0
HV	0	•	•	•
ITC	0	•	•	•
KFS	0	•	•	*
RL seat headrest ACT	0	•	•	•
ACT RR seat headrest	0	•	•	•
Pre-crash seat back seat RL	0	•	•	•
Pre-crash seat back seat RR	0	•	•	•
Active rear wing	0	•	•	•
Engine 2	0	•	•	•
Grille shutter	0	•	•	•
Cruise Control 2	0	*	*	•
Stop & Go	0	•	•	•
Diagnostics recorder	0	•	•	0
Panoramic View Monitor	0	•	•	•
Blind Spot Monitor Slave	0	•	•	•
Blind Spot Monitor Master	0	•	•	•
Plug-in control	0	•	•	•
Body / gateway	0	•	•	•
Multi-bus gateway	0	•	•	0
No.1 multi-bus monitoring	0	•	•	0
No.2 multi-bus monitoring	0	•	•	0
The motor-generator	0	•	•	•
Remote Security	0	•	•	•
Vehicle control	0	•	•	•
PKB electric	0	•	•	•
	-		•	•

LEXUS_V01.10 BMS Function List (Note:For reference only)

- This function is supported.
- * This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- ▲ This function is the new feature in this version.

Vehicle	Area	Year	BMS
CT200h	EUROPE AND OTHER	Up to 2015	•
ES200	EUROPE AND OTHER	Up to 2015	•
ES300H	EUROPE AND OTHER	Up to 2015	•
GS450H	EUROPE AND OTHER	Up to 2015	•
HS250H	EUROPE AND OTHER	Up to 2015	•
IS300H	EUROPE AND OTHER	Up to 2015	•
LS600H	EUROPE AND OTHER	Up to 2015	•
RX400H	EUROPE AND OTHER	Up to 2015	•
RX450H	EUROPE AND OTHER	Up to 2015	•
СТ200Н	JAPAN	Up to 2015	•
GS300H	JAPAN	Up to 2015	•
GS450H	JAPAN	Up to 2015	•
HS250H	JAPAN	Up to 2015	•
IS300H	JAPAN	Up to 2015	•
LS600H	JAPAN	Up to 2015	•
NX300H	JAPAN	Up to 2015	•
RC300H	JAPAN	Up to 2015	•
RX450H	JAPAN	Up to 2015	•
СТ200Н	NORTH AMERICA	2011 - 2015	•
ES300H	NORTH AMERICA	2013 - 2015	•
GS450H	NORTH AMERICA	2007 - 2015	•
HS250H	NORTH AMERICA	2010 - 2012	•
LS600H	NORTH AMERICA	2008 - 2015	•
NX300H	NORTH AMERICA	2015	•
RX400H	NORTH AMERICA	2006 - 2008	•
RX450H	NORTH AMERICA	2010 - 2015	•

LEXUS_V01.10 DPF Function List (Note:For reference only)

- This function is supported.
- O This function is not supported.
- ▲ This function is the new feature in this version.

Vehicle	is the new feature in this ver	Year	DPF
СТ200Н	EUROPE AND OTHER	Up to 2015	DI F
ES240	EUROPE AND OTHER	Up to 2015	•
ES250	EUROPE AND OTHER	Up to 2015	•
ES300H	EUROPE AND OTHER	Up to 2015	•
ES350	EUROPE AND OTHER	Up to 2015	•
GS250	EUROPE AND OTHER	Up to 2015	•
GS300	EUROPE AND OTHER	Up to 2015	•
GS300H	EUROPE AND OTHER	Up to 2015	•
GS350	EUROPE AND OTHER	Up to 2015	•
GS430	EUROPE AND OTHER	Up to 2015	•
GS450H	EUROPE AND OTHER	Up to 2015	
GS460	EUROPE AND OTHER	Up to 2015	•
GX400	EUROPE AND OTHER	Up to 2015	<u> </u>
GX460	EUROPE AND OTHER	Up to 2015	•
GX470	EUROPE AND OTHER	Up to 2015	•
НS250Н	EUROPE AND OTHER	Up to 2015	•
IS F	EUROPE AND OTHER	Up to 2015	•
IS200D	EUROPE AND OTHER	Up to 2015	•
IS220D	EUROPE AND OTHER	Up to 2015	•
IS250	EUROPE AND OTHER	Up to 2015	•
IS250C	EUROPE AND OTHER	Up to 2015	•
IS300	EUROPE AND OTHER	Up to 2015	•
IS300C	EUROPE AND OTHER	Up to 2015	•
IS300H	EUROPE AND OTHER	Up to 2015	•
IS350	EUROPE AND OTHER	Up to 2015	•
IS350C	EUROPE AND OTHER	Up to 2015	•
LFA	EUROPE AND OTHER	Up to 2015	•
LS430	EUROPE AND OTHER	Up to 2015	•
LS460	EUROPE AND OTHER	Up to 2015	•
LS600H	EUROPE AND OTHER	Up to 2015	•
LX460	EUROPE AND OTHER	Up to 2015	•
LX470	EUROPE AND OTHER	Up to 2015	•
LX570	EUROPE AND OTHER	Up to 2015	•
NX200	EUROPE AND OTHER	Up to 2015	•
RC350	EUROPE AND OTHER	Up to 2015	•
RC-F	EUROPE AND OTHER	Up to 2015	•
RX270	EUROPE AND OTHER	Up to 2015	•

RX350	EUROPE AND OTHER	Up to 2015	•
RX400H	EUROPE AND OTHER	Up to 2015	•
RX450H	EUROPE AND OTHER	Up to 2015	•
SC430	EUROPE AND OTHER	Up to 2015	•
СТ200Н	JAPAN	Up to 2015	•
GS250	JAPAN	Up to 2015	•
GS300H	JAPAN	Up to 2015	•
GS350	JAPAN	Up to 2015	•
GS430	JAPAN	Up to 2015	•
GS450H	JAPAN	Up to 2015	•
GS460	JAPAN	Up to 2015	•
HS250H	JAPAN	Up to 2015	•
IS F	JAPAN	Up to 2015	•
IS250	JAPAN	Up to 2015	•
IS250C	JAPAN	Up to 2015	•
IS300H	JAPAN	Up to 2015	•
IS350	JAPAN	Up to 2015	•
IS350C	JAPAN	Up to 2015	•
LFA	JAPAN	Up to 2015	•
LS460	JAPAN	Up to 2015	•
LS600H	JAPAN	Up to 2015	•
NX300H	JAPAN	Up to 2015	•
RC300H	JAPAN	Up to 2015	•
RC350	JAPAN	Up to 2015	•
RX270	JAPAN	Up to 2015	•
RX350	JAPAN	Up to 2015	•
RX450H	JAPAN	Up to 2015	•
SC430	JAPAN	Up to 2015	•
СТ200Н	NORTH AMERICA	2011 - 2015	•
ES300H	NORTH AMERICA	2013 - 2015	•
ES350	NORTH AMERICA	2007 - 2015	•
GS300	NORTH AMERICA	2006	•
GS350	NORTH AMERICA	2007 - 2015	•
GS430	NORTH AMERICA	2006 - 2007	•
GS450H	NORTH AMERICA	2007 - 2015	•
GS460	NORTH AMERICA	2008 - 2011	•
GX460	NORTH AMERICA	2010 - 2015	•
GX470	NORTH AMERICA	2005 - 2009	•
НS250Н	NORTH AMERICA	2010 - 2012	•
IS F	NORTH AMERICA	2008 - 2014	•
IS250	NORTH AMERICA	2006 - 2015	•
IS250C	NORTH AMERICA	2010 - 2015	•
IS350	NORTH AMERICA	2006 - 2015	•
IS350C	NORTH AMERICA	2010 - 2015	•
LFA	NORTH AMERICA	2012 - 2013	•
LS430	NORTH AMERICA	2004 - 2006	•
LS460	NORTH AMERICA	2007 - 2015	•
LS600H	NORTH AMERICA	2008 - 2015	•
LX470	NORTH AMERICA	2006 - 2007	•
LX570		0000 0015	•
	NORTH AMERICA	2008 - 2015	
NX300H	NORTH AMERICA NORTH AMERICA	2008 - 2015	•
NX300H RC350			_
	NORTH AMERICA	2015	_

RX400H	NORTH AMERICA	2006 - 2008	•
RX450H	NORTH AMERICA	2010 - 2015	•
SC430	NORTH AMERICA	2006 - 2010	•

LEXUS_V01.10 EPB Function List (Note:For reference only)

NOTES:

• This function is supported.

* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported.

▲ This function is the new feature in this version.

▲ This function	n is the new feature in this version.	
Vehicle	Area	EPB
GS350	EUROPE AND OTHER	•
GS250	EUROPE AND OTHER	•
GS300h	EUROPE AND OTHER	•
GS450h	EUROPE AND OTHER	•
GS F	EUROPE AND OTHER	•
NX200	EUROPE AND OTHER	•
NX300h	EUROPE AND OTHER	•
RX450h	EUROPE AND OTHER	•
LFA	EUROPE AND OTHER	•
LX570	EUROPE AND OTHER	•
LS460	EUROPE AND OTHER	•
LS600h	EUROPE AND OTHER	•
LX450d	EUROPE AND OTHER	•
GS300h	JAPAN	•
NX300h	JAPAN	•
GS350	JAPAN	•
GS250	JAPAN	•
GS450h	JAPAN	•
GS F	JAPAN	•
RX400h	JAPAN	•
LFA	JAPAN	•
LX570	JAPAN	•
LS460	JAPAN	•
LS600h	JAPAN	•
NX200t	JAPAN	•

LEXUS_V01.10 ETC Function List (Note:For reference only)

- This function is supported.
- * This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- ▲ This function is the new feature in this version.

	ne new feature in this ver		P
Vehicle	Area	Year	ETC
ES240	EUROPE AND OTHER	Up to 2014	•
ES350	EUROPE AND OTHER	Up to 2014	•
GS300	EUROPE AND OTHER	Up to 2014	•
GS350	EUROPE AND OTHER	Up to 2014	•
GS430	EUROPE AND OTHER	Up to 2014	•
GS450H	EUROPE AND OTHER	Up to 2014	•
GS460	EUROPE AND OTHER	Up to 2014	•
GX470	EUROPE AND OTHER	Up to 2014	•
IS220D	EUROPE AND OTHER	Up to 2014	•
IS250	EUROPE AND OTHER	Up to 2014	•
IS250C	EUROPE AND OTHER	Up to 2014	•
IS300	EUROPE AND OTHER	Up to 2014	•
IS300C	EUROPE AND OTHER	Up to 2014	•
IS350	EUROPE AND OTHER	Up to 2014	•
IS350C	EUROPE AND OTHER	Up to 2014	•
LS430	EUROPE AND OTHER	Up to 2014	•
LS600H	EUROPE AND OTHER	Up to 2014	•
LX460	EUROPE AND OTHER	Up to 2014	•
LX470	EUROPE AND OTHER	Up to 2014	•
LX570	EUROPE AND OTHER	Up to 2014	•
RC350	EUROPE AND OTHER	Up to 2014	•
RX270	EUROPE AND OTHER	Up to 2014	•
RX350	EUROPE AND OTHER	Up to 2014	•
RX400H	EUROPE AND OTHER	Up to 2014	•
SC430	EUROPE AND OTHER	Up to 2014	•
СТ200Н	JAPAN	As of 2010	•
GS250	JAPAN	As of 2011	•
GS300H	JAPAN	As of 2013	•
GS350	JAPAN	As of 2005	•
GS430	JAPAN	As of 2005	•
GS450H	JAPAN	As of 2006	•
GS460	JAPAN	As of 2007	•
HS250H	JAPAN	As of 2009	•
IS F	JAPAN	As of 2007	•
IS250	JAPAN	As of 2005	•
IS250C	JAPAN	As of 2009	•
IS300H	JAPAN	As of 2013	•
IS350	JAPAN	As of 2005	•
IS350C	JAPAN	As of 2010	•
LS460	JAPAN	As of 2006	•
LS600H	JAPAN	As of 2007	•
NX300H	JAPAN	As of 2014	•
RC300H	JAPAN	As of 2014	•
RC350	JAPAN	As of 2014	
RX270			•
RX350	JAPAN TADAN	As of 2010	•
IVVOOA	JAPAN	As of 2008	■

RX450H	JAPAN	As of 2009	•
SC430	JAPAN	As of 2005	•

LEXUS_V01.10 OIL Function List (Note:For reference only)

- This function is supported.
- * This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- ▲ This function is the new feature in this version.

Vehicle	Area	Year	OIL
CT200h	USA	2011 - 2012	*
ES330	USA	2006	*
ES350	USA	2007 - 2012	*
GS300	USA	2006	*
GS350	USA	2007 - 2011	*
GS430	USA	2006 - 2007	*
GS450h	USA	2007 - 2011	*
GS460	USA	2008 - 2011	*
GX470	USA	2006 - 2009	*
HS250h	USA	2010 - 2011	*
IS F	USA	2008 - 2012	*
IS250	USA	2006 - 2012	*
IS350	USA	2006 - 2012	*
LS430	USA	2006	*
LS460	USA	2007 - 2012	*
LS600h	USA	2012	*
LX470	USA	2006 - 2007	*
LX570	USA	2008 - 2011	*
RX330	USA	2006	*
RX350	USA	2012	*
RX400h	USA	2006 - 2008	*
RX450h	USA	2010 - 2012	*
SC430	USA	2006 - 2010	*

LEXUS_V01.10 SAS Function List (Note:For reference only)

- This function is supported.
- * This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- ▲ This function is the new feature in this version.

	the new feature in this ve		
Vehicle	Area	Year	SAS
СТ200Н	EUROPE AND OTHER	Up to 2015	•
ES250	EUROPE AND OTHER	Up to 2015	•
ES300H	EUROPE AND OTHER	Up to 2015	•
ES350	EUROPE AND OTHER	Up to 2015	•
GS250	EUROPE AND OTHER	Up to 2015	•
GS300	EUROPE AND OTHER	Up to 2015	•
GS300H	EUROPE AND OTHER	Up to 2015	•
GS350	EUROPE AND OTHER	Up to 2015	•
GS430	EUROPE AND OTHER	Up to 2015	•
GS450H	EUROPE AND OTHER	Up to 2015	•
GS460	EUROPE AND OTHER	Up to 2015	•
HS250H	EUROPE AND OTHER	Up to 2015	•
IS F	EUROPE AND OTHER	Up to 2015	•
IS220D	EUROPE AND OTHER	Up to 2015	•
IS250	EUROPE AND OTHER	Up to 2015	•
IS250C	EUROPE AND OTHER	Up to 2015	•
IS300	EUROPE AND OTHER	Up to 2015	•
IS300C	EUROPE AND OTHER	Up to 2015	•
IS300H	EUROPE AND OTHER	Up to 2015	•
IS350	EUROPE AND OTHER	Up to 2015	•
IS350C	EUROPE AND OTHER	Up to 2015	•
LFA	EUROPE AND OTHER	Up to 2015	•
LS460	EUROPE AND OTHER	Up to 2015	
LS600H	EUROPE AND OTHER	Up to 2015	
NX200			
	EUROPE AND OTHER	Up to 2015	
NX200T	EUROPE AND OTHER	Up to 2015	
RC350	EUROPE AND OTHER	Up to 2015	
RC-F	EUROPE AND OTHER	Up to 2015	•
RX270	EUROPE AND OTHER	Up to 2015	
RX350	EUROPE AND OTHER	Up to 2015	
RX400H	EUROPE AND OTHER	Up to 2015	
RX450H	EUROPE AND OTHER	Up to 2015	•
CT200H	JAPAN	Up to 2015	•
GS250	JAPAN	Up to 2015	<u> </u>
GS300H	JAPAN	Up to 2015	•
GS350	JAPAN	Up to 2015	•
GS430	JAPAN	Up to 2015	•
GS450H	JAPAN	Up to 2015	•
GS460	JAPAN	Up to 2015	•
IS F	JAPAN	Up to 2015	•
IS250	JAPAN	Up to 2015	•
IS250C	JAPAN	Up to 2015	•
IS300H	JAPAN	Up to 2015	•
IS350	JAPAN	Up to 2015	•
IS350C	JAPAN	Up to 2015	•
LFA	JAPAN	Up to 2015	•

LS460	JAPAN	Up to 2015	•
LS600H	JAPAN	Up to 2015	•
NX200T	JAPAN	Up to 2015	•
NX300H	JAPAN	Up to 2015	•
RC300H	JAPAN	Up to 2015	•
RC350	JAPAN	Up to 2015	•
RC-F	JAPAN	Up to 2015	•
RX270	JAPAN	Up to 2015	•
RX350	JAPAN	Up to 2015	•
RX450	JAPAN	Up to 2015	•
СТ200Н	NORTH AMERICA	2011 - 2015	•
ES300H	NORTH AMERICA	2013 - 2015	•
ES350	NORTH AMERICA	2013 - 2015	•
GS300	NORTH AMERICA	2006	•
GS350	NORTH AMERICA	2007 - 2015	•
GS430	NORTH AMERICA	2006 - 2007	•
GS450H	NORTH AMERICA	2007 - 2015	•
GS460	NORTH AMERICA	2008 - 2011	•
HS250H	NORTH AMERICA	2010 - 2012	•
IS F	NORTH AMERICA	2008 - 2014	•
IS250	NORTH AMERICA	2006 - 2015	•
IS250C	NORTH AMERICA	2010 - 2015	•
IS350	NORTH AMERICA	2006 - 2015	•
IS350C	NORTH AMERICA	2010 - 2015	•
LFA	NORTH AMERICA	2012 - 2013	•
LS460	NORTH AMERICA	2007 - 2015	•
LS600H	NORTH AMERICA	2008 - 2015	•
NX200T	NORTH AMERICA	2015	•
NX300H	NORTH AMERICA	2015	•
RC350	NORTH AMERICA	2015	•
RC-F	NORTH AMERICA	2015	•
RX350	NORTH AMERICA	2010 - 2015	•
RX400H	NORTH AMERICA	2006 - 2008	•
RX450H	NORTH AMERICA	2010 - 2015	•